 

 


How to change LE-003 battery

- 1 Adjust loupe to maximum focus distance

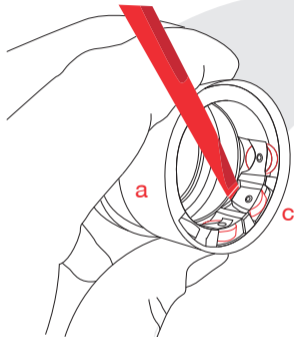

- 2 At maximum focus distance, continue to unscrew until the unit separates into two pieces



- 3 Remove batteries with flat plastic tool