



Item	Part No.	Description
1	ECS650.01	FRONT PANEL
2	ECS650.02	CORD SUPPORT
3	ECS650.03	DISPLAY PANEL
4	ECS650.04	HANDLE
5	ECS650.05	CABLE REEL KIT
6	ECS650.06	CLAMP SUPPORT KIT
7	ECS650.07	WHEEL AXLE
8	ECS650.08	WHEEL KIT (195x47)
9	ECS650.09	TRANSFORMER
10	ECS650.10	PCB UNIT
11	ECS650.11	RECTIFIER
12	ECS650.12	FUSE SUPPORT
13	ECS650.13	POWER OUTLET
14	ECS650.14	NEGATIVE CABLE

Item	Part No.	Description
15	ECS650.15	POWER SUPPLY CABLE
16	ECS650.16	THERMOSTAT 13A
--	ECS650.16B	BRACKET FOR THERMOSTAT 13A (NOT SHOWN)
17	ECS650.17	THERMOSTAT 11A
--	ECS650.17B	BRACKET FOR THERMOSTAT 11A (NOT SHOWN)
18	ECS650.18	BASE
19	ECS650.19	REMOTE START CABLE + CONTROL
20	ECS650.20	POSITIVE CLAMP
20A	ECS650.20A	NEGATIVE CLAMP
--	120/122452	FUSE 100Amp 99x20mm LARGE (NOT SHOWN)
22	ECS650.22	POSITIVE CABLE

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.