

Type 10  
Side Ported

Type 11  
Bottom Ported

# Plug-in Connector Connecting Base


D-sub Connector Flat Ribbon Cable PC Wiring

# Series SY3000/5000



RoHS

## How to Order Manifold

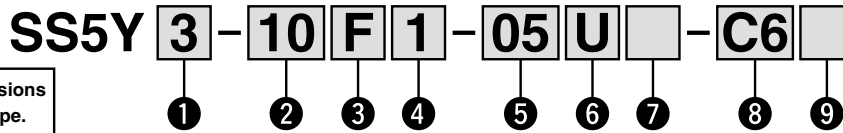

Refer to page 123 for dimensions of Type 11/Bottom ported type.

### 1 Series

3	SY3000
5	SY5000

### 2 Type


10	Side ported
11	Bottom ported*

\* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

### 3 Connector type

<b>F:</b> D-sub connector (25 pins) 	<b>P:</b> Flat ribbon cable (26 pins) 	<b>PG:</b> Flat ribbon cable (20 pins) 
<b>PH:</b> Flat ribbon cable (10 pins) 	<b>J:</b> PC wiring (20 pins) <p>Yellow ink</p>	

### 4 Connector entry direction

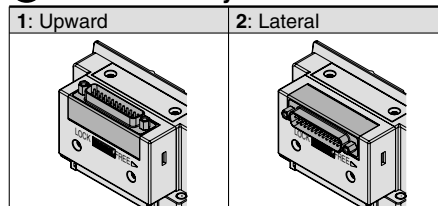

### 5 Valve stations

#### F: D-sub connector (25 pins)

Symbol	Stations	Note
02	2 stations	Double wiring Note 1)
⋮	⋮	
12	12 stations	Specified layout Note 2) (Available up to 24 solenoids)
⋮	⋮	
24	24 stations	

#### P: Flat ribbon cable (26 pins)

Symbol	Stations	Note
02	2 stations	Double wiring Note 1)
⋮	⋮	
12	12 stations	Specified layout Note 2) (Available up to 24 solenoids)
⋮	⋮	
24	24 stations	

#### PG: Flat ribbon cable (20 pins)

Symbol	Stations	Note
02	2 stations	Double wiring Note 1)
⋮	⋮	
09	9 stations	Specified layout Note 2) (Available up to 18 solenoids)
⋮	⋮	
18	18 stations	

#### PH: Flat ribbon cable (10 pins)

Symbol	Stations	Note
02	2 stations	Double wiring Note 1)
⋮	⋮	
04	4 stations	Specified layout Note 2) (Available up to 8 solenoids)
⋮	⋮	
08	8 stations	

#### J: PC wiring (20 pins)


Symbol	Stations	Note
02	2 stations	Double wiring Note 1)
⋮	⋮	
08	8 stations	Specified layout Note 2) (Available up to 16 solenoids)
⋮	⋮	
16	16 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)  
Note 3) This also includes the number of blanking plate assembly.

## How to Order Manifold Assembly

### Example (SS5Y3-10F1-□)

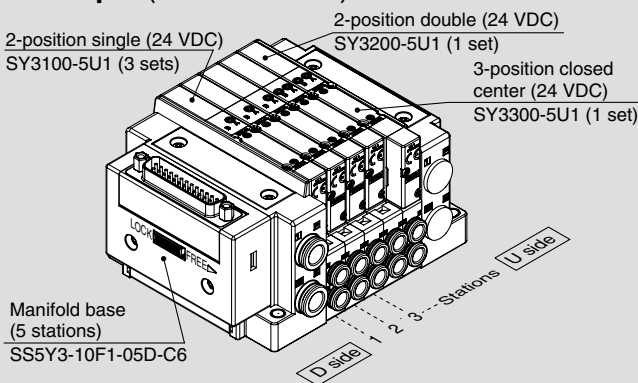

SS5Y3-10F1-05D-C6 ... 1 set (Type 10 5-station manifold base part no.)  
 \*SY3100-5U1 ..... 3 sets (2-position single part no.)  
 \*SY3200-5U1 ..... 1 set (2-position double part no.)  
 \*SY3300-5U1 ..... 1 set (3-position closed center part no.)  
 The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 56. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

### 6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 24 stations)

Refer to the page on the right for 8.

### 7 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

\* 3/5(E) port is plugged for the built-in silencer type.

### 9 Mounting and Option

Symbol	Mounting	Option
Nil	Direct mounting	None
AA		Name plate (With station number)
BA		Name plate (Without station number)
D□	DIN rail mounting	Without name plate
A□		Name plate (With station number)
B□		Name plate (Without station number)

#### DIN Rail Option

Symbol	Option
Nil	Direct mounting
0	Without DIN rail (with bracket)
3	For 3 stations Specify a longer rail than the total length of specified stations.
⋮	⋮
24	For 24 stations

Note 1) Enter the number of stations inside □. (Refer to "DIN Rail Option" below.)  
Note 2) Only direct mounting is available for Type 11 (Bottom ported).