46



CE ECOLAB


#### Model number

## VBA-4E4A-G11-ZAJ/EA2L-V1

G11 module 4 inputs and 4 outputs


#### Features

- Inputs for 2-, 3-, and 4-wire sensors •
- Power supply of outputs from the ex-• ternal auxiliary voltage
- Supply of sensors from AS-Interface •
- Function display for bus, external au-. xiliary voltage, in- and outputs
- Red LED per channel, lights up in the • event of output overload
- Communication monitoring .
- Switchable lead breakage detection . (outputs)
- Degree of protection IP68 / IP69K •
- **AS-Interface POWER24**

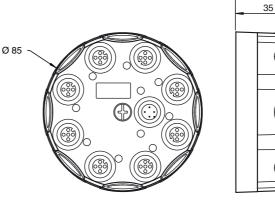


## **Electrical connection**

Dimensions

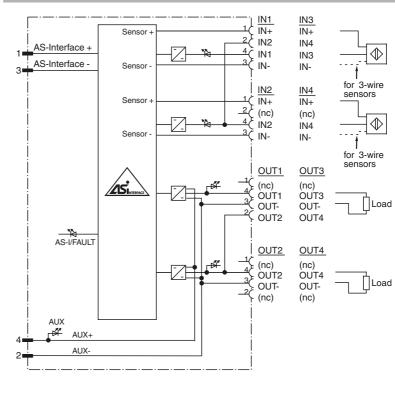

## Indicating / Operating means

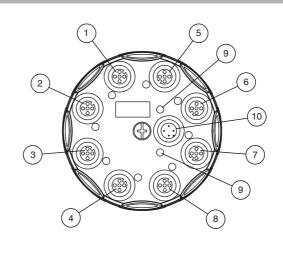



4-wire

sensors





(10)AS-i/AUX connection

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

# EPPPERL+FUCHS

1

## AS-Interface sensor/actuator module

#### Technical data

Technical data	
General specifications	
Slave type	A/B slave
AS-Interface specification	V3.0
Required master specification	≥ V3.0
UL File Number	E87056
Functional safety related parameters	100 -
MTTF <sub>d</sub>	120 a
Mission Time (T <sub>M</sub> ) Diagnostic Coverage (DC)	20 a 0 %
8 8 ( )	0 %
Indicators/operating means LED AS-i/FAULT	Status display; multi-colour LED
LED AS-WRADEI	Green: normal operation Red: communication fault Flashing yellow/red: address 0 Flashing green/red: sensor supply i.e. overload or lead interrup- tion outputs
LED AUX	ext. auxiliary voltage U <sub>AUX</sub> ; dual LED green/red green: voltage OK red: reverse voltage
LED IN	switching state (input); 4 LED yellow
LED OUT	switching state (output); 4 LED yellow/red yellow: output active red: output overload or lead interruption
Electrical specifications	
Auxiliary voltage (output) U <sub>AUX</sub>	20 30 V DC PELV
Rated operating voltage U <sub>e</sub>	18,0 31.6 V from AS-Interface
Rated operating current I <sub>e</sub>	$\leq$ 40 mA (without sensors) / max. 240 mA
Protection class	III
Surge protection	$U_{AUX}, U_{\text{in}}$ : Over voltage category III, safe isolated power supplies (PELV)
Input	
Number/Type	4 inputs for 2- or 3-wire sensors (PNP), DC option 2 inputs for 4-wire sensors (PNP), DC from AS-Interface
Supply Voltage	12 31 V
Current loading capacity	$\leq$ 200 mA, overload and short-circuit protected
Input current	$\leq$ 9 mA (limited internally)
Switching point	according to DIN EN 61131-2 (Type 2)
0 (unattenuated)	≤3 mA
1 (attenuated)	≥5 mA
Signal delay	< 1 ms (input/AS-Interface)
Output	
Number/Type	4 electronic outputs, PNP, overload and short-circuit proof
Supply	from external auxiliary voltage U <sub>AUX</sub>
Current	2 A per output TB ≤ 40 °C: 6 A total TB ≤ 70 ŰC: sum O1 + O2 max. 2 A, sum O3 + O4 max. 2 A
Voltage	≥ (U <sub>AUX</sub> - 0.5 V)
Electrical isolation	
Input/Output	safe isolation, rated insulation voltage 40 V DC
Output/AS-Interface	safe isolation, rated insulation voltage 40 V DC
Programming instructions	
Profile	S-7.A.7
IO code	7
ID code ID1 code	A
ID1 code ID2 code	7 7
D2 code Data bits (function via AS-Interface)	/ input output
D0	IN1 O1
D1	IN2 O2
D2	IN3 O3
D3	IN4 O4
Parameter bits (programmable via AS-i	i) function
P0	Communication monitoring P0 = 0 monitoring = off, the outputs maintain the status if com- munication fails P0 = 1 monitoring = on, i.e. if communication fails, the outputs are deenergised (basic setting)
P1	Input filter P1 = 0 input filter on, pulse suppression $\leq 2 \text{ ms}$ P1 = 1 input filter off (basic setting)
P2	Lead breakage outputs P2 = 0 lead breakage on P2 = 1 lead breakage off (basic setting)
P3	not used
Ambient conditions	
Ambient temperature	-25 70 °C (-13 158 °F)
<ul> <li>Refer to "General Notes Relating to Peop</li> </ul>	nerl+Euchs Product Information"

VBA-4E4A-G11-ZAJ/EA2L-V1

#### Function

The V\*A-4E4A-G11-ZAJ/EA2L-V1 is an AS-Interface I/O module with 4 inputs and 4 outputs. 2, 3 and 4 wire sensors can also be connected as mechanical contacts to the 4 sourcing electronic inputs. The 4 electronic outputs are overload and short-circuit protected.

The housing with a central screw enables fast mounting on the base plate.

Connection to the AS-Interface cable, to the external power supply and to the sensors/actuators is via M12x1 plug-in connections on the top side of the device.

The inputs and the connected sensors are powered by the internal supply of the module (from the AS-Interface). The outputs and the connected actuators are powered by an external voltage source (AUX).

The current switching state of each input and output is indicated via an IN or OUT LED. The OUT LED also indicates an overload or a lead breakage at the associated output. The ASi/FAULT LED indicates the status of the AS-Interface (normal operation, communication error, peripheral fault, address 0). The AUX LED indicates the external power supply. The I/O module is compatible with AS-Interface POWER24.

#### Note:

The device is equipped with a communication monitor, which deactivates the outputs if the AS-Interface does not communicate with the module for more than 40 ms. The communication monitor can be deactivated via the parameter P0. Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1.

Parameter P2 activates a lead breakage detection system for the outputs. This function detects and reports a missing load, providing the relevant output is deactivated. The associated OUT LED and the 'peripheral fault' function display the signal transmitted to the AS-Interface master. An overload of the input supply or the outputs is also reported to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface remains established even if a peripheral fault is set.

#### Accessories

VBP-HH1-V3.0-KIT AS-Interface Handheld with accessory

VAZ-V1-B3 Blind plug for M12 sockets

VBP-HH1-V3.0 AS-Interface Handheld

VAZ-PK-1,5M-V1-G Adapter cable module/hand-held programming device Release date: 2013-12-12 13:59 Date of issue: 2015-02-05 221518\_eng.xml

2

www.pepperl-fuchs.com

USA: +1 330 486 0001 Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com

1 776 4411 Singapore: I-fuchs.com fa-info@sg.pep

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



# AS-Interface sensor/actuator module

# VBA-4E4A-G11-ZAJ/EA2L-V1


Storage temperature	-25 85 °C (-13 185 °F)
Shock and impact resistance	30 g, 11 ms in 6 spatial directions 3 shocks 10 g, 16 ms in 6 spatial directions 1000 shocks
Vibration resistance	0.75 mm 10 57 Hz , 5 g 57 150 Hz, 20 cycles
Mechanical specifications	
Degree of protection	IP68 / IP69K
Connection	AS-Interface/U <sub>AUX</sub> : M12 round connector Inputs/outputs: M12 round connector
Material	
Housing	PBT PC
Mounting screw	Stainless steel 1.4305 / AISI 303
Mass	200 g
Mounting	Mounting base
Compliance with standards and directives	•
Directive conformity	
EMC Directive 2004/108/EC	EN 61000-6-2:2005, EN 61000-6-4:2007, EN 50295:1999
Standard conformity	
Noise immunity	EN 61000-6-2:2005, EN 61326-1:2006, EN 50295:1999
Emitted interference	EN 61000-6-4:2007
Input	EN 61131-2:2007
Degree of protection	EN 60529:2000
Fieldbus standard	EN 50295:1999, IEC 62026-2:2006

#### Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

#### Mounting instructions

Screw the device onto a level mounting surface using two M5 attachment screws. The attachement screws are not included.

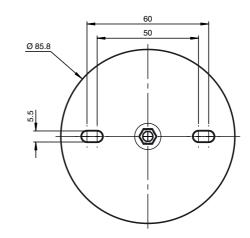

Screw a blind plug onto spare connections to ensure the protection category.

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

www.pepperl-fuchs.com fa-info@us.pe

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

