

OBD-II CAN BUS GPS DEV KIT

Introduction



The OBD II Slaver allows you to hack your vehicle with the integrated OBD port and output all the data via serial interface. It supports the CAN bus protocol, integrates micro SD card slot. On top of that, with the help of a build-in Atmega32U4 (RP2040 for V2), it's compatible with arduino. Which means you can code it like a arduino, then just plug it into your car's OBD port, you will get the output data via the Type C USB port or you can store all the data into your micro-SD card (TF card), easy-peasy.


This Serial CAN Bus module is based on **MCP2551** and **MCP2515**, which can provide can baud rate from **5kb/s** to **1Mb/s**.

One more thing, we integrate the GPS module, you can even track your car with this fantastic little module. It is obviously that you will love it, happy hacking!

Version Track:

- V1.0 - Original version, Atmega32U4 MCU.
- V2.0 - Change MCU to RP2040

CAN BUS PRODUCTS LIST OF LONGAN LABS

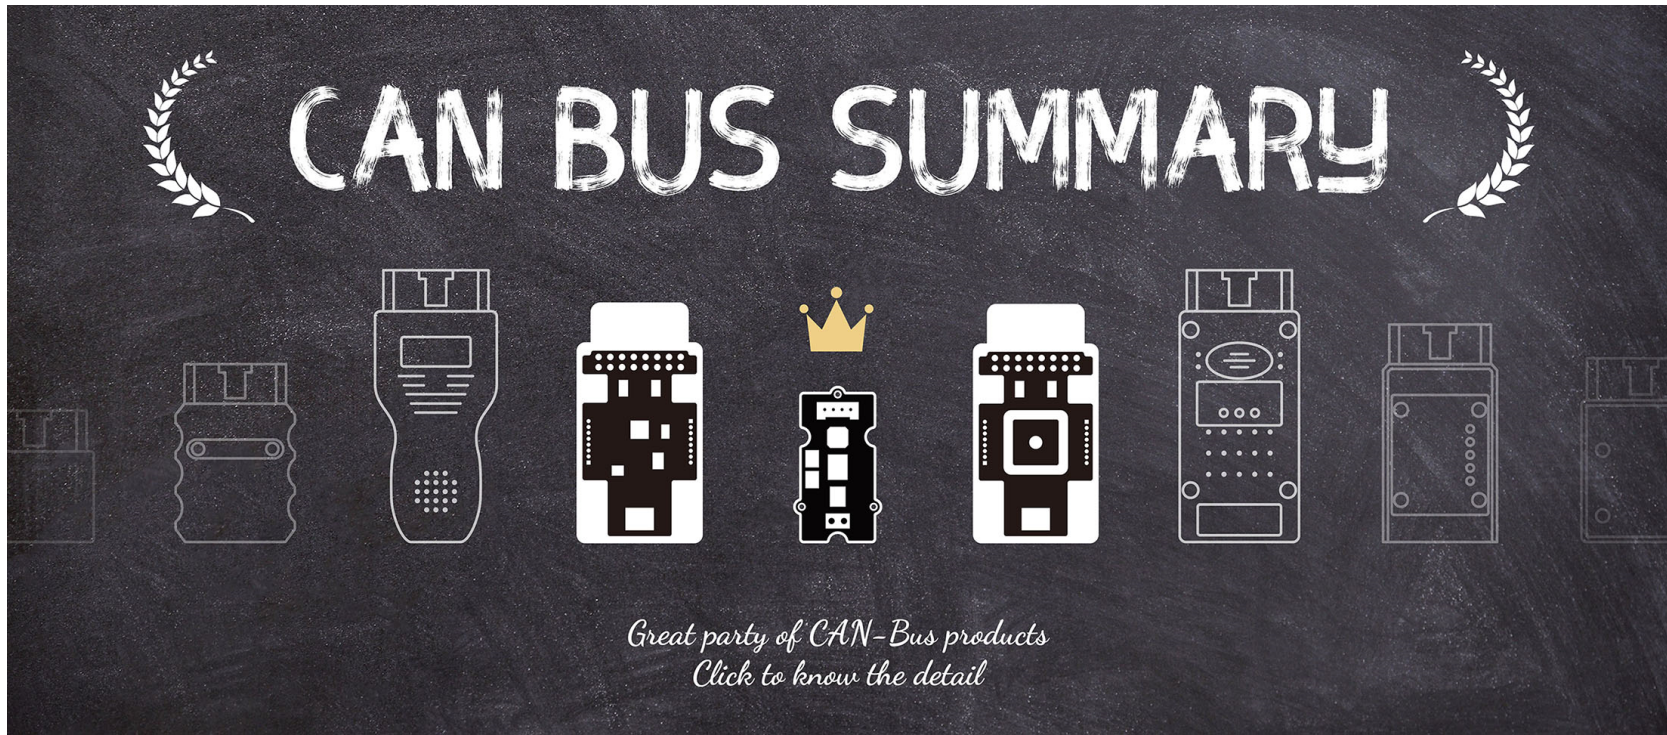


We have made a lot of can bus products, you can get more information through the following list, so as to choose a product suitable for you.

PRODUCT NAME	LINK	PRICE	MCU	CHIP	PROTOCOL
Serial CAN Bus Module	LINK	\$19.9	ATMEGA168PA	MCP2515	CAN2.0

PRODUCT NAME	LINK	PRICE	MCU	CHIP	PROTOCOL
I2C CAN Bus Module	LINK	\$19.9	ATMEGA168PA	MCP2515	CAN2.0
OBD-II Serial CAN Bus Dev Kit	LINK	\$20.9	ATMEGA168PA	MCP2515	CAN2.0
OBD-II CAN Bus GPS Dev Kit	LINK	\$29.9	ATMEGA32U4(RP2040 for V2)	MCP2515	CAN2.0
OBD-II CAN Bus Basic Dev Kit	LINK	\$24.9	ATMEGA32U4(RP2040 for V2)	MCP2515	CAN2.0
CAN-FD Shield	LINK	\$19.9	NO MCU	MCP2517FD	CAN-FD
CAN Bus Shield	LINK	\$9.9	NO MCU	MCP2515	CAN2.0
CANBed	LINK	\$24.9	ATMEGA32U4	MCP2515	CAN2.0
CANBed-FD	LINK	\$29.9	ATMEGA32U4	MCP2517FD	CAN-FD

PRODUCT NAME	LINK	PRICE	MCU	CHIP	PROTOCOL
CANBed M4	LINK	\$49.9	ATSAME51	-	CAN-FD
OBD-II RF Dev Kit	LINK	\$19.9	ATmega168PA	MCP2515	CAN2.0

 **Note**

The above price may not be the latest price, please refer to the price on the product page.

Features

- ODB II port
- Uart to CAN Bus communication
- Build-in Atmega32U4 (RP2040 for V2)
- Integrated GPS module
- Integrated Micro-SD(TF) card

- AT command support
- Up to 115200 Uart baud rate (default 9600)
- Up to 1Mb/s CAN Bus baud rate
- TX and RX led indicator
- Easy-to-use Arduino library

Specifications

Parameter	Value
MCU	Atmega32U4 (with Arduino Leonardo bootloader) / RP2040 for V2
Clock Speed	16MHz
Flash Memory	32KB
SRAM	2.5KB

Parameter	Value
EERROM	1KB
Operate Voltage	5V
Input Interface	OBD-II
Output Interface	USB Type C

Hardware Overview


Part List

- OBD-II Slaver(Base board) x 1
- GPS Board x 1
- Plastic Case x 1
- Screw Driver x 1



Pin out

Base Board

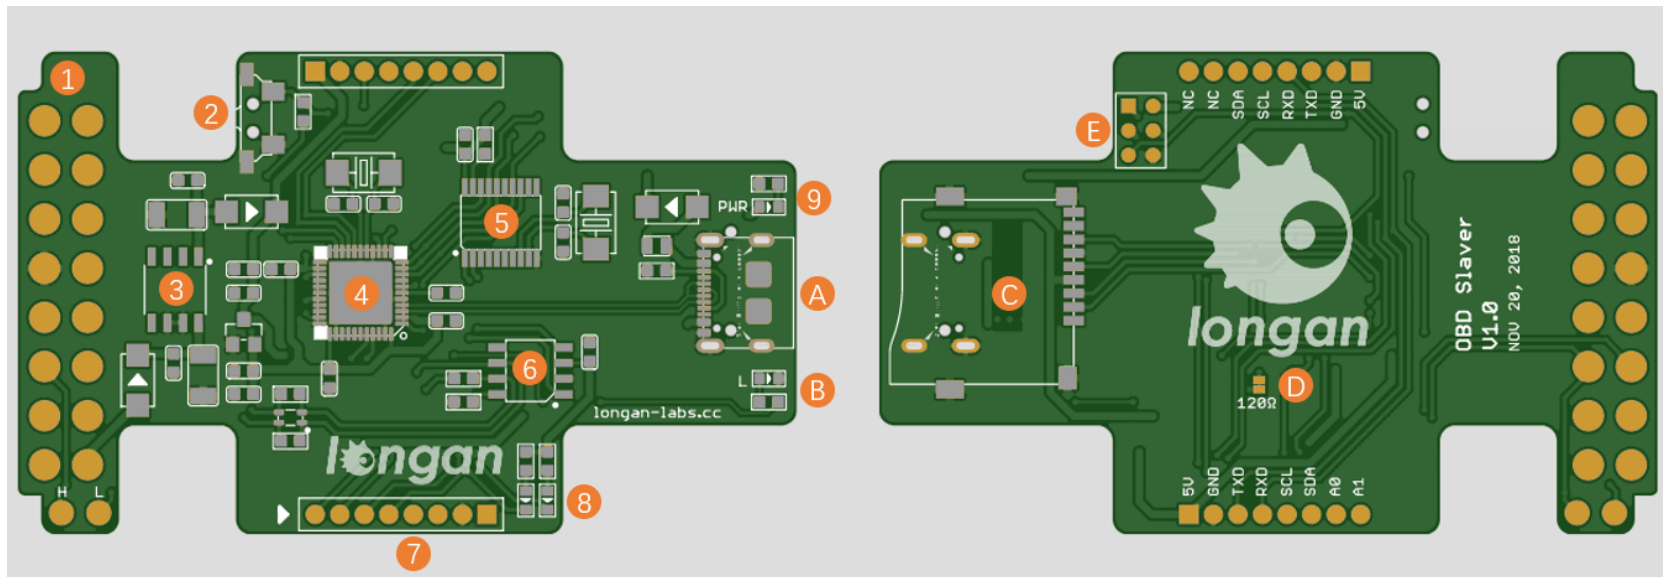

1.OBD-II Connector:

On-board diagnostics (OBD) is an automotive term referring to a vehicle's self-diagnostic and reporting capability. OBD-II is an improvement over OBD-I in both capability and standardization. The OBD-II standard specifies the type of diagnostic connector and its pinout.

2.Reset Button:

Reset the on-board Atmega chip, please note that the button had been canceled in the latest version.

3.78L05:

Provide a stable 5V to the whole system.

4. Atmega32U4:(RP2040 for V2)

The master of the entire module, mainly used to store data on the TF card or transfer data to the computer through the type C cable. In addition, since it's arduino compatible, you can use it to implement some simple controls, such as triggering a buzzer alarm when the speed exceeds a certain value.

5. MCP2515:

Microchip Technology's MCP2515 is a stand-alone Controller Area Network (CAN) controller that implements the CAN specification, version 2.0B. It is capable of transmitting and receiving both standard and extended data and remote frames. The MCP2515 has two acceptance masks and six acceptance filters that are used to filter out unwanted messages, thereby reducing the host MCUs overhead. The MCP2515 interfaces with microcontrollers (MCUs) via an industry standard Serial Peripheral Interface (SPI).

6. MCP2551

High-Speed CAN Transceiver: The MCP2551 is a high-speed CAN, fault-tolerant device that serves as the interface between a CAN protocol controller and the physical bus. Typically, each node in a CAN system must have a device to convert the digital signals generated by a CAN controller to signals suitable for transmission over the bus cabling (differential output). It also provides a buffer between the CAN controller and the high-voltage spikes that can be generated on the CAN bus by outside sources (EMI, ESD, electrical transients, etc.).

7.2x8Pin Female Header for GPS module

See the GPS section for specific pin definitions.

 **Attention**

It should be noted that when assembling the GPS module, please align the white triangle on the development board and the module, otherwise the GPS module may be damaged.

8.CAN RX/TX Indicator

9.Power LED


A.Micro USB connector for programming

B.User LED, connect to D13 (D18 for RP2040 version)

C.TF Card slot

D.120Ω resister


ISO 11898 requires a cable with a nominal impedance of 120 Ω; therefore, you should use 120 Ω resistors for termination. If you place multiple devices along the cable, only the devices on the ends of the cable need termination resistors. Figure 1 shows an example of how to terminate a high-speed network.

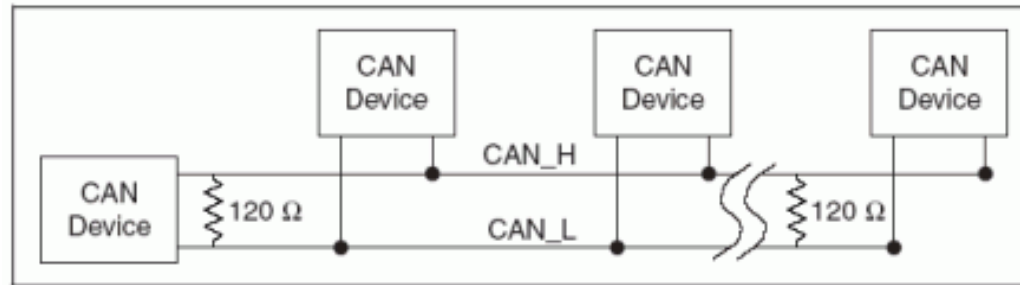

So if you use this slaver on the end of the CAN bus, you need to solder a 120Ω resistor between the two pad, if not just leave them alone. For more detail about the CAN bus protocol, please refer to the [NI CAN Physical Layer and Termination Guide](#)


E.ICSP pads for burning bootloader

GPS Board

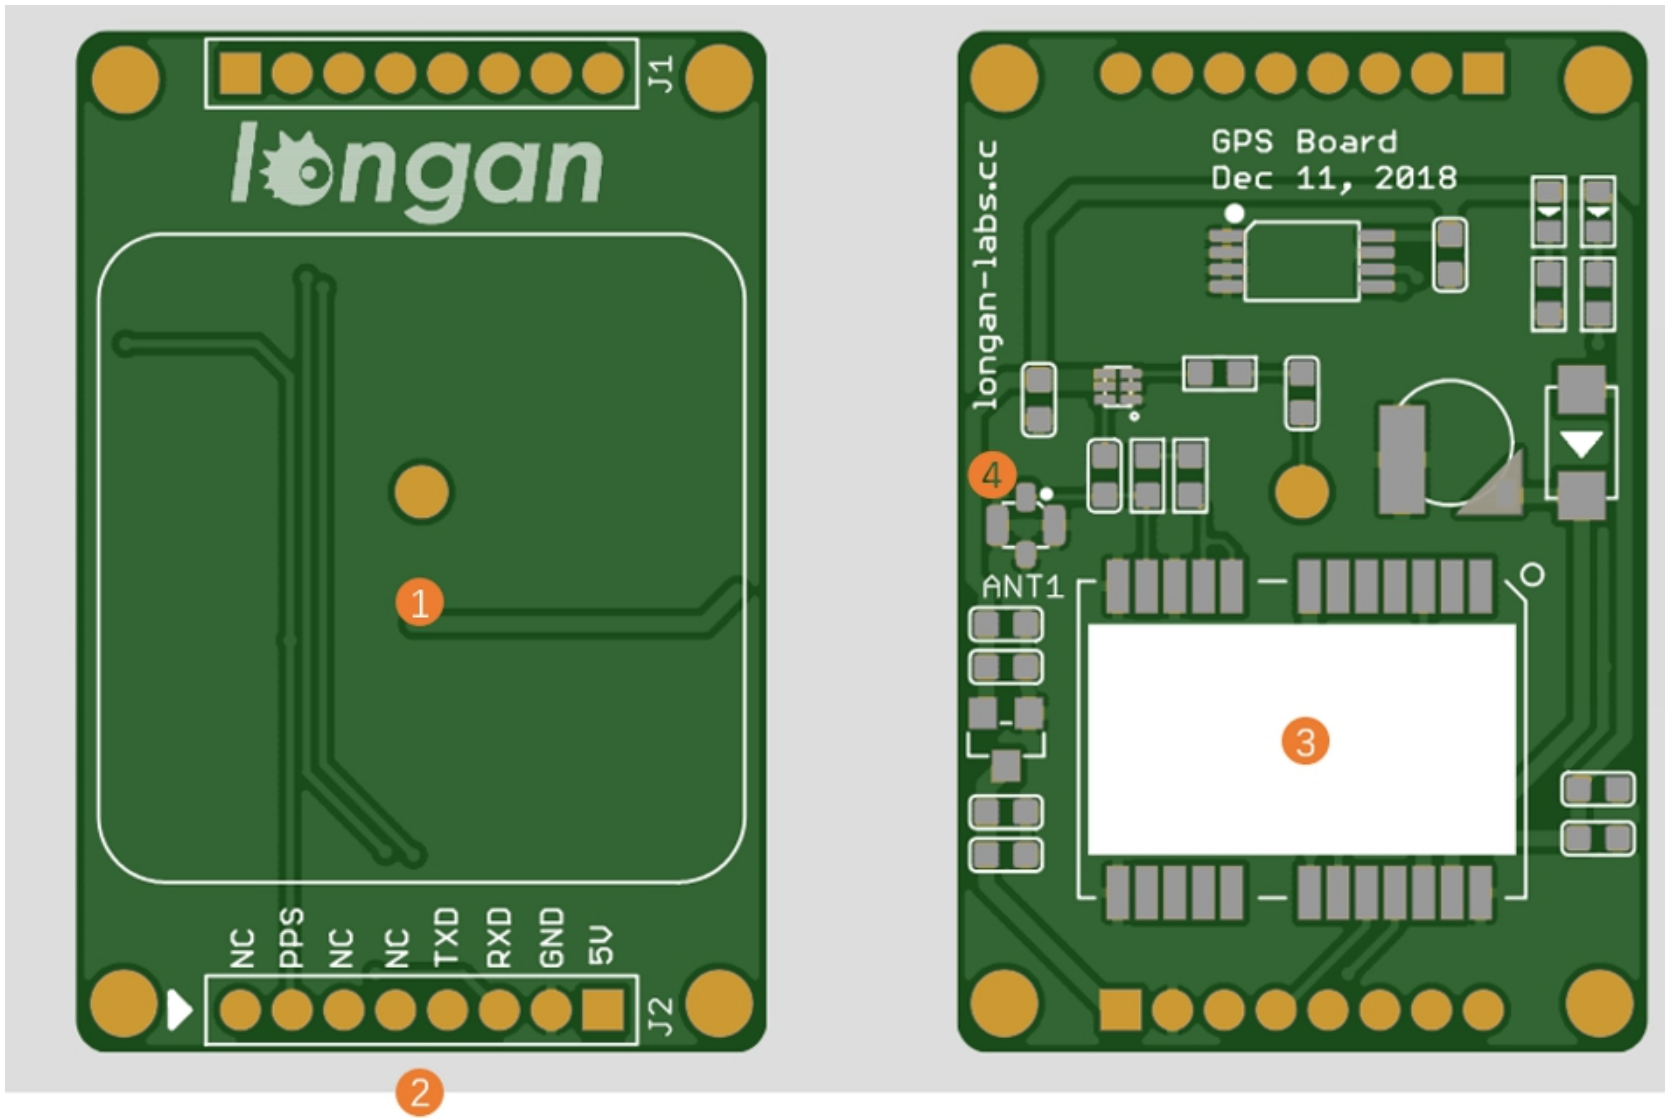

1. GPS Antenna

Dimension(mm): 25x25x4

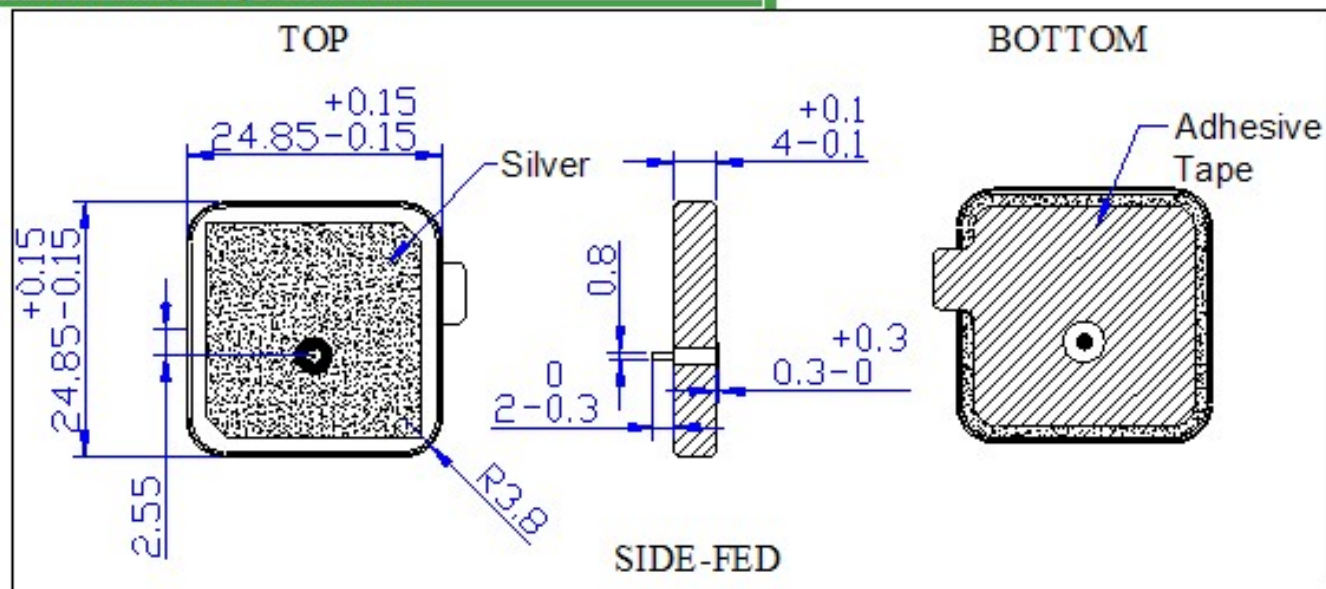

Specification

Center Frequency(MHz)	1575±3
-10dB Bandwidth(MHz)	16 min
Gain at Zenith (dBic)	5 typ.
SWR(At Center Frequency)	< 1.5
Polarization	R.H.C.P
Impedance (Ω)	50 typ.
Axial Ratio (dB)	≦ 3
Frequency Temperature Coefficient(ppm/°C)	0±20
Testing contination	70*70 mm Sqare Ground Plane

2.2x8Pin header

3. GPS module

4. External Antenna Port

NEO-6 modules are designed for use with passive and active13 antennas.

Parameter	Specification
Antenna Type	Passive and active antenna
Minimum gain	15 dB (to compensate signal loss in RF cable)
Maximum gain	50 dB
Maximum noise figure	1.5 dB

Arduino IDE Setup for V2 (RP2040 version)

If you are using the V1 (Atmega32U4 version), please skip this chapter.

First download the Arduino IDE from <https://www.arduino.cc/en/Main/Software>. Arduino IDE can be installed and run on Windows, Linux, and Mac OS X operating systems. Download the installer or zip file (Windows only) and install (if

you have the zip file, extract it to your Windows computer's hard drive) it on your operating system.

Once finished, start the Arduino IDE.


Copy and paste the link below into the Additional Boards Manager URLs option in the Arduino IDE preferences (**File > Preferences**).

```
https://raw.githubusercontent.com/Longan-Labs/Longan-RP2040/main/package\_rp2040\_index.json
```

Once done, click OK button to save the new preference settings.

Now open the Boards Manager by navigating to the **Tools -> Board** menu.

Select All from the Type drop-down menu. Then type longan in the top search bar. While typing, you will see the Longan RP2040 Boards package.

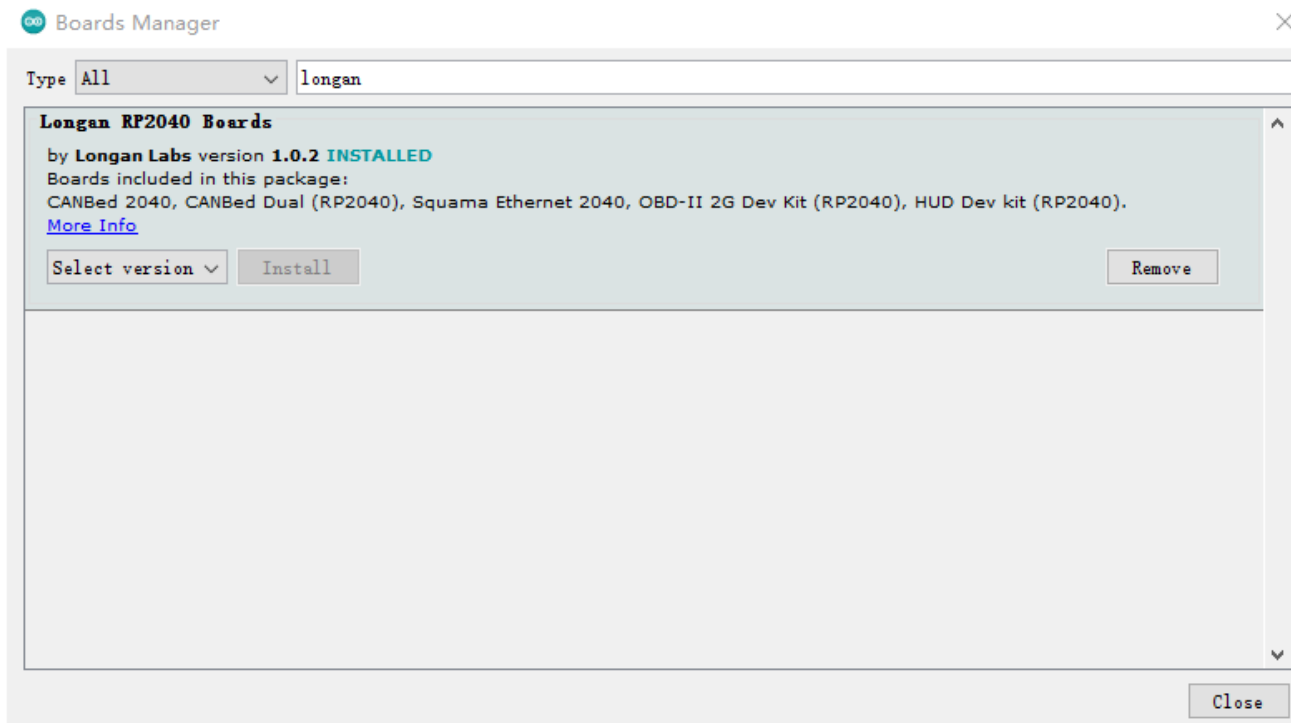

Click on the Longan RP2040 Boards by Longan Labs and then click on Install button.

Once installed, close the Boards Manager window.

Assembly and Hardware Connection

Assembly

It is assembled when you get the development board. If you disassemble it, you can reassemble it by following the steps.


Step 1.

Please check each part.




Step 2.

Mount the base board to the bottom housing.

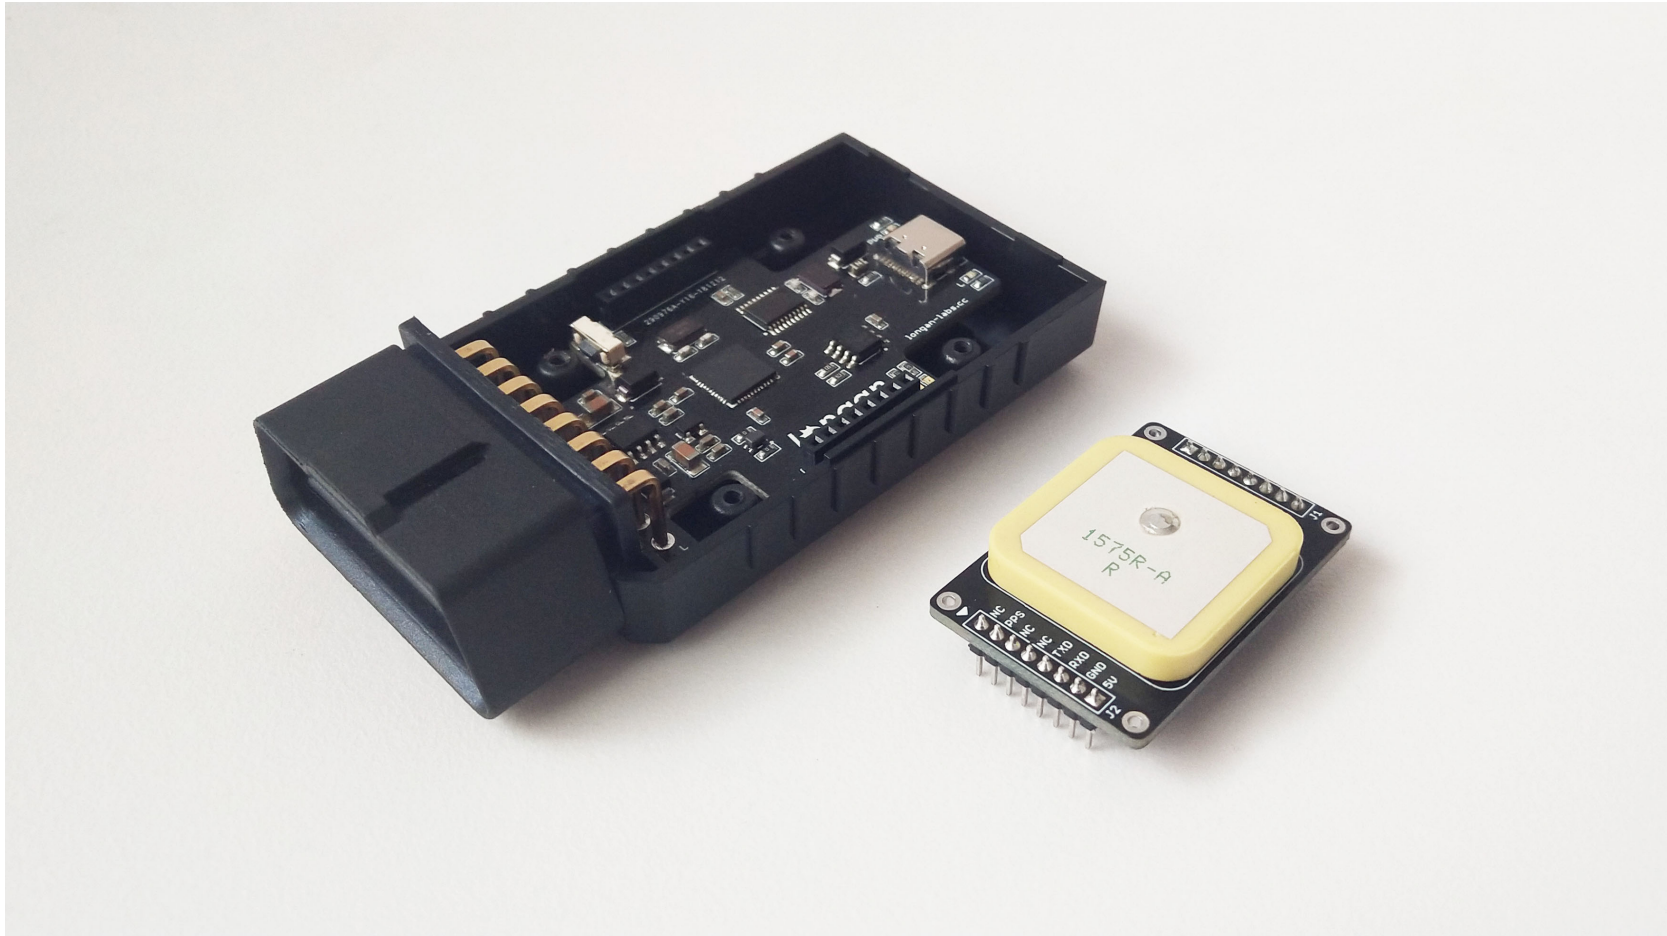

Step 3.

Insert the GPS board on the baseboard.

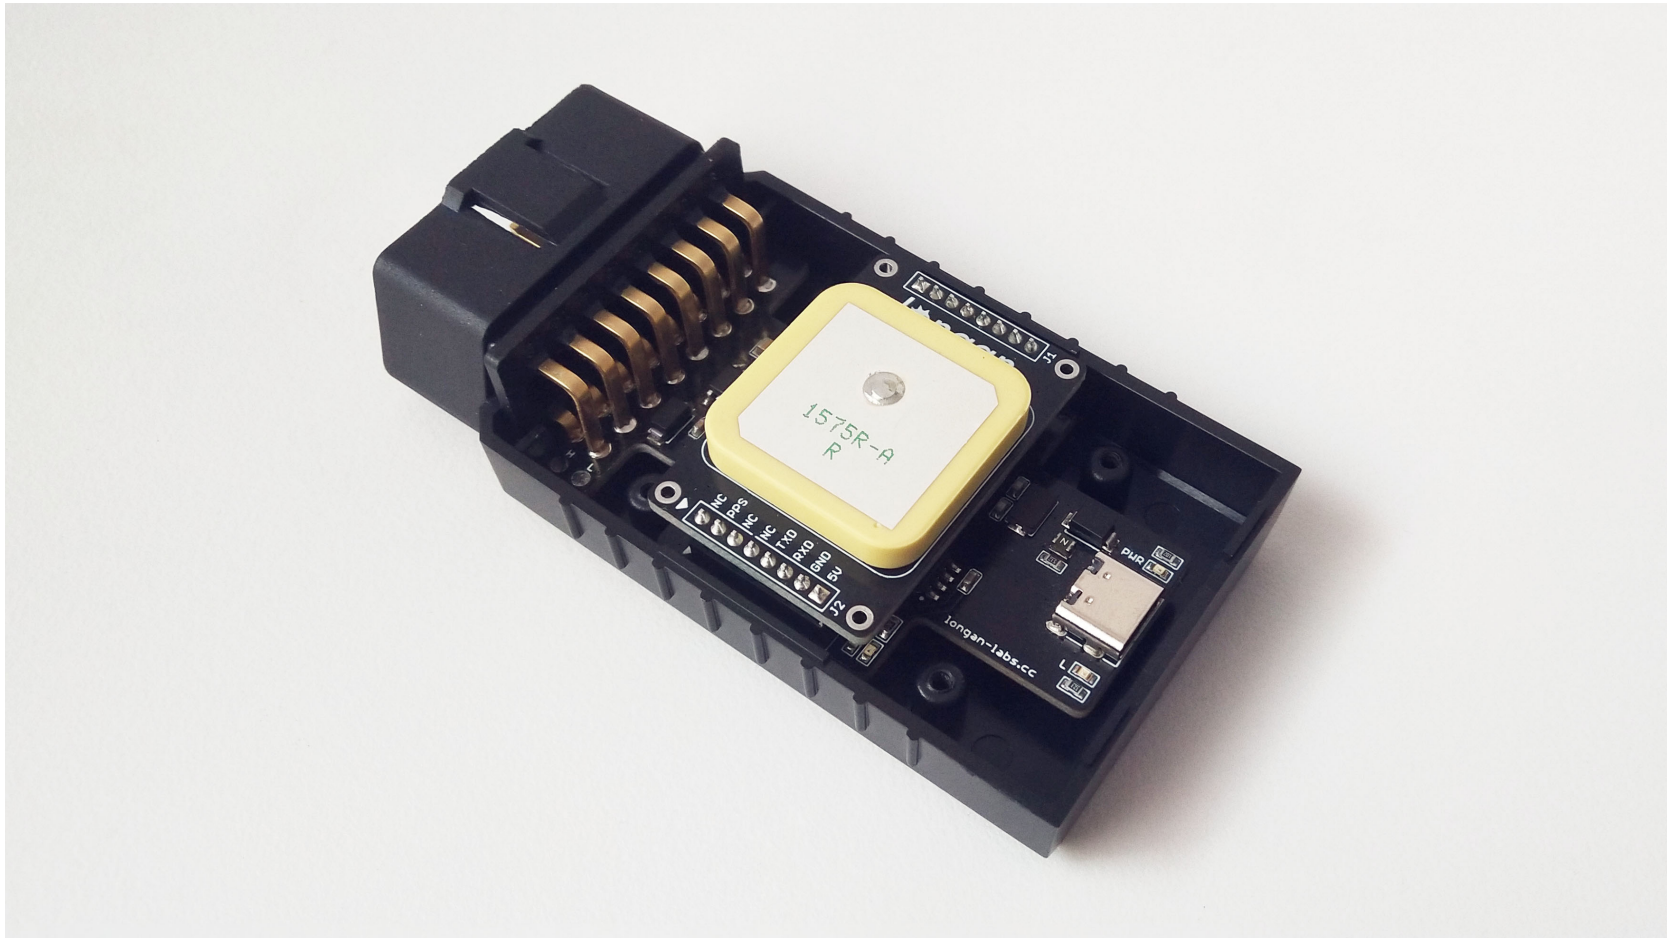

⚠ Attention

When inserting the GPS board, be careful to align the white triangles of the GPS and Base boards.

Step 4.

Close the top cover and fix it with screws.




Get data from a Vehicle

We can use this kit to get data from a vehicle, we take the vehicle speed for an example here.

You can use our products to read data from cars. Here we provide a simple example by which you can read the speed and revs from a car. This is the **OBD-based PIDs protocol**. Regarding the deeper technology of OBD, we can't provide support at present. You may need to have some understanding of the car's protocol. After all, we are more of a hardware supplier.

The interface of OBD is as follows,

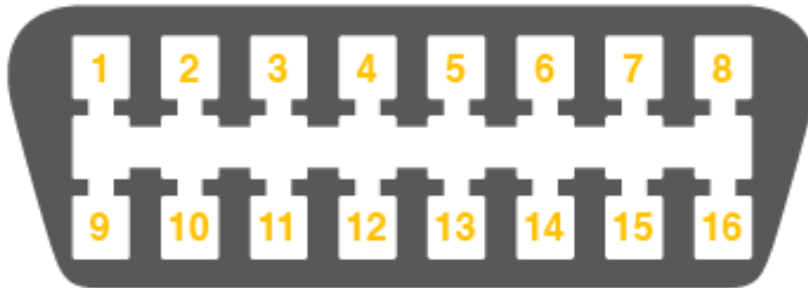

PIN	DESCRIPTION	PIN	DESCRIPTION
1	Vendor Option	9	Vendor Option
2	J1850 Bus +	10	j1850 Bus
3	Vendor Option	11	Vendor Option
4	Chassis Ground	12	Chassis Ground
5	Signal Ground	13	Signal Ground
6	CAN (J-2234) High	14	CAN (J-2234) Low
7	ISO 9141-2 K-Line	15	ISO 9141-2 Low
8	Vendor Option	16	Battery Power

OBD-II Connector and Pinout

Upload the following code to the development board, then open the serial monitor, you get the speed from the car now.

```
#include <SPI.h>
#include "mcp_can.h"

/* Please modify SPI_CS_PIN to adapt to different boards.

CANBed V1          - 17
CANBed M0          - 3
CAN Bus Shield    - 9
CANBed 2040       - 9
CANBed Dual       - 9
OBD-2G Dev Kit   - 9
Hud Dev Kit      - 9
*/

#define SPI_CS_PIN 9

MCP_CAN CAN(SPI_CS_PIN);           // Set CS pin

#define PID_ENGIN_PRM          0x0C
#define PID_VEHCLE_SPEED      0x0D
#define PID_COOLANT_TEMP      0x05

#define CAN_ID_PID            0x7DF

void set_mask_filt()
{
    // set mask, set both the mask to 0x3ff
```

```

CAN.init_Mask(0, 0, 0x7FC);
CAN.init_Mask(1, 0, 0x7FC);

// set filter, we can receive id from 0x04 ~ 0x09

CAN.init_Filt(0, 0, 0x7E8);
CAN.init_Filt(1, 0, 0x7E8);

CAN.init_Filt(2, 0, 0x7E8);
CAN.init_Filt(3, 0, 0x7E8);
CAN.init_Filt(4, 0, 0x7E8);
CAN.init_Filt(5, 0, 0x7E8);
}

void sendPid(unsigned char __pid) {
    unsigned char tmp[8] = {0x02, 0x01, __pid, 0, 0, 0, 0, 0};
    CAN.sendMessageBuf(CAN_ID_PID, 0, 8, tmp);
}

bool getSpeed(int *s)
{
    sendPid(PID_VEHICLE_SPEED);
    unsigned long __timeout = millis();

    while(millis()-__timeout < 1000) // 1s time out
    {
        unsigned char len = 0;
        unsigned char buf[8];

        if (CAN_MSGAVAIL == CAN.checkReceive()) { // check if get data
            CAN.readMessageBuf(&len, buf); // read data, len: data length, buf: data buf
        }
    }
}

```

```

        if(buf[1] == 0x41)
        {
            *s = buf[3];
            return 1;
        }
    }
}

return 0;
}

const int pinPwrCtrl = 12;           // for RP2040 verison
//const int pinPwrCtrl = A3;        // for Atmega32U4 version

void setup() {
    Serial.begin(115200);
    while(!Serial);

    pinMode(pinPwrCtrl, OUTPUT);     // Enable power for GPS and CAN Bus
    digitalWrite(pinPwrCtrl, HIGH);

    while (CAN_OK != CAN.begin(CAN_500KBPS)) {           // init can bus : baudrate = 500k
        Serial.println("CAN init fail, retry...");
        delay(100);
    }
    Serial.println("CAN init ok!");
    set_mask_filt();
}

void loop() {

    int __speed = 0;

```

```
int ret = getSpeed(&__speed);
if(ret)
{
    Serial.print("Vehicle Speed: ");
    Serial.print(__speed);
    Serial.println(" kmh");
}
delay(500);
}

// END FILE
```

If you want to get other data by PIDs, you can refer to the above example, and refer to [this link](#)

GPS Usage

The GPS Module use serial port to output the GPS data, you just need to connect this module to your PC via the USB type C cable, using any serial tool such as putty, you will be able to get the GPS data.

Please upload below code to the board,

```
const int pinPwrCtrl = 12;    // for RP2040 verison
//const int pinPwrCtrl = A3;    // for Atmega32U4 version
void setup()
{
    pinMode(pinPwrCtrl, OUTPUT);
    digitalWrite(pinPwrCtrl, HIGH);    // power on
```

```
Serial.begin(9600);  
Serial1.begin(9600);  
}  
  
void loop()  
{  
  while(Serial1.available())  
  {  
    Serial.write(Serial1.read());  
  }  
}  
  
// END FILE
```

The open your serial monitor,

SSCOM V5.13.1 Serial/Net data debugger, Author: Tintin, 2618058@qq.com

PORT COM_Settings Display Send_Data Multi_Strings Tools Help

```

ENNA OPEN*25
$GPGGA, 131302.533, , , , 0, 00, 25.5, , , , , *63
$GPGLL, , , , 131302.533, V, M*7E
$GPGSA, A, 1, , , , , , 25.5, 25.5, 25.5*02
$GPGSV, 1, 1, 01, 07, , , 31*7D
$GPRMC, 131302.533, V, , , , , 261218, , , M*47
$GPVTG, , , , , , M*33
$GPZDA, 131302.533, 26, 12, 2018, 00, 00*5D
$GPTXT, 01, 01, 01, ANTENNA OPEN*25
$GPGGA, 131303.533, , , , 0, 00, 25.5, , , , , *62
$GPGLL, , , , 131303.533, V, M*7F
$GPGSA, A, 1, , , , , , 25.5, 25.5, 25.5*02
$GPGSV, 1, 1, 01, 07, , , 31*7D
$GPRMC, 131303.533, V, , , , , 261218, , , M*46
$GPVTG, , , , , , M*33
$GPZDA, 131303.533, 26, 12, 2018, 00, 00*5C
$GPTXT, 01, 01, 01, ANTENNA OPEN*25
$GPGGA, 131304.533, , , , 0, 00, 25.5, , , , , *65
$GPGLL, , , , 131304.533, V, M*78
$GPGSA, A, 1, , , , , , 25.5, 25.5, 25.5*02
$GPGSV, 1, 1, 01, 07, , , 31*7D
$GPRMC, 131304.533, V, , , , , 261218, , , M*41
$GPVTG, , , , , , M*33
$GPZDA, 131304.533, 26, 12, 2018, 00, 00*5B
$GPTXT, 01, 01, 01, ANTENNA OPEN*25
$GPGGA, 131305.533, , , , 0, 00, 25.5, , , , , *64
$GPGLL, , , , 131305.533, V, M*79
$GPGSA, A, 1, , , , , , 25.5, 25.5, 25.5*02
$GPGSV, 1, 1, 01, 07, , , 31*7D
$GPRMC, 131305.533, V, , , , , 261218, , , M*40
$GPVTG, , , , , , M*33
$GPZDA, 131305.533, 26, 12, 2018, 00, 00*5A

```

ClearData OpenFile D:\Setup\Tools\Crack\sscom51\sscom51.ini SendFile Stop ClearSend OnTop English SaveConfig EXT

ComNum COM4 USB Serial Device HEXShow SaveData ReceivedToFile SendHEX SendEvery: 1000 ms/Tim AddCrLf

OpenCon More Settings Show Time and Packe OverTime: 20 ms No 1 BytesTo 末尾 Verify None

RTS DTR BaudRat, 115200 AT

SEND

www.daxia.com S:0 R:1658 COM4 Closed 115200bps,8,1,None,None

CAN BUS Usage

Arduino Code

We provide an arduino [library for the dev board](#).

There're many examples for the library, which is consist of,

- **send** - How to send a frame to CAN Bus
- **recv** - How to recv a frame from CAN Bus

HOW TO GET DATA FROM THE CAR

There's an **OBDII_PIDs** sketch in the library. Open the sketch and upload it to the board.

Then open the serial monitor, input a PID, then you will get reponse from vehicle, the input should be end with '\n'.

Reference

- [Base board eagle file for Atmega32U4 version](#)
- [Base board eagle file for RP2040 version]
- [GPS board eagle file](#)
- [Arduino Library](#)
- [NEO-6 Datasheet](#)