

will instantly shut off. To reset, simply place the heater in an upright position and press the mode button to reactivate the unit.

TRANSPORTING THE UNIT

Locate the pull down handle (C) above the control panel. Pull down to release and then grasp the handle. Pull the unit using the handle ensuring that all castors are in contact with the floor.

 
NOTE: Do not use handle to lift the product .

STORAGE TIPS

If the heater is not required for long periods, for example during the summer, it should be stored at room temperature; in a dry place and preferably covered to prevent the accumulation of dust and dirt.

FITTING A REPLACEMENT PLUG FOR U.K. AND IRELAND ONLY.

If the plug is not suitable for the socket outlets in your home, it can be removed and replaced by a plug of the correct type. For correct type and correct installation please refer to “Installation of a plug” below.

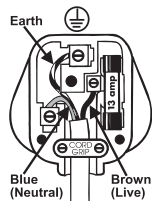

INSTALLATION OF A PLUG – Applicable to U.K. and Ireland.

NOTE: If you are in any doubt about wiring and the installation of the plug. Please contact a qualified electrician.

NOTE: If a 13A 3-pin plug is fitted, it must be an ASTA approved plug, conforming to the BS1363 standard. Replacement 13 amp fuse must also be BSI or ASTA approved.

The wires in this mains lead are coloured as such:
GREEN & YELLOW - Earth
BROWN - Live
BLUE - Neutral

Please note that the colour of these mains wires may not correspond with the colour markings that identify the terminals in your plug.

Please proceed as follows:

- The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter E (⊕) or is coloured GREEN, or GREEN & YELLOW.
- The BROWN coloured wire must be connected to the pin terminal, which is marked with the letter L (Live) or is coloured RED.
- The BLUE coloured wire must be connected to the pin terminal which is marked with the letter N (Neutral) or is coloured BLACK.
- **DO NOT CONNECT** either of these wires to the earth terminal in the plug. The earth terminal is marked with the letter E (⊕) or is coloured GREEN, or GREEN & YELLOW.

GUARANTEE

Please keep your receipt as this will be required for any claims under this guarantee.

This appliance is guaranteed for 5 years after your purchase as described in this document.

During this guaranteed period, if in the unlikely event the appliance no longer functions due to a design or manufacturing fault, please take it back to the place of purchase, with your till receipt and a copy of this guarantee.

The rights and benefits under this guarantee are additional to your statutory rights, which are not affected by this guarantee. Only Holmes Products (Europe) Ltd. (“Holmes”) has the right to change these terms.

Holmes undertakes within the guarantee period to repair or replace the appliance, or any part of appliance found to be not working properly free of charge provided that:

- you promptly notify the place of purchase or Holmes of the problem; and
- the appliance has not been altered in any way or subjected to damage, misuse, abuse, repair or alteration by a person other than a person authorised by Holmes.

Faults that occur through, improper use, damage, abuse, use with incorrect voltage, acts of nature, events beyond the control of Holmes, repair or alteration by a person other than a person authorised by Holmes or failure to follow instructions for use are not covered by this guarantee. Additionally, normal wear and tear, including, but not limited to, minor discoloration and scratches are not covered by this guarantee.

The rights under this guarantee shall only apply to the original purchaser and shall not extend to commercial or communal use.

If your appliance includes a country-specific guarantee or warranty insert please refer to the terms and conditions of such guarantee or warranty in place of this guarantee or contact your local authorized dealer for more information.

This marking indicates that this product should not be disposed with other household wastes and should be disposed separately throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal due to the presence of hazardous substances within the product, recycle it responsibly to promote the sustainable reuse of materials and resources. To return your used device, please use the return and collection systems available to you or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Holmes Products (Europe) Limited
1 Francis Grove
London
SW19 4DT
UK



**Holmes Products (Europe) Ltd.
1 Francis Grove
London SW19 4DT
England**

Fax: +44 (0)20 8947 8272

Email: enquiriesEurope@jardencs.com

UK - Filter Sales Order Line - 0870 759 9000

Website address: www.bionaire.com

UK - Free phone Customer Service Helpline – 0800 052 3615



pure indoor living



OIL FILLED
RADIATOR

MODEL# BOH2503D



© 2010 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved.
Distributed by Holmes Products (Europe) Ltd., 1 Francis Grove, London SW19 4DT, United Kingdom. Printed in PRC

© 2010 Sunbeam Products, Inc. faisant affaires sous le nom de Jarden Consumer Solutions. Tous droits réservés.
Distribué par Holmes Products (Europe) Ltd., 1 Francis Grove, London SW19 4DT, United Kingdom. Imprimé en RPC

SPR-051010

P/N: 138197

BOH2503D

Fig. 1

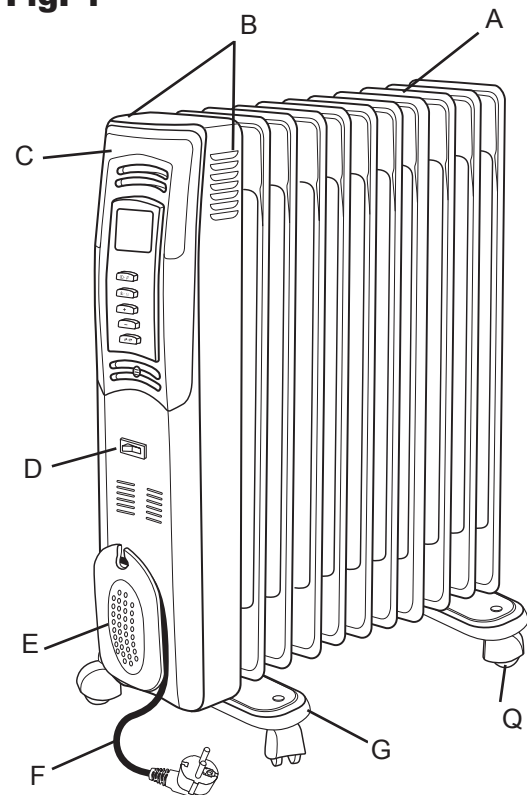 


Fig. 2


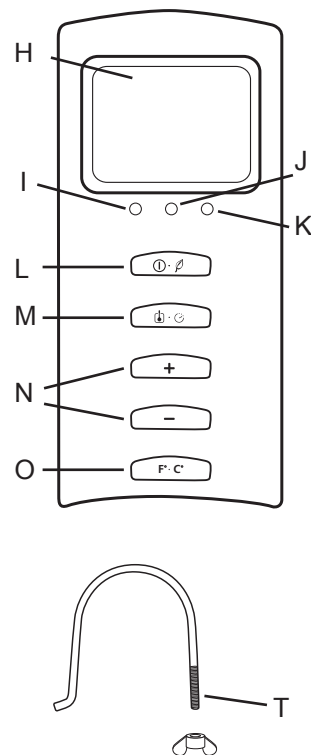 


Fig. 3

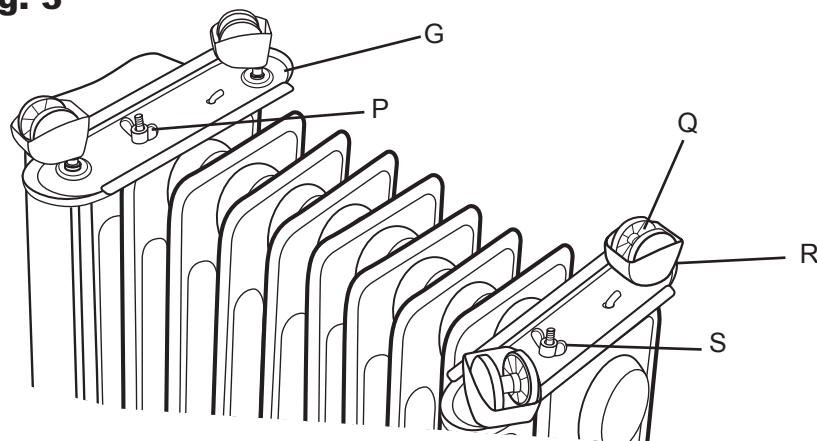 

U.K. and IRELAND

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Before connecting the heater, check that the voltage indicated on the rating plate corresponds to the main voltage in your home/office.
2. **WARNING:** In order to avoid overheating, do not cover the heater (☹) Reference to product.
3. DO NOT position the heater directly under a power socket.
4. DO NOT use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
5. If the supply cord or plug is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid hazard. The heater contains no user serviceable parts. Should the product suffer damage or breakdown, it must be returned to the manufacturer or their service agent.
6. Under the environment with electrical fast transient, the product may malfunction.
7. DO NOT use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
8. Only touch the heater with dry hands.
9. DO NOT use this heater outdoors.
10. DO NOT position where it can be touched by children, especially the very young.
11. Allow a safe area around the heater away from furniture or other objects; at least 50 cm from the top and sides and 200 cm at the front. The heater is to be placed at least 3m from water source.
12. DO NOT use this heater when it is lying on its side.
13. DO NOT use the heater in rooms with explosive gas (e.g. petrol) or while using, oxygen, inflammable glue or solvent (e.g. when gluing or varnishing parquet floors, PVC etc.)
14. DO NOT insert any objects into the heater.
15. Keep the mains cord at a safe distance from the main body of the heater.
16. If overheating should occur, the built-in overheating safety device will switch off the heater.
17. DO NOT place the cord under a rug.
18. The heater cannot be used adjacent to curtains or combustible material. Curtains or combustible material may be burned if the heater was installed incorrectly.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have

been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

20. This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak;
21. When scrapping the heater, follow the regulations concerning the disposal of oil.

DESCRIPTIONS (See Fig. 1, 2 & 3)

- A. Heated fins
- B. Vents
- C. Pull down handle
- D. Power switch
- E. Cord Storage
- F. Power cord
- G. Front castor assembly
- H. Digital display
- I. Power light
- J. Mode light
- K. Timer light
- L. Mode button
- M. Thermostat/timer button
- N. Adjuster buttons
- O. °F - °C button
- P. Front wing nut
- Q. Castor
- R. Rear castor assembly
- S. Rear wing nut
- T. U-bolt

Technical Specifications

BOH2503D: Wattage: 2500W

ASSEMBLY INSTRUCTIONS (See Fig. 3)

Please make sure the heater has not been plugged into any electricity outlet. Carefully remove heater from box. Some accessories are packed internally. Please make sure you have all of the following accessories prior to throwing away packaging. 2 Castor assemblies with four castors (R, G, & Q), and 2 U Bolts with wing nuts (T, P, S).

Note: This unit is for FLOOR USE ONLY.

1. Turn the heater upside down and you will see 2 U-bolts (T) with wing nuts over the first and last joint of the heater.
2. Unscrew the wing nuts (S & P) from the U-bolts (T).
3. Start with the front of the unit and place one hole of the front castor assembly (G) to the L shape of the U-bolt (T) and the other hole of the castor assembly into the other end of the U-bolt, then screw on the wing nut (P).
4. Repeat step 3 for the rear castor assembly, using wing nut (N) instead of wing nut (K) and rear castor assemblies (M).
5. Use your hand to press the four casters (L) onto the four axis of the two foot plates until you hear them click into place. Use your hand

to turn the castors and if the move smoothly they have been installed properly.

6. After installation of the front and rear castor assemblies and the castors turn the heater the right way up: the heater is now ready for use.

NOTE: Make sure when assembling that the castor assemblies with wheels are pointing outwards for maximum stability.

OPERATING INSTRUCTIONS (See Fig. 1&2)

1. Ensure the power switch (D) is set to the OFF (O) position.
2. Plug in heater.
3. Flip the power switch to the ON (-) position. The power light (I) will illuminate red until the unit is unplugged.
4. Press the mode button (L) once to activate the unit. The mode light (J) will glow green to indicate the heater is running. The unit will automatically start on Setting 3 (High Heat).
5. Press the mode button until the desired heat setting is shown on the digital display (H).

BOH2503D: 3=2500W, 2=1300W, 1=1200W, ∅=Energy Saving Mode

After using the heater, press the mode button until the unit is deactivated and the mode light turns off, then turn the power switch to the OFF position. Unplug the heater from the socket.

SETTING THE THERMOSTAT

1. Set the desired heat setting by pressing the mode button.
2. Press the thermostat/timer button (M) once to activate thermostat setting. The room temperature and a thermostat icon flash on the display.
3. Press the + or - adjuster buttons (N) to select the desired temperature. (Range 12° C - 30° C)
4. The thermostat symbol will stop flashing. The thermostat control will now automatically maintain the preset temperature level by turning the heater on and off.
5. To deactivate the thermostat setting, press the thermostat/timer button continuously until the thermostat symbol does not appear on the display.

NOTE: The Power light will remain lit during operation.

NOTE: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature.

FROST GUARD INSTRUCTION

When the heater is in frost guard mode, the temperature will be maintained at 5° C; thus the heater will be in the off status unless the room temperature is lower than 5° C. If the room temperature is lower than 5° C, the heater will automatically start working and will keep turning on & off all the time, maintaining its ambient temperature of 5° C. To activate, press the mode button to turn the unit on, then press the

thermostat/timer button twice. The (❄) icon will display to indicate that frost guard is activated.

USING THE TIMER

Programmable timer

The user can programme the heater to turn OFF after a selected period or to come ON at a preset time.

Setting the OFF timer

1. Select the mode and temperature you want the heater to run.
2. Press the thermostat/timer button 3 times. The OFF timer icon flashes.
3. Using either the (+) or (-) adjuster buttons, programme the heater to turn off up to 24 hours later, in increments of 1 hour.

Example - 9 hours

4. After setting the time, the digital display will stop flashing to show the timer is activated. The timer will count down until the predetermined length of time has passed, and the heater will then automatically switch off.

Example - Switch OFF - The time is 1 pm. The heater is running and you require the heater to switch off at 10 pm; therefore, set the time to 9 hours.

Setting the ON timer

1. If the heater is on, press the thermostat/timer control button 4 times. The ON timer icon flashes.
2. Using either the (+) or (-) adjuster buttons, programme the heater to switch on up to 24 hours later, in increments of 1 hour.

Example - 4 hours

3. After setting the ON timer, the digital display will stop flashing to show the timer is activated. The timer will count down until the predetermined period has passed, and then the heater will automatically switch on.

NOTE: When the ON timer is set, the unit will remember the setting the unit was previously on and activate to this setting after the predetermined period. The heat setting may be changed after setting the timer by pressing the mode button.

ENERGY SAVING MODE

To activate, press the mode button until ∅ appears on the display. The heater will operate on a cycle – 10 minutes on High (2500W) and 30 minutes on Medium (1300W). When the temperature is at or above 85°F (30°C), the heater will ignore the 10 minute High setting and operate on Medium for 30 minutes immediately. The cycle repeats while in this mode.

DISPLAY PREFERENCES

The default setting on the digital display is degrees Celsius (°C). To switch to degrees Fahrenheit (°F), press the °F-°C button.

NOTE: Unit must be unplugged for it to be fully off.

TIP OVER PROTECTION

When the unit is accidentally knocked over, or tilts on one side at more than a 45° angle; it