

## EMC filter for variable frequency drives, 3-phase 520 V, 8 A

Part no. **DX-EMC34-008-L**  
 Article no. **184506**  
 Catalog No. **DX-EMC34-008-L**



### Delivery programme

Description			three-phase low leakage current
Mains voltage (50/60Hz)	$U_{LN}$	V	max. 520 + 10%
Rated operational current	$I_e$	A	8
For use with			DE1 DE11 DC1 DA1 DG1
Degree of Protection			IP20
Connection type			Screw terminal, PE stud
Notes			Separate mounting

### Technical data

#### General

Standards			EN 50178, IEC 61800-3, EN 61800-3 incl. A11
Environmental conditions			
Altitude		m	Up to 2000 m a.s.l.; observe drating at higher altitudes
Degree of Protection			IP20

### Design verification as per IEC/EN 61439

Technical data for design verification			
Rated operational current for specified heat dissipation	$I_n$	A	8
Equipment heat dissipation, current-dependent	$P_{vid}$	W	6
Static heat dissipation, non-current-dependent	$P_{vs}$	W	0
Operating ambient temperature min.		°C	-25
Operating ambient temperature max.		°C	50
Degree of Protection			IP20
IEC/EN 61439 design verification			
10.2 Strength of materials and parts			
10.2.2 Corrosion resistance			Meets the product standard's requirements.
10.2.3.1 Verification of thermal stability of enclosures			Meets the product standard's requirements.
10.2.3.2 Verification of resistance of insulating materials to normal heat			Meets the product standard's requirements.
10.2.3.3 Verification of resistance of insulating materials to abnormal heat and fire due to internal electric effects			Meets the product standard's requirements.
10.2.4 Resistance to ultra-violet (UV) radiation			Meets the product standard's requirements.
10.2.5 Lifting			Does not apply, since the entire switchgear needs to be evaluated.
10.2.6 Mechanical impact			Does not apply, since the entire switchgear needs to be evaluated.
10.2.7 Inscriptions			Meets the product standard's requirements.
10.3 Degree of protection of ASSEMBLIES			Does not apply, since the entire switchgear needs to be evaluated.
10.4 Clearances and creepage distances			Meets the product standard's requirements.
10.5 Protection against electric shock			Does not apply, since the entire switchgear needs to be evaluated.
10.6 Incorporation of switching devices and components			Does not apply, since the entire switchgear needs to be evaluated.
10.7 Internal electrical circuits and connections			Is the panel builder's responsibility.

10.8 Connections for external conductors		Is the panel builder's responsibility.
10.9 Insulation properties		
10.9.2 Power-frequency electric strength		Is the panel builder's responsibility.
10.9.3 Impulse withstand voltage		Is the panel builder's responsibility.
10.9.4 Testing of enclosures made of insulating material		Is the panel builder's responsibility.
10.10 Temperature rise		The panel builder is responsible for the temperature rise calculation. Eaton will provide heat dissipation data for the devices.
10.11 Short-circuit rating		Is the panel builder's responsibility. The specifications for the switchgear must be observed.
10.12 Electromagnetic compatibility		Is the panel builder's responsibility. The specifications for the switchgear must be observed.
10.13 Mechanical function		The device meets the requirements, provided the information in the instruction leaflet (IL) is observed.

## Technical data ETIM 6.0

Low-voltage industrial components (EG000017) / Accessories for frequency controller (EC002025)		
Electric engineering, automation, process control engineering / Electrical drive / Electrical drive (accessories) / Frequency controller (accessories) (ecl@ss8.1-27-02-92-01 [ACN127008])		
Type of accessory		Filter

## Approvals

Product Standards		UL 1283
UL File No.		E192040
North America Certification		UL listed, certified by UL for use in Canada

## Additional product information (links)

<b>IL04012018Z*.pdf Radio interference suppression filter for PowerXL</b>	
IL04012018Z*.pdf Radio interference suppression filter for PowerXL	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWA_INSTRUCTIONS/IL04012018Z2016_06.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWA_INSTRUCTIONS/IL04012018Z2016_06.pdf</a>
<b>MN04020005Z DA1 variable frequency drives, Installation manual</b>	
MN04020005Z DA1 variable frequency drives, Installation manual - Deutsch	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020005Z_DE.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020005Z_DE.pdf</a>
MN04020005Z DA1 variable frequency drives, Installation manual - English	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020005Z_EN.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020005Z_EN.pdf</a>
<b>MN04020003Z DC1 variable frequency drives, Installation manual</b>	
MN04020003Z DC1 variable frequency drives, Installation manual - Deutsch	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020003Z_DE.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020003Z_DE.pdf</a>
MN04020003Z DC1 variable frequency drives, Installation manual - English	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020003Z_EN.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020003Z_EN.pdf</a>
MN04020003Z DC1 variable frequency drives, Installation manual - čeština	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020003Z_CZ.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020003Z_CZ.pdf</a>
MN04020003Z DC1 variable frequency drives, Installation manual - italiano	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020003Z_IT.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN04020003Z_IT.pdf</a>
<b>MN040011 DE1 Variable speed starter, Manual</b>	
MN040011 DE1 Variable speed starter, Manual - Deutsch	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_DE.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_DE.pdf</a>
MN040011 DE1 Variable speed starter, Manual - English	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_EN.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_EN.pdf</a>
MN040011 DE1 Variable speed starter, Manual - français	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_FR.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_FR.pdf</a>
MN040011 DE1 Variable speed starter, Manual - italiano	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_IT.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_IT.pdf</a>
MN040011 DE1 Variable speed starter, Manual - nederlands	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_NO.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_NO.pdf</a>
MN040011 DE1 Variable speed starter, Manual - polski	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_PL.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_PL.pdf</a>
MN040011 DE1 Variable speed starter, Manual - русский	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_RU.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040011_RU.pdf</a>
<b>MN040002 PowerXL DG1 Series VFD, Installation Manual</b>	
MN040002 PowerXL DG1 Series VFD, Installation Manual - Deutsch	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040002_DE.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040002_DE.pdf</a>
MN040002 PowerXL DG1 Series VFD, Installation Manual - English	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040002_EN.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040002_EN.pdf</a>
MN040002 PowerXL DG1 Series VFD, Installation Manual - français	<a href="ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040002_FR.pdf">ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040002_FR.pdf</a>

MN040002 PowerXL DG1 Series VFD,  
Installation Manual - italiano

[ftp://ftp.moeller.net/DOCUMENTATION/AWB\\_MANUALS/MN040002\\_IT.pdf](ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040002_IT.pdf)

MN040002 PowerXL DG1 Series VFD,  
Installation Manual - polski

[ftp://ftp.moeller.net/DOCUMENTATION/AWB\\_MANUALS/MN040002\\_PL.pdf](ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN040002_PL.pdf)