


Stepper 4 click

PID: MIKROE-2748


Stepper 4 click can be used for driving a stepper motor and controlling its step resolution, rotation direction, and time between the steps. It has output drive capability of **2A**.

The click carries <u>TB67S269FTG</u>, a two-phase bipolar stepping motor driver from Toshiba. Stepper 4 click is designed to run on either 3.3V or 5V power supply. It communicates with the target microcontroller over the following pins on the mikroBUS™ line: AN, RST, CS, PWM, INT.

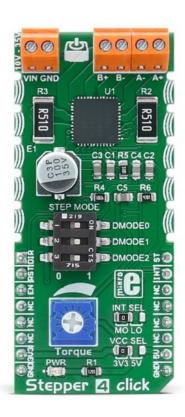

How the click works

There is a connector with two screw terminals used for connecting external DC supply.

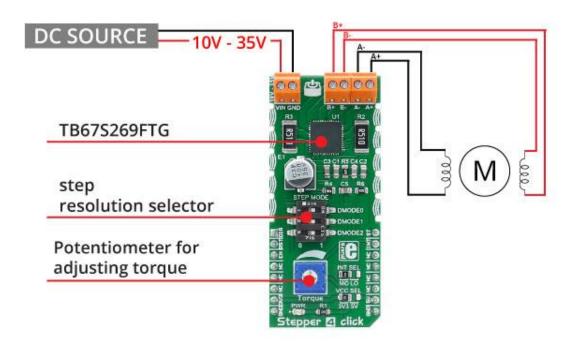


The other four connectors are used for connecting the stepper motor to the click. After a motor is connected, it can be controlled by the MCU through the Stepper 4 click.

The onboard potentiometer is used to set the motor's torque.

TB67S269FTG features

The TB67S269 is a two-phase bipolar stepping motor driver from Toshiba.

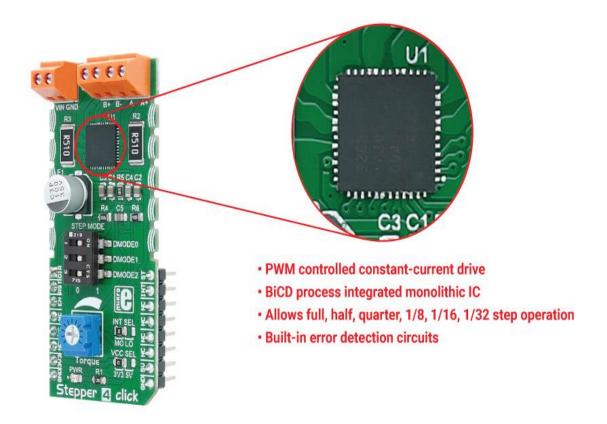

Step mode selector

There are several different resolutions a stepper motor can use - a full step, half a step, etc. The driver on this click also allows different resolutions, from a full step to 1/32 of a step.

DMODE0	DMODE1	DDMODE2	Function
0	0	0	Standby mode (the OSCM is disabled and the output stage is set to 'OFF' status)
0	0	1	Full step resolution
0	1	0	Half step resolution (Type(B))
0	1	1	Quarter step resolution
1	0	0	Half step resolution (Type (B))
1	0	1	1/8 step resolution
1	1	0	1/16 step resolution
1	1	1	1/32 step resolution

Specifications

Туре	Stepper
Applications	The click is designed for driving bipolar step motors in full, 1/2, 1/4, 1/8, 1/16, 1/32 step modes
On-board modules	TB67S269FT CLOCK-in controlled bipolar stepping motor driver, three pairs of screw terminals, potentiometer
Interface	GPIO
Input Voltage	3.3V or 5V
Click board size	L (57.15 x 25.4 mm)

Pinout diagram

This table shows how the pinout on Stepper 4 click corresponds to the pinout on the mikroBUS $^{\text{TM}}$ socket (the latter shown in the two middle columns).

Notes	Pin	♥ ♥ mikro™ • • • BUS			Pin	Notes	
Rotation direction	DIR	1	AN	PWM	16	ST	Stepping pin
Reset	RST	2	RST	INT	15	INT	Interrupt
Enable pin	EN	3	CS	TX	14	NC	
	NC	4	SCK	RX	13	NC	
	NC	5	MISO	SCL	12	NC	
	NC	6	MOSI	SDA	11	NC	
Power supply	+3.3V	7	3.3V	5V	10	+5V	Power supply
Ground	GND	8	GND	GND	9	GND	Ground

Jumpers and settings

Designator	Name	Default Position	Default Option	Description
VCC SEL	VCC SEL	Left	3V3	Power supply selection, left position 3V3,right position 5V
INT SEL	INT SEL	Left	MO	Interrupt pin selection, left position MO,right position LO