robot a coupe NEW Register Your product on line







R 101 XL


R 201 XL

R 211 XL R 201 XL Ultra R 211 XL Ultra

www.robot-coupe.com



Register your product on line

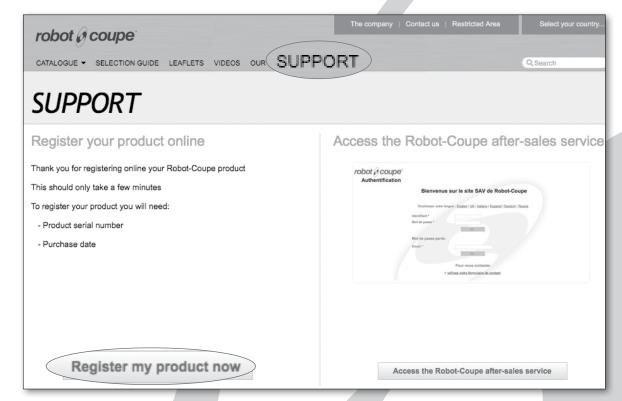

robot a coupe®





DECLARATION OF CONFORMITY

Declares that the machines identified by their type above, comply with:

- The essential requirements of the following European directives and with the corresponding national regulations:
 - Directive «Machinery» 2006/42/EC,
 - Directive «Low voltage» 2014/35/EU,
 - Directive «Electromagnetic compatibility» 2014/30/EU,
 - Regulation (EC) n°1935/2004 «Materials and articles intended to come into contact with food».
 - Regulation (EU) n°10/2011 «Plastic materials and articles intended to come into contact with food»,
 - Directive «Reduction of Hazardous Substances (RoHS) 2002/95/EC,
 - Directive «WEEE» 2012/19/EU,
- The requirements of the European harmonized standards and with the standards specifying the hygiene and safety requirements:

- EN ISO 12100: 2010: Safety of machinery General principles for design,
- EN 60204-1 -2006: Safety of machinery Electrical equipment of machines,
- EN 12852: Food Processors and Blenders.
- EN 1678-1998: Vegetable Cutting Machines,
- EN 454 + A1 2010-02: Blender-Mixers.
- EN 12853: Hand-held Blenders and Whisks (stick blenders).
- EN 14655: Bread Slicers.
- EN 13208: Vegetable Preparation Machines,
- EN 13621: Salad Spinners,
- EN 60529-2000: Degrees of protection,
- IP 55 for the electrical controls,
- IP 34 for the machines.

Montceau en Bourgogne on 4 March 2016

Alain NODFT Industrial Director



SUMMARY

WARRANTY

IMPORTANT WARNING

INTRODUCTION TO YOUR

NEW FOOD PROCESSOR

R 101 XL • R 201 XL • R 201 XL Ultra

R 211 XL • R 211 XL Ultra

SWITCHING ON THE MACHINE

- Advices on electrical connections
- Control panel

ASSEMBLY

- Cutter attachment
- Vegetable preparation attachment

USE & EXAMPLES

- Cutter attachment
- Vegetable preparation attachment

OPTIONS

- Serrated blade
- Slightly serrated blade

CLEANING

- Motor base
- Cutter attachment
- Vegetable preparation attachment
- Blade

MAINTENANCE

- Blade
- Bowl locating plates

TECHNICAL SPECIFICATIONS

- Weight
- Dimensions
- Working height
- Noise level
- Electrical data

SAFETY

STANDARDS

TECHNICAL DATA

- Exploded views
- Electric diagram

ROBOT-COUPE S.N.C., LIMITED WARRANTY

Your new ROBOT-COUPE appliance is warranted to the original buyer for a period of one year from the date of sale if you bought it from ROBOT-COUPE s.n.c.

If you bought your ROBOT-COUPE product from a distributor your product is covered by your distributor's warranty (Please check with your distributor terms and conditions of the warranty).

The ROBOT-COUPE s.n.c. limited warranty is against defects in material and/or workmanship.

THE FOLLOWING ARE NOT COVERED BY THE ROBOT-COUPE s.n.c. WARRANTY:

1 - Damage caused by abuse, misuse, dropping, or other similar damage caused by or resulting from failure to follow assembly, operating, cleaning, user maintenance or storage instructions.

- **2** Labour to sharpen and/ or replacements for blades which have become blunt, chipped or worn after a normal or excessive period of use.
- **3** Materials or labour to replace or repair scratched, stained, chipped, pitted, dented or discoloured surfaces, blades, knives, attachments or accessories.
- **4** Any alteration, addition or repair that has not been carried out by the company or an approved service agency.
- **5** Transportation of the appliance to or from an approved service agency.
- **6** Labour charges to install or test new attachments or accessories (i.e., bowls, discs, blades, attachments) which have been arbitrarity replaced.
- **7 -** The cost of changing direction-of-rotation of three-phase electric motors (installer is responsible).

8 - SHIPPING DAMAGES. Visible and latent defects are the responsibility of the freight carrier. The consignee must inform the carrier and consignor immediately, or upon discovery in the case of latent defects.

KEEP ALL ORIGINAL CONTAINERS AND PACKING MATERIALS FOR CARRIER INSPECTION.

Neither ROBOT-COUPE s.n.c. nor its affiliated companies or any of its distributors, directors, agents, employees, or insurers will be liable for indirect damage, losses, or expenses linked to the appliance or the inability to use it.

The ROBOT-COUPE s.n.c. warranty is given expressly and in lieu of all other warranties, expressed or implied, for merchantability and for fitness toward a particular purpose and constitutes the only warranty made by ROBOT-COUPE s.n.c. France.

M WARNING

Keep these instructions in a safe place

IMPORTANT WARNING

WARNING: In order to limit accidents such as electric shocks or personal injury, and in order to limit material damage due to misuse of the appliance, please read these instructions carefully and follow them strictly. Reading the operating instructions will help you get to know your appliance and enable you to use the equipment correctly. Please read these instructions in their entirety and make sure that anyone else who may use the appliance also reads them beforehand.

UNPACKING

- Carefully remove the equipment from the packaging and take out all the boxes or packets containing attachments or specific items.
- WARNING some of the tools are very sharp e.g. blades, discs... etc.

INSTALLATION

• We recommend you install your machine on a perfectly stable solid base.

CONNECTION

- Always check that your mains supply corresponds to that indicated on the identification plate on the motor unit and that it can withstand the amperage.
- The machine must be earthed.

HANDLING

• Always take care when handling the blades, as they are extremely sharp.

ASSEMBLY PROCEDURES

• Follow the various assembly procedures carefully (see page 16) and make sure that all the attachments are correctly positioned.

USE

- Never try to override the locking and safety systems.
- Never insert an object into the container where the food is being processed.
- Never push the ingredients down with your hand.
- Do not overload the appliance.
- Never switch the appliance on when it is empty.

CLEANING

- As a precaution, always unplug your appliance before cleaning it.
- Always clean the appliance and its attachments at the end of each cycle.
- Never immerse the motor unit in water.
- For parts made from aluminum, use cleaning fluids intended for aluminum.

- For plastic parts, do not use detergents that are too alkaline (e.g., containing too much caustic soda or ammonia).
- Robot-Coupe can in no way be held responsible for the user's failure to follow the basic rules of cleaning and hygiene.

MAINTENANCE

- Before opening the motor housing, it is absolutely vital to unplug the appliance.
- Check the seals and washers regularly and ensure that the safety devices are in good working order.
- It is particularly important to maintain and check the attachments since certain ingredients contain corrosive agents, e.g. citric acid.
- Never operate the appliance if the power cord or plug has been damaged or if the appliance fails to work properly or has been damaged in any way.
- Do not hesitate to contact your local Maintenance
 Service if something appears to be wrong.

INTRODUCTION TO YOUR NEW FOOD PROCESSOR R 101 XL • R 201 XL Ultra • R 211 XL • R 211 XL Ultra

The R 101 XL, R 201 XL, R 201 XL Ultra, R 211 XL, R 211 XL Ultra are perfectly geared to professional needs. They can perform numerous tasks which you will gradually discover as you use your machine needs especially for Small-scale catering and takeaway outlets.

The R 101 XL, R 201 XL, and R 211 XL Ultra consist of a cutter bowl and vegetable preparation lid with ejection into the bowl.

The R 211 XL, and R 211 XL Ultra consist of a cutter and of a vegetable preparation attachments.

In cutter mode, they can be used to process meat, vegetables, fine stuffing, mousse, grinding, kneading,... in less than 5 minutes for even the longest tasks.

In the vegetable preparation version, the devices have a wide range of discs for thin julienne slicing and for the grating of vegetables.

The outstanding results coming out of your machine will soon introduce you to a whole new world of culinary skills and possibilities.

Thanks to their simple design both attachments can be easily fitted and removed.

This manual contains important information designed to help the user get the most out of his/her Food Processor.

We therefore recommend that you read the following carefully before using your machine.

We have also included a few examples to help you get the feel of your new machine and appreciate its numerous advantages.

We therefore recommend that you read the following carefully before using your machine.

We have also included a few examples to help you get the feel of your new machine and appreciate its numerous advantages.

SWITCHING ON THE MACHINE

A

WARNING

THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET (RISK OF ELECTROCUTION).

ADVICES ON ELECTRICAL CONNECTIONS

Before plugging in, check that your power supply corresponds to that indicated on the machine's identification plate.

These ROBOT-COUPE machines are fitted with various types of motors:

230 V/ 50 Hz / 1 115 V/ 60 Hz / 1 220 V/ 60 Hz / 1

The machine has a single-phase plug connected to a power machine cord.

CONTROL PANEL

R 101 XL:

Red switch = off switch

Green switch = on switch

R 201 XL • R 201 XL Ultra R 211 XL • R 211 XL Ultra

Red switch = off switch

Green switch = on switch

Black switch = Pulse switch

ASSEMBLY

BOWL CUTTER ATTACHMENT

1) The motor base facing you make sure that the bowl is straight to the motor shaft and that the safety bar is slightly moved to your left.





R 101 XL - R 201 XL - R 201 XL Ultra

R 211 XL - R 211 XL Ultra

2) Turn the safety bar to the right until the motor base connectors are securely positioned in their sockets. The safety bar should then be in front of you.





R 101 XL - R 201 XL - R 201 XL Ultra

R 211 XL - R 211 XL Ultra

3) Place the knife on the motor shaft and lower it right down to the bottom of the bowl.

Make sure that it is correctly positioned by making it rotate inside the bowl.





R 101 XL - R 201 XL - R 201 XL Ultra

R 211 XL - R 211 XL Ultra

4) Place the lid on the bowl and make it rotate to the right until it clicks.







R 101 XL

R 201 XL - R 201 XL Ultra R 211 XL - R 211 XL Ultra

Once contact is made your machine is ready for use.

VEGETABLE PREPARATION ATTACHMENT R 101 XL, R 201 XL and R 201 XL Ultra

Follow the same procedure as for the cutter attachment for points 1) and 2).

3) Fit the extension piece onto the motor shaft.





R 101 XI

R 201 XL - R 201 XL Ultra

4) Fit the disc of your choice onto the extension piece.





R 101 XL R 201 XL - R 201 XL Ultra

5) Place the lid on the bowl so that the large feedhopper is facing you.

Close the lid by rotating to the right until it locks.





R 201 XL - R 201 XL Ultra

R 211 XL - R 211 XL Ultra

R 211 XL and R 211 XL Ultra:

The vegetable preparation attachment consists of two detachable parts: the vegetable preparation bowl and the lid.

1) The motor unit facing you, fit the bowl onto it: the ejection chute should be at the back of the machine



2) Turn the bowl to the right until the motor unit connectors are securely positioned in their sockets.



3) Place the plastic discharge plate on motor shaft and check that it is properly positioned down the bowl.



4) Then choose the disc you want to use and place it onto the discharge plate.



5) Place the lid on the bowl and make it rotate to the right until the lid clicks.



USES & EXAMPLES

CUTTER ATTACHMENT

The cutter will enable you to perform all your cutting tasks very quickly, we recommend therefore that you keep a close eye on the mixture in order to obtain the desired results.

The pulse control allows you to stop and start the machine for high-precision control when working with certain types of ingredients.

The cutter attachment has numerous other applications. The above quantities and times are approximate and may vary according to the quality of the ingredients and recipes.

USES	Max. processing quantity (in kg)	Time (in min.)	
СНОР			
• MEAT			
Hamburger / steak tartare	0.7	3	
Sausage meat / tomatoes	0.8	3	
Terrine / pâté	0.8	4	
• FISH			
Brandade	0.9	5	
Terrines	0.9	5	
• VEGETABLES			
Garlic/parsley/onion/shalotts	0.2 / 0.5	3	
Soup/purées	1	4	
• FRUITS			
Compotes/purées	1	4	

USES	Max. processing quantity (in kg)	Time (in min.)
EMULSIFY		
Mayonnaise/ailloli/rémoulade sauce	1	3
Snail or salmon butter	0.8	4
KNEAD		
Shortcrust pastry/shortbread	1	4
Pizza dough	1	4
GRIND		
Dried fruit	0,5	4
Ice	0,5	4
Breadcrumbs	0,5	5

VEGETABLE PREPARATION ATTACHMENT

The vegetable preparation attachment consists of two openings:

- **one large feed opening** for cutting vegetables such as cabbage, celeriac,...
- a round opening for long vegetables and highprecision cutting.

For optimum cutting, use the following section as a guide to help you.

SLICERS	
S 1	carrot / cabbage / cucumber / onion / potato / leek
S 2 / S 3	lemon / carrot / mushroom / cabbage / potato / cucumber / zucchini / onion / leek / bell pepper
S 4 / S 5	eggplant / beet root / carrot / mushroom / cucumber / bell pepper / radish / lettuce / potato / leek / tomato
S 6	egg plant / beet root / carrot / mushroom / cucumber / bell pepper / radish / lettuce / potato / leek

RIPPL	E CUT SLICER	
Rcs 2	beet / root / potato	
GRATE	RS	
G 1,5	celeriac / cheese	G 9 cabbage / cheese
G 2	carrot / celeriac / cheese	Parmesan / chocolate
G 3	carrot	Radish 0.7 mm
G 6	cabbage / cheese	Radish 1 mm
JULIEN	INE	
J 2x2	carrot / celeriac / potato	
J 2x4	carrot / beet root / zucchini / pot	tato
J 2x6	carrot / beet root / zucchini / pot	tato
J 4x4	egg plant / beet root / zucchini /	potato
J 6x6	egg plant / beet root / celeriac /	zucchini / potato
J 8x8	celeriac / potato	

OPTIONS

A serrated knife is available as an option and is mainly intended for kneading and grinding.





A slightly serrated blade is also available. This blade has the same function as the straight blade.

It has been conceived for a longer lasting cut

performance but cannot be sharpened.

CLEANING



WARNING

As a precaution, always unplug your appliance before cleaning it (risk of electrocution).

MOTOR UNIT

Never immerse the motor unit in water. Clean it with a damp cloth or a sponge.

CUTTER ATTACHMENT

Remove the lid and then the bowl from the motor unit by making it rotate to the left. Pull up to disengage and leave the knife in the bowl in order to prevent any spillage (if you work with liquids).

If the food has a solid consistency, remove the knife and empty the bowl.

Replace the bowl, place the knife on the shaft and switch your machine on in order to remove any mixture which may be stuck to the knife.

You may rinse the bowl by filling it with hot water and by leaving the machine operate for a few minutes.

VEGETABLE PREPARATION ATTACHMENT

Remove the lid by turning it on the left side. Pull out the disc plate and the discharge plate by raising it by its hub. Then pull out the bowl by turning in a clockwise direction.

You may then clean all the parts.

Dishwashers are best avoided. Instead we recommend that you hand wash the parts of your machine.

Removable parts can be easily rinsed under a tap. The machine can be damaged if temperature of water is too hot or if very strong detergents are being used.

• BLADE

After cleaning the blade, always dry the blades well.

A IMPORTANT

Check that your detergent is suitable for cleaning plastic parts. Some washing agents are too alkaline (e.g. high levels of caustic soda or ammonia) and totally incompatible with certain types of plastic, causing them to deteriorate rapidly.

MAINTENANCE

BLADE

We strongly recommend that the blades which are not serrated be sharpened regularly by using the sharpening stone that is supplied with the machine.

The quality of the cut mainly depends on the sharpness of your blades.

Blades progressively become dull and should be replaced from time to time to ensure constant quality of the final product.

If these plates wear out, the bowl will no longer be securely attached to the motor unit.

This makes it awkward to use since the bowl can come loose during processing.

There is no risk to the user however, because the safety system will automatically stop the machine.


It is advisable therefore to change those plates when needed in order to ensure maximum ease of use.

TECHNICAL SPECIFICATIONS

WEIGHT

	Net	Gross
R 101 XL	8.60 kg	9.70 kg
R 201 XL	8.95 kg	10.05 kg
R 201 XL Ultra	9.90 kg	11.00 kg
R 211 XL	9.80 kg	12.60 kg
R 211 XL Ultra	10.60 kg	13.45 kg

• DIMENSIONS (in mm)

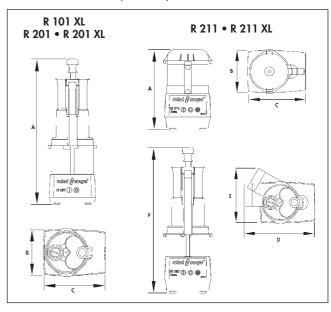

	Α	В	С	D	E	F
R 101 XL	665	220	280			
R 201 R 201 XL	720	220	280			
R 211 R 211 XL	450	220	280	665	285	365

WORKING HEIGHT

We recommend that you position the food processor on a stable worktop so that the upper edge of the large feed hopper is at a height of between 1.20 m and 1.30 m.

NOISE LEVEL

The equivalent continuous sound level when the food processor is operating on no-load is less than 70 dB(A).

ELECTRICAL DATA

Single phase machine R 101 XL

Motor	Speed (Rpm)	Intensity (Amp.)
230 V/50 Hz	1500	3
115 V/60 Hz	1800	6
220 V/60 Hz	1800	3

Single phase machine R 201 XL • R 201 XL Ultra

Motor	Speed (Rpm)	Intensity (Amp.)
230 V/50 Hz	1500	4.3
115 V/60 Hz	1800	8
220 V/60 Hz	1800	4.3

Single phase machine R 211 XL • 211 XL Ultra

Motor	Speed (Rpm)	Intensity (Amp.)	
230 V/50 Hz	1500	5.7	
115 V/60 Hz	1800	12	
220 V/60 Hz	1800	5.7	

- Power shown on data plate.

SAFETY

$|\Lambda$

WARNING

The blades are extremely sharp.

Handle with care.

The R 101 XL • R 201 XL • R 201 XL Ultra • R 211 XL • R 211 XL Ultra are fitted with an electromechanical safety system.

As soon as you open the lid, the motor stops.

To restart the machine, simply close the lid and press the green switch on.

In order to avoid splash when processing liquid preparation in the cutter bowl, we recommend you to stop the machine before opening the lid.

The R 101 XL • R 201 XL • R 201 XL Ultra • R 211 XL • R 211 XL Ultra are fitted with a temperature thermal protector which automatically stops the motor when the machine is left on for too long or is overloaded.

If this happens, allow the machine to cool completely before restarting it.

A REMEMBER

Never try to override the locking and safety systems.

Never introduce any object into the container where the food is being processed.

Never push the ingredients down with your hand.

Do not overload the appliance.

Never switch the appliance on while it is empty.


STANDARDS

Consult the declaration of compliance on page 3.

robotocoupe®

R 101 XL

N° de série / Serial number - 675 - - - - -

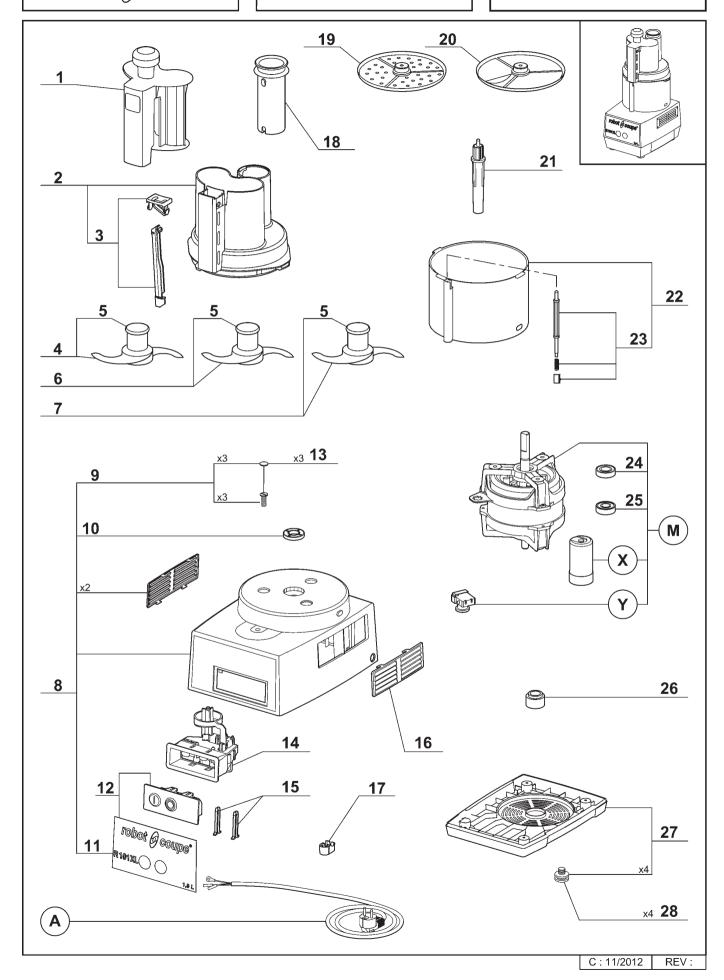



R101 XL


N° de série / Serial number - 675 - - - - -

Index	Pièce	/ Part	Désignation	n		Description			
1	49	083	POUSSOIF	R LEGUMES		VEGETABLE PUSHER			
2	49	081	COUVERO	LE		LID			
3	49	080	ENS. TIGE	SECURITE COUVER	CLE	COMPLETE LI	D SAFETY ROD ASSE	MBLY	
4	27	138	COUTEAU	CRANTE		SERRATED BL	ADE		
5	117	058	CAPUCHO	N COUTEAU		BLADE CAP			
6	27	061	COUTEAU	DENTE		FINE SERRAT	ED BLADE		
7						SMOOTH BLAI	DE		
8 49 070 ENS. SUPPORT MOTEUR						MOTOR SUPP	ORT ASSEMBLY		
9	29	178	ENS. VISS	ERIE		SCREW ASSE	MBLY		
10	501	010	BAGUE ET	ANCHEITE		MOTOR SEAL			
11	49	071	PLAQUE F	RONTALE		FRONT PLATE			
12	49	089	ENS. TABL	EAU COMMANDE		COMPLETE SI	VITCH ASSEMBLY		
13	29	633	CAPSULE	CACHE VIS (x3)		BOLT COVER	(x3)		
14	39	877	ENS. SEC			SAFETY ASSE			
15	39	876	ENS. CLA	/ETTE PLASTRON (x2	2)	PANEL KEY AS	, ,		
16 104 122 GRILLE DE VENTILATION						VENTILATION			
17 49 000 CAVALIER SERRE CABLE					POWER CORE				
18	49 084 POUSSOIR CAROTTES					ROUND PUSHER			
19		27 577 RAPEUR 2 mm				GRATER 2 mm			
20		27 555 EMINCEUR 2 mm			SLICER 2 mm				
21	101 120 PROLONGATEUR			DISC STEM					
22		702	CUVE CUTTER			CUTTER BOWL			
23		007		SECURITE CUVE		COMPLETE BOWL SAFETY ROD ASSEMBLY			
24		229		NT MOTEUR SUPERI		UPPER BALL-BEARING 6002 2RS			
25		457		NT MOTEUR INFERIE	EUR 6201 2RS	LOWER BALL BEARING 6201 2RS			
26		568		I AMORTISSEUR		ABSORBER			
27		196	ENS. SOC			BASE ASSEMBLY			
28	39	928	PIEDS (x4))		FOOT (x4)			
Ind	fex	Désigr	nation			Description			
	`	CARI	E D'ALIME	NTATION		POWER CORD			
_	_			NIATION		MOTOR			
N		MOTE							
X				IR DE DEMARRAGI	E	STARTING CAPACITOR			
Y	/	RELA	IS DEMAR	RAGE MOTEUR		MOTOR STARTI	NG RELAY		
	Ma	chine		Voltage	А	М	х	Υ	
2:	2 581	UK			39 889		1		
	2 582	Aust			39 891				
			•						
	2 585	ZAF		230/50/1	39 597	49 098		500 289	
	2 586	СН			39 893		600 018		
		DK			39 892				
	22 580 Pack		(2D		39 888		-		
	2 584	DD A		220/60/1	20 504	49 099		504 674	
27	22 583 BF				39 594				

robotocoupe®

R 201 XL

N° de série / Serial number - 676 - - - - -

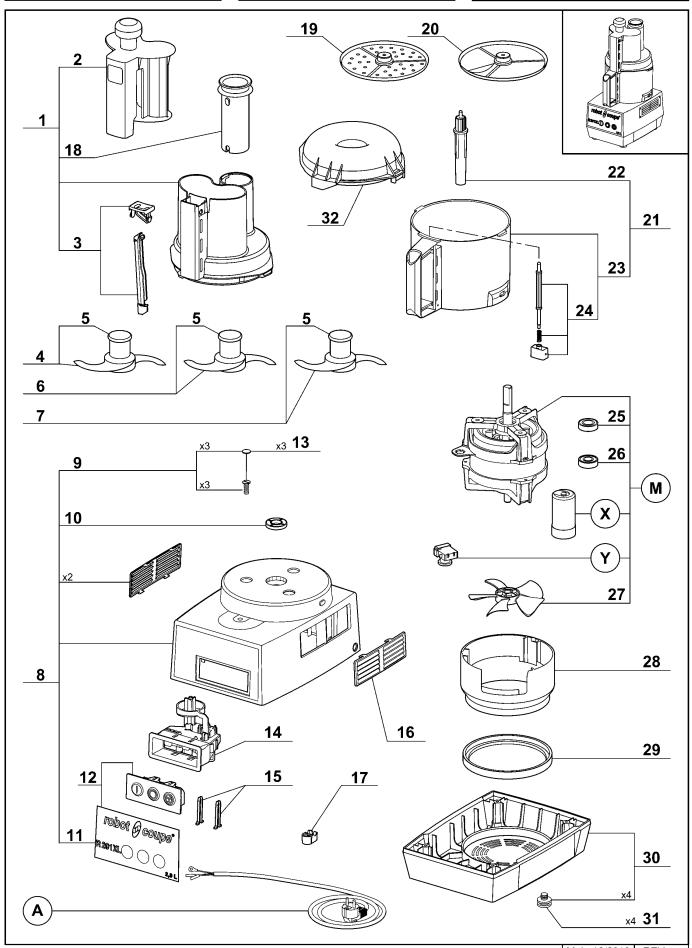

Maj:12/2013 REV:a



R 201 XL

N° de série / Serial number - 676 - - - -


	Z 0/0			120/00/1	33 030	33 00 l	003 009	1 200 Z20	
	2 573 2 575	BRA		120/60/1	39 594 39 890	39 851	603 669	500 296	
	2 574	DD V		220/60/1	20 504	39 850		504 674	
	2 570	Pack	2U		39 888		-		
	22 576 CH 22 577 DK		2D		39 892	_	600 018		
				230/30/ T		39 849	600.040	500 289	
				230/50/1	39 893	20 940		500 289	
	2 572	Aust			39 891	\dashv			
2	2 571	UK			39 889				
	Mad	chine		Voltage	Α	М	х	Υ	
	Y	KELA	IS DEMAR	RAGE MOTEUR		MOTOR START	NG RELAY		
	_			IR DE DEMARRAGE	Ξ.	STARTING CAPACITOR			
					=	MOTOR			
		MOTE							
	4	CABI	E D'ALIME	NTATION		POWER CORD			
Inc	dex	Désign	ation			Description			
JZ	108	+00		LL COTTER		COTTERLID			
31 32	106	928	PIEDS (x4)) :LE CUTTER		FOOT (x4) CUTTER LID			
30		904	ENS. SOCI			BASE ASSEMBLY			
29	106			AMORTISSEUR		ABSORBER	21.7		
28	101			VENTILATION		VENTILATION BAFFLE			
27	117			EUR MOTEUR		MOTOR FAN			
26	600			NT MOTEUR INFERIE	EUR 6201 2RS	LOWER BALL BEARING 6201 2RS			
25	504			NT MOTEUR SUPERI		UPPER BALL-BEARING 6002 2RS			
24		103		SECURITE CUVE		COMPLETE BOWL SAFETY ROD ASSEMBLY			
23	112 204 CUVE CUTTER				CUTTER BOWL				
22				DISC STEM					
21				DISC STEM + BOWL ASSEMBLY					
20					SLICER 2 mm				
19				! mm		GRATER 2 mn	١		
18 49 084 POUSSOIR CAROTTES				R CAROTTES		ROUND PUSH	ER		
17 49 000 CAVALIER SERRE CABLE						POWER CORI	CLIP		
16 104 122 GRILLE DE VENTILATION						VENTILATION	GRID		
15 39 876 ENS. CLAVETTE PLASTRON (x2)				/ETTE PLASTRON (x2	2)	PANEL KEY A	SSEMBLY (x2)		
14 39 877 ENS. SECURITE				JRITE		SAFETY ASSE	MBLY		
13	29	633	CAPSULE	CACHE VIS (x3)		BOLT COVER	(x3)		
12	49	090	ENS. TABL	EAU COMMANDE		COMPLETE S'	WITCH ASSEMBLY		
11 49 073 PLAQUE FRONTALE						FRONT PLATE	<u> </u>		
10 501 010 BAGUE ETANCHEITE					MOTOR SEAL				
9	29	178	ENS. VISS	ERIE		SCREW ASSE	MBLY		
8	49	072	ENS. SUP	PORT MOTEUR		MOTOR SUPP	ORT ASSEMBLY		
7	27	055	COUTEAU	LISSE		SMOOTH BLA	DE		
6	27	061	COUTEAU	DENTE		FINE SERRAT	ED BLADE		
5	117	058	CAPUCHO	N COUTEAU		BLADE CAP			
4	27	138	COUTEAU	CRANTE		SERRATED B	ADE		
3	49	080	ENS. TIGE	SECURITE COUVER	CLE	COMPLETE LID SAFETY ROD ASSEMBLY			
2	49	083	POUSSOIF	R LEGUMES		VEGETABLE PUSHER			
1	49	081	ENS. COU	VERCLE		LID ASSEMBLY			

Maj : 12/2013 REV : a

robot@coupe®

R 201 Ultra XL

N° de série / Serial number - 677 - - - - -

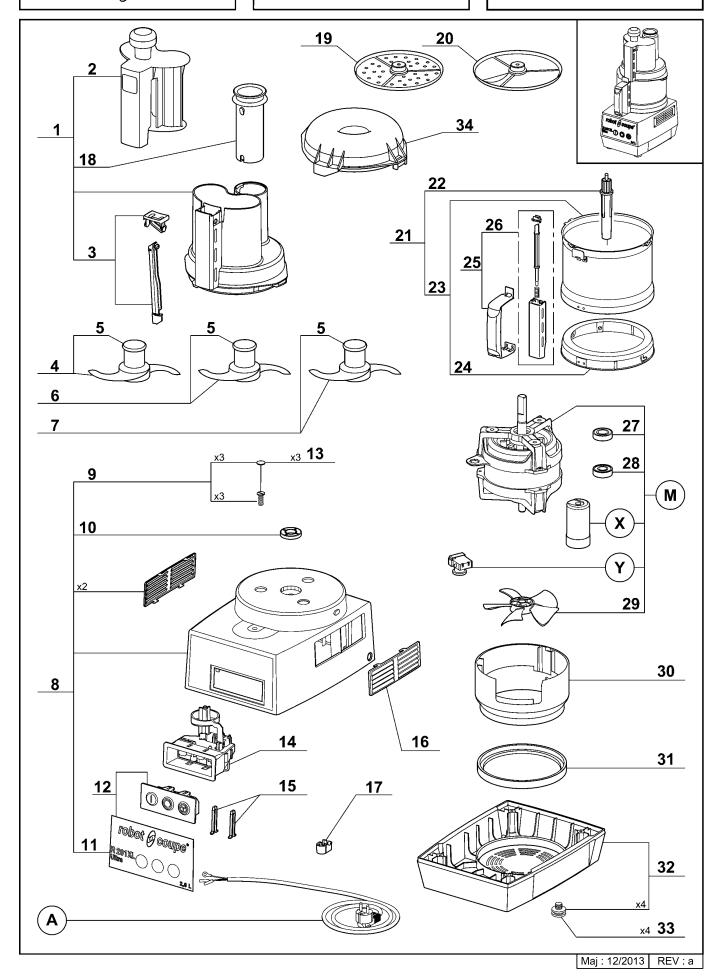



R 201 Ultra XL


N° de série / Serial number - 677 - - - -

Index	Pièce ,	/ Part	Désignation			Description		
1	49	081	ENS. COU\	/ERCLE		LID ASSEMBL	Υ	
2	49	083	POUSSOIR	LEGUMES		VEGETABLE PUSHER		
3	49	080	ENS. TIGE	SECURITE COUVER	CLE	COMPLETE LID SAFETY ROD ASSEMBLY		
4	27	138	COUTEAU	CRANTE		SERRATED BLADE		
5	117	058	CAPUCHO	N COUTEAU		BLADE CAP		
6	27	061	COUTEAU	DENTE		FINE SERRAT	ED BLADE	
7	27	055	COUTEAU	LISSE		SMOOTH BLA	DE	
8	49	074	ENS. SUPP	ORT MOTEUR		MOTOR SUPF	ORT ASSEMBLY	
9	29	178	ENS. VISSE	RIE		SCREW ASSE	MBLY	
10	501	010	BAGUE ET	ANCHEITE		MOTOR SEAL		
11	49	075	PLAQUE F	RONTALE		FRONT PLATE		
12 49 091 ENS. TABLEAU COMMANDE				EAU COMMANDE	COMPLETE S	WITCH ASSEMBLY		
13 101 208 CAPSULE CACHE VIS (x3)				CACHE VIS (x3)	BOLT COVER	(x3)		
14	39	877	ENS. SECU	RITE		SAFETY ASSE	EMBLY	
15	39	876	ENS. CLAV	ETTE PLASTRON (x2	2)	PANEL KEY A	SSEMBLY (x2)	
16	104	122	GRILLE DE	VENTILATION		VENTILATION	GRID	
17	49	000	CAVALIER	SERRE CABLE		POWER CORI	CLIP	
18 49 084 POUSSOIR CAROTTES						ROUND PUSH	ER	
19 27 577 RAPEUR 2 mm						GRATER 2 mr	า	
20 27 555 EMINCEUR 2 mm				2 mm	SLICER 2 mm			
21	21 39 761 ENS. CUVE + PROLONGATEUR				DISC STEM + BOWL ASSEMBLY			
22	22 101 569 PROLONGATEUR			DISC STEM				
23				CUTTER BOWL				
24				LOCKING WASHER ASSEMBLY				
25				BOWL HANDLE ASSEMBLY				
26		762		SECURITE CUVE		COMPLETE BOWL SAFETY ROD ASSEMBLY		
27	504			NT MOTEUR SUPERI	IFUR 6002 2RS	UPPER BALL-BEARING 6002 2RS		
28	600			NT MOTEUR INFERIE		LOWER BALL BEARING 6201 2RS		
29	117			UR MOTEUR	2011 0201 2110	MOTOR FAN		
30	101			ENTILATION		VENTILATION BAFFLE		
31	106			MORTISSEUR		ABSORBER		
32		905	ENS. SOCL			BASE ASSEM	RI V	
33		928	PIEDS (x4)	. L				
34	106			E CUTTER		FOOT (x4) CUTTER LID		
34	100	438	COOVERCE	LECOTTER		COTTENTIO		
Ind	lex	Désigr	ation			Description		
	\	CABL	E D'ALIMEN	NTATION		POWER CORD		
N		MOTE				MOTOR		
 X				R DE DEMARRAGI	=			
					=	STARTING CAPACITOR		
Y		RELA	IS DEMARE	RAGE MOTEUR		MOTOR START	NG RELAY	
	Ма	chine		Voltage	Α	М	X	Y
22	2 591	UK			39 889			
2:	2 592	Aust			39 891			
	2 596	СН			39 893	\dashv		
		—————————————————————————————————————			39 849		500 289	
					39 892		600 018	
				39 597	_			
		Pack	2D		39 888		-	
	22 594			220/60/1	39 594	39 850		504 674
22 593 BF 22 595		BRA		400/00/4		20.054	600.000	F00 000
_				120/60/1	39 890	39 851	603 669	500 296

robotocoupe

R 211 XL

N° de série / Serial number - 678 - - - - -

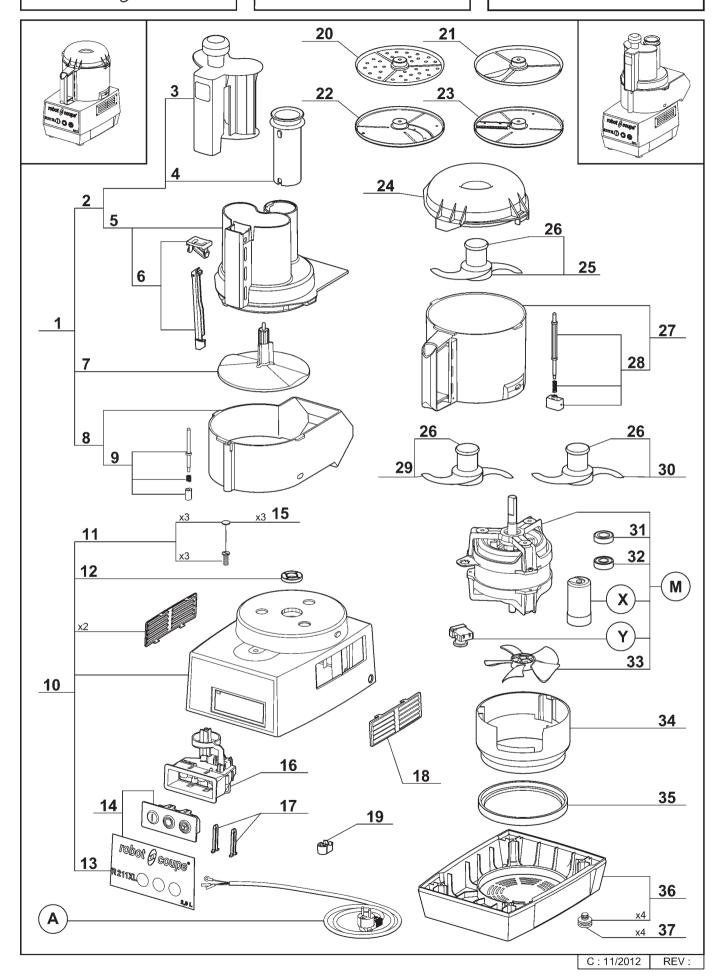



R 211 XL

N° de série / Serial number - 678 ---- --

C: 11/2012


REV:

Index	Index Pièce / Part Désignation			7		Description				
1	27	407	ACCESSO	IRE COUPE-LEGUME	S	VEGETABLE S	LICER ATTACHMENT			
2	49	102	ENS. COU'	VERCLE COUPE-LEG	UMES	VEGETABLE S	LICER LID ASSEMBLY	•		
3	49	083	POUSSOIF	R LEGUMES		VEGETABLE P	USHER			
4	49	084	POUSSOIF	R CAROTTES		ROUND PUSH	ER .			
5		101	COUVERC	LE COUPE-LEGUMES	5	VEGETABLE S	LICER LID			
6	49	080	ENS. TIGE	SECURITE COUVER	CLE	COMPLETE LID SAFETY ROD ASSEMBLY				
7	103	287	DISQUE E	VACUATEUR		SLINGER PLAT	SLINGER PLATE			
8	103	289	CUVE COL	JPE-LEGUMES		VEGETABLE SLICER BOWL				
9	29	875	ENS. TIGE	SECURITE CUVE CO	UPE-LEGUMES	VEGETABLE SLICER BOWL SAFETY ROD ASSEMBLY				
10	49	076	ENS. SUPF	PORT MOTEUR		MOTOR SUPPORT ASSEMBLY				
11	29	178	ENS. VISS	ERIE		SCREW ASSEMBLY				
12	501	010	BAGUE ET	ANCHEITE		MOTOR SEAL				
13	49	077	PLAQUE F	RONTALE		FRONT PLATE				
14	49	092	ENS. TABL	EAU COMMANDE		COMPLETE SV	VITCH ASSEMBLY			
15	29	633	CAPSULE	CACHE VIS (x3)		BOLT COVER (x3)			
16	39	877	ENS. SECI	JRITE		SAFETY ASSEMBLY				
17	39	876	ENS. CLAV	/ETTE PLASTRON (x2	!)	PANEL KEY ASSEMBLY (x2)				
18	104	122	GRILLE DE	VENTILATION	,	VENTILATION GRID				
19	49	000	CAVALIER	SERRE CABLE		POWER CORD CLIP				
20	27	577	RAPEUR 2	mm		GRATER 2 mm				
21	27	555	EMINCEUF	R 2 mm		SLICER 2 mm				
22	27	566	EMINCEUF	R 4 mm		SLICER 4 mm				
23	27	599	JULIENNE	2 x 2 mm		JULIENNE 2 x 2 mm				
24	106	458	COUVERC	LE CUTTER		CUTTER LID				
25	27	055	COUTEAU	LISSE		SMOOTH BLAD	ÞΕ			
26	117	058	CAPUCHO	N COUTEAU		BLADE CAP				
27	112	204	CUVE CUT	TER		CUTTER BOWL	_			
28	39	103	ENS. TIGE	SECURITE CUVE CU	TTER	COMPLETE CL	JTTER BOWL SAFETY	ROD ASSEMBLY		
29	27	138	COUTEAU	CRANTE		SERRATED BL	ADE			
30	27	061	COUTEAU	DENTE		FINE SERRATE	D BLADE			
31	504	229	ROULEME	NT MOTEUR SUPERI	EUR 6002 2RS	UPPER BALL-BEARING 6002 2RS				
32	600	457	ROULEME	NT MOTEUR INFERIE	UR 6201 2RS	LOWER BALL BEARING 6201 2RS				
33	117	610	VENTILATI	EUR MOTEUR		MOTOR FAN				
34	101	097	CONDUIT	VENTILATION		VENTILATION	VENTILATION BAFFLE			
35	106	880	TAMPON A	MORTISSEUR		ABSORBER				
36	29	29 904 ENS. SO		_E		BASE ASSEME	LY			
37	39	928	PIEDS (x4)	ı		FOOT (x4)				
Ind	lex	Désigr	nation			Description				
	\			NTATION		POWER CORD				
A			E D'ALIME	NTATION						
N		MOTE				MOTOR				
Х	(CONE	DENSATEU	R DE DEMARRAGE		STARTING CAPACITOR				
Y	′	RELA	IS DEMAR	RAGE MOTEUR		MOTOR STARTII	NG RELAY			
	Ma	chine		Voltage	Α	M	Х	Υ		
	2 126	UK			39 889 39 891					
	2 125									
	2 130 CH			230/50/1	39 893 39 849	39 849	500 2	500 289		
	2 129					1	600 018			
	2 124	Pack	4D		39 888					
	2 128			220/60/1		39 850	1	504 674		
							1	1		
	2 127			120/60/1	39 890	39 851	603 669	500 296		

robotocoupe®

R 211 Ultra XL

N° de série / Serial number - 679 - - - - - -

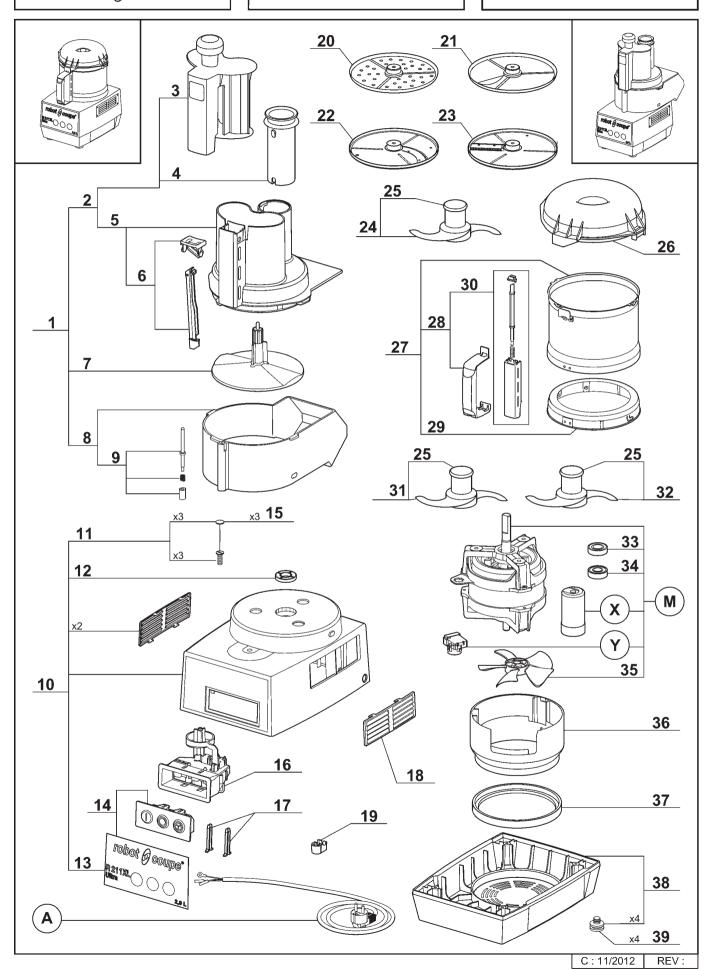



R 211 Ultra XL


N° de série / Serial number - 679 - - - -


Index	Pièce	/ Part	Désignatior	1		Description			
1	27	407	ACCESSO	RE COUPE-LEGUME	S	VEGETABLE S	SLICER ATTACHMENT		
2	49	102	ENS. COU	VERCLE COUPE-LEG	UMES	VEGETABLE S	SLICER LID ASSEMBLY	,	
3	49	083	POUSSOIF	RLEGUMES		VEGETABLE PUSHER			
4	49	084	POUSSOIF	CAROTTES		ROUND PUSH	IER		
5	49	101	COUVERC	LE COUPE-LEGUMES	5	VEGETABLE SLICER LID			
6	49	080	ENS. TIGE	SECURITE COUVER	CLE	COMPLETE LID SAFETY ROD ASSEMBLY			
7	103	287	DISQUE EV	/ACUATEUR		SLINGER PLA	TE		
8	103	289	CUVE COL	IPE-LEGUMES		VEGETABLE SLICER BOWL			
9	29	875	ENS. TIGE	SECURITE CUVE CO	UPE-LEGUMES	VEGETABLE SLICER BOWL SAFETY ROD ASSEMBLY			
10	49	078	ENS. SUPF	PORT MOTEUR		MOTOR SUPPORT ASSEMBLY			
11	29	178	ENS. VISSI	ERIE		SCREW ASSEMBLY			
12	501	010	BAGUE ET	ANCHEITE		MOTOR SEAL			
13	49	079	PLAQUE F	RONTALE		FRONT PLATE			
14	49	093	ENS. TABL	EAU COMMANDE		COMPLETE SWITCH ASSEMBLY			
15	101	208	CAPSULE	CACHE VIS (x3)		BOLT COVER (x3)			
16	39	877	ENS. SECU	JRITE		SAFETY ASSEMBLY			
17	39	876	ENS. CLAV	'ETTE PLASTRON (x2	?)	PANEL KEY ASSEMBLY (x2)			
18	104	122	GRILLE DE	VENTILATION		VENTILATION GRID			
19	49	000	CAVALIER	SERRE CABLE		POWER CORD CLIP			
20	27	577	RAPEUR 2	mm		GRATER 2 mm			
21	27	555	EMINCEUF	R 2 mm		SLICER 2 mm			
22	27	566	EMINCEUF	R 4 mm		SLICER 4 mm			
23	27	599	JULIENNE	2 x 2 mm		JULIENNE 2 x 2 mm			
24	27	055	COUTEAU	LISSE		SMOOTH BLADE			
25	117	058	CAPUCHO	N COUTEAU		BLADE CAP			
26	106	458	COUVERC	LE CUTTER		CUTTER LID			
27	39	795	CUVE CUT	TER		CUTTER BOWL			
28	39	763	ENS. POIG	NEE CUVE		BOWL HANDL	E ASSEMBLY		
29	39	753	ENS. RONI	DELLE D'ACCROCHA	GE	LOCKING WAS	SHER ASSEMBLY		
30	39	762	ENS. TIGE	SECURITE CUVE		COMPLETE BOWL SAFETY ROD ASSEMBLY			
31	27	138	COUTEAU	CRANTE		SERRATED B	LADE		
32	27	061	COUTEAU	DENTE		FINE SERRATED BLADE			
33		229	ROULEME	NT MOTEUR SUPERI	EUR 6002 2RS	UPPER BALL-BEARING 6002 2RS			
34	600	457	ROULEME	NT MOTEUR INFERIE	EUR 6201 2RS	LOWER BALL BEARING 6201 2RS			
35		610		EUR MOTEUR		MOTOR FAN			
36		097		VENTILATION		VENTILATION BAFFLE			
37		880		MORTISSEUR		ABSORBER			
38		905	ENS. SOCI			BASE ASSEMBLY			
39	39	928	PIEDS (x4)			FOOT (x4)			
Inde	Index D		nation			Description			
A CA		CABL	E D'ALIMEI	NTATION		POWER CORD			
M	1	МОТЕ	UR			MOTOR			
Х		CONF	DENSATEU	R DE DEMARRAGE	<u> </u>	STARTING CAPACITOR			
Y				RAGE MOTEUR		MOTOR STARTING RELAY			
	Ma	chine		Voltage	Α	М	X	Υ	
	2 119				39 889		^	•	
	2 118				39 891				
2 123 Pac				230/50/1	33 031	39 849		500 289	
2 123 Pa				Z3U/3U/1		39 849	600 018	500 ∠89	
			เงบ		39 888				
	2 122			00010011			4	F0.4.0=-	
	2 121			220/60/1		39 850		504 674	
	2 120			120/60/1	39 890	39 851	603 669	500 296	

SCHEMA ELECTRIQUE

ELECTRIC DIAGRAM

ELEKTRISCHES SCHALTBILD

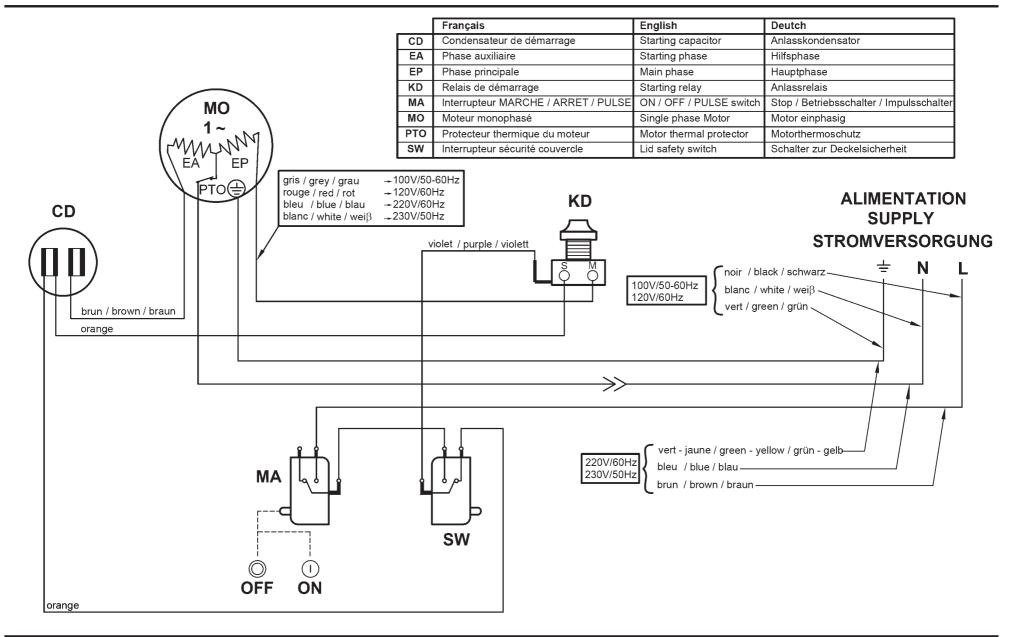

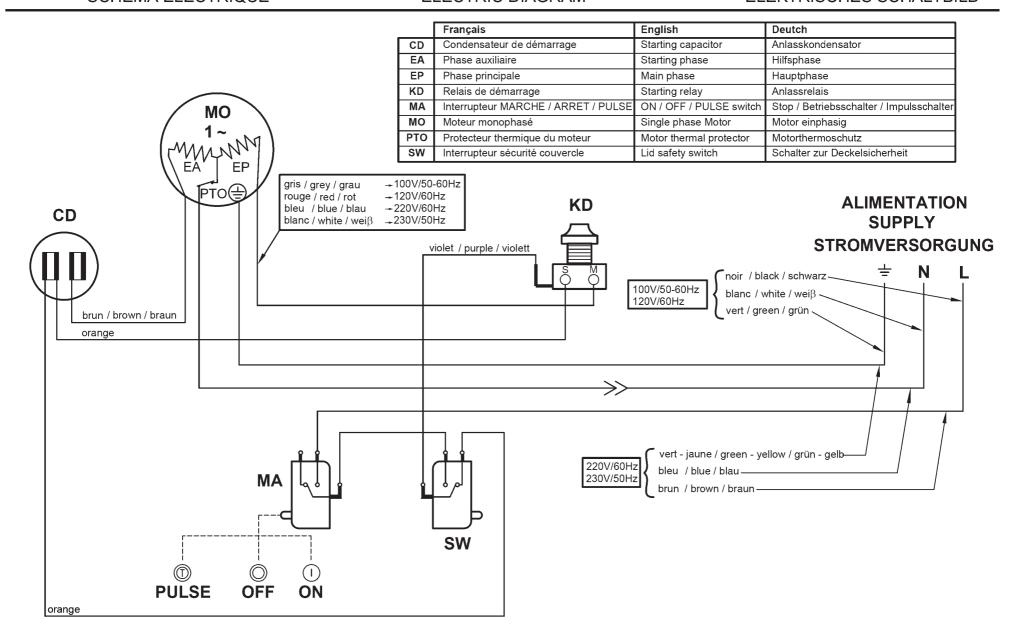

N° 410586 C : 10/12





Head Office, French, Export and Marketing Department:

48, rue des Vignerons 94305 Vincennes Cedex- France Tel.: 01 43 98 88 15 - Fax: 01 43 74 36 26 Email: international@robot-coupe.com

Robot Coupe Australia Pty Ltd:

Unit 3/43 Herbert St Artarmon NSW 2064 Australia Tel.: (02) 9478 0300 Fax (02) 9460 7972 Email: orders@robotcoupe.com.au

Robot-Coupe U.K. LTD:

Fleming Way, Isleworth, Middlesex TW7 6EU Tel.: 020 8232 1800 Fax: 020 8568 4966 Email: sales@robotcoupe.co.uk