



TOOLCRAFT

GB OPERATING INSTRUCTIONS

Reading magnifier 2/4x incl. LED

Item no. 1400301

Version 01/16



Intended use

The product is intended for magnifying the view of objects. There are 4 LEDs located underneath the lens intended for illuminating objects to be viewed. Power is supplied via 4 LR1130 button cell batteries.

The product is suitable for use in dry areas only.

For safety and approval purposes (CE), you must not rebuild and/or modify this product. If you use the product for purposes other than those described above, the product may be damaged. In addition, improper use can cause hazards such as short circuiting, fire, electric shock etc. Read the instructions carefully and keep them for future reference. Make this product available to third parties only together with its operating instructions.


This product complies with the statutory national and European requirements. All company names and product names are trademarks of their respective owners. All rights reserved.

Delivery content

- Reading magnifier
- 4 x button cell LR1130
- Storage bag
- Operating instructions

Up-to-date Operating instructions:

1. Open www.conrad.com/downloads in a browser or scan the displayed QR code.
2. Select document type and language and enter the item number into the search field. After submitting the query you can download displayed records.

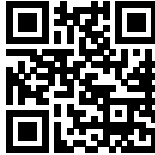

Safety instructions



Read the operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling in these operating instructions, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.

a) Persons / Product

- Never use the magnifier to stare directly into sunlight or other strong light sources and do not use it near them. This poses a risk of loss of eyesight!
- If used improperly the magnifier can act as a burning glass. This poses a fire hazard! Do not leave the magnifier in direct sunlight.
- Do not use the magnifier when moving around, since you might miss and hence stumble over obstacles.
- Do not touch the lens with your fingers (especially finger nails) or sharp/pointed objects.
- Attention, LED light:
 - Do not look directly into the LED light!
 - Do not look into the beam directly or with optical instruments!
- The device is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly. These may become dangerous playing material for children.
- Protect the product from extreme temperatures, direct sunlight, strong jolts, high humidity, moisture, flammable gases, vapours and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. Safe operation can no longer be guaranteed if the product:
 - is visibly damaged,
 - is no longer working properly,
 - has been stored for extended periods in poor ambient conditions or
 - has been subjected to any serious transport-related stresses.
- Please handle the product carefully. Jolts, impacts or a fall even from a low height can damage the product.

b) (Rechargeable) batteries

- Correct polarity must be observed while inserting the (rechargeable) batteries.
- Rechargeable batteries should be removed from the device if it is not used for a long period of time to avoid damage through leaking. Leaking or damaged (rechargeable) batteries might cause acid burns when in contact with skin, Therefore use suitable protective gloves to handle corrupted (rechargeable) batteries.

- (Rechargeable) batteries must be kept out of reach of children. Do not leave (rechargeable) batteries lying around, as there is risk, that children or pets swallow them.
- All (rechargeable) batteries should be replaced at the same time. Mixing old and new (rechargeable) batteries in the device can lead to (rechargeable) battery leakage and device damage.
- (Rechargeable) batteries must not be dismantled, short-circuited or thrown into fire. Never recharge non-rechargeable batteries. There is a risk of explosion!

c) Miscellaneous

- Consult a professional if you require assistance with product operation, safety or connection.
- Maintenance work, adjustments and repairs may be carried out only by a professional or at a specialist workshop.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

Operation

a) Inserting/replacing batteries

- The battery compartment is located next to the round lens on the narrow side of the housing. Carefully pull out the battery compartment till the very end.
- Insert 4 LR1130 button cell batteries, observing correct polarity. The positive terminal (+) must face upwards.
- Slide the battery compartment back into the housing.



Before first time use, remove the safety strip from the battery compartment.

Change the batteries once the light cannot be switched on anymore.

In order to remove inserted batteries, push it out from below using a slim object.

b) Illumination

Press the silver-grey button to turn the light on or off.

Maintenance and cleaning

- The product is maintenance-free except for potential battery replacement and occasional cleaning.
- Do not use any abrasive or chemical cleaners.
- Never submerge the product in water to clean it.
- When cleaning, do not apply too much force on the lens or housing in order to avoid scratching.
- Use a lens cleaning cloth for cleaning the lens. Alternatively, use a dry, clean, soft and lint-free cloth or a dust brush. If necessary, you can moisten the cloth with a little lukewarm water.
- When cleaning the lens with a cleaning agent, make sure not to directly apply the cleaner on the lens. Always apply the cleaning agent directly to the cloth first.
- Clean the housing with a dry, clean, soft and lint-free cloth. To remove tougher stains, slightly dampen the cloth with lukewarm water. You may use a little soap or a mild cleaning agent.

Disposal

a) Product



Electronic devices are recyclable waste and must not be disposed of in the household waste.

At the end of its service life, dispose of the product in accordance with applicable regulatory guidelines.



Remove any inserted (rechargeable) batteries and dispose of them separately from the product.

b) (Rechargeable) batteries

You as the end user are required by law (Battery Ordinance) to return all used batteries/rechargeable batteries. Disposing of them in the household waste is prohibited.



Contaminated (rechargeable) batteries are labeled with this symbol to indicate that disposal in the domestic waste is forbidden. The designations for the heavy metals involved are: Cd = Cadmium, Hg = Mercury, Pb = Lead (name on (rechargeable) batteries, e.g. below the trash icon on the left). Used batteries/rechargeable batteries can be returned to collection points in your municipality, our stores or wherever batteries/rechargeable batteries are sold.

You thus fulfill your statutory obligations and contribute to the protection of the environment.

Technical data

Power supply	4 x button cell LR1130
Magnifying factor	2x (main lens, 75 x 43 mm), 4x (round lens, Ø 23 mm)
Focal length.....	10 – 11 cm (main lens), 4 – 5 cm (round lens)
Colour temperature.....	8000 – 10000 K (cold-white)
Operating and storage conditions.....	-10 to +45 °C, 10 – 85 % RH
Dimensions (L x W x H).....	120 x 64 x 11 mm
Weight	60 g

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com).

All rights including translation reserved. Reproduction by any method, e.g. photocopy, microfilming, or the capture in electronic data processing systems require the prior written approval by the editor. Reprinting, also in part, is prohibited. This publication represents the technical status at the time of printing.