



Item	Part No.	Description
1	EH5001.01	COVER FOR GRILLE
2	EH5001.02	GRILLE
3	EH5001.03	HEATING ELEMENT 230V/300W
4	EH5001.04	INNER CASING
5	EH5001.05	TIME-DELAY THERMOSTAT 10A 250V
6	EH5001.06	THERMOSTAT 250V 20A 80°C
7	EH15001.05	THERMOSTAT/SENSOR CLIP
8	EH9001.11	WIRE RING
9	EH5001.09	OUTER CASING
10	EH5001.10	FRAME
11	EH5001.11	HANDLE GRIP
12	EH5001.12	CONTROL BOX
13	EH9001.16	SWITCH
14	EH5001.14	KNOB
15	EH15001.13	SWITCH RING

Item	Part No.	Description
16	EH5001.16	THERMOSTAT 23A 400V
17	EH5001.17	CABLE GRIP
18	EH9001.21	RELAY
19	EH5001.19	RELAY SUPPORT
20	EH5001.20	MOTOR FAN
21	EH5001.21	MOTOR SUPPORT
22	EH5001.22	MOTOR
23	EH5001.23	END PLUG
24	EH5001.24	RUBBER FEET
25	EH9001.29	ADJUSTING KNOB (M8)
26	EH9001.30	RIVET
27	EH5001.27	PLUG + WIRE
28	EH5001.28	CONNECT PLATE
29	EH5001.29	HEATING ELEMENT SUPPORT

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.