



Model Number


OBE500-R3F-SE2-L

Laser thru-beam sensor
with 2 m fixed cable



Features

- Very flat design for direct mounting without mounting bracket
- DuraBeam Laser Sensors - durable and employable like an LED
- TEACH-IN
- Detection of partially transparent objects by teach-in
- Detection of small parts or flat objects from 0.25 mm

Dimensions

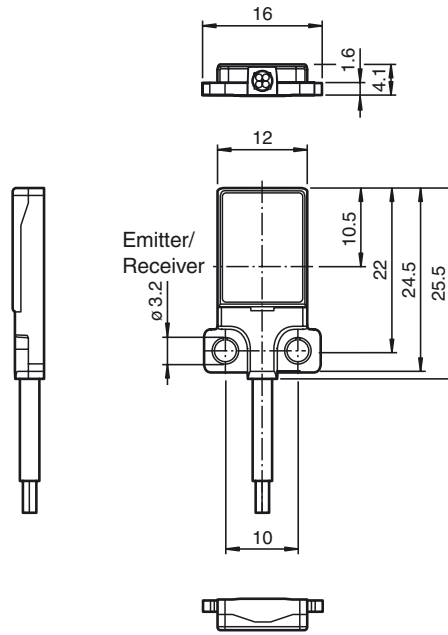

Electrical connection

 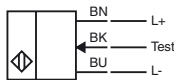

Release date: 2017-02-23 14:20 Date of issue: 2019-05-16 280483_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Technical data**System components**

Emitter	OBE500-R3F-S-L
Receiver	OBE500-R3F-E2-L

General specifications

Effective detection range	0 ... 500 mm
---------------------------	--------------

Threshold detection range	700 mm
---------------------------	--------

Light source	LASER LIGHT
--------------	-------------

Light type	modulated visible red light , 680 nm
------------	--------------------------------------

Laser nominal ratings

Note	LASER LIGHT , DO NOT STARE INTO BEAM
------	--------------------------------------

Laser class	1
-------------	---

Wave length	680 nm
-------------	--------

Beam divergence	> 5 mrad
-----------------	----------

Pulse length	approx. 3 µs
--------------	--------------

Repetition rate	approx. 16.6 kHz
-----------------	------------------

max. pulse energy	8 nJ
-------------------	------

Angle deviation	approx. 0.5 °
-----------------	---------------

Object size	typ. starts from 0.5 mm ; typ. from 0.25 mm (after teach-in)
-------------	--

Diameter of the light spot	approx. 3 mm at a distance of 500 mm
----------------------------	--------------------------------------

Angle of divergence	approx. 1 °
---------------------	-------------

Optical face	frontal
--------------	---------

Ambient light limit	EN 60947-5-2 : 25000 Lux
---------------------	--------------------------

Functional safety related parameters

MTTF _d	806 a
-------------------	-------

Mission Time (T _M)	20 a
--------------------------------	------

Diagnostic Coverage (DC)	0 %
--------------------------	-----

Indicators/operating means

Operation indicator	LED green, statically lit Power on , short-circuit : LED green flashing (approx. 4 Hz)
---------------------	--

Function indicator	Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control ; OFF when light beam is interrupted
--------------------	---

Electrical specifications

Operating voltage	U _B	12 ... 24 V
-------------------	----------------	-------------

No-load supply current	I ₀	Emitter: ≤ 10 mA Receiver: ≤ 8 mA
------------------------	----------------	--------------------------------------

Protection class	III
------------------	-----

Input

Test input	Test of switching function at 0 V
------------	-----------------------------------

Switching threshold	Teach-In input
---------------------	----------------

Output

Switching type	NO contact / dark on
----------------	----------------------

Signal output	1 PNP output, short-circuit protected, reverse polarity protected, open collector
---------------	---

Switching voltage	max. 30 V DC
-------------------	--------------

Switching current	max. 50 mA , resistive load
-------------------	-----------------------------

Voltage drop	U _d	≤ 1.5 V DC
--------------	----------------	------------

Switching frequency	f	approx. 2 kHz
---------------------	---	---------------

Response time	250 µs
---------------	--------

Directive conformity**Electromagnetic compatibility**

Directive 2014/30/EU	EN 60947-5-2:2007 EN 60947-5-2/A1:2012
----------------------	--

Standard conformity

Standards	EN 60947-5-2:2007 EN 60947-5-2/A1:2012 EN 60825-1:2007 UL 60947-5-2: 2014
-----------	--

Ambient conditions

Ambient temperature	-10 ... 60 °C (14 ... 140 °F)
---------------------	-------------------------------

Storage temperature	-20 ... 70 °C (-4 ... 158 °F)
---------------------	-------------------------------

Mechanical specifications

Housing width	16 mm
---------------	-------

Housing height	25.5 mm
----------------	---------

Housing depth	4.1 mm
---------------	--------

Degree of protection	IP67
----------------------	------

Connection	2 m fixed cable
------------	-----------------

Material

Housing	PC (Polycarbonate) and Stainless steel
---------	--


Optical face	PMMA
--------------	------

Cable	PUR
-------	-----

Mass	approx. 20 g Per sensor
------	-------------------------

Tightening torque, fastening screws	1 Nm
-------------------------------------	------

Cable length	2 m
--------------	-----



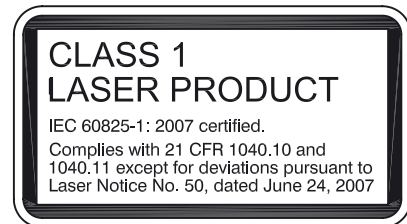
Laserlabel

Other suitable accessories can be found at
www.pepperl-fuchs.com

Approvals and certificates

UL approval	E87056 , cULus Recognized, Class 2 Power Source
CCC approval	CCC approval / marking not required for products rated ≤36 V
FDA approval	IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Curves/Diagrams

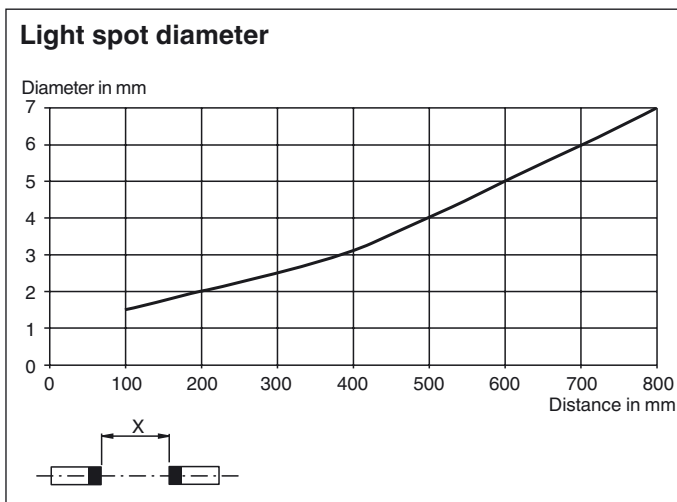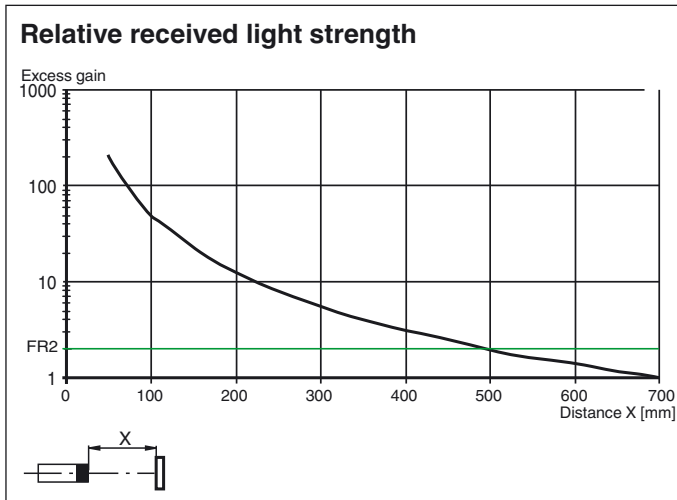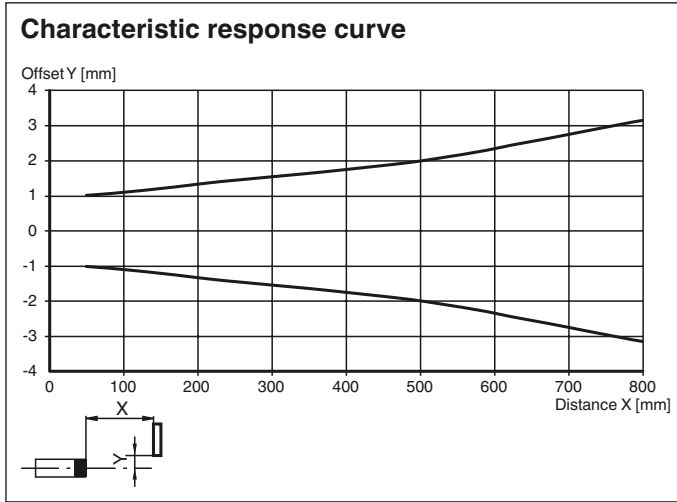

Release date: 2017-02-23 14:20 Date of issue: 2019-05-16 280493_eng.xml

Teach-In Methods

The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.



The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

Position Teach

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- The signal threshold is set to a minimum

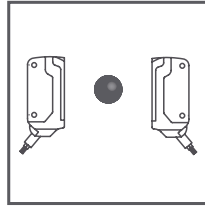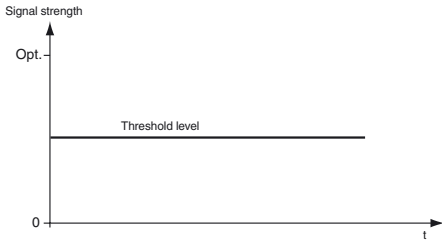

Recommended application:



This method enables minuscule particles in the beam path to be detected, and provides exceptional positioning accuracy. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

1. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
2. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
3. The end of the Teach-in process is indicated when the green LED indicator lights up static and yellow LED blinks.

Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- The signal threshold is set in the center between the two taught signal values

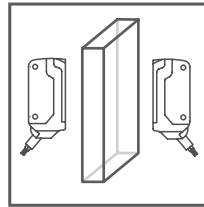
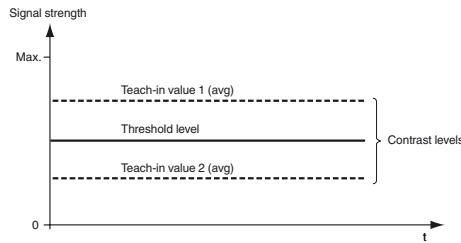


1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
2. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
3. Position the object in the beam path.
4. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
5. The end of the Teach-in process is indicated when the green LED indicator lights up static.

Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to a maximum
- The signal threshold is set to a minimum

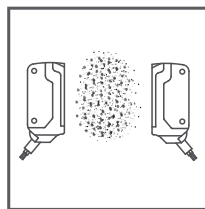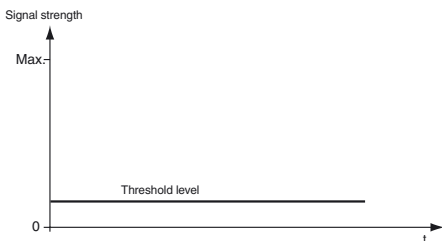

Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

6. Cover the receiver or transmitter.
7. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
8. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
9. The end of the Teach-in process is indicated when the green LED indicator lights up static.

Laser notice laser class 1

- The irradiation can lead to irritation especially in a dark environment. Do not point at people!
- Maintenance and repairs should only be carried out by authorized service personnel!
- Attach the device so that the warning is clearly visible and readable.
- The warning accompanies the device and should be attached in immediate proximity to the device.

Release date: 2017-02-23 14:20 Date of issue: 2019-05-16 280493_eng.xml



- Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Release date: 2017-02-23 14:20 Date of issue: 2019-05-16 280493_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com