


# PETROL BRUSH CUTTER

69301 - GTP8 SPARE PARTS DRAWING

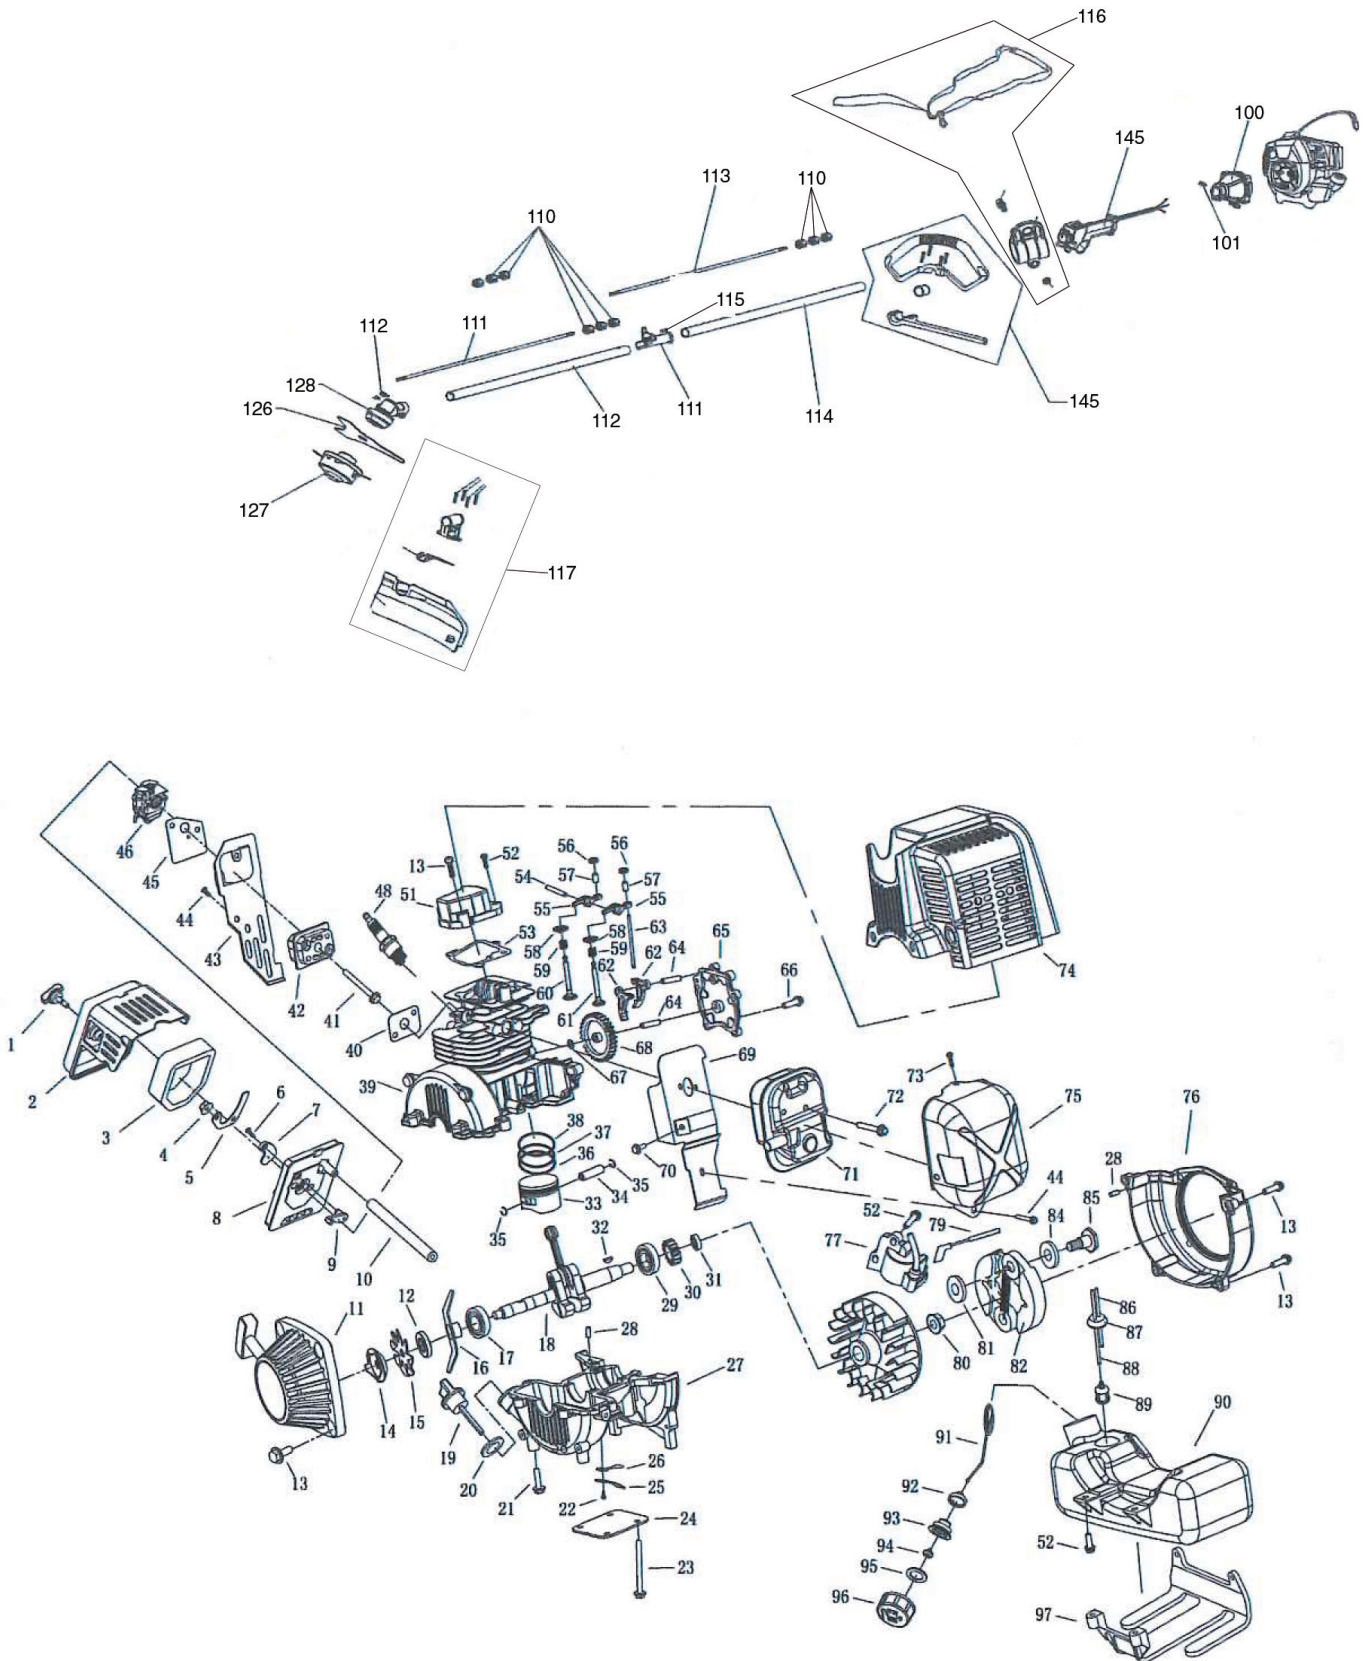



# PETROL BRUSH CUTTER

## 69301 - GTP8 SPARE PARTS LISTING

KEY No.	PART No.	STOCK No.	DESCRIPTION
1	Y-GTP8-01	10884	Screw
2	Y-GTP8-02	10970	Air filter cover
3	Y-GTP8-03	10981	Air filter
4	Y-GTP8-04	10983	Nut
5	Y-GTP8-05	10984	Baffle
6	Y-GTP8-06	10985	Screw
7	Y-GTP8-07	10986	Choke
8	Y-GTP8-08	10987	Inner cover
9	Y-GTP8-09	10988	Handle
10	Y-GTP8-10	10999	Air pipe
11	Y-GTP8-11	11000	Starter assembly
12	Y-GTP8-12	11002	Oil seal
13	Y-GTP8-13	11003	Screw
14	Y-GTP8-14	11004	Starter pawl
15	Y-GTP8-15	11005	Fan
16	Y-GTP8-16	11006	Oil dispersion plate
17	Y-GTP8-17	11007	Needle bearing
18	Y-GTP8-18	11008	Crankshaft
19	Y-GTP8-19	11009	Dipstick
20	Y-GTP8-20	11010	Seal
21	Y-GTP8-21	11014	Screw M5x20
22	Y-GTP8-22	11016	Screw M3x8
23	Y-GTP8-23	11017	Screw M5x55
24	Y-GTP8-24	11018	Board
25	Y-GTP8-25	11020	Board
26	Y-GTP8-26	11021	Reed
27	Y-GTP8-27	11022	Crankcase
28	Y-GTP8-28	11026	Pin B4x18
29	Y-GTP8-29	11027	Needle bearing 6002
30	Y-GTP8-30	11028	Gear
31	Y-GTP8-31	11029	Seal
32	Y-GTP8-32	11030	Flywheel key
33	Y-GTP8-33	11031	Piston
34	Y-GTP8-34	11032	Piston pin
35	Y-GTP8-35	11033	Piston snap ring
36	Y-GTP8-36	11034	Piston ring
37	Y-GTP8-37	11035	Piston ring
38	Y-GTP8-38	11039	Piston ring
39	Y-GTP8-39	11041	Cylinder
40	Y-GTP8-40	11042	Intake gasket
41	Y-GTP8-41	11043	Screw M5x75

KEY No.	PART No.	STOCK No.	DESCRIPTION
42	Y-GTP8-42	11044	Intake boot
43	Y-GTP8-43	11045	Board
44	Y-GTP8-44	11185	Screw M5x8
45	Y-GTP8-45	11188	Carburettor gasket
46	Y-GTP8-46	11190	Carburettor
48	Y-GTP8-48	11198	Spark plug
51	Y-GTP8-51	11199	Cylinder cover
52	Y-GTP8-52	11229	Screw M5x16
53	Y-GTP8-53	11232	Cylinder cover gasket
54	Y-GTP8-54	11268	Rocker pin
55	Y-GTP8-55	11292	Rocker
56	Y-GTP8-56	11345	Adjust nut
57	Y-GTP8-57	11352	Pushrod spacer
58	Y-GTP8-58	11356	Spring seat
59	Y-GTP8-59	11378	Spring
60	Y-GTP8-60	11379	Inlet valve
61	Y-GTP8-61	11380	Exhaust valve
62	Y-GTP8-62	11381	Lower rocker
63	Y-GTP8-63	11382	Pushrod
64	Y-GTP8-64	11383	Pin
65	Y-GTP8-65	11384	Cover
66	Y-GTP8-66	11385	Screw M4x16
67	Y-GTP8-67	11386	Washer
68	Y-GTP8-68	11388	Cam wheel
69	Y-GTP8-69	11389	Board
70	Y-GTP8-70	11390	Screw M5x8
71	Y-GTP8-71	11392	Muffler
72	Y-GTP8-72	11393	Screw M5x20
73	Y-GTP8-73	11394	Screw M5x16
74	Y-GTP8-74	11395	Cylinder cover
75	Y-GTP8-75	11411	Muffler cover
76	Y-GTP8-76	11413	Flywheel cover
77	Y-GTP8-77	11456	Ignition coil
79	Y-GTP8-79	11457	Packing
80	Y-GTP8-80	11458	Nut
81	Y-GTP8-81	11464	Washer B
82	Y-GTP8-82	11465	Clutch assembly
84	Y-GTP8-84	11466	Wave washer
85	Y-GTP8-85	11476	Screw pin
86	Y-GTP8-86	11477	Pipe
87	Y-GTP8-87	11558	Plug

