



Item	Part No.	Description
1	EH30001.01	COVER FOR GRILLE
2	EH30001.02	GRILLE, REAR
3	EH30001.03	MOTOR
4	EH30001.04	FAN
5	EH30001.05	CONTACTOR
6	EH30001.06	HEATING ELEMENT SUPPORT
7	EH30001.07	TIME- DELAY THERMOSTAT
8	EH30001.08	THERMAL CUT-OFF
9	EH30001.09	HANDLE
10	EH30001.10	CONTROL BOX
11	EH30001.11	SOCKET
12	EH30001.12	CONTROL BOX COVER
13	EH30001.13	WATERPROOF RING
14	EH30001.14	THERMOSTAT KNOB
15	EH30001.15	SWITCH
16	EH30001.16	THERMOSTAT

Item	Part No.	Description
17	EH30001.17	SWITCH KNOB
18	EH30001.18	HEATING ELEMENT
19	EH30001.19	HEATING ELEMENT SUPPORT
20	EH30001.20	INNER CASING
21	EH30001.21	CONNECT PLATE
22	EH30001.22	WHEEL, FIXED (196x12x39)
23	EH30001.23	WHEEL AXLE
24	EH30001.24	FOOT SUPPORT
25	EH30001.25	OUTER CASING
26	EH30001.26	FRONT GRILLE
27	EH30001.27	COVER FOR BACK GRILL
28	EH30001.28	INSULATION RING(PAIR)
29	EH30001.29	HANDLE GRIP
30	EH30001.30	CAPACITOR
--	EH15001.FK	FIXING KIT (NOT SHOWN)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.