

RuggedPad – Change keyboard




You need 2 plastic cards with approx. 0.8mm thickness and a size of 3x5 cm.



Insert the first card on height of the „Insert“-Button between casing and keyboard.







Then remove the keyboard with help of the second card.

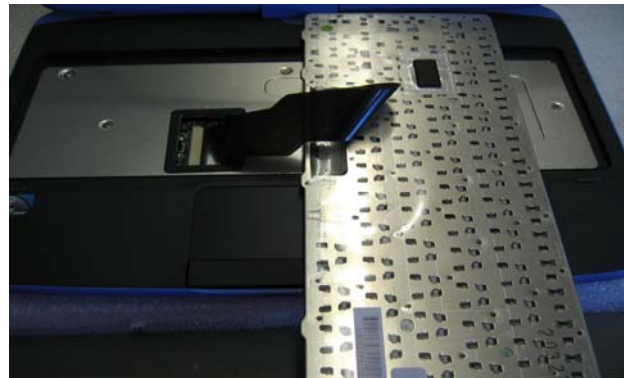

Be careful with the flat cable !



Now remove the cable :

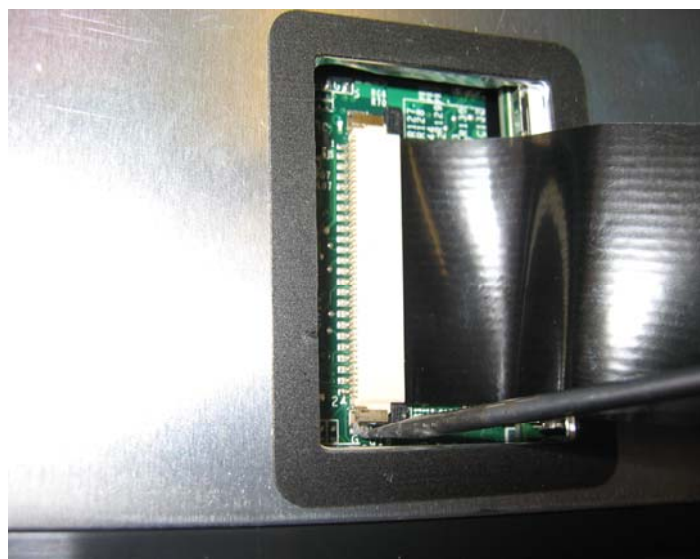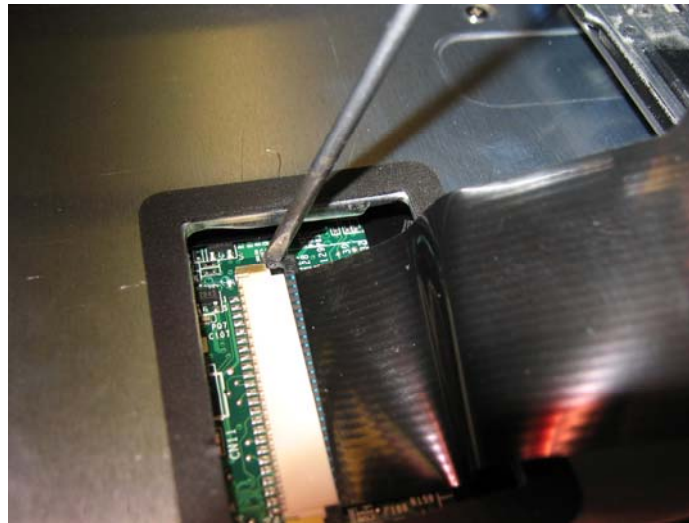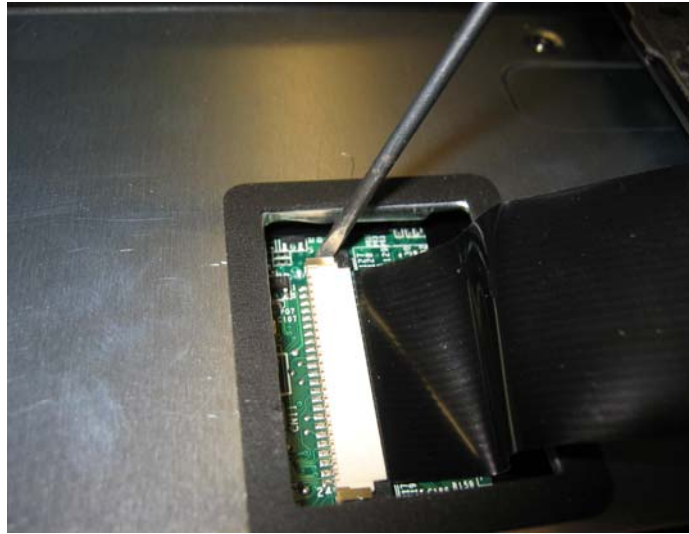


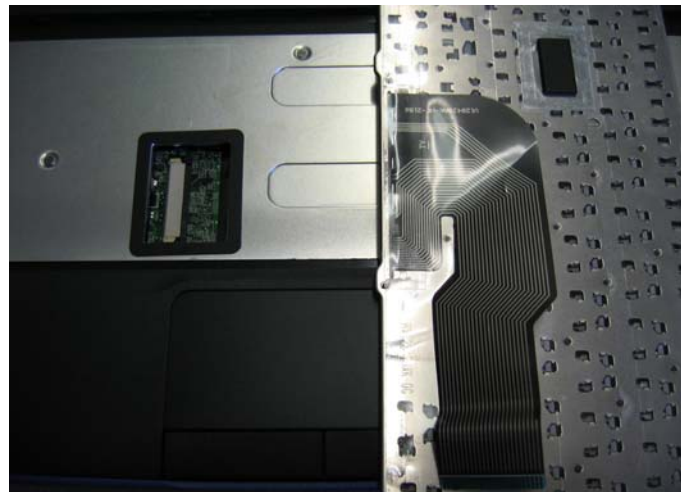

After removal of the old keyboard you need to install the replacement one.



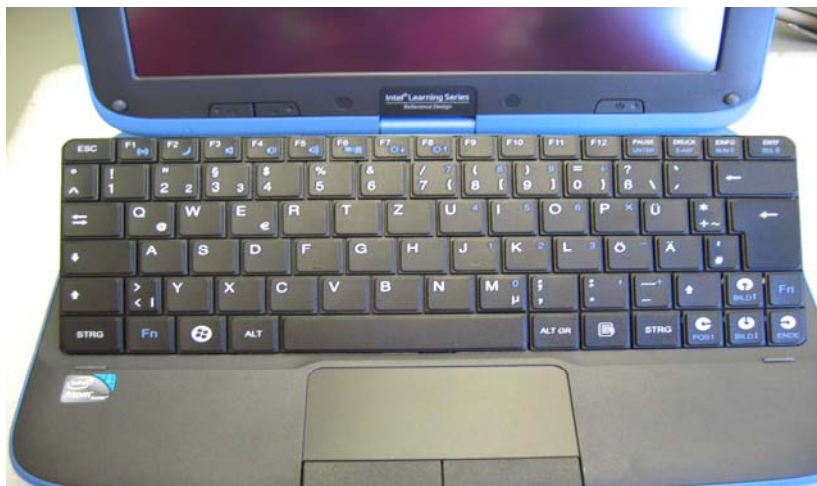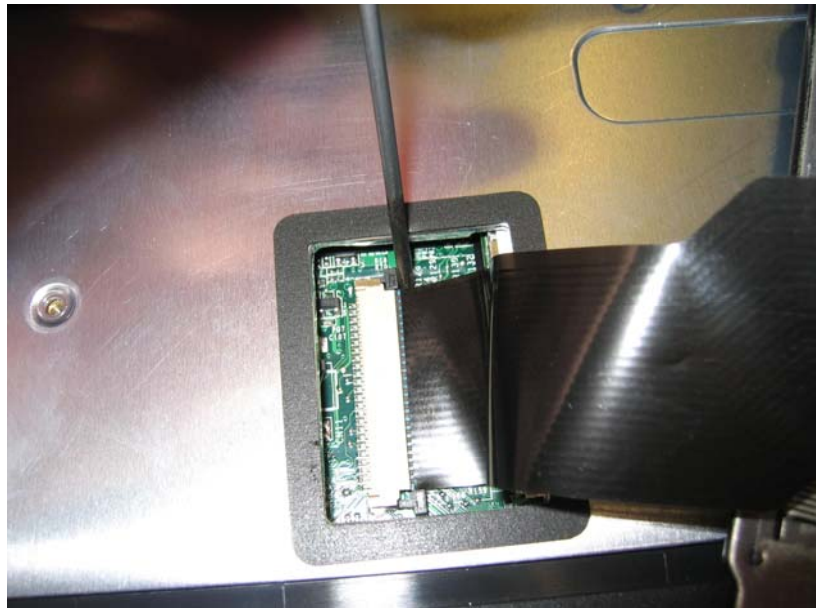

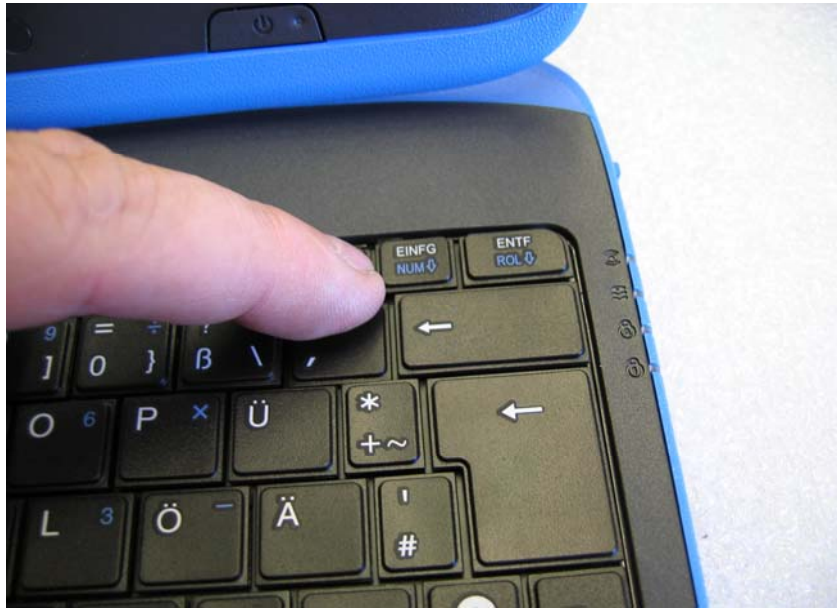



Author: Jens Hankiewicz – CarTFT.com
Date : 23.07.2012