



MICROCHIP

**Lighting Communications
Development Platform
User's Guide**

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, FlashFlex, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, PIC³² logo, rPIC, SST, SST Logo, SuperFlash and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

FilterLab, Hampshire, HI-TECH C, Linear Active Thermistor, MTP, SEEVAL and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

Analog-for-the-Digital Age, Application Maestro, BodyCom, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, HI-TIDE, In-Circuit Serial Programming, ICSP, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, mTouch, Omniscent Code Generation, PICC, PICC-18, PICDEM, PICDEM.net, PICkit, PICtail, REAL ICE, rLAB, Select Mode, SQI, Serial Quad I/O, Total Endurance, TSHARC, UniWinDriver, WiperLock, ZENA and Z-Scale are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

GestIC and ULPP are registered trademarks of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2013, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

ISBN: 9781620773543

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
== ISO/TS 16949 ==

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC[®] MCUs and dsPIC[®] DSCs, KEELOQ[®] code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

Table of Contents

Preface	7
Introduction.....	7
Document Layout	7
Conventions Used in this Guide	8
Warranty Registration.....	9
Recommended Reading.....	9
The Microchip Web Site	10
Development Systems Customer Change Notification Service	10
Customer Support	11
Revision History	11
 Chapter 1. Overview	
1.1 Introduction	13
1.2 Main Communication Board Highlights	14
1.2.1 DM160214	14
1.3 Prototyping Communication Board Highlights	14
1.3.1 AC160214	14
1.4 DALI Adapter Highlights	15
1.4.1 AC160214-1	15
1.5 DMX512A Adapter Highlights	15
1.5.1 AC160214-2	15
1.6 DALI Starter Kit	15
1.6.1 DV160214-1	15
1.7 DMX512A Starter Kit	15
1.7.1 DV160214-2	15
 Chapter 2. Main Board (DM160214)	
2.1 Features	17
2.2 Stand-alone Demonstration	20
2.2.1 Demonstration Setup	21
2.2.2 Demonstration Operation Modes	22
 Chapter 3. Prototyping Board (AC160214)	
3.1 Features	23
 Chapter 4. DALI Adapter (AC160214-1)	
4.1 Features	25
4.2 Board Settings	27
4.3 DALI Demonstration	28
4.3.1 Demonstration Setup	29
4.3.2 Demonstration Operation	31

Chapter 5. DMX512A Adapter (AC160214-2)

5.1 Features	33
5.2 Board Settings	35
5.3 DMX512A Demonstration	36
5.3.1 Demonstration Setup	37
5.3.2 Demonstration Operation	38
Worldwide Sales and Service	42

**Object of Declaration: Lighting Communications Development Platform (DM160214,
AC160214, AC160214-1, AC160214-2, DV160214-1, DV160214-2)**

EU Declaration of Conformity

This declaration of conformity is issued by the manufacturer.

The development/evaluation tool is designed to be used for research and development in a laboratory environment. This development/evaluation tool is not a Finished Appliance, nor is it intended for incorporation into Finished Appliances that are made commercially available as single functional units to end users under EU EMC Directive 2004/108/EC and as supported by the European Commission's Guide for the EMC Directive 2004/108/EC (8th February 2010).

This development/evaluation tool complies with EU RoHS2 Directive 2011/65/EU.

For information regarding the exclusive, limited warranties applicable to Microchip products, please see Microchip's standard terms and conditions of sale, which are printed on our sales documentation and available at www.microchip.com.

Signed for and on behalf of Microchip Technology Inc. at Chandler, Arizona, USA


Derek Carlson
VP Development Tools

16-July-2013
Date

Lighting Communications Development Platform User's Guide

NOTES:

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXA”, where “XXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the Lighting Communications Development Platform. Items discussed in this chapter include:

- Document Layout
- Conventions Used in this Guide
- Warranty Registration
- Recommended Reading
- The Microchip Web Site
- Development Systems Customer Change Notification Service
- Customer Support
- Revision History

DOCUMENT LAYOUT

This document describes how to use the Lighting Communications Development Platform as a development tool to emulate and debug firmware on a target board, as well as how to program devices. The document is organized as follows:

- **Chapter 1. “Overview”**
- **Chapter 2. “Main Board (DM160214)”**
- **Chapter 3. “Prototyping Board (AC160214)”**
- **Chapter 4. “DALI Adapter (AC160214-1)”**
- **Chapter 5. “DMX512A Adapter (AC160214-2)”**

Lighting Communications Development Platform User's Guide

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Arial font:		
Italic characters	Referenced books	<i>MPLAB[®] IDE User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u><i>File>Save</i></u>
Bold characters	A dialog button	Click OK
	A tab	Click the Power tab
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
Courier New font:		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	Constants	0xFF, 'A'
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets []	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	void main (void) { ... }

WARRANTY REGISTRATION

Please complete the enclosed Warranty Registration Card and mail it promptly. Sending in the Warranty Registration Card entitles users to receive new product updates. Interim software releases are available at the Microchip web site.

RECOMMENDED READING

This user's guide describes how to use Lighting Communications Development Platform. Other useful documents are listed below. The following Microchip documents are available and recommended as supplemental reference resources.

- *Digitally Addressable Lighting Interface (DALI) Communication (DS01465)* – It has emerged as a standard in Europe to address growing power issues, mostly for commercial and industrial purposes. DALI is part of the IEC 60929 specification and is increasing in popularity around the world. This application note provides a general overview of DALI.
- *DALI Control Gear (AN1487)* – This application note explains the implementation of some DALI commands on the control gear, how commissioning is performed, as well as the modes of operation.

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

DEVELOPMENT SYSTEMS CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com, click on Customer Change Notification and follow the registration instructions.

The Development Systems product group categories are:

- **Compilers** – The latest information on Microchip C compilers, assemblers, linkers and other language tools. These include all MPLAB C compilers; all MPLAB assemblers (including MPASM™ assembler); all MPLAB linkers (including MPLINK™ object linker); and all MPLAB librarians (including MPLIB™ object librarian).
- **Emulators** – The latest information on Microchip in-circuit emulators. This includes the MPLAB REAL ICE™ and MPLAB ICE 2000 in-circuit emulators.
- **In-Circuit Debuggers** – The latest information on the Microchip in-circuit debuggers. This includes MPLAB ICD 3 in-circuit debuggers and PICKit™ 3 debug express.
- **MPLAB® IDE** – The latest information on Microchip MPLAB IDE, the Windows® Integrated Development Environment for development systems tools. This list is focused on the MPLAB IDE, MPLAB IDE Project Manager, MPLAB Editor and MPLAB SIM simulator, as well as general editing and debugging features.
- **Programmers** – The latest information on Microchip programmers. These include production programmers such as MPLAB REAL ICE in-circuit emulator, MPLAB ICD 3 in-circuit debugger and MPLAB PM3 device programmers. Also included are nonproduction development programmers such as PICSTART® Plus and PICKit 2 and 3.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:

<http://www.microchip.com/support>.

REVISION HISTORY

Revision A (July, 2013)

Initial release of this document.

Lighting Communications Development Platform User's Guide

NOTES:

Chapter 1. Overview

1.1 INTRODUCTION

Microchip lighting solutions provide opportunities to create product differentiation via customizable user interfaces and the ability to enhance the user's experience. Enhanced capabilities can be integrated into the luminaire ballast/driver, wall controller, or remotes – and are only limited by the developer's creativity.

The Lighting Communications Development Platform provides a universal lighting development platform for the creation of communications-enabled lighting applications. The platform consists of a main board and various communications interface adapters to support in the development of DALI, DMX512A, as well as future protocols.

To utilize the communications platform, a minimum of two main or two prototyping boards and two adapters are required – connected via appropriate cabling (e.g., RJ45 patch cable, DMX512A 5-pin XLR cable, or DALI 2-wire).

The Lighting Communications Development Platform consists of:

- Main communications board
- Prototyping board
- Communications interface adapters:
 - DALI
 - DMX512A

The following are required:


- Minimum of two main or two prototyping boards
- Minimum two adapters connected via appropriate cabling:
 - RJ45 patch cable
 - DMX512A 5-pin XLR cable
 - DALI 2-wire

The communication platform is compatible with commercially-available DALI/DMX512A products and can be integrated into the existing lighting networks during development or utilized with multiple communication platforms to simulate large lighting networks.

To further ease in development, code libraries for both DMX512A and DALI are available as a free download. Go to www.microchip.com/lightingcomms to get started.

Learn more about Intelligent Lighting and Control Solutions from Microchip at www.microchip.com/lighting.

FIGURE 1-1: EXAMPLE CONFIGURATION

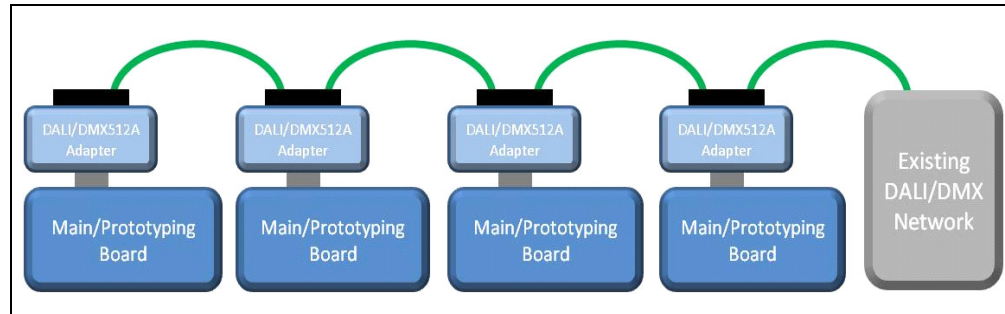

1.2 MAIN COMMUNICATION BOARD HIGHLIGHTS

1.2.1 DM160214

- Populated with a PIC16F1947 for user interface, communications and LED control:
 - 4-channel constant current control with RGBW color mixing and dimming
 - Slider potentiometer for dimming control
 - Universal Communications Adapter Interface: DALI, DMX512A and future support
 - Master and slave support for DALI and DMX512A
 - DALI commissioning and support for custom zones and scenes
 - LCD display and push-button user interface
 - Customizable capabilities
- Populated with a MCP6004 op amp for current feedback
- Populated with a MCP16322 for 5V power conversion
- Populated with Cree XLamp MC-E color delivering red, green, royal-blue and white in a single LED – high lumen output in a small form factor
- Populated with the LEDnLIGHT collimator LLC19N optic and holder by Gaggione for high-quality color mixing and tight beam control.
- 9-12V power supply input

1.3 PROTOTYPING COMMUNICATION BOARD HIGHLIGHTS

1.3.1 AC160214

- Populated with a PIC16F1947 for user interface and communications:
 - Universal Communications Adapter Interface: DALI, DMX512A and future support
 - Master and slave support for both DALI and DMX512A
 - DALI commissioning and support for custom zones and scenes
 - Customizable capabilities
- Populated with a MCP16322 for 5V power conversion
- Bread boarding space for customized lighting development
- 9-12V power supply input

1.4 DALI ADAPTER HIGHLIGHTS

1.4.1 AC160214-1

- Screw terminals and RJ45 connectors
- Isolated DALI interface
- Current-limited DALI power supply (jumper option)
- Free DALI 'C' Library
- Demonstration code
- All code resides within the PIC16F1947 on main/prototype board

1.5 DMX512A ADAPTER HIGHLIGHTS

1.5.1 AC160214-2

- XLR5 and RJ45 connectors
- Isolated transceiver
- Bidirectional communication termination (jumper option)
- Free DMX512A 'C' Library
- Demonstration code
- All code resides within the PIC16F1947 on main/prototype board

1.6 DALI STARTER KIT

1.6.1 DV160214-1

- Two main boards
- One prototyping board
- Two DALI adapters
- 9V international power supply
- RJ45 patch cable

1.7 DMX512A STARTER KIT

1.7.1 DV160214-2

- Two main boards
- One prototyping board
- Two DMX512A adapters
- 9V international power supply
- RJ45 patch cable

NOTES:

Chapter 2. Main Board (DM160214)

The lighting communications main board is the core of the Lighting Communications Development Platform. It uses a PIC16F1947 microcontroller to run the user interface, LCD control, 4-color LED drive and the various communications protocols (see Figure 2-1). By changing the firmware and plug on the adapter, a number of lighting communication protocols can be implemented, such as DMX512A and DALI. Please reference the chapter of the specific protocol adapter for detailed setup.


FIGURE 2-1: LIGHTING COMMUNICATIONS MAIN BOARD



2.1 FEATURES

- PIC16F1947 microcontroller
- Cree XLamp MC-E color LED
- Gaggione Led-n-light 40 mm color-mixing optic
- Analog drive of LEDs
- 6-digit, 7-segment LCD display
- Four switches for input
- Slider potentiometer
- 5V Buck power supply (9 to 24V DC input)
- PICKit™ programming port
- Lighting Communications adapter port
- Eight I/O pins brought to pads


FIGURE 2-2: MAIN BOARD SCHEMATICS: MICROCONTROLLER, LCD AND CONNECTORS

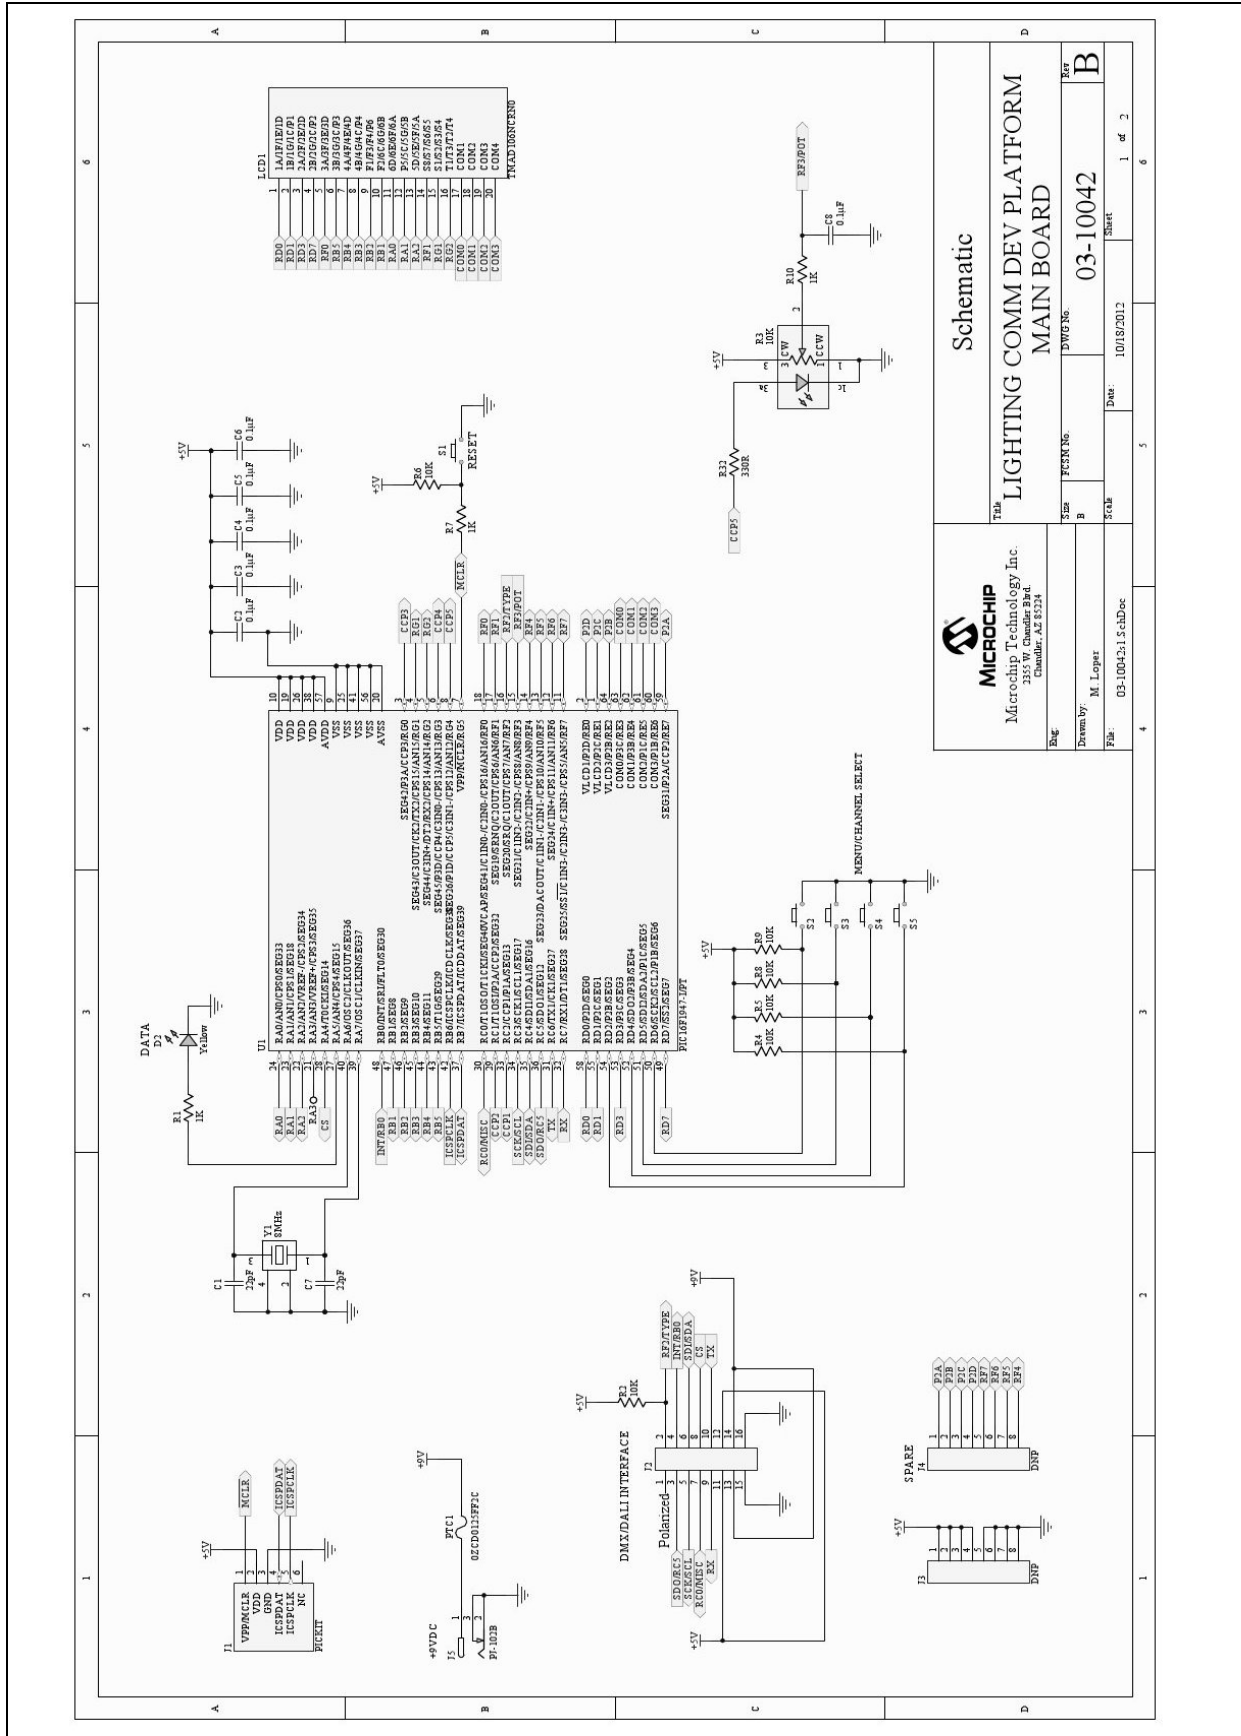

MicroCHIP
Microchip Technology Inc.
3251 W. Chandler Blvd.
Chandler, AZ 85224

Schematic
Title: LIGHTING COMM DEV PLATFORM
MAIN BOARD
DWG No.: 03-10042
Rev: B
Size: TCN No. B
Drawn by: M. Lopez
Date: 10/18/2012
File: 03-10042_1.schdoc
Sheet 1 of 2

FIGURE 2-3: MAIN BOARD SCHEMATICS: LED DRIVE AND POWER SUPPLY

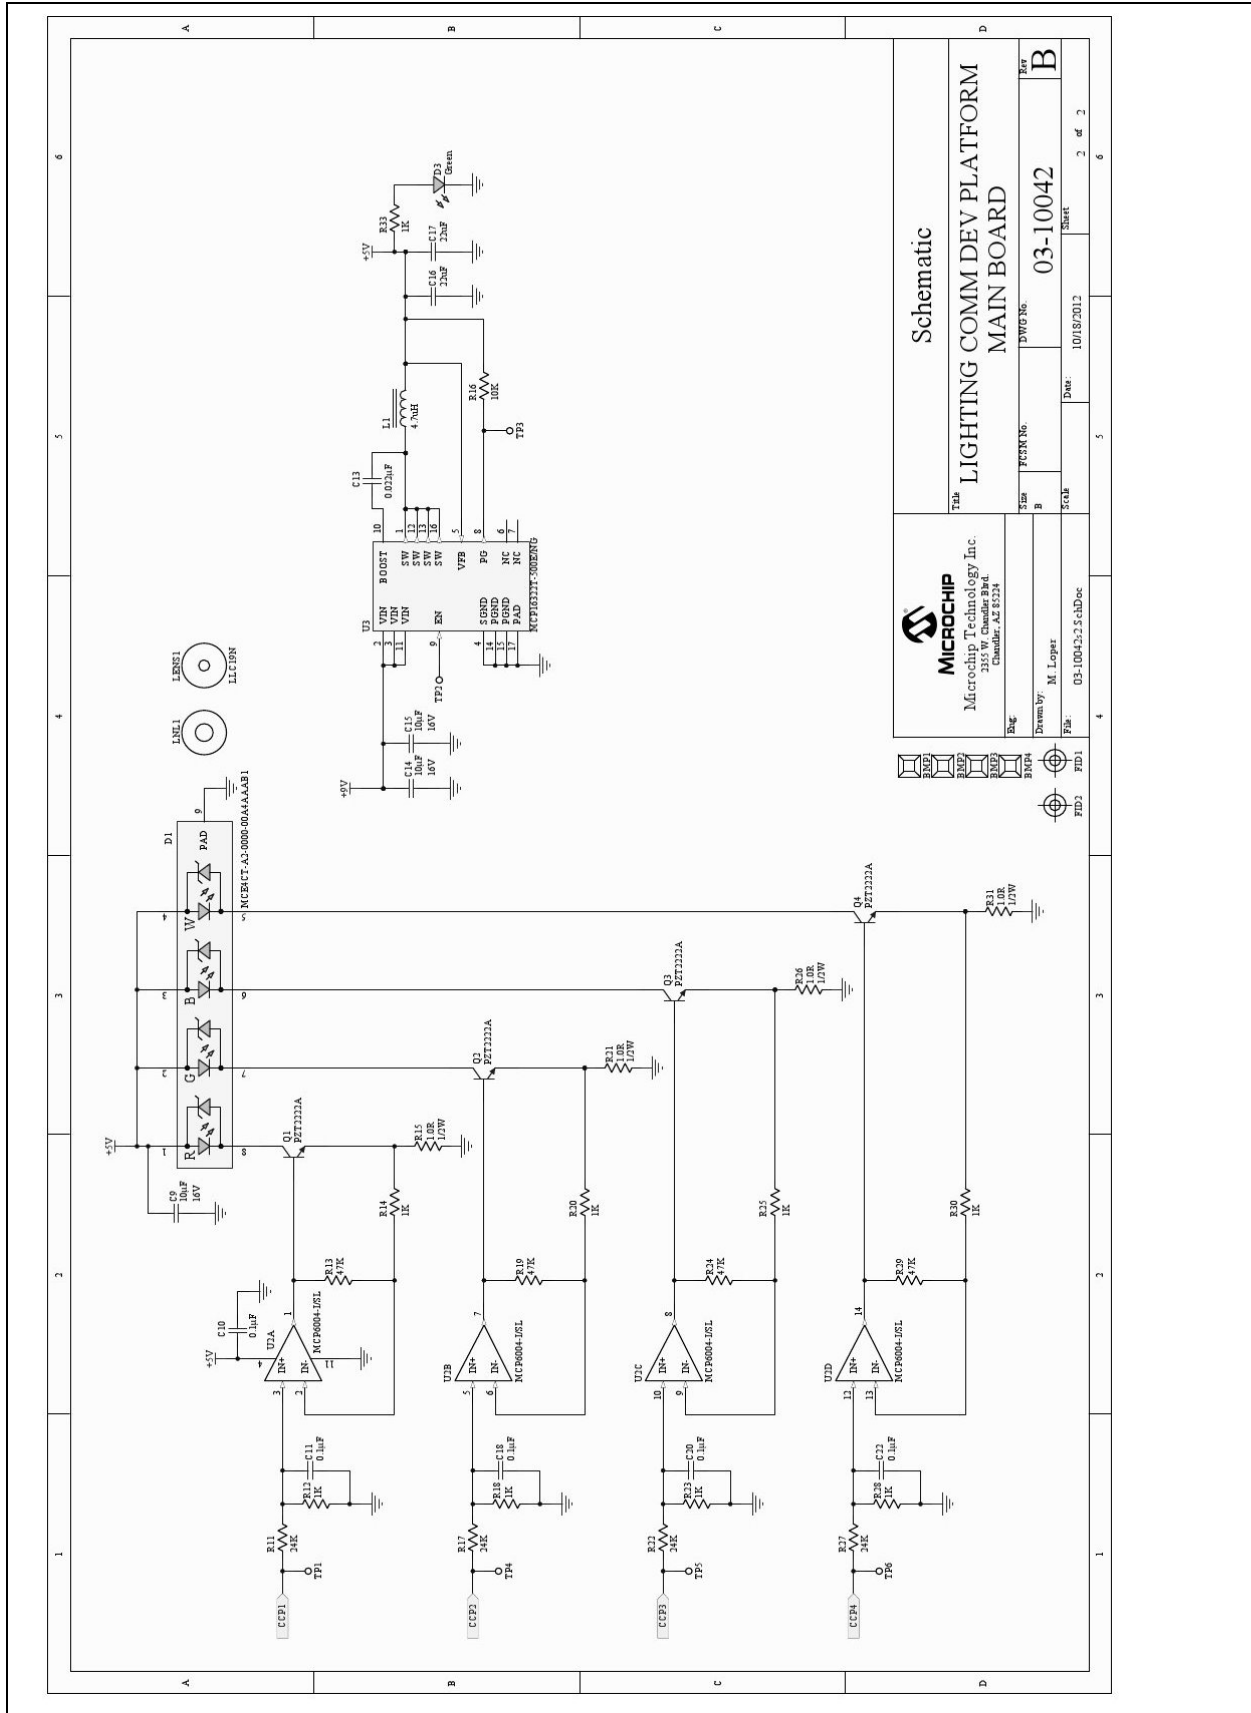

2.2 STAND-ALONE DEMONSTRATION

FIGURE 2-4: MAIN BOARD STAND-ALONE DEMO



Demonstration Overview

- Self-contained demonstration **without** communications control
- Main communication board performing RGBW (red, green, blue, white) color mix
- PIC16F1947 Controlled Features:
 - RGBW LED color mixing via constant current control
 - Slider and button interface
 - LCD drive and control

Hardware Requirements



- Main communication board
- 9-12V power supply
- PICKit 3 programmer

Firmware Requirements

- *StandAloneDemo.X.production.hex*

Downloadable at www.microchip.com/lightingcomms.

2.2.1 DEMONSTRATION SETUP

<p>1 Utilize the PICkit™ 3 to program the main communication board with stand-alone demonstration code.</p>	 A photograph showing a person's hands holding a red PICkit 3 programmer on the left and a green communication board on the right. The programmer is connected to the board via a cable. The board has a small LCD screen and a circular component.
<p>2 Connect the power by inserting the 9V power supply into the DC connector on the controller board.</p>	 A photograph showing a person's hands holding the green communication board. A 9V battery is being inserted into a DC power connector on the left side of the board. The board's components, including the LCD and circular component, are visible.


2.2.2 DEMONSTRATION OPERATION MODES

<p>Button 1 (S2) – 'rGb' LCD Display (Power-up mode)</p> <ul style="list-style-type: none">• Auto-rotates through red, green, blue, white and custom-color mix• Slider not used	
<p>Button 2 (S3) – 'FAde' LCD Display</p> <ul style="list-style-type: none">• Auto-rotates through red, green, blue, white and custom-color mix with transition fade• Slider not used	
<p>Button 3 (S4) – 'SLId' LCD Display</p> <ul style="list-style-type: none">• Slider-controlled rotation through red, green, blue, white and custom-color mix	
<p>Button 4 (S5) – 'LitE' LCD Display</p> <ul style="list-style-type: none">• Red, green, blue, white simultaneously ON• Slider-controlled simultaneous dimming of red, green, blue, white	

Chapter 3. Prototyping Board (AC160214)

The lighting communications prototyping board allows for quick prototyping using the communications adapters. It uses a PIC16F1947 microcontroller with the same connections to the adapter boards and breaks out the remaining I/O pins for prototyping your own circuits (see Figure 3-1). Because of the same connections to the adapter boards, the lighting communications libraries are easily adapted to your specific prototype project. For example, a 4-channel lighting console can be built by soldering sliders on to the prototyping area and connecting them to the analog input pins. Please refer to Figure 3-2 for details on I/O pin connections.


FIGURE 3-1: PROTOTYPE BOARD

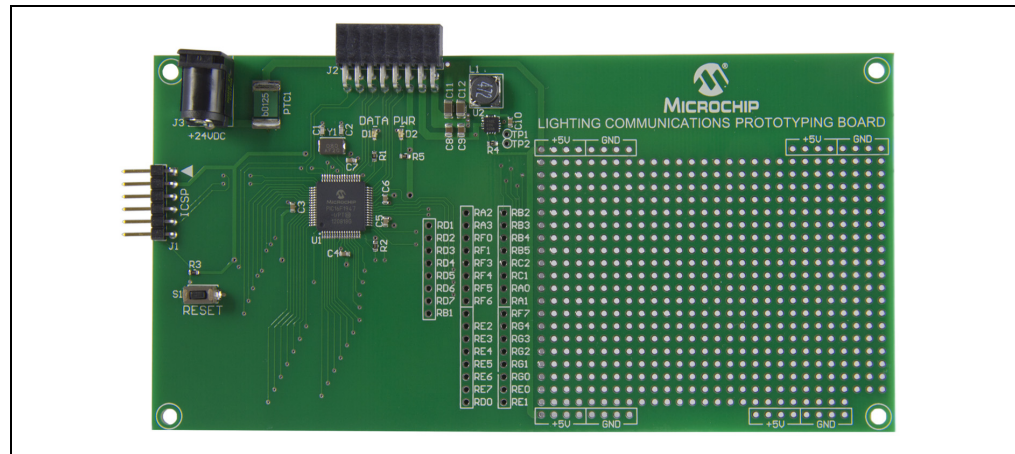

3.1 FEATURES


- PIC16F1947 microcontroller
- 5V Buck power supply (9 to 24V DC input)
- PICkit™ programming port
- Lighting Communications adapter port
- Remaining I/O pins brought to pads

FIGURE 3-2: PROTOTYPE BOARD SCHEMATIC

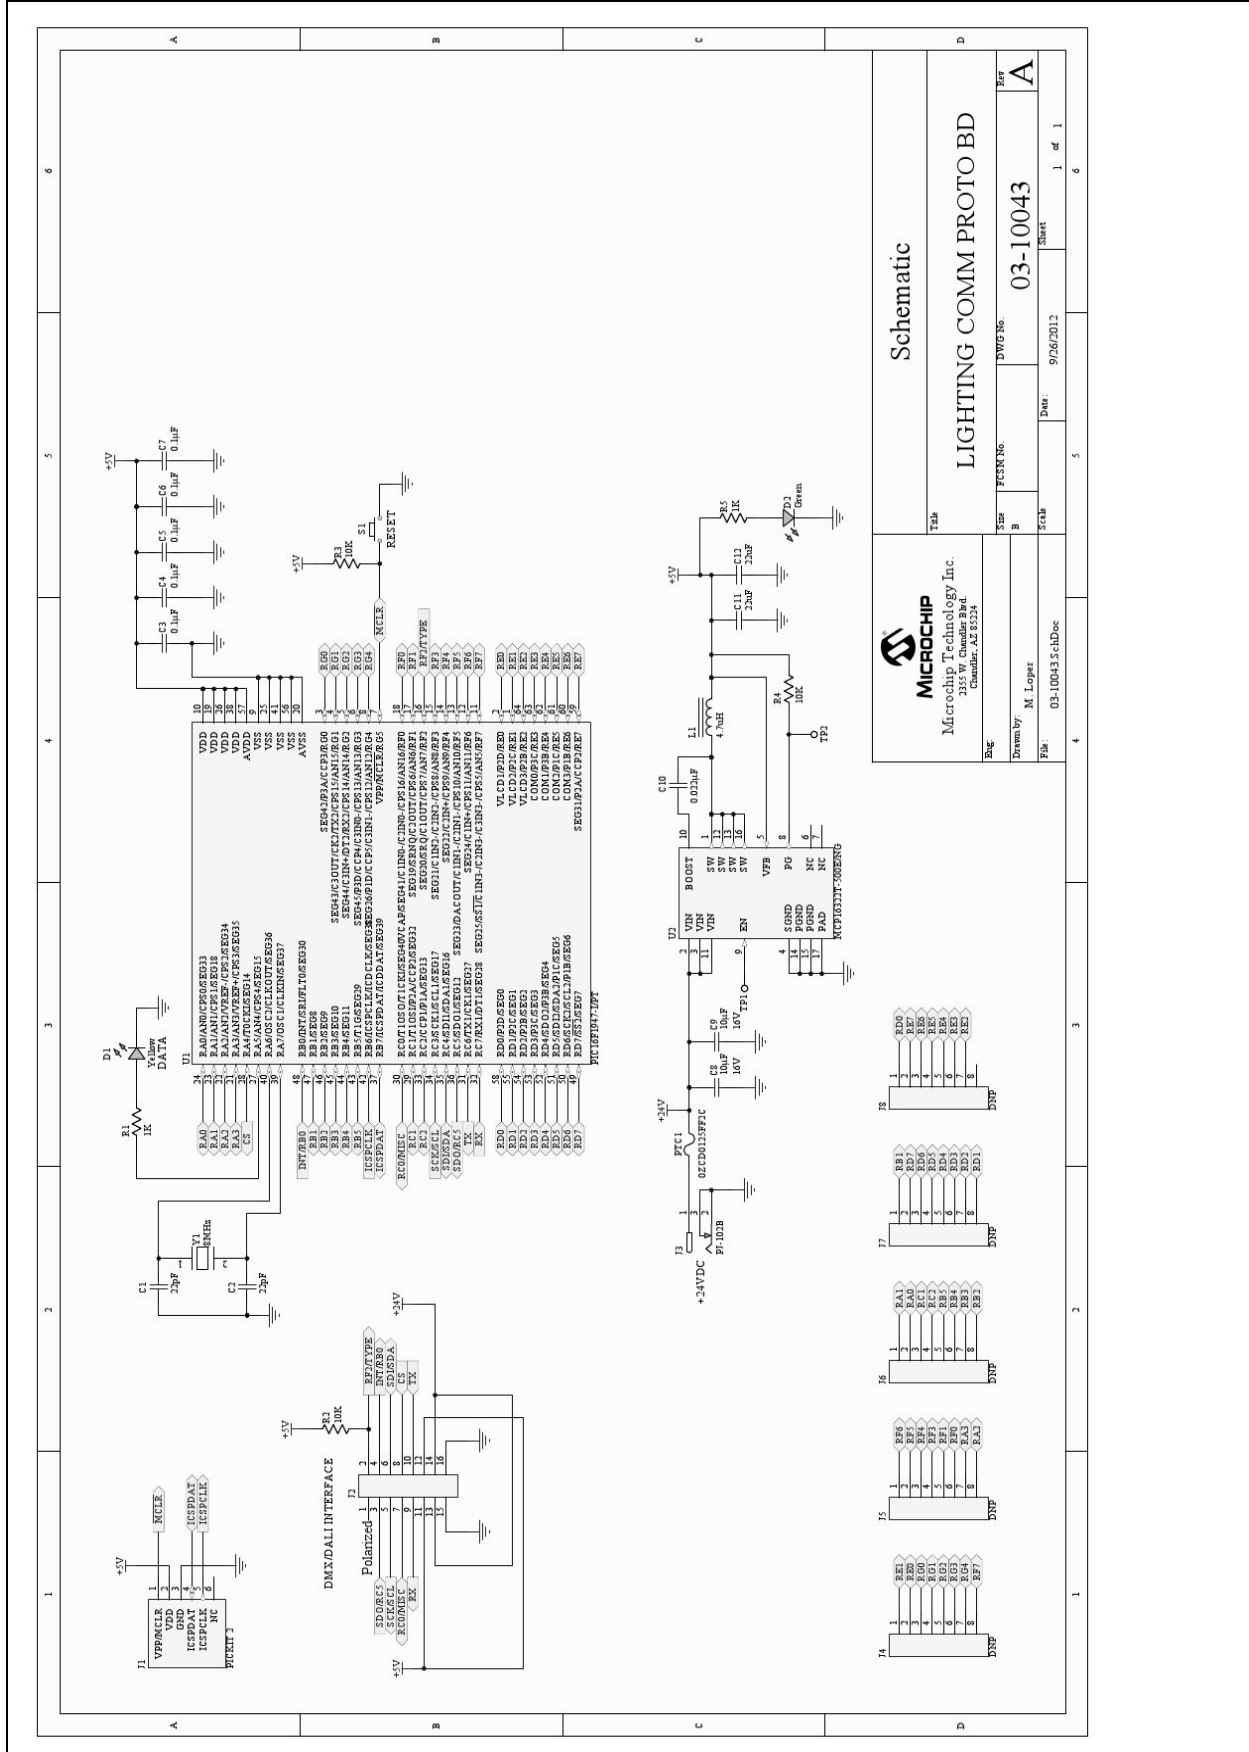


Chapter 4. DALI Adapter (AC160214-1)

The DALI adapter enables the lighting communications main board to operate as DALI control gear (receiver) or DALI control device (controller). It has screw terminals for basic DALI connection, and RJ45 connectors for quick connect of multiple DALI adapter boards together. It has a boost power supply with a simple high-speed current limit circuit to act as a DALI power supply. The option of phantom power is included on the RJ45 connector to allow multiple development boards to be powered from a single supply (see Figure 4-1).

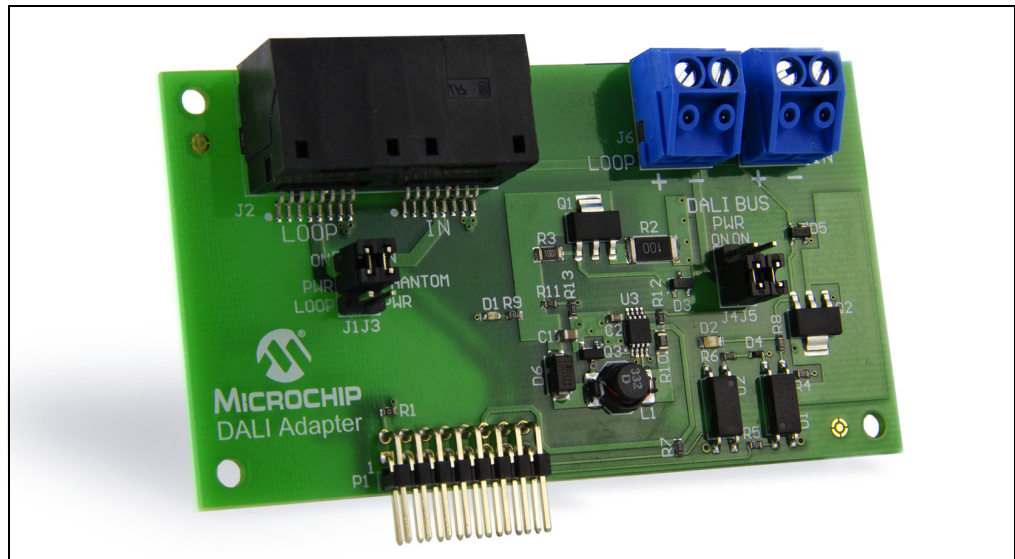FIGURE 4-1: DALI ADAPTER BOARD**4.1 FEATURES**

- Two screw terminal blocks for general purpose DALI connectivity
- RJ45 connectors for quick connection of multiple boards
- Optically-isolated DALI bus for safety
- Built-in 16V current-limited DALI power supply required for DALI communications
- Power shared across RJ45 connector so that multiple boards can be powered from a single supply.

FIGURE 4-2: DALI ADAPTER SCHEMATIC

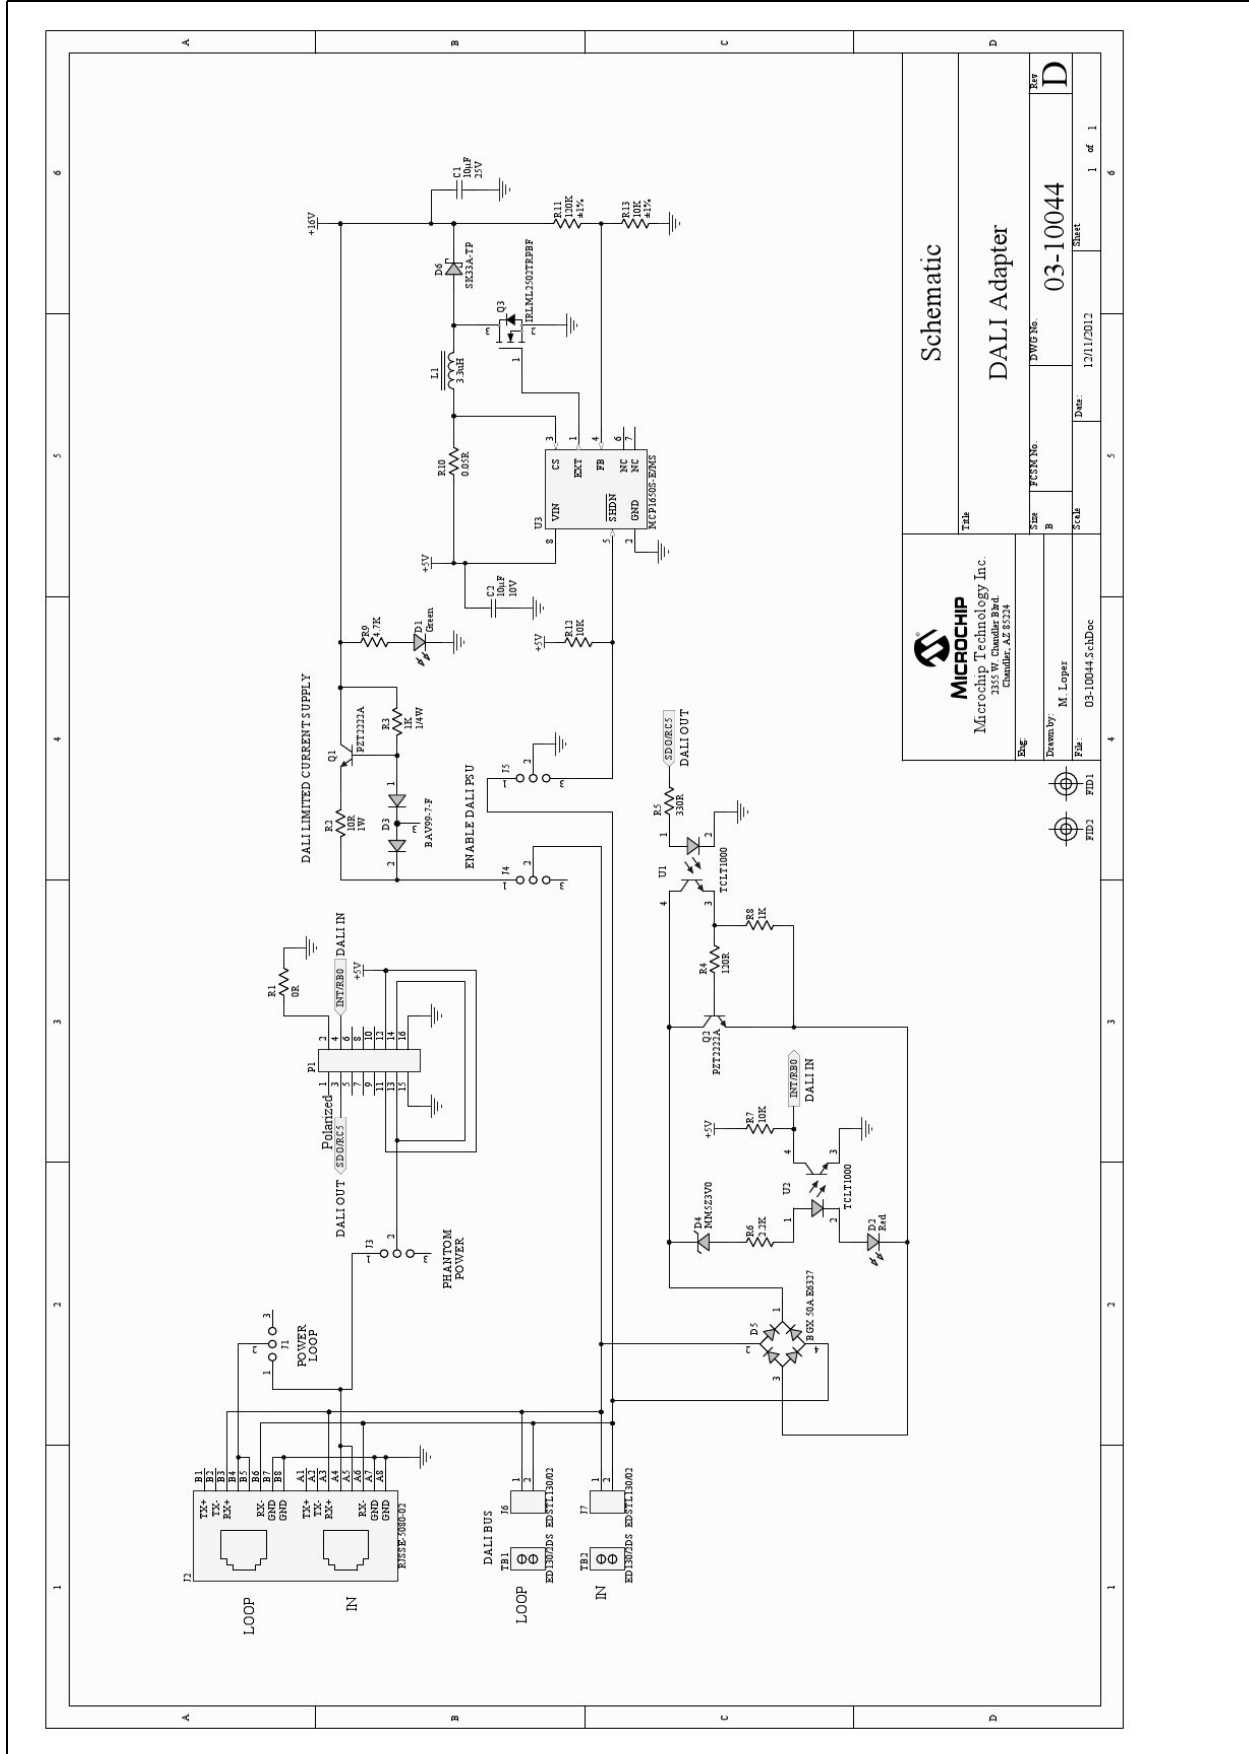

Schematic

DALI Adapter

DWG No. 03-10044

1 of 1

1/21/2012

M. Lopez

03-10044 Sch.Doc


FD1

FD1

DALI Adapter (AC160214-1)

4.2 BOARD SETTINGS


FIGURE 4-3: DALI ADAPTER JUMPERS

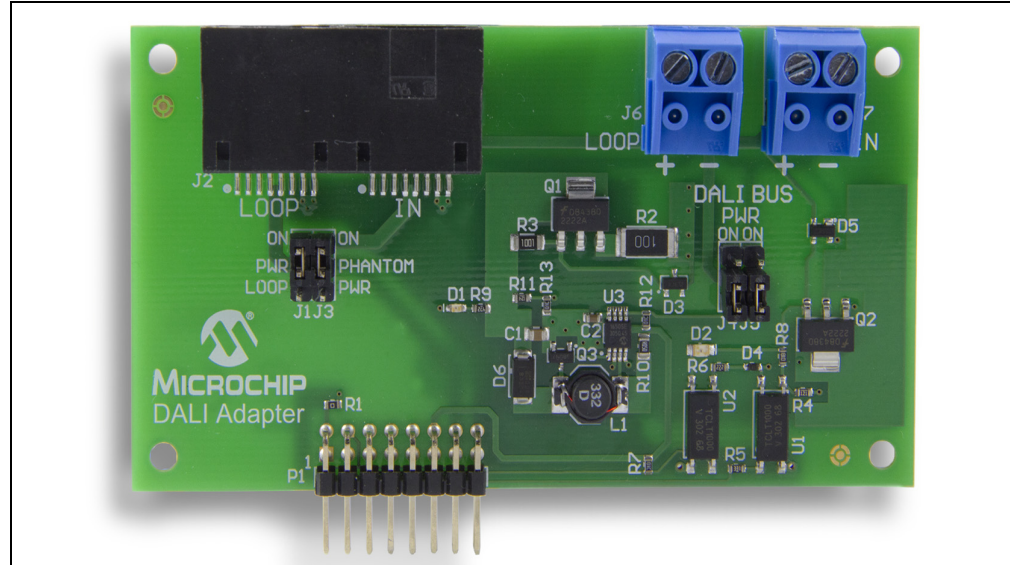

Label	Name	Description	Settings
J1	Loop	Loops phantom power to next board.	ON = Loop power to next board OFF = Do not loop power
J3	Phantom Power	It enables phantom power to supply or be supplied from the main board.	ON = Phantom power enabled OFF = Phantom power disabled
J4, J5	PWR	DALI Power supply. Enabling this connects the boost and current-limiting power supply to the DALI bus. NOTE: Enabling this removes the electrical isolation.	Both ON = DALI Power enabled and connected to the bus Both OFF = DALI Power disabled
J6	Loop	Screw terminal for general purpose DALI connection. Use this one to loop the DALI bus.	
J7	In	Screw terminal for general purpose DALI connection. Use this as the DALI bus input.	
J2	Loop/In	RJ45 connectors for DALI input, output and loop. It also allows phantom power for easy connection of demo boards. Phantom power is not a DALI standard – this capability is provided for ease of use during development. The RJ45 connector is for quick connection of the demo boards only and should not be used in end products as it does not comply with the DALI electrical requirements.	
P1		Connection to the main board.	

4.3 DALI DEMONSTRATION

FIGURE 4-4: DALI DEMONSTRATION CONFIGURATION

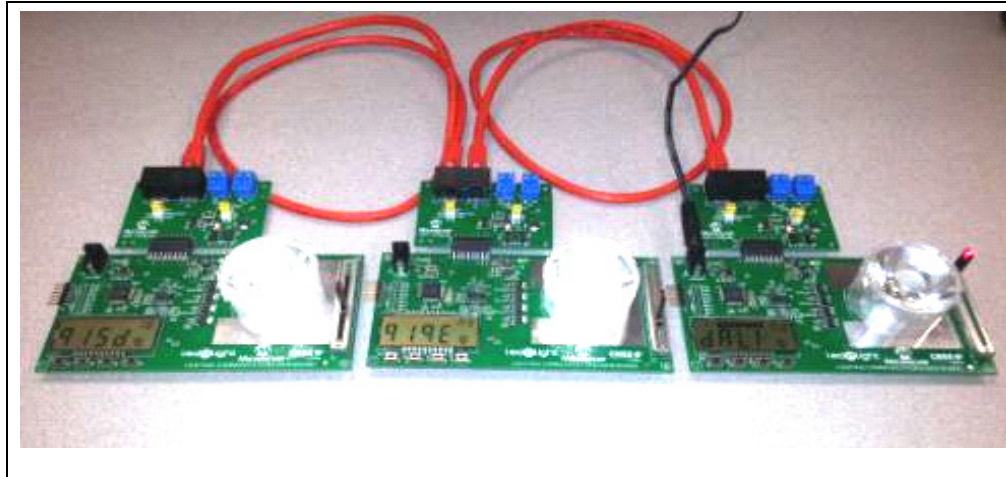

Demonstration Overview

- DALI bidirectional communications control
- Single-control device sending commands to multiple control gears
- Control gear performing white dimming based on control device commands
- PIC16F1947 Controlled Features:
 - White LED dimming via constant current control
 - Slider and button interface
 - LCD drive and control
 - DALI command and control

Hardware Requirements

- Three main communication boards
- Three DALI adapters
- Two RJ45 patch cables:
 - Optional: two 2-wire cables
- 9-12V power supply
- PICkit 3 programmer







Firmware Requirements

- Control device demonstration code: *DALI_ControlDeviceDemo.hex*
- Control gear demonstration code: *DALI_ControlGearDemo.hex*

Downloadable at www.microchip.com/lightingcomms.

DALI Adapter (AC160214-1)

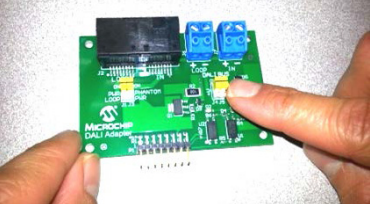4.3.1 Demonstration Setup

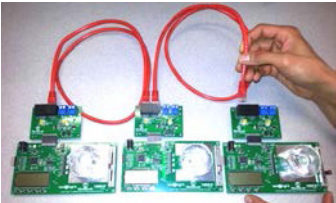1	Utilize the PICkit™ 3 to program the main communication board with control device demonstration code.	
2	Utilize the PICkit 3 to program one or more additional boards with the control gear demonstration code.	
3	Set up the DALI adapter board as power supply. Use the following settings: J1 = ON J3 = ON J4 and J5 = ON	
4	Set up the remaining DALI adapter boards. Use the following jumper settings: J1 = ON J3 = ON J4 and J5 = OFF	
5	Connect the DALI boards to the main boards.	
6	Connect the demo boards together using the RJ45 connectors and Ethernet patch cables.	





Lighting Communications Development Platform User's Guide

7 Connect the 9-12 VDC power cord to one of the boards.



4.3.2 Demonstration Operation

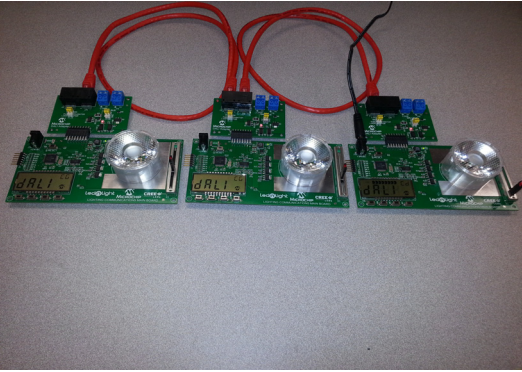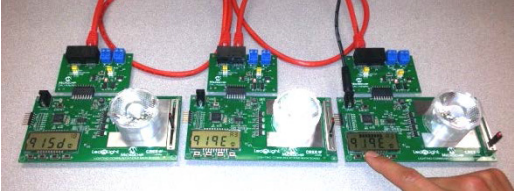4.3.2.1 CONTROL DEVICE


<p>LCD displays “Cd” in the top right corner for the Control Device firmware, and “CG” for the control gear firmware.</p> <p>Main display will be “dALI”.</p> <p>Button S2 of the control device initiates the commissioning sequence.</p> <p>Buttons S3 to S5:</p> <ol style="list-style-type: none"> 1. During commissioning, these assign the short address to the currently highlighted control gear. 2. During normal operation, these toggle the selected control gear ON and OFF. <p>Slider is used in Normal mode to set the level of the last selected control gear.</p> <p>Note that the LED on the control device is not active.</p>	
<p>How to run a commissioning sequence:</p> <ol style="list-style-type: none"> 1. Power-up the boards 2. Press S2 to start the sequence. The display will start scrolling through a 24-bit hex search sequence. 3. When a control gear is discovered, the count will stop and its LED will go bright. 4. Select a button (S3 to S5) to associate this control gear with. Once assigned, the LED will dim down and the count will continue. 5. This repeats until all devices have been discovered and the count runs out. 	<p>Start Commission</p>  <p>Assigning the control gear to a switch</p> 
<p>Controlling the lights:</p> <ol style="list-style-type: none"> 1. Press a button, S3 to S5, to turn the selected control gear ON and OFF. 2. Once a control gear is selected, then the slider can be used to set its brightness. 	<p>Running the demo</p> 

NOTES:

Chapter 5. DMX512A Adapter (AC160214-2)

The DMX512A adapter enables the lighting communications main board to operate as a DMX512A controller or receiver. It has the DMX512A standard 5-pin XLR connectors for connection to existing equipment, and RJ45 connectors for quickly connecting multiple adapter boards together (see Figure 5-1). Using an isolated RS-485, it complies with the DMX512A standard. We have added the option of phantom power which allows multiple development boards to be powered from a single supply. This breaks the isolation and is not part of the DMX512A standard.


FIGURE 5-1: DMX512A ADAPTER

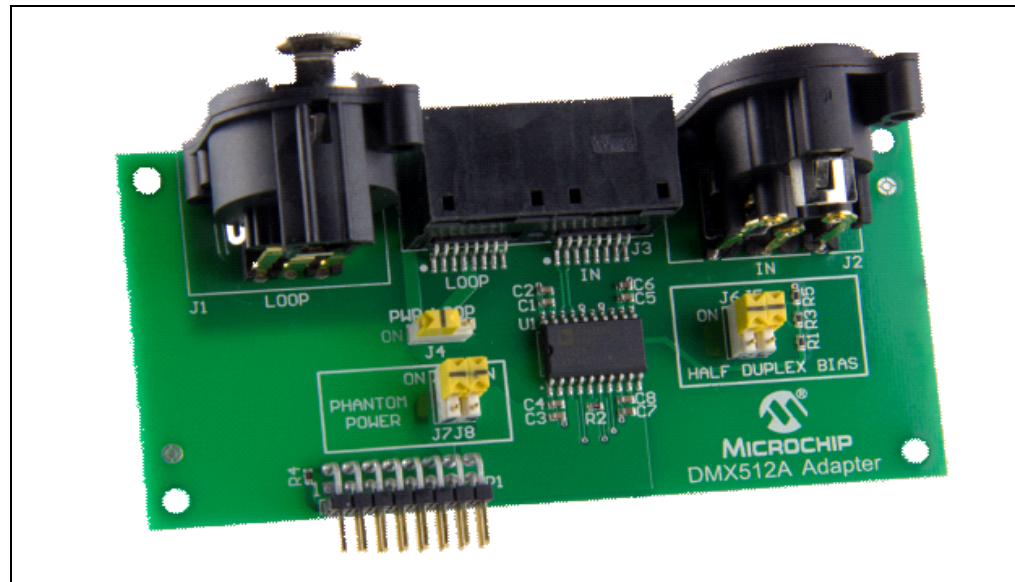

5.1 FEATURES

- 5-pin XLR plug and socket (DMX512A compliant)
- Isolated RS-485 transceiver (DMX512A compliant)
- RJ45 connectors for quick connection of multiple boards wired to DMX512A pinouts
- Power shared across RJ45 connector so that multiple boards can be powered from a single supply (Removes isolation and is not DMX512 compliant. For experimentation only)
- Half-duplex biasing for half-duplex operation as controller (removes isolation)
- Lighting communications adapter connector

FIGURE 5-2: DMX512A ADAPTER SCHEMATIC

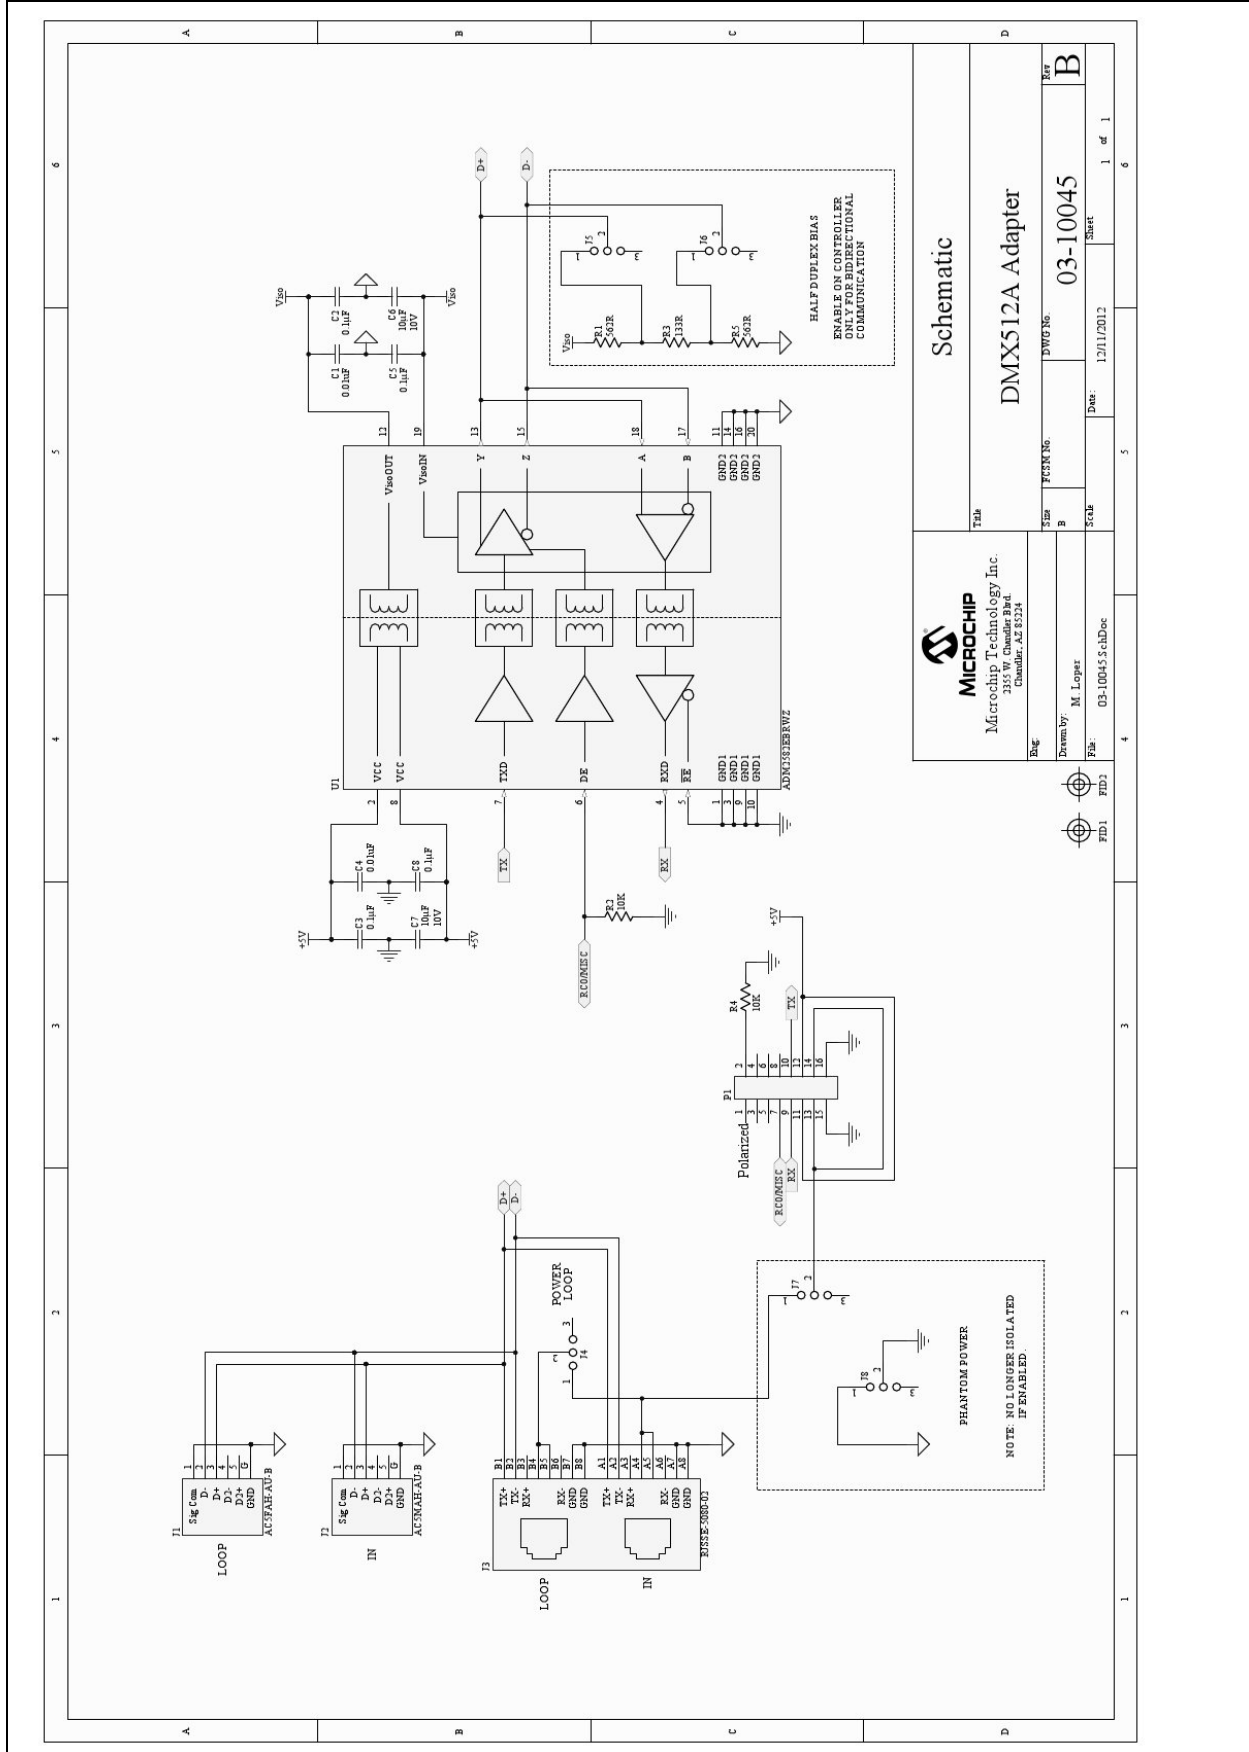


Microchip		Schematic	
Microchip Technology Inc. 3290 Central Expressway Chandler, AZ 85226			
Doc No:	03-10045	Rev:	B
Drawn by:	M. Lopez	Scale:	
File:	03-10045-StdDoc	Date:	12/11/2012
Sheet		1 of 1	

DMX512A Adapter (AC160214-2)

5.2 BOARD SETTINGS

FIGURE 5-3: DMX512A ADAPTER JUMPERS

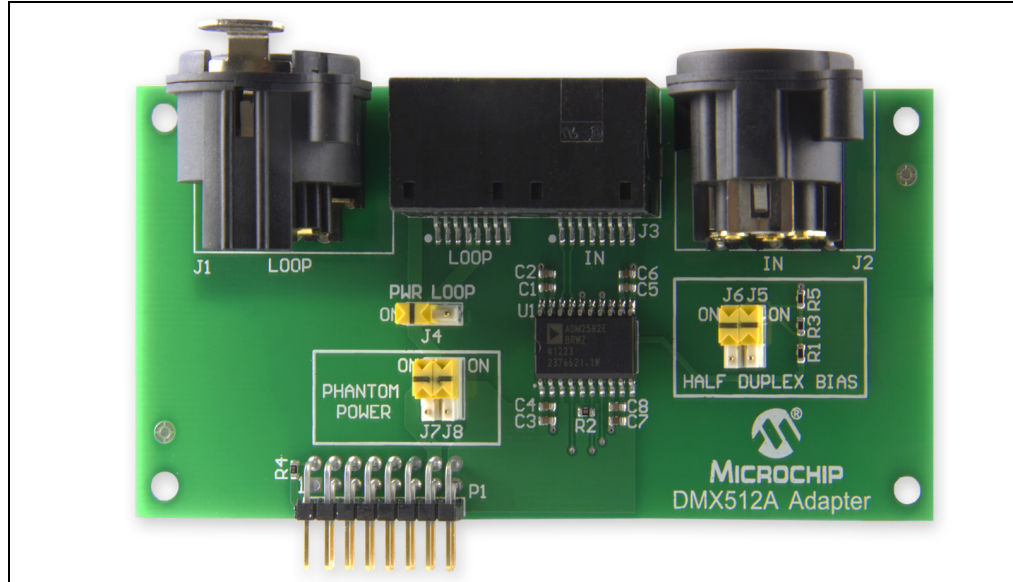

Label	Name	Description	Settings
J4	PWR Loop	Loops phantom power to next board.	ON = Loop power to next board OFF = Do not loop power
J7, J8	Phantom Power	It enables phantom power to supply or be supplied from the main board. Using this option, it removes the isolation so is no longer DMX512A compliant.	Both ON = Phantom power enabled Both OFF = Phantom power disabled
J5, J6	Half-Duplex Bias	It enables the half-duplex bias resistors needed for bidirectional communication used by DMX512A for RDM and other enhanced functions.	Both ON = Bias enabled Both OFF = Bias disabled
J1	Loop	5-pin XLR socket for DMX512A out or looping to the next board.	
J2	In	5-pin XLR socket for DMX512A input.	
J3	Loop/In	RJ45 connectors for DMX512A input, output and loop. Wired according to the DMX512A RJ45 connection standard for permanent wiring. It also allows the phantom power using the "unused" wires for easy connection of demo boards which is not DMX512A compliant.	
P1		Connection to the main board.	

5.3 DMX512A DEMONSTRATION

FIGURE 5-4: DMX512A DEMONSTRATION CONFIGURATION



Demonstration Overview

- DMX512A unidirectional communications control
- Single controller sending commands to multiple receivers
- Receivers performing RGBW (red, green, blue, white) color mix based on controller commands
- PIC16F1947 Controlled Features:
 - RGBW LED color mixing via constant current control
 - Slider and button interface
 - LCD drive and control
 - DMX512A command and control

Hardware Requirements

- Three main communication boards
- Three DMX512A adapters
- Two RJ45 patch cables:
 - Optional: Two XLR5 cables
- 9-12V power supply
- PICkit 3 programmer




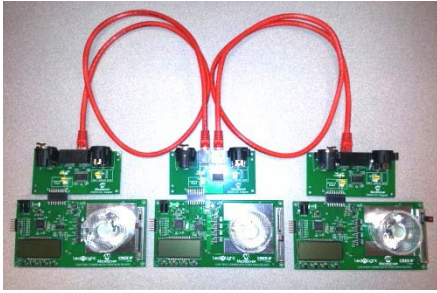
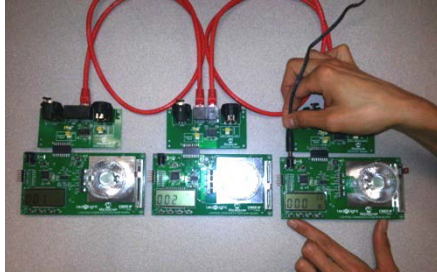
Firmware Requirements

- Controller demonstration code: *DMX512A_ControllerDemo.hex*
- Receiver demonstration code: *DMX512A_ReceiverDemo.hex*

Downloadable at www.microchip.com/lightingcomms.

DMX512A Adapter (AC160214-2)

5.3.1 Demonstration Setup

1	Utilize the PICkit™ 3 to program the main communication board with controller demonstration code.	
2	Utilize the PICkit 3 to program one or more additional boards with the DMX512A receiver demonstration code.	
3	Set up the adapter jumper settings, then plug the adapter onto the main boards. Use the following settings: <ul data-bbox="277 884 386 1037" style="list-style-type: none">• J4 – ON• J5 – ON• J6 – ON• J7 – ON• J8 – ON	
4	Use RJ45 cables to connect the controller to the receivers by daisy-chaining the cables between them as shown.	
5	Connect the power by inserting the 9V power supply into the DC connector on the controller board.	

5.3.2 Demonstration Operation


5.3.2.1 RECEIVER

LCD displays an 'E' in the top right corner for the receiver firmware.

A 3-digit DMX512A base address will also be displayed on the LCD.

Buttons **S2** to **S4** set the base address of the receiver.

Each board uses four addresses, one for each color in the order of red, green, blue and white.

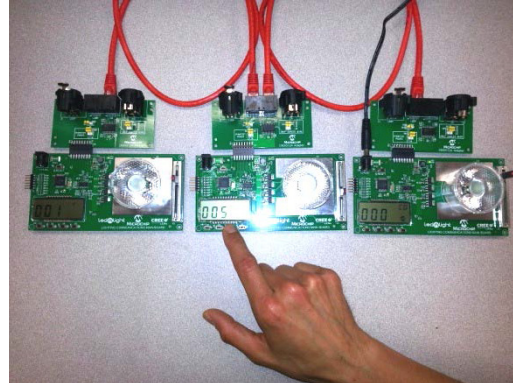

Set the base address of each receiver to a unique or common address in the range 1 to 512.


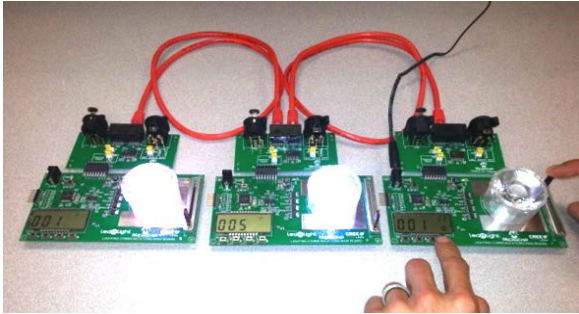
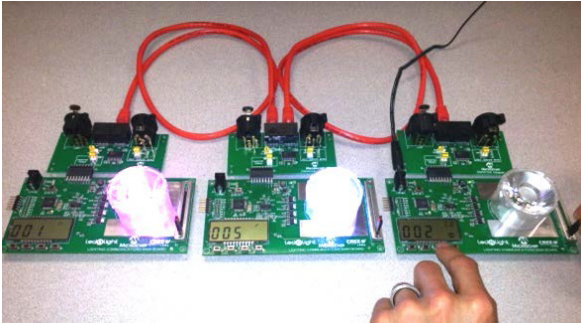
For the generic demo, please set one of the receiver boards to address '001'.

If you have more than one receiver board, add 4 to each board address to get the correct offset. (e.g., 001 005 009 013 017 021, etc.)



DMX512A Adapter (AC160214-2)

5.3.2.2 CONTROLLER

<p>A 'C' is displayed on the top right of the LCD, followed by a single digit to show what mode the demo is in.</p> <p>The transmit address is also displayed on the LCD.</p> <p>Use button S4 to rotate through the modes C0 to C2.</p> <p>Buttons S2, S3 and S4 are used to set the DMX transmit address for mode C2.</p> <p>Note that the LED on the controller is not active.</p>	
<p>Mode C0: This is the OFF mode, transmission should cease.</p>	
<p>Mode C1: It automatically rotates between red, green, blue, white and some color mixes. No interaction with slider or buttons.</p>	

Mode C2:

It manually sets the selected address using the slider value.


Change the address using buttons **S2**, **S3** and **S4**.
Adjust the slider to set the level of that channel.

Change the address to the next channel that you want to change and move the slider accordingly.

Note: Channels will be automatically updated to the current slider value as you rotate through the addresses.

Example:

- Set controller address display to '001'. Slider controls the red LED of receiver '001'.
- Set controller address display to '002'. Slider controls the green LED of receiver '001'.
- Set controller address display to '008'. Slider controls the white LED of receiver '005'.

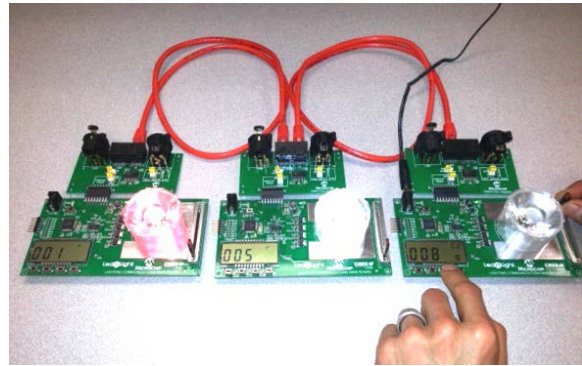

NOTES:



MICROCHIP

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Cleveland
Independence, OH
Tel: 216-447-0464
Fax: 216-447-0643

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Farmington Hills, MI
Tel: 248-538-2250
Fax: 248-538-2260

Indianapolis
Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

Santa Clara
Santa Clara, CA
Tel: 408-961-6444
Fax: 408-961-6445

Toronto
Mississauga, Ontario,
Canada
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office
Suites 3707-14, 37th Floor
Tower 6, The Gateway
Harbour City, Kowloon
Hong Kong
Tel: 852-2401-1200
Fax: 852-2401-3431

Australia - Sydney
Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing
Tel: 86-10-8569-7000
Fax: 86-10-8528-2104

China - Chengdu
Tel: 86-28-8665-5511
Fax: 86-28-8665-7889

China - Chongqing
Tel: 86-23-8980-9588
Fax: 86-23-8980-9500

China - Hangzhou
Tel: 86-571-2819-3187
Fax: 86-571-2819-3189

China - Hong Kong SAR
Tel: 852-2943-5100
Fax: 852-2401-3431

China - Nanjing
Tel: 86-25-8473-2460
Fax: 86-25-8473-2470

China - Qingdao
Tel: 86-532-8502-7355
Fax: 86-532-8502-7205

China - Shanghai
Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang
Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen
Tel: 86-755-8864-2200
Fax: 86-755-8203-1760

China - Wuhan
Tel: 86-27-5980-5300
Fax: 86-27-5980-5118

China - Xian
Tel: 86-29-8833-7252
Fax: 86-29-8833-7256

China - Xiamen
Tel: 86-592-2388138
Fax: 86-592-2388130

China - Zhuhai
Tel: 86-756-3210040
Fax: 86-756-3210049

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444
Fax: 91-80-3090-4123

India - New Delhi
Tel: 91-11-4160-8631
Fax: 91-11-4160-8632

India - Pune
Tel: 91-20-2566-1512
Fax: 91-20-2566-1513

Japan - Osaka
Tel: 81-6-6152-7160
Fax: 81-6-6152-9310

Japan - Tokyo
Tel: 81-3-6880-3770
Fax: 81-3-6880-3771

Korea - Daegu
Tel: 82-53-744-4301
Fax: 82-53-744-4302

Korea - Seoul
Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Malaysia - Kuala Lumpur
Tel: 60-3-6201-9857
Fax: 60-3-6201-9859

Malaysia - Penang
Tel: 60-4-227-8870
Fax: 60-4-227-4068

Philippines - Manila
Tel: 63-2-634-9065
Fax: 63-2-634-9069

Singapore
Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Hsin Chu
Tel: 886-3-5778-366
Fax: 886-3-5770-955

Taiwan - Kaohsiung
Tel: 886-7-213-7828
Fax: 886-7-330-9305

Taiwan - Taipei
Tel: 886-2-2508-8600
Fax: 886-2-2508-0102

Thailand - Bangkok
Tel: 66-2-694-1351
Fax: 66-2-694-1350

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

UK - Wokingham
Tel: 44-118-921-5869
Fax: 44-118-921-5820

11/29/12