



Intuitive


Extremely Just connect a cable, and press the TEST button



Wide **LCD** Screen

Check all parameters such as wiremap, direction and cable length at a glance.



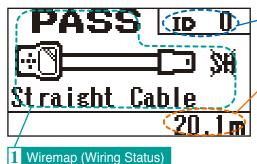

2 Direction (ID No.)

Identify the terminator ID here.

### 3 Cable Length

Obtain a record of the entire length of the cable, or up to the point where the cable is dam-

Super-

sensitive

Detection

Large PASS/FAIL display, cable type, reason for cable failure and shield condition.

• • • • • •

•

•

•

• • • •

•

• • • •

•

•


• •


•

For wiring confirmation and locating broken wires after installation.Quick PASS/FAIL reading helps you complete your work faster.

### **PASS** Display Examples


Both straight-through and crossover cables (10/100BASE, 1000BASE-T and 1000BASE-TX) can be checked.

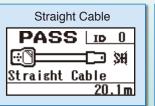


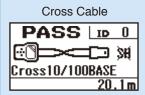


### Fully Compatible to **CAT6** LAN Cables

Detect the existence of shields or check for shield integrity.

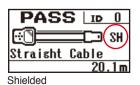

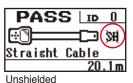

### **FAIL** Display Examples

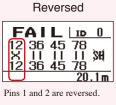







Pins 3 and 6 have been incorrectly paired with Pins 4 and 5



FAIL ID
36 45 78
12 36 45 78
7 19 19 19 m


Pin 1 is open at a distance 7 meters from the LAN cable tester.

#### Short

F	ΑI	L	ID	
++	36 11	45 11	78 11	SH
12 10	36 19	45 19	78 19	m

Pins 1 and 2 are shorted at a distance 10 meters from the LAN cable tester.


#### Split Pair

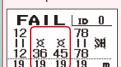

A very common mistake - twist pairs Pins 3+6, and Pins 4+5, have been incorrectly con-




# Can you find **Split pairs?**

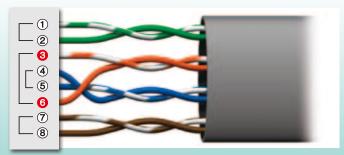



### **Proper Wiring**

LAN cable wires should be connected as shown in the diagram above, such that Pins 3 and 6 are twisted.

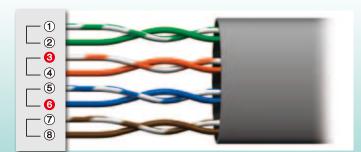



### Split Pair

A "Split Pair" is detected when Pins 3 and 6 are not twisted and paired together as shown above.

# Direction

• •

•

•

• • • •

### Locate up to 21 unique cable destinations.

Have you ever had trouble installing additional cables?





Take advantage of the conveniences offered by the tester's capabilities to check wiring while confirming multiple cable destinations.

**Increased** Efficiency!

You will never need to go back and forth again just to change the terminators.

Up to 21 terminators can be connected (additional terminators sold separately.) Convenient for confirming the connection destinations of multiple cables.

# Cable Length

Measure for cable length and detect the location of broken or short-circuited wires.

The NVP\*setting is a cable-length compensation function that enhances the accuracy of cable length measurements.

Accuracy with NVP activated:

■ ± 4% rdq. ± 1m

(vs.previous HIOKI model: 15% rdg. ±1m)



\* NVP (Nominal Velocity of Propagation) is the ratio of the speed of a signal in the cable relative to the speed of light in a vacuum. NVP differs according to the type of cable and the manner in which the wire pairs are twisted, so measurement accuracy can be enhanced by setting the NVP value for the particular type of cable to be measured.

### ■ Activating the NVP function is as simple as 1-2-3






Prepare a reference cable using a known length of the same type as that to be measured (at least 100-meter length recommended).



On the Settings screen, select "Length Adjust".

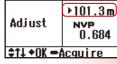

Press the TEST button to measure the (already known)

length of the reference cable.

▶100.0m Adjust NVP 0.675 \$↑↓ +NK =Acquire

Increased

Precision!

Calibrate the display to the measured reference cable.





## ■ How Can Split Pairs Affect the Network? ==

- Communication speed can be suppressed 100BASE signals may reach only 10BASE speeds.
- Excessive communication errors data transfer may be intermittent or completely inhibited.
- Cables miswired in this way are more susceptible to electrical noise.

Split pairs appear to be properly connected to the untrained eye, and cannot be detected with continuity testing.



To properly check LAN cable wiring, a tester capable of detecting split pairs is indispensable.



The HIOKI 3665 can do the job for you properly and accurately by also detecting split pairs.

### Specifications (Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)

@ 23 ±5 °C, 80% RH or less, non-condensating, with battery indicator unlit

<u> </u>	,,			
Measurable cables	Twisted-pair cable			
	100 $\Omega$ characteristic impedance, shielded and unshielded, CAT 3, 4, 5, 5e and 6			
Compatible connectors	RJ-45 plugs			
Measurement Items				
[Wiremap]	Wiring condition and shielding can be confirmed using the HIOKI TERMINATOR 9690			
	Detectable errors: open, short, reversed, transposed, split pairs and other miswiring			
	Measurable lengths: 2 to 300 m, 6.6 to 984 ft			
[Cable Length]	Measurement accuracy: ±4% rdg. ±1 m, ±4% rdg. ±3.3 ft			
	Display resolution: 0.1 m			
[Destination]	Up to 21 cables can be identified using the supplied TERMINATOR 9690 and optional Models 9690-01 to			
	9690-04 to test multiple cables simultaneously			
Display	$128 \times 64$ dot matrix LCD (with backlight)			
	Auto Backlight: pressing a button turns the backlight on (it turns off automatically after about 20 seconds)			
	Beeper: sounds when pressing buttons and when measurement results are displayed			
Functions	Energy-Saving Mode: enter into energy-saving mode after measurement (and resume when the TEST button is pressed)			
Functions	Auto Power Save: the 3665 turns off automatically about 10 minutes after the last button press			
	Battery Check: Battery indicator blinks when voltage falls below 2.4 V			
	Unit Switch: Select between meters or feet			
Compliance	Safety Standard: EN61010 Pollution Level 2			
Standards	EMC Standard: EN61326			
Allowable Input	3.3 V peak (between RJ-45 pins)			
Operating Temperature & Humidity				
Storage Temperature & Humidity	-10 to 50 °C, 80% RH or less, non-condensating			
Power supply	LR6 (AA) alkaline batteries × 2			
Maximum Power Consumption	1.4 VA			
Operating Time	Approx. 50 hours (measuring once per minute)			
Dimensions	Approx. 85 mm (3.35 in) W × 130 mm (5.12 in) H × 33 mm (1.30 in) D			
Mass	Approx. 160 g (5.6 oz)			
	HOLE			
Model: LAN CABLE HITESTER 3665				
Model No. (Order Code) (Note) 3665-20 (English model)				
0000-20 (Eng	not movely			

Accessories: Terminator 9690 ×1, Carrying case ×1, LR6 (AA) alkaline battery ×2, Instruction manual ×1

### ■ Supplied Accessories \_

TERMINATOR 9690 **CARRYING CASE** 

(Stores the HiTESTER 3665 and TERMINATORs 9690)



**TERMINATOR 9690** 



**CARRYING CASE** 

### ■ Options \_

TERMINATOR 9690-01 (IDs 1 to 5) TERMINATOR 9690-02 (IDs 6 to 10) TERMINATOR 9690-03 (IDs 11 to 15)

TERMINATOR 9690-04 (IDs 16 to 20)

CARRYING CASE 9249 (stores the 3665 and 9690 together)



TERMINATOR 9690-01



**CARRYING CASE 9249** (for storing everything together)

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies. **DISTRIBUTED BY** 



HEADQUARTERS 81 Koizumi Ueda, Nagano 386-1192 Japan www.hioki.com

HIOKI USA CORPORATION
TEL +1-609-409-9109 FAX +1-609-409-9108
hioki@hiokiusa.com / www.hiokiusa.com

### HIOKI (Shanghai) SALES & TRADING CO., LTD. TEL +86-21-6391-0090/0092 FAX +86-21-6391-0360 info@hioki.com.cn / www.hioki.cn

HIOKI SINGAPORE PTE.LTD. TEL +65-6634-7677 FAX +65-6634-7477 info-sg@hioki.com.sg / www.hioki.com.sg

HIOKI KOREA CO., LTD. TEL +82-2-2183-8847 FAX +82-2-2183-3360 info-kr@hioki.co.jp / www.hiokikorea.com

HIOKI EUROPE GmbH

TEL +49-6173-31856-0 FAX +49-6173-31856-25 hioki@hioki.eu / www.hioki.com

All information correct as of Apr. 9, 2018. All specifications are subject to change without notice.