

LED VALUE CEILING





Model Name	Wattage	ССТ	Input Voltage	Frequency	Cover Material	Ø	Н	Weight	ta
LDVAL-CL-10W-R-2-AM	10W	3000K/ 4000K/ 6500K	100- 240V	50/60Hz	РММА	260mm	60mm	362g	-10~40°C
LDVAL-CL-20W-R-3-AM	20W					330mm	65mm	546g	
LDVAL-CL-23W-R-3-AM	23W					330mm	65mm	546g	
LDVAL-CL-30W-R-3-AM	30W					390mm	70mm	777g	
LDVAL-CL-42W-R-4-AM	42W					440mm	75mm	1026g	




INSTALLATION:

1. Disconnect mains power before assembly. افصل التيار الكهربائي قبل التجميع



2. Rotating the cover and take it off تدوير الغطاء وخلعه

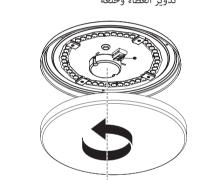


3. Keep the fixture pan flat on the ceiling. Mark the drilling hole with pen and drilling on the ceiling accordingly.

حافظ على وعاء المصباح ثابت على السقف قم بوضع علامة بالقلم في مناطق الثقب ثم احفر السقف وفقا



4. Drill expansion screw into the ceiling hole احفر مسمار التوسع في ثقب السقف

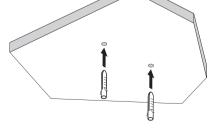




LED VALUE CEILING


5. Insert power supplier wires into the fixture pan through sheathed wire cable hole. وصل أسلاك الطاقة في غطاء المصباح من خلال تمرير


الاسلاك في الثقوب

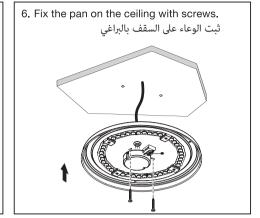

7. Insert the L,N,G input wires in the terminal block, secure the connection via push-in button.

ثبت الاسلاك بالبراغي في مواقع L, N, G قم بإحكام التوصيل عن طريق زر الضغط

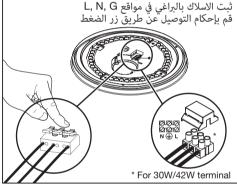

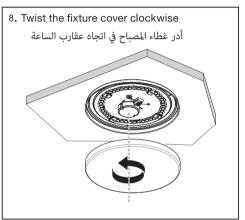

9. Turn the power switch back on to verify that the product is working properly.

> قم بتشغيل مفتاح الطاقة مرة أخرى للتحقق أن المنتج يعمل بشكل صحيح









$\overline{\mathbb{V}}$

WARNINGS:

- (GB)
- This product must be installed by a licensed electrical contractor strictly in accordance with local wiring rules.
- Avoid touching the LEDs.
- Please do not attempt to disassemble or change the construction of the luminaire or replace any of the parts to avoid the possibility of injury or product failure.
- Please keep this manual for future reference.
- This product is designed for indoor use only. It is not intended for installation in wet areas or where the location is exposed to the elements.
- This luminaire is designed for ceiling installation.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- Please note that the fixure is equipped with standard surge protection only. To protect the fixture from sags, surges, and lightning strikes, additional surge protectors must be deployed on the primary side.
 - يجب تثبيت المنتج من قبل مقاول
 - كهربائي مرخص بدقة وفقًا لقواعد الأسلاك المحلية
 - من فضك لا تحاول تفكيك أو تغيير بناء المنتج
 أو استبدال أي جزء من الأجزاء لتجنب احتمال حدوث إصابة أو تعطل في المنتج
 - يرجى الحفاظ على هذا الكتيب للرجوع إليه في المستقبل
 - المنتج مصمم للاستخدام الداخلي فقط. غير مناسب للتركيب
 - في المناطق الرطبة أو المناطق المكشوفة
 - الْمنتج مصمم للتركيب في السقف المعلق
 - يجب استبدال مصدر النوء الموجود في وحدة الإنارة فقط عن طريق المصنَّع أو وكيل الخدمة أو شخص مؤهل مهاثل
 - يرجى ملاحظة أن المنتج مجهز بوحدة حماية التيار الكهربائي الاساسية فقط. لحماية لحماية المنتج من التدفق العالي
 للتيار الكهربائي، يجب توفير وحدة حماية تيار كهرائي اضافية مع وحدة الحماية الأساسية





(See LEDVANCE Pty Ltd ABN 34 050 103 181 Suite 2.1A, 394 Lane Cove Road Macquarie Park NSW 2113, Australia Ph +61 29481 8399/1300 467 726 WWW ledvance au

© LEDVANCE Pte Ltd. 988 Toa Payoh North, # 03-06, Singapore 319002

EDVANCE Sdn, Bhd. (1166537-U) 100.7.009, 129 Offices, Block J, Jaya One No. 72A, Jalan Universiti, 46200 Petaling Jaya, Selangor Darul Ehsan, Malaysia

EDVANCE Pvt. Ltd. 1201-1202, 12th Floor, Signature Towers, Tower-A, South City-I, Gurugram-122001, Haryana (India) Consumer care (Name and address as per above), Consumer care Tel. No. 0124-4150100 E-mail id: customercare@ledvance.com www.ledvance.in

◎ (주)레드밴스 서울시 강남구 삼성로554예성빌딩6층 (우편번호 06165) 전화번호: +82 80 4891 700 www.ledvance.co.kr

LEDVANCE Prosperity Co., Ltd.
 20/F, Cornell Centre, 50 Wing Tai Rd.,
 Chai Wan, Hong Kong

■ LEDVANCE Middle East FZE
 Jebel Ali Free Zone
 JAFZA 16, Office 603
 P.O. Box 17476, Dubai – UAE





