



# Data Sheet

## HDMI solderless terminal block with screw

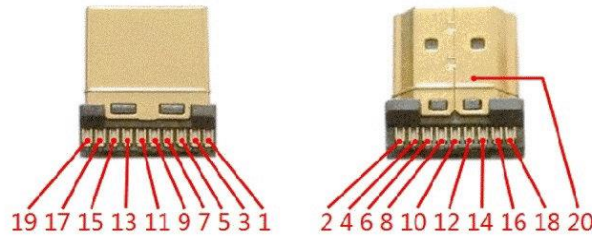

### Connect Instructions

Method 1:HDMI 19+1 wire,connect all line orders on PCB board like the right order.  
 Method 2:HDMI 15+1 wire,don't connect line order 2, 5, 8, 11;the others like method 1.  
 Method 3:HDMI 14+1 wire,don't connect line order 2, 5, 8, 11,14;the others same.  
 Method 4:HDMI 13+1 wire,don't connect line order 2, 5, 8, 11,13,14;the others same.  
**If change bothside plugs,pls take the 4 methods as reference.**  
 Change one side plug, pls test the old line order,then connect like old.  
 Different manufactures may use different cable colors,connect same ways on both sides according to cable structure.

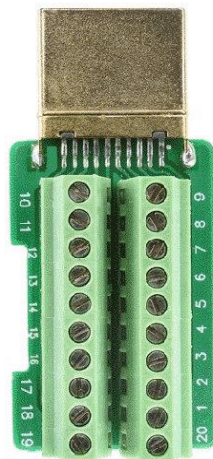

Serial no. on the circuit board consistent with international line order standards.

