


## CABLE MOUNTING INSTRUCTIONS

856.0000 RG58- 8200.0000 LowLoss

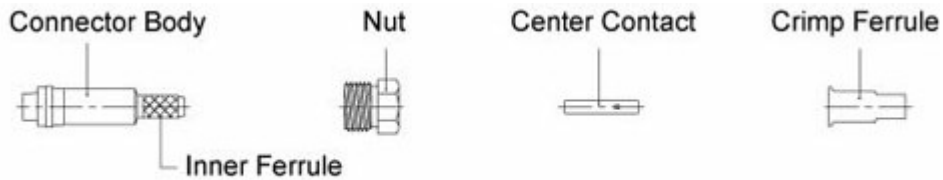

1.

### Preparation of Cable


- (1). Slide crimp ferrule onto cable.
- (2). Strip cable to recommended dimensions shown in catalogue.



2.

### Crimping Center Contact to Cable Center Conductor


- (1). Insert cable center conductor into center contact until cable dielectric rest against center contact
- (2). Crimp (or Solder) center contact to cable center conductor

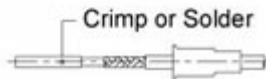


3.

### Inserting Cable to Connector Body

- (1). Slide nut onto connector body from inner ferrule end
- (2). Flare slightly end of cable braid to facilitate insertion of connector body
- (3). Insert cable assembly into rear of connector body, with all braid wires on outside of inner ferrule
- (4). Push cable assembly forward until contact seat inside of insulator

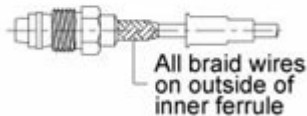

4.

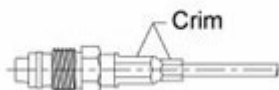

### Final Assembly

- (1). Slide crimp ferrule forward until flush with connector body and crimp.
- (2). Hold cable firmly seated then crimp in place

