


Mounting Blocks

Material: Steel, black oxide finish.

When mounting blocks are used, the shock absorber has to be secured with a lock nut.
2 socket-head screws DIN 912 are included.

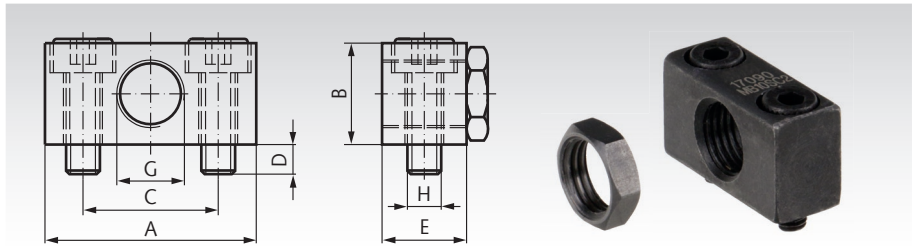

Ordering Details: e.g.:


Product No. 690 030 01, Mounting Block M8x1

Product No.	for Product No.	A	B	C	D	E	G	H	Tighten. Torque	Weight	Product No.	Weight
Mounting Block	Shock absorbers	mm	mm	mm	mm	mm	Thread	Thread	Nm	g	Lock Nut	g
690 030 01	690 030 00	25	12	16	3,5	10	M8x1	M4x12	4	15	690 030 04	0,8
690 050 01	690 050 00	25	14	16	3,5	10	M10x1	M4x16	4	20	690 050 04	1,4

Clamp Mounts

Material: Steel, black oxide finish.

When using the clamp mount, no lock nut is required. Fine adjustment can be carried out before the clamping.
2 socket-head screws DIN 912 are included.

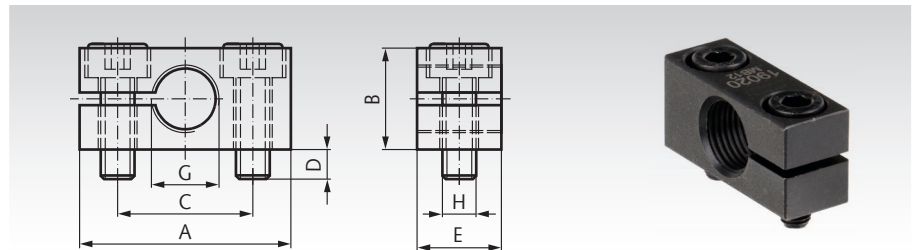

Ordering Details: e.g.:


Product No. 690 035 02, Clamp Mount M12x1

Product No.	for Product No.	A	B	C	D	E	G	H	Tighten. Torque	Weight
Clamp Mount	Shock absorbers	mm	mm	mm	mm	mm	Thread	Thread	Nm	g
690 035 02	690 035 00	32	16	20	4,5	12	M12x1	M5x16	6	35
690 150 02	690 150 00	32	20	20	4,5	12	M14x1,5	M5x2a0	6	40
690 225 02	690 225 00	40	25	28	6	20	M20x1,5	M6x25	11	89
690 600 02	690 600 00 / 690 900 00	46	32	34	6	25	M25x1,5	M6x30	11	185

Rectangular Flanges

Material: Steel, black oxide finish.

The rectangular flange allows front-end mounting without using an additional lock nut. The low and compact design allows space-saving constructions.
2 socket-head screws DIN 912 are included.

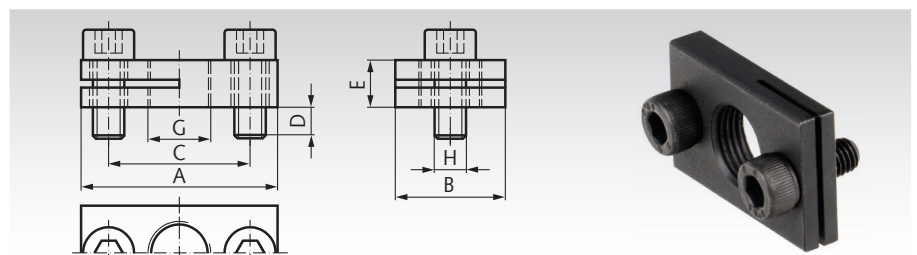

Ordering Details: e.g.:

Product No. 690 030 03, Rectangular Flange M8x1

Product No.	for Product No.	A	B	C	E	G	H	Tighten. Torque	Weight
Rectangular Flange	Shock absorbers	mm	mm	mm	mm	Thread	Thread	Nm	g
690 030 03	690 030 00	25	14	18	6	M8x1	M4x10	4	15
690 050 03	690 050 00	28	14	20	6	M10x1	M4x10	4	15
690 035 03	690 035 00	32	20	24	6	M12x1	M5x12	6	25
690 150 03	690 150 00	34	20	26	6	M14x1,5	M5x12	6	25
690 225 03	690 225 00	46	32	36	8	M20x1,5	M6x14	11	89
690 600 03	690 600 00 / 690 900 00	52	32	42	8	M25x1,5	M6x14	11	185