Dimensions

OBT250-R103-2EP-IO-V31-L



Model Number

OBT250-R103-2EP-IO-V31-L

Triangulation sensor (BGS) with 4-pin, M8 x 1 connector

Features

- Miniature design with versatile moun-• ting options
- DuraBeam Laser Sensors durable ٠ and employable like an LED
- Extended temperature range • -40°C ... 60°C
- High degree of protection IP69K
- IO-link interface for service and process data


Product information

The R103 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design - from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

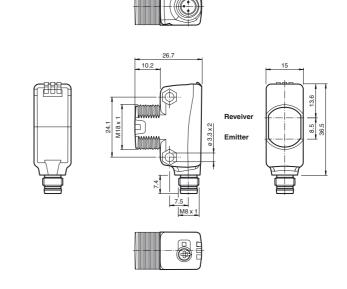


Electrical connection



Pinout



Indicators/operating means



1	Light-on/dark-on changeover switch	
2	Sensing range adjuster	
3		
4		
5	Operating indicator / light on	

Pepperl+Fuchs Group

www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Laserlabel

Technical data

General specifications Detection range Detection range min. Detection range max Adjustment range Reference target Light source Light type Laser nominal ratings Note Laser class Wave length Beam divergence Pulse length Repetition rate max. pulse energy Black/White difference (6 %/90 %) Diameter of the light spot Angle of divergence Ambient light limit Functional safety related parameters MTTF_d Mission Time (T_M) Diagnostic Coverage (DC) Indicators/operating means Operation indicator Function indicator Control elements Control elements **Electrical specifications** Operating voltage Ripple No-load supply current Protection class

Interface Interface type Device profile Transfer rate **IO-Link Revision** Min. cycle time Process data witdh SIO mode support Device ID

Compatible master port type Output

Switching type

Signal output

Switching voltage

Switching current Usage category Voltage drop

Switching frequency Response time Ambient conditions

Ambient temperature Storage temperature **Mechanical specifications**

Housing width	
Housing height	
Housing depth	
Degree of protection	
Connection	
Material	

www.pepperl-fuchs.com

7 ... 250 mm 7 ... 25 mm 7 ... 250 mm 25 ... 250 mm standard white, 100 mm x 100 mm laser diode modulated visible red light LASER LIGHT , DO NOT STARE INTO BEAM

680 nm > 5 mrad d63 < 1 mm in the range 150-250 mm 3μs approx. 13 kHz 10.4 nJ < 5 % at 120 mm approx. 1 mm at a distance of 200 mm approx. 0.3 ° EN 60947-5-2 40000 Lux

560 a

UB

 I_0

 U_{d}

f

20 a

0%

LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode LED yellow: constantly on - object detected constantly off - object not detected Light-on/dark-on changeover switch Sensing range adjuster

10 ... 30 V DC max. 10 % < 20 mA at 24 V supply voltage Ш

IO-Link (via C/Q = pin 4) Smart Sensor COM 2 (38.4 kBaud) 1.1 2.3 ms Process data input 1 Bit Process data output 2 Bit yes 0x110605 (1115653) А

The switching type of the sensor is adjustable. The default setting is: $C/Q - Pin4$: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link /Q - Pin2: NPN normally closed / dark-on, PNP normally open / light-on
2 push-pull (4 in 1)outputs, short-circuit protected, reverse pola- rity protected, overvoltage protected
max. 30 V DC
max. 100 mA , resistive load
DC-12 and DC-13
≤ 1.5 V DC
1650 Hz
300 µs
-40 60 °C (-40 140 °F)
-40 70 °C (-40 158 °F)
15 mm
43.9 mm
26.7 mm
IP67 / IP69 / IP69K
M8 x 1 connector, 4-pin



Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Accessories

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

V31-GM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com





Housing	PC (Polycarbonate)
Optical face	РММА
Mass	approx. 12 g
Compliance with standards and directi- ves	•
Directive conformity	
EMC Directive 2004/108/EC	EN 60947-5-2:2007+A1:2012
Standard conformity	
Product standard	EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012
Standards	UL 60947-5-2: 2014 IEC 61131-9:2013 IEC 60825-1:2007 EN 60825-1:2007 EN 61131-9:2013
Approvals and certificates	
••	
UL approval	E87056 , cULus Listed , class 2 power supply , type rating 1

FDA approval

IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Curves/Diagrams

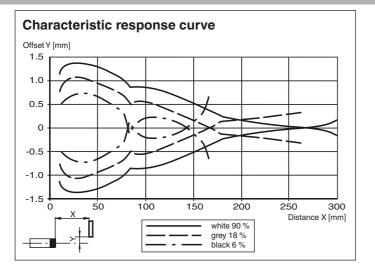

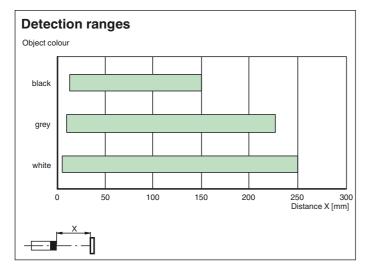


Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group USA: +1 330 486 0001 www.pepperl-fuchs.com


fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



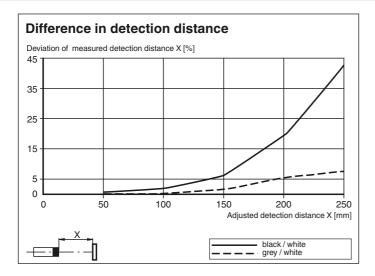

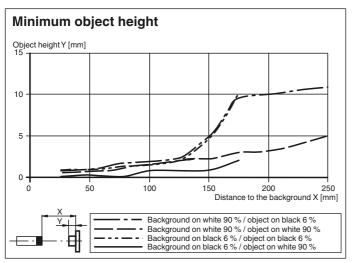

Functions and Operation

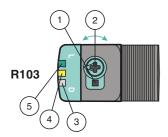

- 1 Light-on / dark-on changeover switch
- 2 Sensing range / sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster / sensitivity adjuster for more than 180 degrees.

Sensing Range/ Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Δ

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.



After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range / sensitivity adjuster for more than 180 degrees.

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

