







Model Number

UB120-12GM-U-V1


Single head system

Features

- Extremely narrow projection cone
- Analog output 0 ... 10 V
- Very small unusable area
- Measuring window adjustable
- Short response time

Diagrams

Characteristic response curve

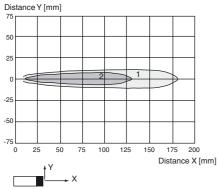

Curve 1: flat surface 10 mm x 10 mm Curve 2: round bar, Ø 8 mm

Technical data General specifications

15 ... 120 mm Sensing range Adjustment range 20 ... 120 mm 0 ... 15 mm Unusable area Standard target plate 10 mm x 10 mm Transducer frequency approx. 850 kHz Response delay approx. 27 ms

Indicators/operating means

solid yellow: object in the evaluation range LED yellow yellow, flashing: program function, object detected I FD red solid red: Error

Electrical specifications

Operating voltage U_B 15 ... 30 V DC , ripple 10 $\%_{SS}$ ≤ 30 mA

No-load supply current I₀ Input

Input type 1 program input

lower evaluation limit A1: -U_B ... +1 V, upper evaluation limit

red, flashing: program function, object not detected

A2: +4 V ... +U_B

input impedance: > 4.7 k Ω , pulse duration: \geq 1 s

Output Output type 1 analog output 0 ... 10 V

Resolution 0.17 mm

Deviation of the characteristic curve ± 1 % of full-scale value Repeat accuracy ± 0.5 % of full-scale value Load impedance > 1 kOhm Temperature influence ± 1.5 % of full-scale value

Ambient conditions

Ambient temperature -25 ... 70 °C (-13 ... 158 °F) -40 ... 85 °C (-40 ... 185 °F) Storage temperature

Mechanical specifications

Connection type Connector M12 x 1, 4-pin

Protection degree

Material Housing

brass, nickel-plated Transducer epoxy resin/hollow glass sphere mixture; foam

polyurethane, cover PBT

Mass 25 g

Compliance with standards and directives

Standard conformity

Standards EN 60947-5-7:2003 IEC 60947-5-7:2003 FN 60947-5-2:2007

IEC 60947-5-2:2007

Approvals and certificates


UL approval cULus Listed, General Purpose CSA approval cCSAus Listed, General Purpose

CCC approval CCC approval / marking not required for products rated

≤36 V


www.pepperl-fuchs.com

Dimensions

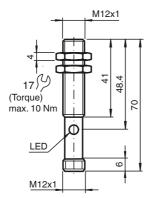


Additional Information

Programmed analogue output function



Electrical Connection

Standard symbol/Connections: (version U)



Core colors in accordance with EN 60947-5-2.

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown
2	WH	(white)
3	BU	(blue)
4	BK	(black)

FPEPPERL+FUCHS

Accessories

UB-PROG2

Programming unit

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

BF 12

Mounting flange, 12 mm

RF 12-F

Mounting flange with dead stop, 12 mm

V1-G-2M-PVC

Female cordset, M12, 4-pin, PVC cable

V1-W-2M-PUR

Female cordset, M12, 4-pin, PUR cable

UVW90-M12

Ultrasonic -deflector

Adjusting the evaluation limits

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. The lower evaluation limit A1 is taught with $-U_B$, A2 with $+U_B$.

Two different output functions can be set:

- 1. Analogue value increases with rising distance to object (rising ramp)
- 2. Analogue value falls with rising distance to object (falling ramp)

TEACH-IN rising ramp (A2 > A1)

- Position object at lower evaluation limit
- TEACH-IN lower limit A1 with UB
- Position object at upper evaluation limit
- TEACH-IN upper limit A2 with + UB

TEACH-IN falling ramp (A1 > A2):

- Position object at lower evaluation limit
- TEACH-IN lower limit A2 with + U_B
- Position object at upper evaluation limit
- TEACH-IN upper limit A1 with UR

Default setting

A1: unusable area

A2: nominal sensing range

Mode of operation: rising ramp

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN evaluation limit		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	on	off
Normal mode (evaluation range)	off	on
Fault	on	previous state

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.