



the sensor people





Part no.: 50113715 AMS 348i 200 H Optical distance sensor







CDRH



Figure can vary

# **Contents**

- Technical data
- · Dimensioned drawings
- Electrical connection
- · Operation and display
- · Part number code
- Notes
- Accessories



### **Technical data**

Basic data	
Series	AMS 300i
Application	
Application	Collision protection of cranes / gantry cranes Positioning of electroplating plants
	Positioning of high-bay storage devices Positioning of skillet systems and side-tracking skates
	1 Ostitoring of skiller systems and side-tracking skates
Functions	
Functions	Heating
Tunctions	Treating
Characteristic parameters	
MTTF	31 years
·····	
Optical data	
Light source	Laser , Red
Laser class	2 , IEC/EN 60825-1:2007
Measurement data	
Measurement range	200 200,000 mm
Accuracy	3 mm
Reproducibility (3 sigma)	2.1 mm
Max. traverse rate	10 m/s
Electrical data	
Performance data	
Supply voltage U <sub>B</sub>	18 30 V , DC
Interface	
Туре	PROFINET
Profinet	
Conformance class	В
Protocol	PROFINET RT
Switch functionality	Integrated
Transmission speed	100 Mbit/s
Connection	
Number of connections	4 Piece(s)
Connection 1	
Type of connection	Connector
Designation on device	BUS IN
Function	BUS IN Data interface
Thread size	M12
Туре	Female
No. of pins	4 -pin
Encoding	D-coded D-coded



Connection 2			
Type of connection	Connector		
Designation on device	BUS OUT		
Function	BUS OUT Data interface		
Thread size	M12		
Туре	Female		
No. of pins	4 -pin		
Encoding	D-coded		
Connection 3			
Type of connection	Connector		
Designation on device	PWR		
Function	PWR / SW IN/OUT Voltage supply		
Thread size	M12		
Туре	Male		
No. of pins	5 -pin		
Encoding	A-coded		
Connection 4			
Type of connection	Connector		
Designation on device	SERVICE		
Function	Service interface		
Thread size	M12		
Туре	Female		
No. of pins	5 -pin		
Encoding	A-coded		
echanical data			
esign	Cubic		
mension (W x H x L)	84 mm x 166.5 mm x 159 mm		
ousing material	Metal		
et weight	2,450 g		
ype of fastening	Through-hole mounting		
peration and display			
pe of display	LC Display LED		
perational controls	Membrane keyboard		
nvironmental data			
mbient temperature, operation	-30 50 °C		
mbient temperature, storage	-30 70 °C		
elative humidity (non-condensing)	90 %		
ertifications			
egree of protection	IP 65		
rotection class	III		
ertifications	c UL US		

### Classification




Customs tariff number	90318020
eCl@ss 8.0	27270801
eCl@ss 9.0	27270801
ETIM 5.0	EC001825
ETIM 6.0	EC001825

### **Dimensioned drawings**

All dimensions in millimeters



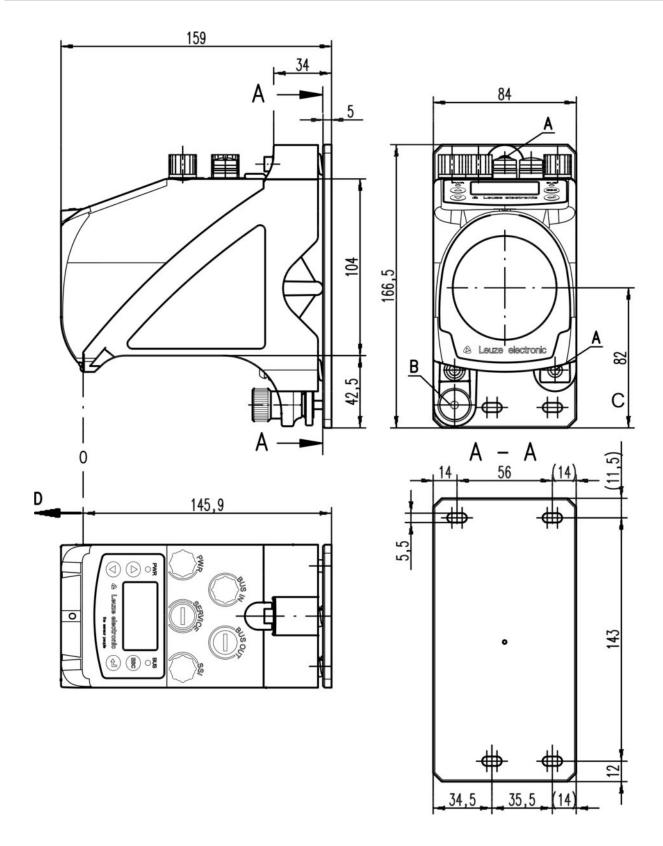

A M 5 screw for alignment B Knurled nut with WAF 4 hexagon socket and M 5 nut for securing

C Optical axis


D Zero point of the distance to be measured



### **Electrical connection**


Connection 1	BUS IN
Type of connection	Connector
Function	BUS IN Data interface
Thread size	M12
Туре	Female
Material	Metal
No. of pins	4 -pin
Encoding	D-coded

Pin	Pin assignment
1	TD+
2	RD+
3	TD-
4	RD-



Connection 2	BUS OUT
Type of connection	Connector
Function	BUS OUT Data interface
Thread size	M12
Туре	Female
Material	Metal
No. of pins	4 -pin
Encoding	D-coded


Pin	Pin assignment
1	TD+
2	RD+
3	TD-
4	RD-



Connection 3	PWR
Type of connection	Connector
Function	PWR / SW IN/OUT Voltage supply
Thread size	M12
Туре	Male
Material	Metal
No. of pins	5 -pin
Encoding	A-coded




Pin	Pin assignment
1	VIN
2	I/O 1
3	GND
4	I/O 2
5	FE

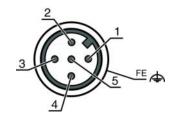

Connection 4	SERVICE
Type of connection	Connector
Function	Service interface
Thread size	M12
Туре	Female
Material	Metal
No. of pins	5 -pin
Encoding	A-coded

Pin	Pin assignment
1	n.c.
2	RS 232-TX
3	GND
4	RS 232-RX
5	n.c.



### **Operation and display**

### **LEDs**

LED		Display	Meaning
1	PWR	Off	No supply voltage
		Green, flashing	Voltage connected / no measurement value output / initialization running
		Green, continuous light	Device OK, measurement value output
		Red, flashing	Device OK, warning set
		Red, continuous light	No measurement value output
		Orange, flashing	PROFINET wave function activated
		Orange, continuous light	Configuration via display
2	BUS	Off	No supply voltage
		Green, flashing	Device ok, initialization phase
		Green, continuous light	Device OK
		Red, flashing	Communication error
		Red, continuous light	Bus error
		Orange, flashing	PROFINET wave function activated
3	BUS IN	Green, continuous light	Link OK
		Orange, flashing	Data exchange active
4	BUS OUT	Green, continuous light	Link OK
		Orange, flashing	Data exchange active



#### Part number code

Part designation: AMS 3XXi YYY Z AAA

AMS	Operating principle: AMS: absolute measurement system			
3XXi	Series/interface (integrated fieldbus technology): 300i: RS 422/RS 232 301i: RS 485 304i: PROFIBUS DP / SSI 308i: TCP/IP 335i: CANopen 338i: EtherCAT 348i: PROFINET RT 355i: DeviceNet 358i: EtherNet/IP 384i: Interbus			
YYY	Operating range: 40: max. operating range in m 120: max. operating range in m 200: max. operating range in m 300: max. operating range in m			
Z	Special equipment: H: with heating			
AAA	Interface: SSI: with SSI interface			

#### Note

A list with all available device types can be found on the Leuze electronic website at www.leuze.com.

#### **Notes**

#### Observe intended use!

- · This product is not a safety sensor and is not intended as personnel protection.
- The product may only be put into operation by competent persons.
- Only use the product in accordance with its intended use.

#### WARNING! LASER RADIATION - LASER CLASS 2

#### Never look directly into the beam!

The device satisfies the requirements of IEC 60825-1:2007 (EN 60825-1:2007) safety regulations for a product of **laser class 2** as well as the U.S. 21 CFR 1040.10 regulations with deviations corresponding to "Laser Notice No. 50" from June 24, 2007.

- Never look directly into the laser beam or in the direction of reflected laser beams! If you look into the beam path over a longer time
  period, there is a risk of injury to the retina.
- Do not point the laser beam of the device at persons!
- Interrupt the laser beam using a non-transparent, non-reflective object if the laser beam is accidentally directed towards a person.
- · When mounting and aligning the device, avoid reflections of the laser beam off reflective surfaces!
- CAUTION! Use of controls or adjustments or performance of procedures other than specified herein may result in hazardous light exposure.
- Observe the applicable statutory and local laser protection regulations.
- The device must not be tampered with and must not be changed in any way.
   There are no user-serviceable parts inside the device.
   Repairs must only be performed by Leuze electronic GmbH + Co. KG.

Leuze electronic GmbH + Co. KG, In der Braike 1, 73277 Owen Phone: +49 7021 573-0, Fax: +49 7021 573-199



#### NOTE

Affix laser information and warning signs!
Laser information and warning signs are affixed to the device. In addition, self-adhesive laser information and warning signs (stick-on labels) are supplied in several languages.

- Affix the laser information sheet to the device in the language appropriate for the place of use. When using the device in the US, use the stick-on label with the "Complies with 21 CFR 1040.10" note.
- Affix the laser information and warning signs near the device if no signs are attached to the device (e.g. because the device is too small) or if the attached laser information and warning signs are concealed due to the installation position.
- Affix the laser information and warning signs so that they are legible without exposing the reader to the laser radiation of the device or other optical radiation.
- For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).
- Use as safety-related component within the safety function is possible, if the component combination is designed correspondingly by the machine manufacturer.

#### **Accessories**

### Connection technology - Connection cables

Part no.	Designation	Article	Description
50104171	KB SSI/ IBS-5000-BA	Connection cable	Suitable for interface: SSI, Interbus-S Connection 1: Connector, M12, Axial, Female, B-coded, 5 -pin Connection 2: Open end Shielded: Yes Cable length: 5,000 mm Sheathing material: PUR
50132079	KD U-M12-5A- V1-050	Connection cable	Connection 1: Connector, M12, Axial, Female, A-coded, 5 -pin Connection 2: Open end Shielded: No Cable length: 5,000 mm Sheathing material: PVC
50135074	KS ET-M12-4A- P7-050	Connection cable	Suitable for interface: Ethernet Connection 1: Connector, M12, Axial, Male, D-coded, 4 -pin Connection 2: Open end Shielded: Yes Cable length: 5,000 mm Sheathing material: PUR

### Reflective tapes for distance sensors

	Part no.	Designation	Article	Description
0	50115022	Reflexfolie 914x914mm-H	Reflector	Special design: Heating Supply voltage: 230 V, AC Design: Rectangular Reflective surface: 914 mm x 914 mm Base material: Aluminum composite Fastening: Mounting plate, Through-hole mounting
	50108988	Reflexfolie 914x914mm-S	Reflective tape	Design: Rectangular Reflective surface: 914 mm x 914 mm Chemical designation of the material: PMMA Fastening: Adhesive

Leuze electronic GmbH + Co. KG, In der Braike 1, 73277 Owen Phone: +49 7021 573-0, Fax: +49 7021 573-199



### **Deflecting mirror**

Part no.	Designation	Article	Description
50104479	US AMS 01	Deflecting mirror	Type of fastening: Through-hole mounting

### Services

Part no.	Designation	Article	Description
S981001	CS10-S-110	Start-up support	Details: Performed at location of customer's choosing, duration: max. 10 hours.  Conditions: Devices and connection cables are already mounted, price not including travel costs and, if applicable, accommodation expenses.  Restrictions: No mechanical (mounting) and electrical (wiring) work performed, no changes (attachments, wiring, programming) to third-party components in the nearby environment.
S981005	CS10-T-110	Product training	Details: Location and content to be agreed upon, duration: max. 10 hours. Conditions: Price not including travel costs and, if applicable, accommodation expenses. Restrictions: Travel costs and accommodation expenses charged separately and according to expenditure.

#### Note

A list with all available accessories can be found on the Leuze electronic website in the Download tab of the article detailed page.