### SMART SENSOR BUSINESS

### Leuze electronic

the sensor people





Part no.: 50105476 BCL 501i ON 100 H Stationary bar code reader



Figure can vary

# Contents

- Technical data
- · Dimensioned drawings
- · Electrical connection
- Diagrams
- · Operation and display
- · Part number code
- Notes
- Accessories

### Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader

#### **Technical data**

gy son
ional
7
r
el + stepping motor with mirror
ngle less than 90°
on
5

### Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader

Performance data		
Supply voltage UB	24 V , DC , -20 +20 %	
Power consumption, max.	75 W	
Inputs/outputs selectable		
Output current, max.	100 mA	
Number of inputs/outputs selectable	4 Piece(s)	
Voltage type, outputs	DC	
Switching voltage, outputs	Тур. U <sub>B</sub> / 0 V	
Voltage type, inputs	DC	
Switching voltage, inputs	Тур. U <sub>B</sub> / 0 V	
Input current, max.	8 mA	

Interface		
Гуре	RS 485	
RS 485		
Function	Process	
Transmission speed	4,800 115,400 Bd	
Data format	Adjustable	
Start bit	1	
Data bit	7, 8, 9 data bits	
Stop bit	1, 2 stop bits	
Parity	Adjustable	
Transmission protocol	Adjustable	
Data encoding	ASCII	
Service interface		
	USB	
Type	036	
Function	Configuration via software	
	Service	
	Service	
Connection		
Connection Number of connections	Service 5 Piece(s)	
Number of connections Connection 1		
Number of connections		
Number of connections Connection 1	5 Piece(s)	
Number of connections Connection 1 Type of connection	5 Piece(s) USB	
Number of connections Connection 1 Type of connection Designation on device	5 Piece(s) USB SERVICE	
Number of connections Connection 1 Type of connection Designation on device Function	5 Piece(s) USB SERVICE Service interface	
Number of connections Connection 1 Type of connection Designation on device Function Connector type	5 Piece(s) USB SERVICE Service interface	
Number of connections Connection 1 Type of connection Designation on device Function Connector type Connection 2	5 Piece(s) USB SERVICE Service interface USB 2.0 Standard-A	
Number of connections         Connection 1         Type of connection         Designation on device         Function         Connector type         Connection 2         Type of connection	5 Piece(s) USB SERVICE Service interface USB 2.0 Standard-A Connector	
Number of connections         Connection 1         Type of connection         Designation on device         Function         Connector type         Connection 2         Type of connection         Designation on device	5 Piece(s) USB SERVICE Service interface USB 2.0 Standard-A Connector SW IN/OUT Signal IN	
Number of connections         Connection 1         Type of connection         Designation on device         Function         Connector type         Connection 2         Type of connection         Designation on device         Function         Cunnection 2         Type of connection         Designation on device         Function	5 Piece(s) USB SERVICE Service interface USB 2.0 Standard-A Connector SW IN/OUT Signal IN Signal OUT	
Number of connections         Connection 1         Type of connection         Designation on device         Function         Connector type         Connection 2         Type of connection         Designation on device         Function         Type of connection         Designation on device         Function         Thread size	5 Piece(s) USB SERVICE Service interface USB 2.0 Standard-A Connector SW IN/OUT Signal IN Signal OUT M12	
Connection 1         Type of connection         Designation on device         Function         Connector type         Connection 2         Type of connection         Designation on device         Function         Type of connection         Designation on device         Function         Type of connection         Designation on device         Function         Thread size         Type	5 Piece(s) USB SERVICE Service interface USB 2.0 Standard-A Connector SW IN/OUT Signal IN Signal OUT M12 Female	

### Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader

Connection 3	
Type of connection	Connector
Designation on device	PWR
Function	Signal IN Signal OUT Voltage supply
Thread size	M12
Туре	Male
Material	Metal
No. of pins	5 -pin
Encoding	A-coded
Connection 4	
Type of connection	Connector
Designation on device	HOST / BUS IN
Function	BUS IN
Thread size	M12
Туре	Male
Material	Metal
No. of pins	5 -pin
Encoding	B-coded
Connection 5	
Type of connection	Connector
Designation on device	BUS OUT
Function	BUS OUT
Thread size	M12
Туре	Female
No. of pins	5 -pin
lechanical data	
esign	Cubic
imension (W x H x L)	173 mm x 84 mm x 147 mm
ousing material	Metal, Aluminum
ens cover material	Glass
et weight	1,500 g
ousing color	Black, RAL 9005 Red, RAL 3000
ype of fastening	Dovetail grooves Mounting thread Via optional mounting device
peration and display	
ype of display	LED Monochromatic graphical display, 128x64 pixel, with background lig ing
umber of LEDs	2 Piece(s)
ype of configuration	Via web browser
perational controls	Button(s)

Environmental data		
Ambient temperature, operation	-35 40 °C	
Ambient temperature, storage	-20 +70 °C	
Relative humidity (non-condensing)	90 %	

Leuze electronic GmbH + Co. KG, In der Braike 1, 73277 Owen Phone: +49 7021 573-0, Fax: +49 7021 573-199

### Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader


Extraneous light tolerance on the bar code, max.	2,000 lx
Certifications	
Degree of protection	IP 65
Protection class	III
Certifications	c UL US
Test procedure for EMC in accordance with standard	EN 55022 EN 61000-4-2, -3, -4, -6
Test procedure for shock in accordance with standard	IEC 60068-2-27, test Ea
Test procedure for continuous shock in accordance with standard	IEC 60068-2-29, test Eb
Test procedure for vibration in accordance with standard	IEC 60068-2-6, test Fc

Classification		
Customs tariff number	84719000	
eCl@ss 8.0	27280102	
eCl@ss 9.0	27280102	
ETIM 5.0	EC002550	
ETIM 6.0	EC002550	

#### **Dimensioned drawings**

All dimensions in millimeters


Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader

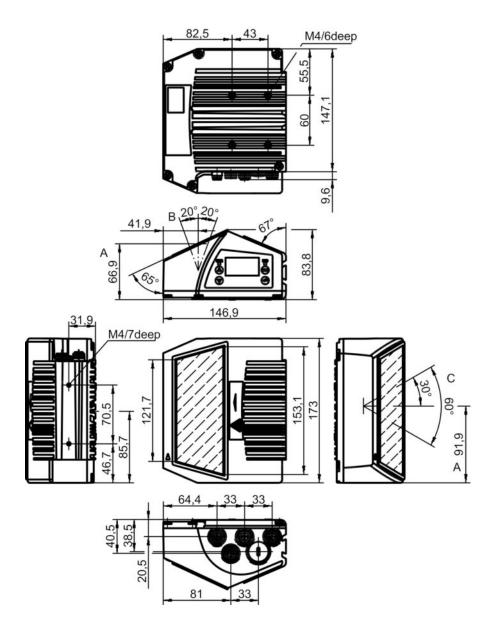

#### **Electrical connection**

Connection 1	SERVICE
Type of connection	USB
Function	Service interface
Connector type	USB 2.0 Standard-A

Pin	Pin assignment
1	+5 V DC
2	D Data
3	D+ - Data
4	GND



### Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader


Connection 2	SW IN/OUT
Type of connection	Connector
Function	Signal IN Signal OUT
Thread size	M12
Туре	Female
Material	Metal
No. of pins	5 -pin
Encoding	A-coded

Pin	Pin assignment
1	VOUT
2	SWIO 1
3	GND
4	SWIO 2
5	FE



Connection 3	PWR	
Type of connection	Connector	
Function	Signal IN Signal OUT Voltage supply	
Thread size	M12	
Туре	Male	
Material	Metal	
No. of pins	5 -pin	
Encoding	A-coded	


Pin	Pin assignment			
1	VIN			
2	SWIO 3			
3	GND			
4	SWIO 4			
5	FE			

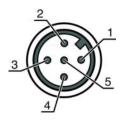

Connection 4	HOST / BUS IN
Type of connection	Connector
Function	BUS IN
Thread size	M12
Туре	Male
Material	Metal
No. of pins	5 -pin
Encoding	B-coded


### Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader

Pin	Pin assignment			
1	n.c.			
2	RS 485 B			
3	GND 485			
4	RS 485 A			
5	FE			



Connection 5	BUS OUT
Type of connection	Connector
Function	BUS OUT
Thread size	M12
Туре	Female
Material	Metal
No. of pins	5 -pin
Encoding	B-coded


Pin	Pin assignment			
1	V CC485			
2	RS 485 B			
3	GND 485			
4	RS 485 A			
5	FE			

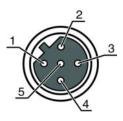

Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader

#### Diagrams


Reading field curve

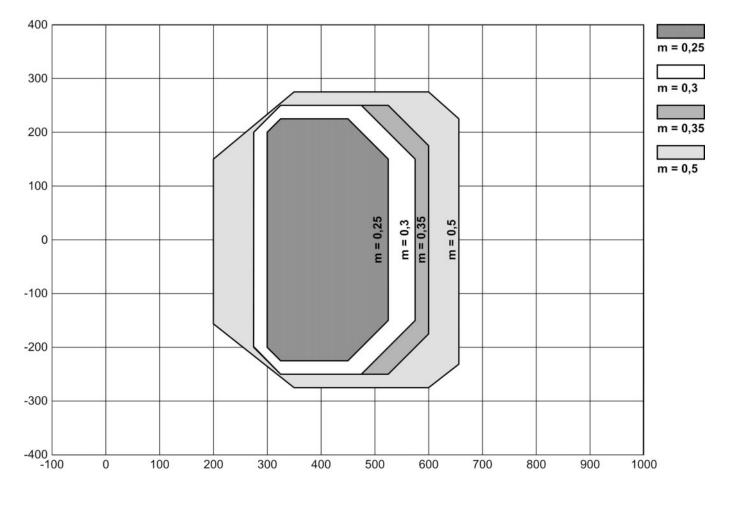

Reading field distance [mm] Reading field width [mm] x y

### Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader

#### Lateral reading field curve

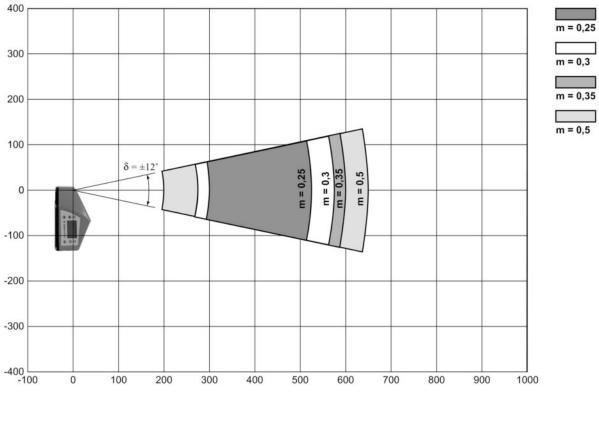

x Reading field distance [mm] y Reading field height [mm]

#### **Operation and display**

#### LEDs

LED	LED Display		Meaning		
1	PWR	Off	Device switched off		
		Green, flashing	Device ok, initialization phase		
		Green, continuous light	Device OK		
		Orange, continuous light	Service operation		
		Red, flashing	Device OK, warning set		
		Red, continuous light	Device error		
2	BUS	Off	No supply voltage		
		Green, flashing	Initialization		
		Green, continuous light	Bus operation ok		
		Red, flashing	Communication error		
		Red, continuous light	Network error		

#### Part number code

Part designation: BCL XXXX YYZ AAA B

#### Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader

BCL	Operating principle: BCL: bar code reader				
XXXX	Series/interface (integrated fieldbus technology): 500i: RS 232 / RS 422 / RS 485 (multiNet master) 501i: RS 485 (multiNet slave) 504i: PROFIBUS DP 508i: EtherNet TCP/IP, UDP 548i: PROFINET RT 558i: EtherNet/IP				
YY	Scanning principle: S: line scanner (single line) O: oscillating-mirror scanner (oscillating mirror)				
Z	Optics: N: High Density (close) M: Medium Density (medium distance) F: Low Density (remote) L: Long Range (very large distances)				
AAA	Beam exit: 100: lateral 102: front				
В	Special equipment: H: with heating				

Note	
A list with all available device type	es can be found on the Leuze electronic website at www.leuze.com.

#### Notes

#### Observe intended use!

- · This product is not a safety sensor and is not intended as personnel protection.
- The product may only be put into operation by competent persons.
- Only use the product in accordance with its intended use.

#### WARNING! LASER RADIATION – LASER CLASS 2

#### Never look directly into the beam!

The device satisfies the requirements of IEC 60825-1:2007 (EN 60825-1:2007) safety regulations for a product of **laser class 2** as well as the U.S. 21 CFR 1040.10 regulations with deviations corresponding to "Laser Notice No. 50" from June 24, 2007.

- Never look directly into the laser beam or in the direction of reflected laser beams! If you look into the beam path over a longer time period, there is a risk of injury to the retina.
- Do not point the laser beam of the device at persons!
- Interrupt the laser beam using a non-transparent, non-reflective object if the laser beam is accidentally directed towards a person.
- · When mounting and aligning the device, avoid reflections of the laser beam off reflective surfaces!
- CAUTION! Use of controls or adjustments or performance of procedures other than specified herein may result in hazardous light exposure.
- · Observe the applicable statutory and local laser protection regulations.
- The device must not be tampered with and must not be changed in any way. There are no user-serviceable parts inside the device. Repairs must only be performed by Leuze electronic GmbH + Co. KG.

### Part no.: 50105476 - BCL 501i ON 100 H - Stationary bar code reader

#### NOTE

Affix laser information and warning signs! Laser information and warning signs are affixed to the device. In addition, self-adhesive laser information and warning signs (stick-on labels) are supplied in several languages.

- Affix the laser information sheet to the device in the language appropriate for the place of use. When using the device in the US, use the stick-on label with the "Complies with 21 CFR 1040.10" note. .
- Affix the laser information and warning signs near the device if no signs are attached to the device (e.g. because the device is too small) or if the attached laser information and warning signs are concealed due to the installation position.
- Affix the laser information and warning signs so that they are legible without exposing the reader to the laser radiation of the device or other optical radiation.

#### Accessories

#### Connection technology - Connection cables

Part no.	Designation	Article	Description
50132079	KD U-M12-5A- V1-050	Connection cable	Connection 1: Connector, M12, Axial, Female, A-coded, 5 -pin Connection 2: Open end Shielded: No Cable length: 5,000 mm Sheathing material: PVC

#### Connection technology - Interconnection cables

Part no.	Designation	Article	Description
50107726	KB USB A - USB A	Interconnection cable	Suitable for interface: USB Connection 1: USB Connection 2: USB Shielded: Yes Cable length: 1,800 mm Sheathing material: PVC
50135254	KDS PB-M12-4A- M12-4A-P3-050	Interconnection cable	Suitable for interface: PROFIBUS DP Connection 1: Connector, M12, Axial, Female, B-coded, 2 -pin Connection 2: Connector, M12, Axial, Male, B-coded, 4 -pin Shielded: Yes Cable length: 5,000 mm Sheathing material: PUR

#### Connection technology - Terminating resistors

Part no.	Designation	Article	Description
50038539	TS 02-4-SA		Suitable for: MultiNet Plus, PROFIBUS DP Connection 1: Connector, M12, Axial, Male, B-coded, 4 -pin Function: Bus termination

### Part no.: 50105476 – BCL 501i ON 100 H – Stationary bar code reader

### Mounting technology - Other

Part no.	Designation	Article	Description
50111224	BT 59	Mounting bracket	Fastening, at system: Groove mounting Mounting bracket, at device: Clampable Material: Metal

#### Services

	Part no.	Designation	Article	Description
₽ ©	S981020	CS30-E-212	Hourly rate for "Configuration"	Details: Compilation of the application data, selection and suggestion of suitable sensor system, drawing prepared as assembly sketch. Conditions: Completed questionnaire or project specifications with a description of the application have been provided. Restrictions: Travel and accommodation charged separately and according to expenditure.
	S981014	CS30-S-110	Start-up support	Details: Performed at location of customer's choosing, duration: max. 10 hours. Conditions: Devices and connection cables are already mounted, price not including travel costs and, if applicable, accommodation expenses. Restrictions: No mechanical (mounting) and electrical (wiring) work performed, no changes (attachments, wiring, programming) to third-party components in the nearby environment.
	S981019	CS30-T-110	Product training	Details: Location and content to be agreed upon, duration: max. 10 hours. Conditions: Price not including travel costs and, if applicable, accommodation expenses. Restrictions: Travel costs and accommodation expenses charged separately and according to expenditure.
	S981021	CS30-V-212	Hourly rate for "Bar code qualification"	Details: REA evaluation with creation of a test report, evaluation of the code quality. Conditions: Original bar codes to be provided by the client.

Note

A list with all available accessories can be found on the Leuze electronic website in the Download tab of the article detailed page.