

DC/DC Converters

Heatsinks

Heatsink Models	
Order code	For converter series:
THL-HS1	THL10WI, THL20WI
THN-HS1	THN15, THN15WI, THN20, THN20WI, THN30, THN30WI
TEN-HS1	TEN15, TEN20WIN, TEN20WIR, TEN30, TEN30WIN, TEN40WIR
TEN-HS2	TEN20WI, TEN30WI
TEN-HS3	TEN40, TEN40WI, TEN60
TEN-HS4	TEL15, TEN15WI, TEN20, TEL 30, TEN40 not 24 Vout models, TEN40WIN not 24 Vout models
TEN-HS5	TEN25, TEN25WI
TEN-HS6	TEN50, TEN50WI, TEN40N 24 Vout models, TEN40WIN 24 Vout models
TEP-HS1	TEP75WI, TEP100, TEP 100WIR, TEP160, TEP160WIR, TEP200WIR

THL-HS1


Order code: THL-HS1


(cont.: heat-sink, thermal pad, 2 clamps)


Material: Aluminum

Finish: Anodic treatment (black)
Weight: 4 g (0.14oz) without converter
Thermal impedance after assembling: 15.8 K/W









Dimensions in mm, () = Inch

THN-HS1


Order code: THN-HS1


(cont.: heat-sink, thermal pad, 2 clamps)


Material: Aluminum

Finish: Anodic treatment (black)
Weight: 8 g (0.28 oz) without converter
Thermal impedance after assembling: 15.8 K/W









Dimensions in mm, () = Inch



DC/DC Converters Heatsinks

TEN-HS1


Order code: TEN-HS1


(cont.: heat-sink, thermal pad, 2 clamps)

Material: Aluminum

Finish: Anodic treatment (black)
Weight: 17 g (0.60oz) without converter
Thermal impedance after assembling: 10 K/W



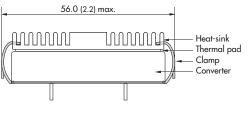



Dimensions in mm, () = Inch

16.8 (0.66)

TEN-HS2

Order code: TEN-HS2


(cont.: heat-sink, thermal pad, 2 clamps)


Material: Aluminum


Finish: Anodic treatment (black)

Weight: 19 g (0.67oz) (without converter)





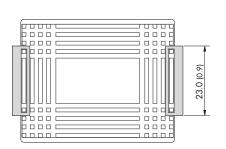



Dimensions in mm, () = Inch



DC/DC Converters Heatsinks

TEN-HS3


Order code: TEN-HS3


(cont.: heat-sink, thermal pad, 2 clamps)

Material: Aluminum

Finish: Anodic treatment (black)

Weight: 22g (0.78oz) (without converter) Thermal impedance after assembling: 7.6 K/W

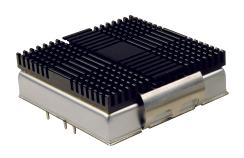

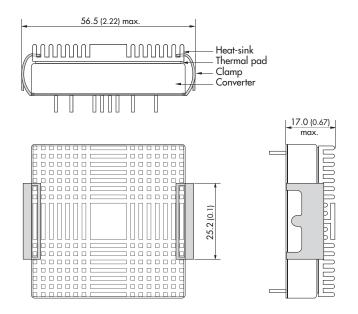

Dimensions in mm, () = Inch

TEN-HS4


Order code: TEN-HS4

(cont.: heat-sink, thermal pad, 2 clamps)

Material: Aluminum

Finish: Anodic treatment (black)
Weight: 9.0 g (0.31oz) without converter
Thermal impedance after assembling: 10 K/W



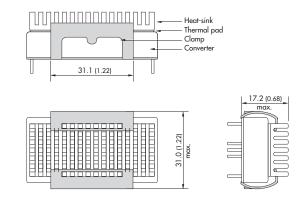

Dimensions in mm, () = Inch



DC/DC Converters Heatsinks

TEN-HS5


Order code: TEN-HS5


(cont.: heat-sink, thermal pad, 2 clamps)


Material: Aluminum


Finish: Anodic treatment (black)

Weight: 19 g (0.67oz) (without converter)

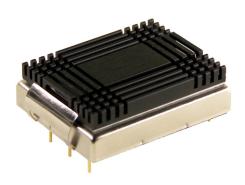



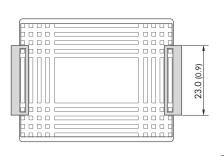



Dimensions in mm, () = Inch

TEN-HS6


Order code: TEN-HS6

(cont.: heat-sink, thermal pad, 2 clamps)

Material: Aluminum

Finish: Anodic treatment (black)
Weight: 9.0 g (0.31oz) without converter
Thermal impedance after assembling: 10 K/W



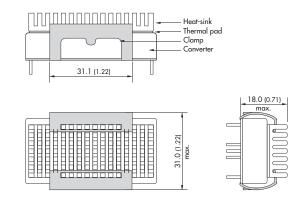

Dimensions in mm, () = Inch



DC/DC Converters Heatsinks

TEP-HS1


Order code: TEP-HS1


Includes heatsink with termal pad and mounting screws

Weight: 135 g (4.76 oz) (Heatsink + converter)



Dimensions in Inch, () = mm



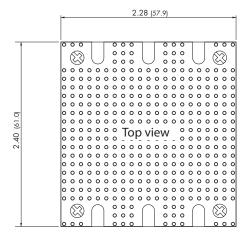

General Information

Note:

For volume orders converters will be supplied with heat-sinks preassembled and a TRACOPOWER side label attached to the converter. Please contact factory for quotation. Separate heat-sinks are only available for prototypes and small quantity orders.

Assembly instructions for TEN and THN heatsinks

Example: TEN30-2412WI with heatsink TEN-HS2

The product label on converter has to be removed before mounting the heat-sink.

- 1. Lay out the assembly and check it for any missing components or for any damage.
- 2. From the converter, remove the product label, including any remaining glue (best with benzine) and, if required, apply a hand-written part number / lot number marking on the side wall of the converter
- 3. Remove the protective foil from the adhesive thermal pad on the heat sink
- 4. Apply the heatsink to the converter and secure it by the two spring fixation clips included with the heat sink assembly





Specifications can be changed without notice! Make sure you are using the latest documentation, downloadable at www.tracopower.com