







Model Number

UB1000-18GM75-E6-V15


Single head system

Features

- · 2 switch outputs
- 3 different output functions can be
- Selectable sound lobe width
- **Program input**
- **Temperature compensation**
- Very small unusable area

Diagrams

Characteristic response curve

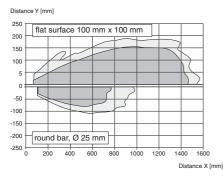





Technical data

General specifications	
Sensing range 70 1000 mm	
Adjustment range 90 1000 mm	
Unusable area 0 70 mm	
Standard target plate 100 mm x 100 m	ım
Transducer frequency approx. 255 kHz	
Response delay approx. 125 ms	

Indicators/operating means

LED yellow indication of the switching state flashing: program function object detected I FD red "Error", object uncertain in program function: No object detected

Electrical specifications

Operating voltage U_B 10 ... 30 V DC , ripple 10 $\%_{SS}$ No-load supply current I₀ ≤ 50 mA

Input

Input type 1 program input,

operating range 1: -U_B ... +1 V, operating range 2: +4 V ... +U_B

input impedance: > 4.7 k Ω ; program pulse: \geq 1 s

Output

Output type 2 switch outputs PNP, NO/NC, programmable Rated operating current I_e 2 x 100 mA, short-circuit/overload protected

Voltage drop U_d ≤ 3 V ≤ 1 % Repeat accuracy Switching frequency f max. 3 Hz Range hysteresis H 1 % of the set operating distance

Temperature influence ± 1.5 % of full-scale value Ambient conditions

-25 ... 70 °C (-13 ... 158 °F) Ambient temperature Storage temperature -40 ... 85 °C (-40 ... 185 °F)

Mechanical specifications

Connection type Connector M12 x 1, 5-pin

IP65 Degree of protection

Material Housing brass, nickel-plated

Transducer epoxy resin/hollow glass sphere mixture; foam

polyurethane, cover PBT

Mass 60 g Factory settings

Output 1 Switching point: 90 mm

output function: Switch point operation mode

output behavior: NO contact

Output 2 Switching point: 1000 mm output function: Switch point operation mode

output behavior: NO contact

Compliance with standards and directives

Beam width

Standard conformity

Standards EN 60947-5-2:2007


IEC 60947-5-2:2007

Approvals and certificates

UL approval cULus Listed, General Purpose CSA approval cCSAus Listed, General Purpose


CCC approval CCC approval / marking not required for products rated

Dimensions

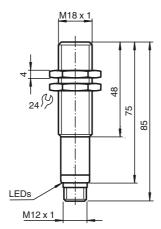

Electrical Connection

Standard symbol/Connections:



Core colours in accordance with EN 60947-5-2.

Pinout




Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

Additional Information

Programmed switching output function

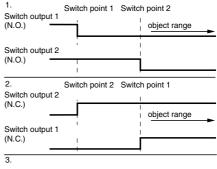

Switch output 1, (N.C.)
Detection of object presence
Switch output 2, (N.O.)
Detection of object presence Switch point 1 -> ∞: Switch point 2 -> ∞ : Switch point 1 a. 2 -> ∞: Both switch outputs, (N.O.)

Detection of object presence

Accessories

UB-PROG3

Programming unit

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

Mounting flange, 18 mm

Mounting flange with dead stop, 18 mm

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

UVW90-K18

Ultrasonic -deflector

V15-G-2M-PVC

Female cordset, M12, 5-pin, PVC cable

V15-W-2M-PUR

Female cordset, M12, 5-pin, PUR cable

Description of Sensor Functions

Programming procedure

The sensor features two programmable switch outputs with one programmable switch point, each. Programming the switch point and the operating mode is done by applying the supply voltage -U_B or +U_B to the Program input. The supply voltage must be applied to the Program input for at least 1 s. LEDs indicate whether the sensor has recognized the target during the programming procedure.

Note:

Switching points may only be specified directly after Power on. A time lock secures the adjusted switching points against unintended modification 5 minutes after Power on. To modify the switching points later, the user may specify the desired values only after a new Power On.

If a programming adapter UB-PROG3 is used for the programming procedure, button A1 is assigned to -UB and button A2 is assigned to +UB.

Programming switch ouputs

Normally open (NO) output

The switch point of switch output 1 has to be closer to the sensor than the switch point of switch output 2

- 1. Place the target at the desired switch point position of switch output 1
- 2. Program the switch point by applying -U_B to the Program input (corresponding yellow LED flashes)
- 3. Disconnect the Program input from -U_B to save the switch point
- 4. Place the target at the desired switch point position of switch output 2
- 5. Program the switch point by applying +U_B to the Program input (corresponding yellow LED flashes)
- 6. Disconnect the Program input from +U_B to save the switch point

Note: The order doesn't make any difference. If you want, you can set only one switching point.

Normally closed (NC) output

The switch point of switch output 2 has to be closer to the sensor than the switch point of switch output 1

- 1. Place the target at the desired switch point position of switch output 1
- 2. Program the switch point by applying -U_B to the Program input (corresponding yellow LED flashes)
- 3. Disconnect the Program input from $-U_B$ to save the switch point
- 4. Place the target at the desired switch point position of switch output 2
- 5. Program the switch point by applying +U_B to the Program input (corresponding yellow LED flashes)
- 6. Disconnect the Program input from +U_B to save the switch point

Note: The order doesn't make any difference. If you want, you can set only one switching point. If both switching points are equal, the sensor works in close function.

Programming detection of object presence

- 1. Cover the sensor face with hand or remove all objects from sensing range
- 2. Apply -U_B to the Program input (red LED flashes)
- 3. Disconnect the Program input from -UB
- 4. Apply +U_B to the Program input (red LED flashes)
- 5. Disconnect the Program input from +U_B

Note: Only one switch output can be configured for detection of presence of objects. If the sensor detects an object within the maximum detection range, the switch output switches.

Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

1. Small angle sound cone

Date of issue: 2014-06-27 204531_eng.xml

date: 2014-06-27 11:20

Release

- · switch off the power supply
- connect the Teach-In input wire to -U_B
- switch on the power supply
- the red LED flashes once with a pause before the next.
- yellow LED: permanently on: indicates the presence of an object or disturbing object within the sens-
- disconnect the Teach-In input wire from -UB and the changing is saved

2. Wide angle sound cone

switch off the power supply

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.co



3

- connect the Teach-In input wire with +U_B
- switch on the power supply
- · the red LED double-flashes with a long pause before the next.
- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-In input wire from +U_B and the changing is saved



Factory settings

See technical data.

Display

The sensor provides LEDs to indicate various conditions.

	Red LED	Yellow LED 1	Yellow LED 2
During Normal operation			
Proper operation	Off	Switching state	Switching state
		output 1	output 2
Interference (e.g. compressed air)	On	remains in previous	remains in previous
		state	state
Programming of output 1			
Object detected	Off	Flashes	Off
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off
Programming of output 2			
Object detected	Off	Off	Flashes
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.