



the sensor people





Part no.: 50140167 LE412BL2.1/N Throughbeam photoelectric sensor receiver











Figure can vary

Contents

- Technical data
- . Dimensioned drawings
- · Electrical connection
- · Operation and display
- Suitable transmitters
- · Part number code
- Notes
- Accessories



Part no.: 50140167 – LE412BL2.1/N – Throughbeam photoelectric sensor

Technical data

412B
Throughbeam principle
Receiver
Guaranteed operating range
0 50 m
0.001 W
4.6 μs
Polarity reversal protection Short circuit protected
10 36 V , DC , Incl. residual ripple
0 20 % , From U _B
0 10 mA
1 Piece(s)
DC
200 mA
Transistor , NPN
Dark switching
5,000 Hz
0.1 ms
20 ms
Cable
Signal OUT Voltage supply
2,000 mm
PVC
Black
3 -wire
0.34 mm²
M12 x 1 mm
M12 x 1 mm 12 mm x 51 mm



Part no.: 50140167 - LE412BL2.1/N - Throughbeam photoelectric sensor

Net weight	100 g		
Housing color	Silver		
Operation and display			
Type of display	LED		
Number of LEDs	2 Piece(s)		
Operational controls	270° potentiometer		
Function of the operational control	Sensitivity adjustment		
Environmental data			
Ambient temperature, operation	-10 50 °C		
Certifications			
Degree of protection	IP 67	IP 67	
Protection class	III	III	
Certifications	c UL US	c UL US	

Classification		
Customs tariff number	85365019	
eCl@ss 8.0	27270901	
eCl@ss 9.0	27270901	
ETIM 5.0	EC002716	

IEC 60947-5-2


Dimensioned drawings

All dimensions in millimeters

Standards applied



Part no.: 50140167 – LE412BL2.1/N – Throughbeam photoelectric sensor

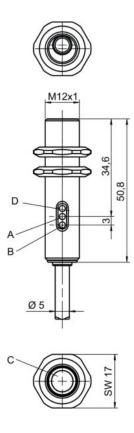

A Green LED B Yellow LED C Optical axis D Potentiometer

Electrical connection

Connection 1		
Type of connection	Cable	
Function	Signal OUT Voltage supply	
Cable length	2,000 mm	
Sheathing material	PVC	
Cable color	Black	
Number of conductors	3 -wire	
Wire cross section	0.34 mm²	

Conductor color	Conductor assignment
Brown	V+
Black	OUT 1
Blue	GND



Part no.: 50140167 - LE412BL2.1/N - Throughbeam photoelectric sensor

Operation and display

LEDs

LED	Display	Meaning
1	Green, continuous light	Function reserve
2	Yellow, continuous light	Switching output/switching state active

Suitable transmitters

	Part no.	Designation	Article	Description
CES	50140165		Throughbeam photoelectric sensor transmitter	Special design: Deactivation input Light source: Laser, Red Supply voltage: DC Deactivation inputs: 1 Piece(s) Connection: Cable, 2,000 mm, 3 -wire

Part number code

Part designation: AAA412BGG.H/ii-K

AAA412B	Operating principle / construction: LS412B: throughbeam photoelectric sensor transmitter LE412B: throughbeam photoelectric sensor receiver ET412B: energetic diffuse reflection sensor PRK412B: retro-reflective photoelectric sensor with polarization filter	
GG	Light source: n/a: LED L2: laser class 2	
Н	Operating range adjustment: 1: 270° potentiometer	
ii	Switching output / function / OUT10UT2 (OUT1 = pin 4, OUT2 = pin 2): 2: NPN transistor output, light switching N: NPN transistor output, dark switching 4: PNP transistor output, light switching P: PNP transistor output, dark switching D: deactivation input (deactivation with low signal) X: pin not used	
К	Electrical connection: n/a: cable, standard length 2000 mm, 3-wire M12: M12 connector, 4-pin (plug)	

Note
A list with all available device types can be found on the Leuze electronic website at www.leuze.com.

Notes

Observe intended use!

- This product is not a safety sensor and is not intended as personnel protection.
- The product may only be put into operation by competent persons.
- · Only use the product in accordance with its intended use.



Part no.: 50140167 – LE412BL2.1/N – Throughbeam photoelectric sensor

WARNING! LASER RADIATION - LASER CLASS 2

Never look directly into the beam!

The device satisfies the requirements of IEC 60825-1:2007 (EN 60825-1:2007) safety regulations for a product of laser class 2 as well as the U.S. 21 CFR 1040.10 regulations with deviations corresponding to "Laser Notice No. 50" from June 24, 2007.

- Never look directly into the laser beam or in the direction of reflected laser beams! If you look into the beam path over a longer time
 period, there is a risk of injury to the retina.
- · Do not point the laser beam of the device at persons!
- Interrupt the laser beam using a non-transparent, non-reflective object if the laser beam is accidentally directed towards a person.
- · When mounting and aligning the device, avoid reflections of the laser beam off reflective surfaces!
- CAUTION! Use of controls or adjustments or performance of procedures other than specified herein may result in hazardous light exposure.
- Observe the applicable statutory and local laser protection regulations.
- The device must not be tampered with and must not be changed in any way.
 There are no user-serviceable parts inside the device.
 Repairs must only be performed by Leuze electronic GmbH + Co. KG.

Accessories

Mounting technology - Mounting brackets

Part no.	Designation	Article	Description
50113549	BT D12M.5	, and the second	Diameter, inner: 12 mm Design of mounting device: Angle, L-shape Fastening, at system: Through-hole mounting Mounting bracket, at device: Screw type Type of mounting device: Rigid Material: Stainless steel

Note

A list with all available accessories can be found on the Leuze electronic website in the Download tab of the article detailed page.

Leuze electronic GmbH + Co. KG, In der Braike 1, 73277 Owen Phone: +49 7021 573-0, Fax: +49 7021 573-199