


# safety utility knife


MANUAL / AUTO-RETRACT / SMART-RETRACT

## REPLACING THE BLADE


1 unlock blade cover

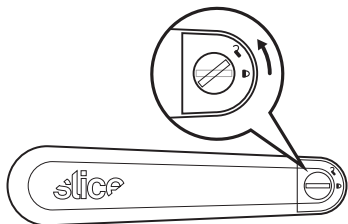


2 remove blade cover

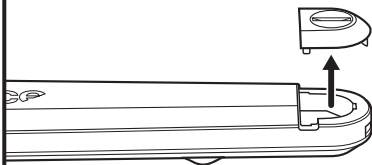


3 expose the blade

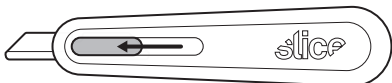


4 unlock blade (middle position)

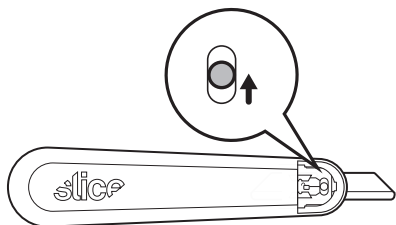


5 remove blade

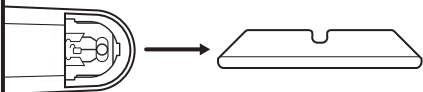


6 insert new blade\*

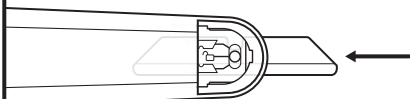


 \*lefty? see page 2

7 lock blade

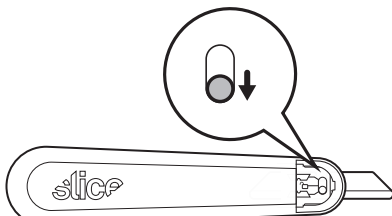

8 lock blade cover

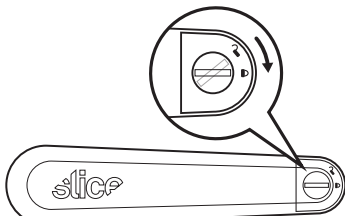

# safety utility knife


MANUAL / AUTO-RETRACT / SMART-RETRACT




## AMBIDEXTROUS: LEFT-HANDED USE

- 1** refer to the instructions for **REPLACING THE BLADE** on the other side of this sheet. repeat steps 1 to 4.


- 2** remove blade

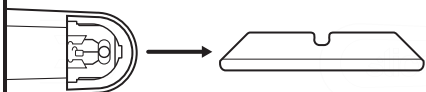


- 3** flip the blade so the sharp edge is facing up.

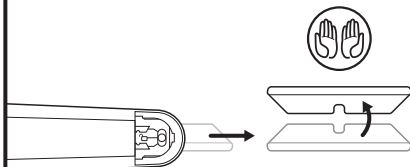

- 4** insert blade into handle

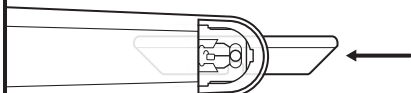

- 5** switch the blade lock button **towards the sharp edge of the blade** to secure it in place.

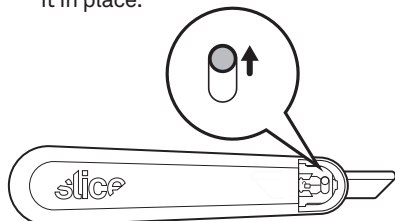

- pay attention to sharp new blades and protect yourself.
- expose only enough blade to cut the material.
- ignore distractions and cut deliberately and at an angle away from the body.
- retract the blade and store in a safe place when not in use.



**caution:** sharp edge! using product on hard surface with excessive force may break ceramic blade - do not disassemble!

## need help?

Besoin d'aide ? / ¿Necesita ayuda? / Sie benötigen Hilfe?

e-mail: [hello@sliceproducts.com](mailto:hello@sliceproducts.com)

web: [www.sliceproducts.com/videos](http://www.sliceproducts.com/videos)