

Evaluation Board for the **ADV7282A-M** 10-Bit, 4× Oversampled SDTV Video Decoder with Differential Inputs

FEATURES

Six video input ports capable of accepting any of the following formats: single-ended CVBS, differential CVBS, S-Video (Y/C), and component (YPbPr)

MIPI CSI-2 Tx output

EVALUATION BOARD KIT CONTENTS

EVAL-ADV7282AMEBZ evaluation board

7.5 V power supply block

USB cable

HARDWARE NEEDED

Source of one or more of the following video inputs: single-ended CVBS, differential CVBS, S-Video (Y/C), and/or component (YPbPr)

PC

MIPI CSI-2 Tx analyzer

CVBS input cable(s)

S-Video cable(s)

Component cable(s)

SMA cable(s)

SOFTWARE NEEDED

DVP evaluation software

[ADV7282A-M](#) script

Windows OS

GENERAL DESCRIPTION

The EVAL-ADV7282AMEBZ evaluation kit is the platform provided by Analog Devices, Inc., to evaluate the [ADV7282A-M](#) video decoder. The EVAL-ADV7282AMEBZ evaluation kit contains an EVAL-ADV7282AMEBZ evaluation board and all of its necessary peripherals.

This user guide provides a detailed overview of the EVAL-ADV7282AMEBZ evaluation board hardware and the software required to use it.

The [ADV7282A-M](#) data sheet and the [ADV7280A/ADV7281A/ADV7282A Device Manual](#) should be consulted in conjunction with this user guide when using the EVAL-ADV7282AMEBZ evaluation board

[EngineerZone](#) can be accessed to find additional information about the [ADV7282A-M](#).

PHOTOGRAPH OF THE EVAL-ADV7282AMEBZ EVALUATION BOARD

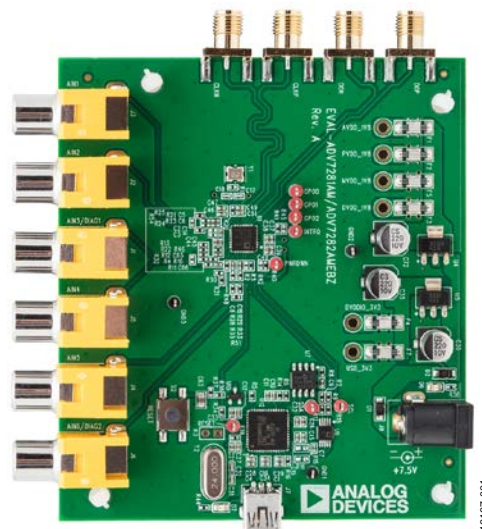


Figure 1.

TABLE OF CONTENTS

Features	1	Evaluation Board Description	4
Evaluation Board Kit Contents	1	Evaluation Board Software.....	8
Hardware Needed	1	Software Required	8
Software Needed	1	Downloading the ADV7282A-M Script Files	8
General Description	1	Downloading the DVP Eval Software	8
Photograph of the EVAL-ADV7282AMEBZ Evaluation Board	1	Installing DVP Eval Software	8
Revision History	2	Loading the ADV7282A-M Script Files	8
Evaluation Board Hardware.....	3	Configuring the Evaluation Board.....	9
Evaluation Board Overview	3		

REVISION HISTORY

9/2017—Revision 0: Initial Version

EVALUATION BOARD HARDWARE

EVALUATION BOARD OVERVIEW

The EVAL-ADV7282AMEBZ evaluation board features an [ADV7282A-M](#) video decoder and a bank of subminiature version A (SMA) connectors. Six analog video inputs (A_{IN1} to A_{IN6}) are connected to the [ADV7282A-M](#) video decoder. The [ADV7282A-M](#) can receive analog video in several different formats; hardware configuration changes can be required to support certain configurations, for example, single-ended CVBS vs. differential CVBS (see Table 1). The [ADV7282A-M](#) converts the analog video received into a mobile industry processor interface (MIPI®) CSI-2 Tx (MIPI Tx) digital stream. The [ADV7282A-M](#) MIPI Tx output consists of one differential data channel (D0P and D0N) and one differential clock channel (CLKP and CLKN); both channels are available at the SMA connectors on the evaluation board.

Analog Video Input Format Configurations

Configuring A_{IN5} and A_{IN6} for Single-Ended CVBS

To configure the A_{IN5} and A_{IN6} inputs to receive single-ended CVBS, make the following resistor changes on the evaluation board:

1. Remove resistor R51.
2. Replace resistors R33 and R35 with 24 Ω resistors.
3. Replace resistors R28 and R29 with 51 Ω resistors.

Configuring A_{IN1} and A_{IN2} for Differential CVBS

To configure A_{IN1} and A_{IN2} to receive differential CVBS, make the following resistor changes on the evaluation board:

1. Replace resistors R24 and R25 with 1.3 kΩ resistors.
2. Replace resistors R21 and R23 with 430 Ω resistors.
3. Replace R54 with a 75 Ω resistor for pseudo differential CVBS or with a 150 Ω resistor for fully differential CVBS.
4. Connect the positive input to A_{IN1} and the negative input to A_{IN2}.

Configuring A_{IN3} and A_{IN4} for Differential CVBS

To configure A_{IN3} and A_{IN4} to receive differential CVBS, make the following resistor changes on the evaluation board:

1. Replace resistors R11 and R12 with 1.3 kΩ resistors.
2. Replace resistors R4 and R10 with 430 Ω resistors.
3. Replace resistor R32 with a 75 Ω for pseudo differential CVBS or with a 150 kΩ for fully differential CVBS.
4. Connect the positive input to A_{IN3} and the negative input to A_{IN4}.

Configuring A_{IN5} and A_{IN6} for S-Video (Y/C)

To configure A_{IN5} and A_{IN6} to receive S-Video (Y/C), make the following resistor changes on the evaluation board:

1. Remove resistor R51.
2. Replace resistors R33 and R35 with 24 Ω resistors.
3. Replace resistors R28 and R29 with 51 Ω resistors.
4. Connect the luma channel (Y) to A_{IN5} and the chroma channel (C) to A_{IN6}.

Table 1. Analog Video Input Format Configurations for the EVAL-ADV7282AMEBZ Evaluation Board

Configuration	A _{IN1}	A _{IN2}	A _{IN3}	A _{IN4}	A _{IN5}	A _{IN6}
Default	Single-Ended CVBS Input 1	Single-Ended CVBS Input 2	Single-Ended CVBS Input 3	Single-Ended CVBS Input 4	Differential CVBS Input 1, positive channel	Differential CVBS Input 1, negative channel
Single-Ended CVBS	Default	Default	Default	Default	See the Configuring A _{IN5} and A _{IN6} for Single-Ended CVBS section	See the Configuring A _{IN5} and A _{IN6} for Single-Ended CVBS section
Differential CVBS	See the Configuring A _{IN1} and A _{IN2} for Differential CVBS section	See the Configuring A _{IN1} and A _{IN2} for Differential CVBS section	See the Configuring A _{IN3} and A _{IN4} for Differential CVBS section	See the Configuring A _{IN3} and A _{IN4} for Differential CVBS section	Default	Default
S-Video (Y/C)	S-Video Input 1 (Y channel)	S-Video Input 1 (C channel)	S-Video Input 2 (Y channel)	S-Video Input 2 (C channel)	See the Configuring A _{IN5} and A _{IN6} for S-Video (Y/C) section	See the Configuring A _{IN5} and A _{IN6} for S-Video (Y/C) section
YPrPb	YPrPb Input 1 (Y channel)	YPrPb Input 1 (Pb channel)	YPrPb Input 1 (Pr channel)	Not applicable	Not applicable	Not applicable

EVALUATION BOARD DESCRIPTION

This section outlines how to power up, communicate with, and use the evaluation board. For an outline of the evaluation board connections, see Figure 2.

Power Supply

To power up the evaluation board, connect a mains cable to the 7.5 V power supply block included in the EVAL-ADV7282AMEBZ evaluation kit. Connect the output jack plug of the 7.5 V power supply block to the input power connector (J8) on the evaluation board. LED D6 illuminates when the power supply is enabled and successfully connects to the evaluation board.

Only use the 7.5 V power supply block provided with the evaluation kit to power the evaluation board.

Communicating with the Evaluation Board

To establish communication with the evaluation board, connect the USB cable included in the EVAL-ADV7282AMEBZ evaluation kit to a computer with [DVP Eval Software](#) installed. Connect the USB cable to the USB connector (J7) on the evaluation board. LED D7 illuminates when the USB cable successfully connects between an active USB port and the evaluation board.

Connecting Input Video

Connect an analog video input(s) to the desired analog input (A_{IN1} to A_{IN6}) of the evaluation board. Refer to Table 1 to determine how different types of input (for example, single-ended CVBS and S-Video) connect to the evaluation board. Refer to the [ADV7282A-M](#) data sheet and the [ADV7280A/ADV7281A/ADV7282A Device Manual](#) for more information on input muxing options.

Connecting Output Video

To observe the output of the evaluation board, connect the MIPI Tx output SMA connectors to a MIPI Tx compatible receiver.

Other Considerations

The 28.63636 MHz crystal (Y1) on the evaluation board does not oscillate until the [ADV7282A-M](#) is configured (see the [Configuring the Evaluation Board](#) section). The I²C master works independently of the crystal, using a ring oscillator in the [ADV7282A-M](#).

Specific components on the evaluation board are outlined in Table 2 and highlighted in Figure 3. Additional details on components are outlined in Table 3.

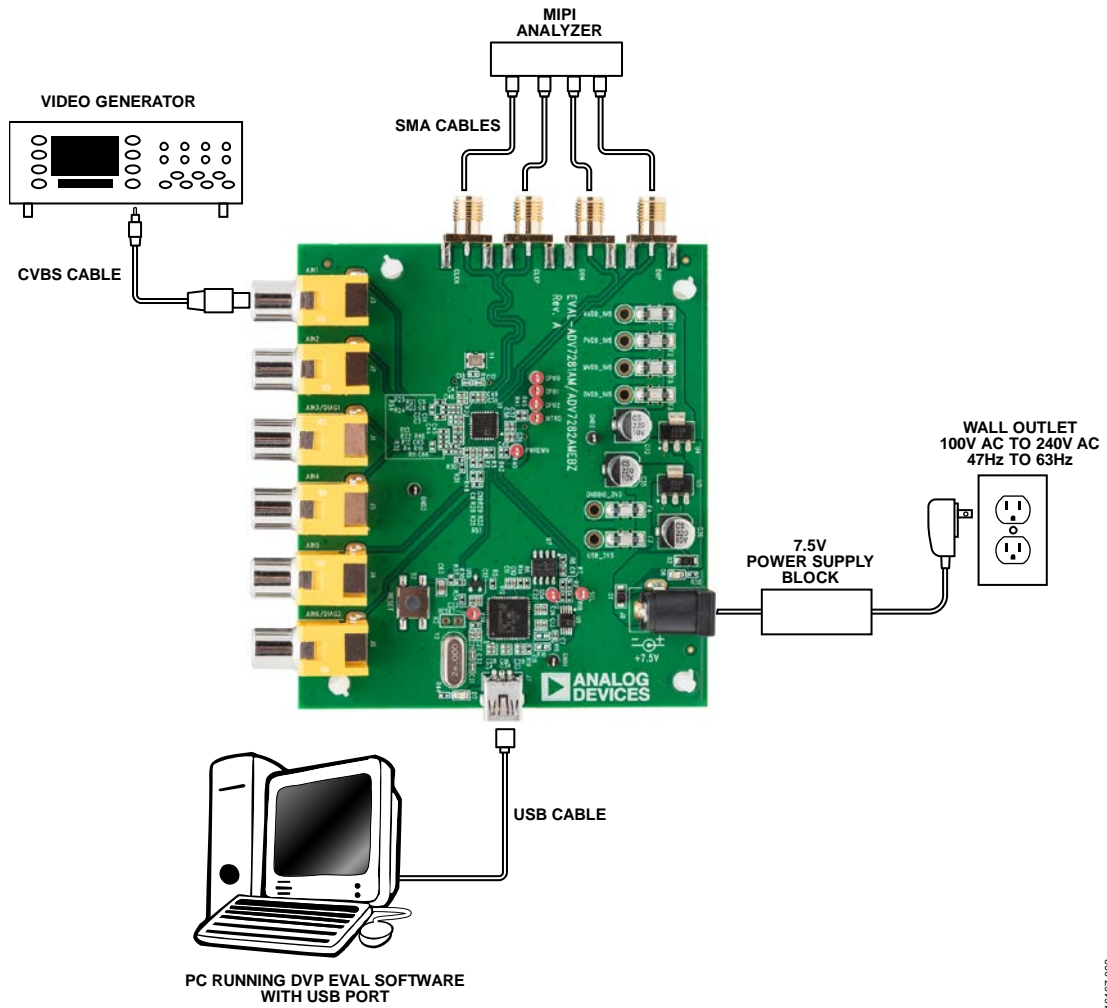


Figure 2. Outline of Evaluation Board Connections

16167-002

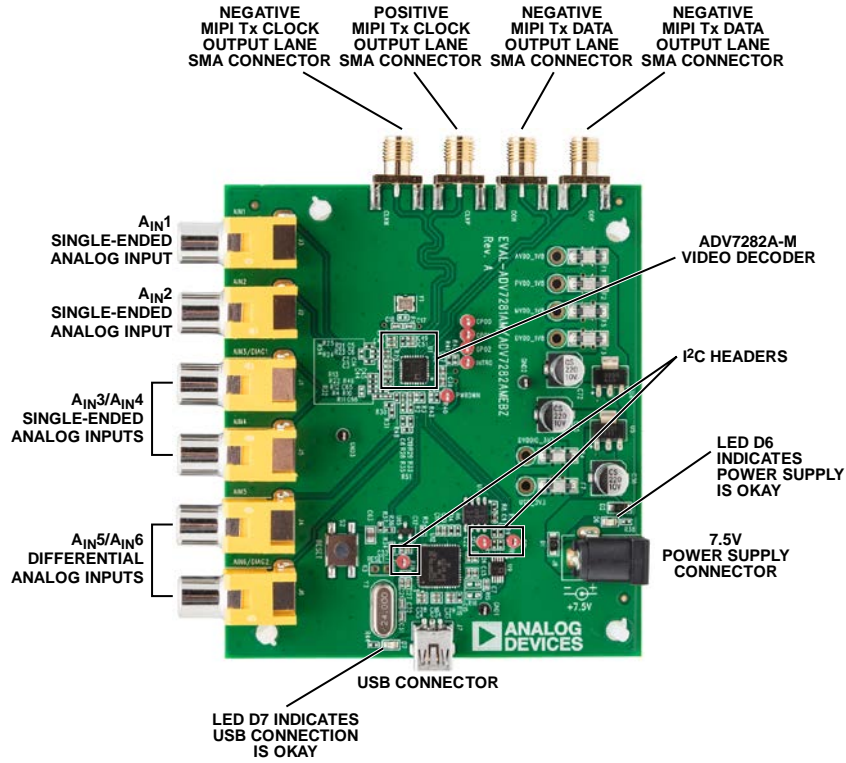


Figure 3. ADV7282A-M. Evaluation Board

16167-003

Table 2. Essential Evaluation Board Components

Reference Designator	Function	Description
J1 to J6 D0N, D0P, CLKN, CLKP J8	Analog video inputs MIPI Tx outputs Power	Analog video inputs (A _{IN1} to A _{IN6}) connected to the ADV7282A-M video decoder. MIPI Tx data (D0P and D0N) and clock (CLKP and CLKN) outputs. Connection for 7.5 V power supply. A 7.5 V power supply block is included in the EVAL-ADV7282AMEBZ evaluation kit.
D6 J7	Power enabled LED USB	The LED illuminates when the 7.5 V supply is connected and enabled. Connecting a USB cable between this connector and a PC with DVP Eval Software and ADV7282A-M scripts ¹ installed allows control of the evaluation board. See the Evaluation Board Software section for more information on DVP Eval Software and ADV7282A-M scripts.
D7	USB connected LED	The LED illuminates when the USB cable is connected between an active USB port on a PC and the evaluation board.

¹ These scripts enable control of the [ADV7282A-M](#) video decoder.

Table 3. Additional Evaluation Board Components

Reference Designator	Function	Description
INTRQ Reset and S2	INTRQ output Reset	Interrupt output from the ADV7282A-M . The evaluation board can be reset by pressing and releasing the push button “S2”. The evaluation board can also be reset by momentarily connecting the “Reset” test point to 0V.
SDA and SCL	I ² C communication bus	Test points. The SDA (I ² C data) and SCL (I ² C clock) test points provide access to the I ² C communication bus on the evaluation board. This allows an external I ² C master to be connected instead of using a PC to configure the evaluation board.
GPO0, GP01, GP02 K3	General purpose output EEPROM programming	General purpose output test points. Never short Jumper K3 and only employ K3 during initial programming. K3 can disable the USB interface on the evaluation board.

EVALUATION BOARD SOFTWARE

SOFTWARE REQUIRED

To complete the initial setup of the evaluation board, it is necessary to download the following:

- [ADV7282A-M](#) script files
- [DVP Eval Software](#)

DOWNLOADING THE ADV7282A-M SCRIPT FILES

To download the [ADV7282A-M](#) script files, complete the following steps:

1. Go to the [ADV7282A-M](#) product page.
2. Download the [ADV7282AM_Cust.zip](#) file.
3. Unzip the [ADV7282AM_Cust.zip](#) file.

DOWNLOADING THE DVP EVAL SOFTWARE

To download the [DVP Eval Software](#), complete the following steps:

1. Open the Install [DVP Eval Software](#) thread on [EngineerZone](#).
2. Download the [Install DVP Eval Latest Source 10-14-11.exe.zip](#) file.
3. Unzip the [Install DVP Eval Latest Source 10-14-11.exe.zip](#) file.

INSTALLING DVP EVAL SOFTWARE

To install the [DVP Eval Software](#), complete the following steps:

1. Run the executable file [Install DVP Eval Latest Source 10-14-11.exe.zip](#).
2. Read the [Software License Agreement](#). If in agreement, click the **I Agree** button.
3. Select the desired **Desktop or Start Menu** shortcuts, and click the **Next** button.
4. Select an installation destination folder and click the **Install** button (see Figure 4). It is recommended to use the default destination folder. Selecting a different destination folder can cause compatibility issues with some versions of the Windows® OS.
5. Restart the PC after the installing the [DVP Eval Software](#).

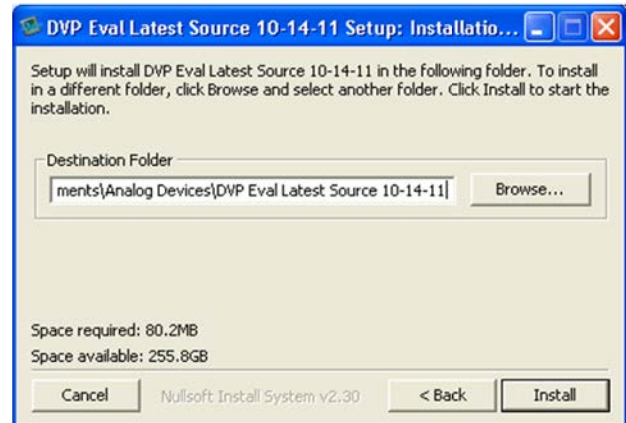


Figure 4. Installation Destination for [DVP Eval Software](#)

LOADING THE ADV7282A-M SCRIPT FILES

This section describes how to combine the [ADV7282A-M](#) script files with the [DVP Eval Software](#).

1. If possible, disconnect the PC from the internet, as some automatic backup agents can interfere with the script file loading process.
2. Copy the unzipped [ADV7282AM_Cust](#) folder to the following directory: C:\Documents and Settings\USER_NAME\My Documents\Analog Devices\DVP Eval Latest Source 10-14-11\xml\New Boards.
3. The location of this folder is influenced by the install location of the [DVP Eval Software](#) and USER_NAME must be defined by the user.
4. Open the [DVP Eval Software](#) by selecting **Start > All Programs > Analog Devices > DVP Eval Latest Source 10-14-11**.
5. Select **File > Update Boards** to combine the [ADV7282A-M](#) script files with the [DVP Eval Software](#) (see Figure 5).



Figure 5. Update Board Files on the [DVP Eval Software](#)

6. After the **Update Boards** process completes, click **OK** on the **Update Boards Successful** window. The PC can now reconnect to the internet if it is disconnected.

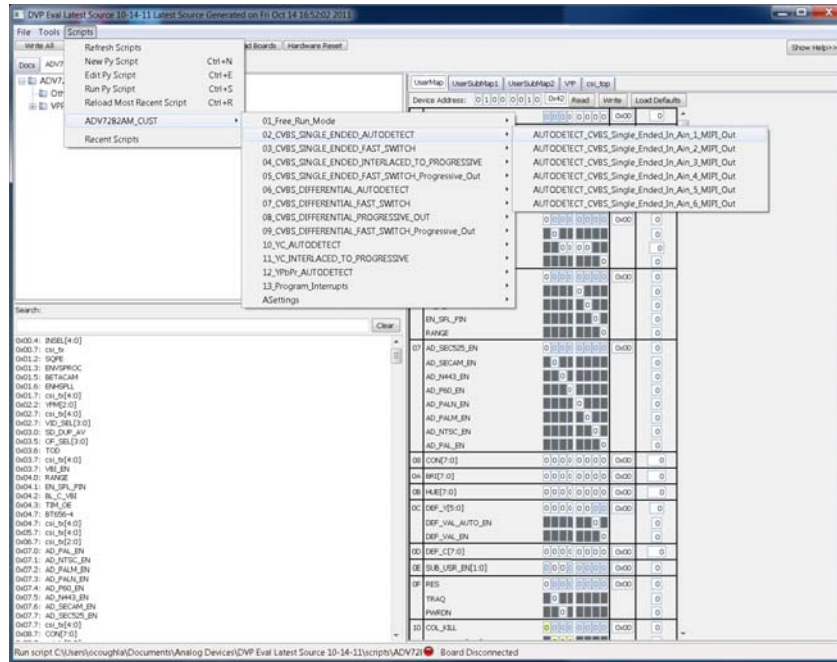


Figure 8. Running EVAL-ADV7282A-M Script on DVP Eval Software

I²C refers to a communications protocol originally developed by Philips Semiconductors (now NXP Semiconductors).



ESD Caution

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.

