

Model Number


VT18-8-400-M/32/40a/118

Diffuse mode sensor with 4-pin, M12 x 1 connector


Features

- Array control panel with highly visible ٠ LED display
- Flashing power on LED in case of ٠ short-circuit
- Multiple device installation possible, ٠ no mutual interference (no cross-talk)
- Not sensitive to ambient light, even ٠ with switched energy saving lamps
- Protection class II ٠

Dimensions

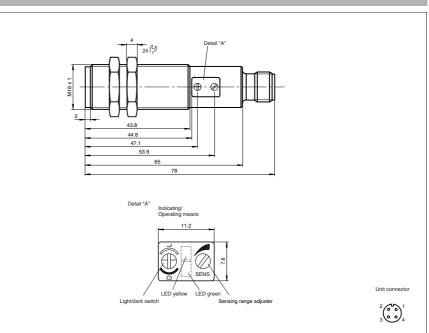

Electrical connection

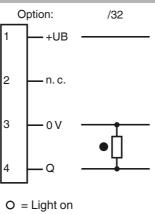

= Dark on

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data	
General specifications	
Detection range	0 400 mm , adjustable
Detection range min.	0 25 mm
Detection range max.	0 400 mm
Light source	LED
Light type	modulated visible red light , 660 nm
Diameter of the light spot	approx. 4 mm at a distance of 120 mm
Optical face	frontal
Ambient light limit	30000 Lux
Hysteresis H	< 15 %
Functional safety related parameter	S
MTTF _d	700 a
Mission Time (T _M)	20 a
Diagnostic Coverage (DC)	0 %
Indicators/operating means	
Operation indicator	LED green, flashes in case of short-circuit
Function indicator	LED yellow, lights up with receiver lit
Control elements	Detection range adjuster, light/dark switch
Electrical specifications	
Operating voltage U	10 30 V DC , class 2
Ripple	10 %
No-load supply current I ₀	< 30 mA
Output	
Switching type	light/dark on, switchable
Signal output	1 PNP output, short-circuit protected, reverse polarity protected,
	open collector
Switching voltage	30 V DC
Switching current	max. 200 mA
Switching frequency f	500 Hz
Response time	1 ms
Ambient conditions	
Ambient temperature	-25 70 °C (-13 158 °F)
Storage temperature	-30 70 °C (-22 158 °F)
Mechanical specifications	
Degree of protection	IP67
Connection	M12 connector, 4-pin (Vario-Quick quick connect technology)
Material	
Housing	brass, nickel-plated
Optical face	plastic
Mass	60 g
Compliance with standards and dirves	ecti-
Standard conformity	
Product standard	EN 60947-5-2
Approvals and certificates	
CE conformity	yes
Protection class	II, rated voltage ≤ 300 V AC with pollution degree 1-2 accor- ding to IEC 60664-1
UL approval	cULus
CCC approval	CCC approval / marking not required for products rated \leq 36 V

Curves/Diagrams

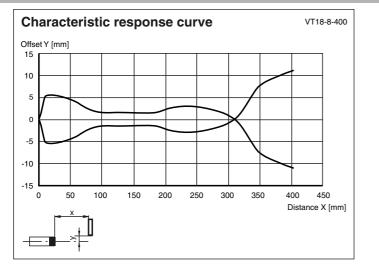

Release date: 2015-02-05 13:20 Date of issue: 2015-02-05 801131_eng.xml

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G


www.pepperl-fuchs.com fa-info


USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

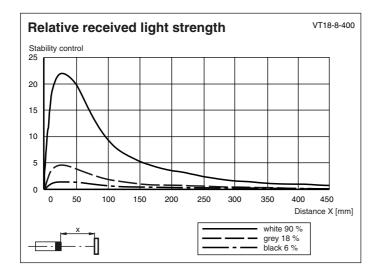

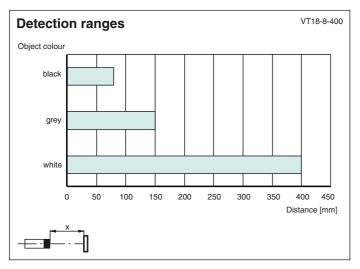

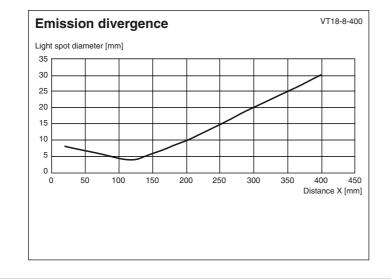

Adjustment

Release date: 2015-02-05 13:20 Date of issue: 2015-02-05 801131_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



VT18-8-400-M/32/40a/118


Sensitivity adjustment

- Turn sensitivity adjuster (counterclockwise) to minimum position.
- Place the object to be detected in the sensing range and turn the sensitivity adjuster clockwise until the yellow indication LED lights up. This setting indicates the position A of the sensitivity adjuster.
- · Remove the object. Increase the sensitivity slowly (turning the sensitivity adjuster clockwise) until the yellow LED lights up again. This setting indicates the position B of the sensitivity adjuster.

Note:

In case of no background object, the LED won't light up, even in MAX. adjustment. In that case take care, that in normal operation conditions no temporal background object can appear in the sensing range (e. g. parked pallets). If this can not be excluded, place (only for adjustment matter) an object at the appropriate location. Then repeat this adjustment step. After finishing the adjustment this temporal object should be removed.

For optimal setting, now turn the sensitivity adjuster to the middle position between the positions A and B.

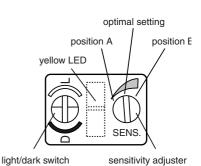

Release date: 2015-02-05 13:20 Date of issue: 2015-02-05 801131_eng.xml



Δ