
**Dimensions** 



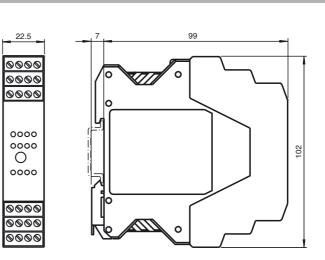

# **Electrical connection**


### Model number

### VBA-4E3A-KE-ZEJQ/E2L


KE switch cabinet module 4 inputs and 3 outputs


## Features

- Housing with removable and color co-• ded terminals
- Communication monitoring
- Inputs for 2- and 3-wire sensors •
- Addressing jack ٠
- Power supply of outputs from the ex-• ternal auxiliary voltage
- Selectable supply to the sensors: External or from the module
- Function display for bus, external au-• xiliary voltage, internal sensor supply, inputs, and outputs
- Red LED per channel, lights up in the ٠ event of output overload
- Switchable lead breakage detection (outputs)
- A/B slave with extended addressing possibility for up to 62 slaves

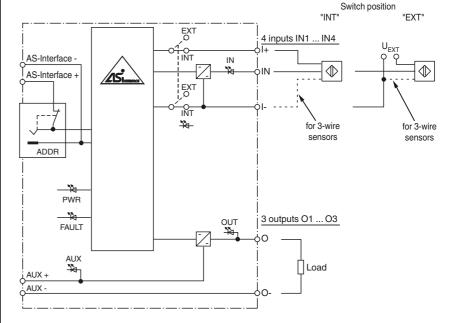

## Indicating / Operating means

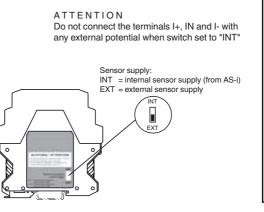

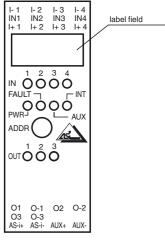

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



# AS-Interface sensor/actuator module

Technical data				
General specifications				
Slave type		A/B slave		
AS-Interface specification		V3.0		
Required master specification		≥ V2.1		
UL File Number		E87056		
Indicators/operating means				
LED FAULT		Error display; red LED		
		interruption outputs	al input supply, i.e. overload or lead	
		Internal input supply active;	0	
LED PWR		AS-Interface voltage; green green: voltage OK flashing green: address 0	LED	
LED AUX		ext. auxiliary voltage U <sub>AUX</sub> ; c green: voltage OK red: reverse voltage	lual LED green/red	
LED IN LED OUT		switching state (input); 4 LED yellow Switching state (output); 3 LED yellow/red yellow: Output active red: Output overload or lead breakage		
Electrical specifications				
Auxiliary voltage (input)	Uevt	12 30 V DC PELV		
Auxiliary voltage (htput)		20 30 V DC PELV		
Rated operating voltage		26.5 31.6 V from AS-Inter	face	
Rated operating current	l <sub>e</sub>	$\leq$ 35 mA (without sensors) /		
Protection class	·e			
Surge protection			e category III, safe isolated power	
		supplies (PELV)	s and going in, bails isolated power	
Input				
Number/Type		4 inputs for 2- or 3-wire sens	1 <i>1</i> .	
		from AS-Interface (switch position INT, basic setting) or external $U_{EXT}$ (switch position EXT) 21 31 V DC (INT)		
Voltage		· · ,	ort airquit protoctod (INT)	
Current loading capacity		$\leq$ 150 mA, overload- and sho	Sh-circuit protected (INT)	
Input current		$\leq$ 9 mA (limited internally)	$2(\overline{\mathbf{T}}_{1}(\mathbf{p}_{2}, 2))$	
Switching point		according to DIN EN 61131-	2 (Type 2)	
0 (unattenuated) 1 (attenuated)		≤3 mA		
Signal delay		$\geq 5 \text{ mA}$		
		< 1 ms (input/AS-Interface)		
Output			and a set and all and a function of	
Number/Type		3 electronic outputs, PNP, overload and short-circuit proof from external auxiliary voltage U <sub>ALIX</sub>		
Supply Current			, lest	
Current		O1 max. 3 A, O2/O3 max. 1.5 A, total 6 A ( $T_B \le 40$ °C) O1 max. 2 A, O2/O3 max. 1 A, total 4 A ( $T_B \le 60$ °C)		
Voltage		≥ (U <sub>AUX</sub> - 0.5 V)		
Usage category		DC-13		
Programming instructions				
Profile		S-7.A.0		
IO code		7		
ID code		A		
ID1 code		7		
ID2 code		0		
Data bits (function via AS-Interface	e)	input	output	
D0		IN1	01	
D1		IN2	02	
D2 D3		IN3 IN4	03 -	
Parameter bits (programmable via	a AS-i)			
PO		Communication monitoring $P0 = 0$ monitoring $= off$ , the of munication fails	putputs maintain the status if com- f communication fails, the outputs	
P1		Input filter P1 = 0 input filter on, pulse suppression $\leq 2 \text{ ms}$ P1 = 1 input filter off (basic setting)		
P2		Lead breakage outputs P2 = 0 lead breakage off (basic setting) P2 = 1 lead breakage off (basic setting)		
P3		not used	5/	
Ambient conditions				
Ambient temperature		-25 60 °C (-13 140 °F)		
Storage temperature		-25 85 °C (-13 185 °F)		
Relative humidity		90 %, noncondensing		
Pollution Degree		2		
Mechanical specifications				
• • • •				

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411

fa-info@de.pepperl-fuchs.com

2

Pepperl+Fuchs Group

w.pepperl-fuchs.com

# Function

The AS-Interface I/O module VBA-4E4A-KE-ZEJQ/E2L is a control cabinet module with 4 inputs and 3 electronic outputs. The housing is only 22.5 mm wide and takes up little space in the control cabinet. The module is mounted by snapping onto the 35-mm DIN rail in compliance with EN 50022.

The connection is made via plug-in terminals. Four-terminal blocks (black) are used for the inputs. The connection of the outputs, the external bulk power and the AS-Interface is via 2-terminal blocks (output black, bulk power grey, AS-Interface yellow).

The supply to the inputs and the connected sensors can be fed either from the internal supply of the module (from the AS-Interface) or via an external voltage source. A switch located on the side of the module changes the supply source. The choice of internal input supply is displayed via the INT LED. The IN and OUT LEDs display the current switching status of the relevant inputs and outputs. The OUT LED also indicates an overload or a lead breakage at the associated output.

#### Note:

The device is equipped with a communication monitor, which deactivates the outputs if the AS-Interface does not communicate with the module for more than 40 ms. The communication monitor can be deactivated via the parameter P0. Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1.

Parameter P2 activates a lead breakage detection system for the outputs. This function detects and reports a missing load, providing the relevant output is deactivated. The associated OUT LED and the 'peripheral fault' function display the signal transmitted to the AS-Interface master. A signal indicating an overload of the internal input supply or the outputs is also transmitted to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface continues even if a peripheral fault is set.

### Accessories

# VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

VBP-HH1-V3.0 AS-Interface Handheld

### VAZ-PK-1,5M-V1-G

Singapore: +65 6779 9091

fa-info@sg.pepperl-fuchs

Adapter cable module/hand-held programming device

F PEPPERL+FUCHS

# VBA-4E3A-KE-ZEJQ/E2L

Protection degree	IP20	
Connection	removable terminals rated connection capacity: rigid/flexible (with and without wire-end ferrules): 0.25 mm <sup>2</sup> 2.5 mm <sup>2</sup> for multiple-wire connection with two wires of equal cross-sec tion: flexible with twin wire-end ferrules: 0.5 mm <sup>2</sup> 1.5 mm <sup>2</sup>	
Material		
Housing	PA 66-FR	
Mass	150 g	
Mounting	DIN mounting rail	
Compliance with standards and divide a compliance with standards and divide a complexity of the standard standard standard standards and the standard stan standard sta	recti-	
Directive conformity		
EMC Directive 2004/108/EC	EN 61000-6-2:2005, EN 61000-6-4:2007, EN 50295:1999	
Standard conformity		
Noise immunity	EN 61000-6-2:2005, EN 61326-1:2006, EN 50295:1999	
Emitted interference	EN 61000-6-4:2007	
Input	EN 61131-2:2004	
Protection degree	EN 60529:2000	
Fieldbus standard	EN 50295:1999, IEC 62026-2:2006	

### Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

