


Infrared Thermometer KEW 5515



KEW 5515 Specifications

Infrared Thermometer		
	Measuring range	-32 - 535°C
	Accuracy	±3.0°C (-3220 °C), ±2.0°C (-20 - +100°C), ±2%rdg (100 - 535°C)
	Measuring element	Thermopile
	Infrared spectral band	5 - 14µm
	Measuring diameter	1000mm/ ø78mm (Distance/ Measuring dia.: 12:1)
	Repeatability	Within ±1°C
	Emissivity	Variable between 0.10 and 1.00 (by 0.01 steps), Before shipment: 0.95
	Collimation	Laser beam (Class 2, 630 - 670nm, 1mW or less) specifies the center.
Th	ermocouple	
	Thermocouple	K-type*
	Measuring range of thermocouple	-199 - 1372°C
	Accuracy of thermocouple	±1.5%rdg+1°C (-40 - 1372°C)
Re	sponse	500ms
Re	solution	0.1°C
Au	to power off	If no key is pressed for 6 seconds, the power is shut off automatically.
LC	D display	LCD with back light (blinks in red when alarm function is activated)
Dι	al display	Simultaneous display (Measured value and either of max, min, average or thermocouple value.)
Op	perating temperature & humidity	0 - 50°C/ 10 - 90% RH
Ap	plicable standards	IEC 61326, IEC 61000-4-2, IEC 61000-4-3, IEC 61000-4-8, IEC 60825-1
Ва	ttery	6F22(9V) × 1
Dir	mension	180 (L)×130 (W)×40 (D) mm
We	eight	Approx. 195g (excluding battery)
Ac	cessories	9152(Carrying case), 6F22(9V) × 1, Instruction manual

Display / Buttons

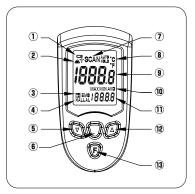

- ① Battery mark
- ② Laser mark
- 3 Thermocouple TC
- 4 Upper/ Lower limit alarm [HAL/LAL]
- (5) Cursor button (Down)
- **6** Buzzer button
- ③ SCAN/ HOLD/ AUTO
- ® Unit
- 9 Main display
- 10 MAX/ MIN/ AVG
- 11) Sub display
- ¹² Cursor button (Up)
- [®] Function button

* Commercial K-type thermocouple can be used with the product.


LCD back light



Dual display



Relation of distance and measuring diameter

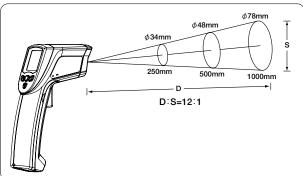



DANGER

The connector for thermocouple is not insulated. Do not make measurement using a thermocouple when there is a risk of electrical shock hazard.



WARNING

KEW5515 is one of the portable laser applied instruments which are regulated by the consumer product safety law.

- Do not look into the laser beam.
- Do not aim the laser beam at human beings.
- Keep the instrument out of children's reach.



Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely Safety Warnings: Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

Cosinus Messtechnik GmbH * Rotwandweg 4 * D-82024 Taufkirchen Tel.: 089-665594-0 * Fax: 089-665594-30 * Web: www.cosinus.de * eMail: office@cosinus.de