Features

- 1-channel isolated barrier
- Universal usage at different power supplies
- Thermocouple, RTD, potentiometer or voltage input
- · Redundant TC input
- Current output 0/4 mA ... 20 mA
- · 2 relay contact outputs
- Configurable by PACTware or keypad
- · Line fault (LFD) and sensor burnout detection
- Up to SIL2 acc. to IEC 61508/IEC 61511

Function

This isolated barrier is used for intrinsic safety applications.

The device converts the signal of a resistance thermometer, thermocouple, potentiometer, or voltage source to a proportional output current. It also provides a relay trip value.


The removable terminal block K-CJC-** is available as an accessory for internal cold junction compensation of thermocouples.

A fault is signalized by LEDs acc. to NAMUR NE44.

The device is easily configured by the use of the PACTware configuration software.

For additional information, refer to the manual and www.pepperl-fuchs.com.

Assembly

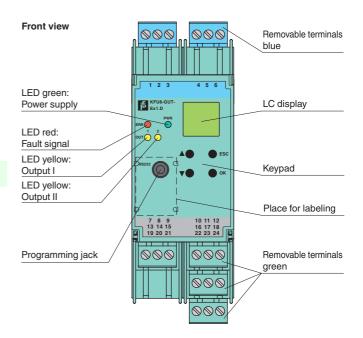







SIL2

Connection

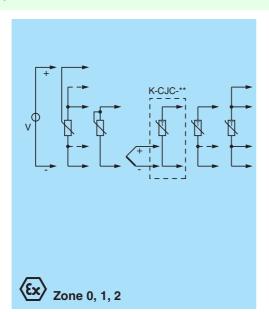

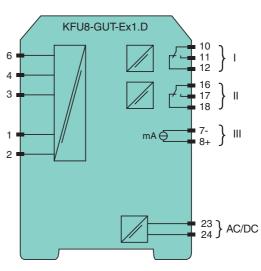

Analog input

terminals 23, 24

20 ... 90 V DC / 48 ... 253 V AC

Pt100, Pt500, Pt1000, Ni100, Ni1000

sensor breakage, sensor short-circuit type B, E, J, K, L, N, R, S, T (IEC 584-1: 1995)

 $0 \dots 10 \ V$, $2 \dots 10 \ V$, $0 \dots 1 \ V$, $-100 \dots 100 \ mV$

approx. 400 μ A with resistance measuring sensor

downscale I ≤ 3.6 mA, upscale I ≥ 21 mA (acc. NAMUR NE43)

250 V AC / 2 A / $\cos \phi \ge 0.7$; 40 DC / 2 A

 \leq 2 W; 2.5 VA / 2.2 W; 3 VA

terminals 1, 2, 3, 4, 6

2-, 3-, 4-wire technology

external and internal

2-, 3-, 5-wire technology

 \geq 1 M Ω (0 ... 1 V, -100 ... 100 mV)

output I: terminals 10, 11, 12

output II: terminals 16, 17, 18 output III: terminals 8+, 7-

5 x 10⁷ switching cycles

Analog current output 0 ... 20 mA or 4 ... 20 mA

approx. 20 ms / approx. 20 ms

 \geq 250 k Ω (0 ... 10 V)

sensor breakage

 $0.8 \dots 20 \ k\Omega$

relay

≤ 24 V DC

< 650 O

 \leq 50 Ω

General specifications

Power loss/power consumption

Types of measuring

Types of measuring

Measuring circuit monitoring

Cold junction compensation Measuring circuit monitoring

Lead resistance

Thermocouples

Potentiometer

Input resistance

Measuring current

Contact loading

Mechanical life

Current range

Fault signal

Open loop voltage

Transfer characteristics

Energized/De-energized delay

Output

Connection

Output I, II

Output III

Load

Deviation

Signal type

Rated voltage

Supply Connection

Input Connection

RTD

Dimensions		40 x 119 x 115 mm (1.6 x 4.7 x 4.5 in) , housing type C3
Mounting		on 35 mm DIN mounting rail acc. to EN 60715:2001
Data for application in connection with Ex-areas		
EC-Type Examination Certificate		TÜV 03 ATEX 2140 , for additional certificates see www.pepperl-fuchs.com
Group, category, type of protection		(x) II (1) G [Ex ia] IIC (x) II (1) D [Ex iaD]
Input		Ex ia IIC, Ex iaD
Supply		
Maximum safe voltage	U _m	40 V DC (Attention! The rated voltage can be lower.)
Input		terminals 2, 6 (for active equipment)
Voltage	U_o	13.1 V
Current	I _o	8 mA
Power	Po	67 mW
Voltage	Ui	29 V
Current	l _i	11 mA
Power	P _i	200 mW
Inputs		terminals 1, 2, 3, 4, 6 (for passive equipment)
Voltage	Uo	13.1 V
Current	I _o	21 mA
Power	Po	67 mW
Output		
Contact loading		253 V AC/2 A/cos φ > 0.7; 40 V DC/2 A resistive load (TÜV 03 ATEX 2140)
Analog output		
Maximum safe voltage	U _m	40 V (Attention! The rated voltage can be lower.)
Interface		
Maximum safe voltage	U _m	40 V (Attention! The rated voltage can be lower.), RS 232
Electrical isolation	111	
Input/Other circuits		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V
Directive conformity		
Directive 94/9/EC		EN 60079-0:2009, EN 60079-11:2007, EN 60079-26:2007, EN 61241-11:2006
General information		
Supplementary information		EC-Type Examination Certificate, Statement of Conformity, Declaration of Conformity, Attestation of Conformity and instructions have to be observed where applicable. For information see www.pepperl-fuchs.com.

Redundant thermocouple

For higher availability it is possible to connect a second redundant thermocouple (B) of the same type to the temperature converter. The cold junction temperature is taken from the connected terminal block.

If the deviation of the both thermocouples (A and B) exceed the selected tolerance, an error will occur. If a lead breakage of one thermocouple (e. g. A) has been detected, an error message occurs and the value of the second thermocouple (B) will be taken for futher calculation.

Accessories

K-CJC-**

This removable terminal block with integrated temperature measurement sensor is needed for internal cold junction compensation for thermocouples. One K-CJC-** is needed for each channel.

PACT*ware*[™]

Device-specific drivers (DTM)

Adapter K-ADP-USB

Programming adapter for parameterisation via the serial USB interface of a PC/Notebook

www.pepperl-fuchs.com