







# Model number


#### VBA-4E4A-G12-ZAJ/EA2L

G12 flat module 4 inputs (PNP) and 4 electronic outputs


#### **Features**

- A/B slave with extended addressing possibility for up to 62 slaves
- One-piece housing with stainless steel base
- Installation without tools
- Metal threaded inserts with SPEED-CON technology
- Flat cable connection with cable piercing technique, variable flat cable guide
- Red LED per channel, lights up in the event of output overload
- Communication monitoring, configurable
- · Inputs for 2-, 3-, and 4-wire sensors
- DIN rail mounting
- AS-Interface certificate


## **Dimensions**

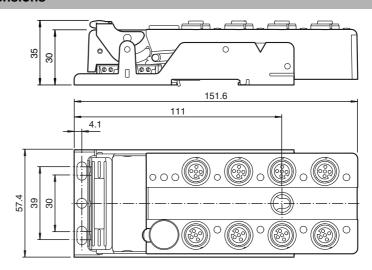

## **Electrical connection**

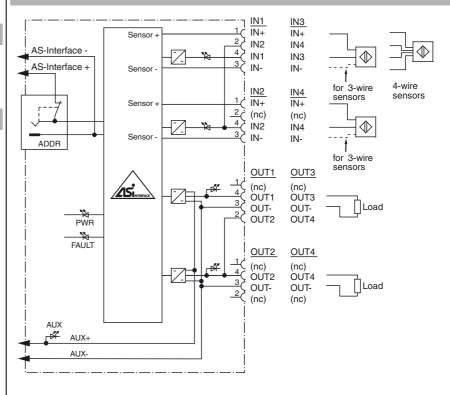

# **Indicating / Operating means**

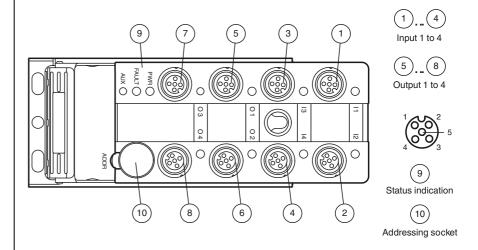

www.pepperl-fuchs.com

Technical data			
Seneral specifications			
Slave type		A/B slave	
AS-Interface specification		V3.0	
Required master specification		≥ V3.0	
UL File Number		E87056	
Functional safety related parame	ters		
MTTF <sub>d</sub>		190 a	
Mission Time (T <sub>M</sub> )		20 a	
Diagnostic Coverage (DC)		0 %	
ndicators/operating means			
LED FAULT		error display; LED red red: communication error of red flashing: overload of se	or address is 0 ensor power supply or outputs
LED PWR		AS-Interface voltage; greet green: voltage OK flashing green: address 0	n LED
LED AUX		ext. auxiliary voltage U <sub>AUX</sub> green: voltage OK red: reverse voltage	; dual LED green/red
LED IN		switching state (input); 4 Ll	ED yellow
LED OUT		Switching status (output); 4 Yellow: output active Red: output overload	4 yellow/red LEDs
Electrical specifications			
Auxiliary voltage (output)	$U_{AUX}$	24 V DC ± 15 % PELV	
Rated operating voltage	U <sub>e</sub>	26.5 31.6 V from AS-Inte	erface
Rated operating current	l <sub>e</sub>	≤ 40 mA (without sensors)	/ max. 240 mA
Protection class		III	
nput			
Number/Type		4 inputs for 2- or 3-wire ser	nsors (PNP), DC
		option 2 inputs for 4-wire s	ensors (PNP), DC
Supply		from AS-Interface	
Voltage		21 31 V	
Current loading capacity		$\leq$ 200 mA, overload and sh	nort-circuit protected
Input current		≤ 8 mA (limited internally)	
Switching point		according to DIN EN 6113	1-2 (Type 2)
0 (unattenuated)		$\leq$ 2 mA	
1 (attenuated)		≥ 6 mA	
Signal delay		< 1 ms (input/AS-Interface)	)
Output			
Number/Type		4 electronic outputs, PNP,	overload and short-circuit proof
Supply		from external auxiliary volta	age U <sub>AUX</sub>
Current		2 A per output 6 A total (TB ≤ 40 °C) 4 A total (TB ≤ 70 °C)	
Voltage		≥ (U <sub>AUX</sub> - 0.5 V)	
Programming instructions			
Profile		S-7.A.7	
IO code		7	
ID code		A	
ID1 code		7	
ID2 code		7	
Data bits (function via AS-Interface	e)	input	output
D0	,	IN1	OUT1
D1		IN2	OUT2
D2		IN3	OUT3
D3		IN4	OUT4
Parameter bits (programmable via	a AS-i)		
P0		communication monitoring P0 = 1 (basic setting), monitoring = ON, i.e. if communicating fails, the outputs are de-energised P0 = 0, monitoring = OFF, if communication fails, the output maintain their condition	
P1		Input filter P1 = 0 input filter on, pulse P1 = 1 input filter off (basic	
P2		Synchronous mode P2 = 0 synchronous mode P2 = 1 synchronous mode	
		not used	
P3			
		-25 70 °C (-13 158 °F	)
Ambient conditions		-25 70 °C (-13 158 °F -25 85 °C (-13 185 °F	
Ambient conditions Ambient temperature			ections 3 shocks ections 1000 shocks

## **Function**

The VBA-4E4A-G12-Z\*J/EA2L is an AS-Interface trigger module with 4 inputs and 4 outputs. 2- and 3-wire sensors as well as mechanical contacts can be connected to the plus switching electronic inputs. The outputs are electronic outputs which can be energized with max. 24 V DC and 2 A per output.

The solid housing permits fast mounting without tools as well as easy removal without tools. The stainless steel shell and the cast housing ensure durability and a high protection category.

The connection to the AS-Interface calbe and to the external power supply is achieved via penetration technology in the integrated flat cable. The insert for the flat cables can be turned in two orientations.

All connections to inputs and outputs are implemented via metal inserts for high stability. The connection to the sensors/actuators is achieved via a M12 x 1 circular connector with SPEEDCON quick locking option.

The inputs and the connected sensors are supplied from the internal power supply of the module (from AS-Interface), the outputs and the connected actuators via an external power source (AUX).

To indicate the current switching state there is an LED for each channel fitted to the top of the module. The outputs are protected against overload and short circuit, an output overload is indicated via an LED per channel. An LED to indicate the AS-Interface voltage and that the module has an address of 0 is available, another indicates errors in the AS-Interface communication as well as periphery faults. Another LED indicates the external power supply (AUX).

This module can be mounted in any position using three screws or can be snapped onto the DIN rail using the stainless steel holder.

An output overload is reported to the AS-Interface master via the function "periphery fault". The communcation with the AS-Interface remains intact.

#### **Accessories**

# VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

#### VAZ-V1-B3

Blind plug for M12 sockets

## VBP-HH1-V3.0

AS-Interface Handheld

# VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

#### VAZ-CLIP-G12

lock for G12 module

Degree of protection	IP67
Connection	Cable piercing method flat cable yellow/flat cable black inputs/outputs: M12 round connector
Material	
Housing	PBT
Mass	230 g
Mounting	Mounting base
Compliance with standards and direct	j-
ves	
Directive conformity	
EMC Directive 2004/108/EC	EN 50295:1999
EMC Directive 2004/108/EC Standard conformity	EN 50295:1999
	EN 50295:1999 EN 61000-6-2:2005, EN 50295:1999
Standard conformity	
Standard conformity Noise immunity	EN 61000-6-2:2005, EN 50295:1999
Standard conformity Noise immunity Emitted interference	EN 61000-6-2:2005, EN 50295:1999 EN 61000-6-4:2007

## **Notes**

For 4-wire sensors, it is only possible to use plug-in slot IN1 or IN3 for inputs 1+2 or 3+4 (jump-ered internally).

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.