







## **Model Number**

### UB500-18GM75-E7-V15


Single head system

### **Features**

- · 2 switch outputs
- 3 different output functions can be
- Selectable sound lobe width
- **Program input**
- **Temperature compensation**
- Very small unusable area

# **Diagrams**

## Characteristic response curve

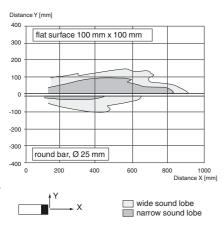

# **Technical data** General specifications

deficial specifications				
	Sensing range	30 500 mm		
	Adjustment range	50 500 mm		
	Unusable area	0 30 mm		
	Standard target plate	100 mm x 100 mm		
	Transducer frequency	approx. 380 kHz		
	Response delay	approx. 50 ms		

## Indicators/operating means

LED yellow indication of the switching state flashing: program function object detected I FD red "Error", object uncertain in program function: No object detected

### **Electrical specifications**

Operating voltage U<sub>B</sub> 10 ... 30 V DC , ripple 10  $\%_{SS}$ No-load supply current I<sub>0</sub> ≤ 50 mA

Input

Input type 1 program input,

operating range 1: -U<sub>B</sub> ... +1 V, operating range 2: +4 V ...

+U<sub>B</sub>

input impedance: > 4.7 k $\Omega$ ; program pulse:  $\geq$  1 s

Output Output type 2 switch outputs NPN, normally open/closed, programmable Rated operating current I<sub>e</sub> 2 x 100 mA, short-circuit/overload protected

Voltage drop U<sub>d</sub> ≤ 3 V ≤1 % Repeat accuracy Switching frequency f max. 8 Hz Range hysteresis H

1 % of the set operating distance Temperature influence ± 1.5 % of full-scale value

Ambient conditions -25 ... 70 °C (-13 ... 158 °F) Ambient temperature Storage temperature -40 ... 85 °C (-40 ... 185 °F)

**Mechanical specifications** Connection type Connector M12 x 1, 5-pin

IP65 Degree of protection

Material

Housing brass, nickel-plated

Transducer epoxy resin/hollow glass sphere mixture; foam

polyurethane, cover PBT

Mass Factory settings

Output 1 Switching point: 50 mm

output function: Switch point operation mode

output behavior: NO contact

Output 2 Switching point: 500 mm output function: Switch point operation mode

output behavior: NO contact

Beam width

Compliance with standards and directives

Standard conformity


Standards EN 60947-5-2:2007

IEC 60947-5-2:2007

## Approvals and certificates


UL approval cULus Listed, General Purpose CSA approval cCSAus Listed, General Purpose CCC approval CCC approval / marking not required for products rated

## **Dimensions**

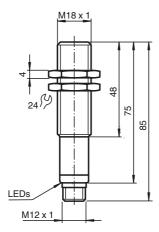

# **Electrical Connection**

Standard symbol/Connections: (version E7, npn)

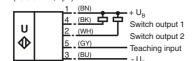

Core colours in accordance with EN 60947-5-2.

## **Pinout**




Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

# **Additional Information**

# Programmed switching output function

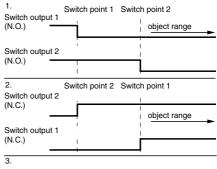

Switch output 1, (N.C.)
Detection of object presence
Switch output 2, (N.O.)
Detection of object presence Switch point 1 -> ∞: Switch point 2 ->  $\infty$ : Switch point 1 a. 2 -> ∞: Both switch outputs, (N.O.)

Detection of object presence

2

### **Accessories**

### **UB-PROG3**

Programming unit

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

Mounting flange, 18 mm

Mounting flange with dead stop, 18 mm

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

#### UVW90-K18

Ultrasonic -deflector

#### V15-G-2M-PVC

Female cordset, M12, 5-pin, PVC cable

#### V15-W-2M-PUR

Female cordset, M12, 5-pin, PUR cable

## **Description of Sensor Functions**

## Programming procedure

The sensor features two programmable switch outputs with one programmable switch point, each. Programming the switch point and the operating mode is done by applying the supply voltage -U<sub>B</sub> or +U<sub>B</sub> to the Program input. The supply voltage must be applied to the Program input for at least 1 s. LEDs indicate whether the sensor has recognized the target during the programming procedure.

### Note:

Switching points may only be specified directly after Power on. A time lock secures the adjusted switching points against unintended modification 5 minutes after Power on. To modify the switching points later, the user may specify the desired values only after a new Power On.

130229\_eng.xml

Date of issue: 2014-06-27

date: 2014-06-27 11:20

Release

If a programming adapter UB-PROG3 is used for the programming procedure, button A1 is assigned to -UB and button A2 is assigned to +UB.

## **Programming switch ouputs**

## Normally open (NO) output

The switch point of switch output 1 has to be closer to the sensor than the switch point of switch output 2

- 1. Place the target at the desired switch point position of switch output 1
- 2. Program the switch point by applying -U<sub>B</sub> to the Program input (corresponding yellow LED flashes)
- 3. Disconnect the Program input from  $-U_B$  to save the switch point
- 4. Place the target at the desired switch point position of switch output 2
- 5. Program the switch point by applying +U<sub>B</sub> to the Program input (corresponding yellow LED flashes)
- 6. Disconnect the Program input from +U<sub>B</sub> to save the switch point

Note: The order doesn't make any difference. If you want, you can set only one switching point.

## Normally closed (NC) output

The switch point of switch output 2 has to be closer to the sensor than the switch point of switch output 1

- 1. Place the target at the desired switch point position of switch output 1
- 2. Program the switch point by applying -U<sub>B</sub> to the Program input (corresponding yellow LED flashes)
- 3. Disconnect the Program input from  $-U_B$  to save the switch point
- 4. Place the target at the desired switch point position of switch output 2
- 5. Program the switch point by applying +U<sub>B</sub> to the Program input (corresponding yellow LED flashes)
- 6. Disconnect the Program input from +U<sub>B</sub> to save the switch point

Note: The order doesn't make any difference. If you want, you can set only one switching point. If both switching points are equal, the sensor works in close function.

# Programming detection of object presence

- 1. Cover the sensor face with hand or remove all objects from sensing range
- 2. Apply -U<sub>B</sub> to the Program input (red LED flashes)
- 3. Disconnect the Program input from -UB
- 4. Apply +U<sub>B</sub> to the Program input (red LED flashes)
- 5. Disconnect the Program input from +U<sub>B</sub>

Note: Only one switch output can be configured for detection of presence of objects. If the sensor detects an object within the maximum detection range, the switch output switches.

## Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

# 1. Small angle sound cone

- · switch off the power supply
- connect the Teach-In input wire to -U<sub>B</sub>
- switch on the power supply
- the red LED flashes once with a pause before the next.
- yellow LED: permanently on: indicates the presence of an object or disturbing object within the sens-
- disconnect the Teach-In input wire from -UB and the changing is saved

## 2. Wide angle sound cone

USA: +1 330 486 0001 www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091



- connect the Teach-In input wire with +U<sub>B</sub>
- switch on the power supply
- the red LED double-flashes with a long pause before the next.
- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-In input wire from +U<sub>B</sub> and the changing is saved



## **Factory settings**

See technical data.

## **Display**

The sensor provides LEDs to indicate various conditions.

	Red LED	Yellow LED 1	Yellow LED 2
During Normal operation			
Proper operation	Off	Switching state	Switching state
		output 1	output 2
Interference (e.g. compressed air)	On	remains in previous	remains in previous
		state	state
Programming of output 1			
Object detected	Off	Flashes	Off
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off
Programming of output 2			
Object detected	Off	Off	Flashes
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off

### Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.