







## Model number


### VBA-4E4A-KE-ZEJQ/E2L

KE switch cabinet module 4 inputs and 4 outputs


### **Features**

- Housing with removable, mechanical and color coded terminals
- · Communication monitoring
- Inputs for 2- and 3-wire sensors
- Addressing jack
- Power supply of outputs from the external auxiliary voltage
- Selectable supply to the sensors: External or from the module
- Function display for bus, external auxiliary voltage, internal sensor supply, inputs, and outputs
- Red LED per channel, lights up in the event of output overload
- Switchable lead breakage detection (outputs)

### **Dimensions**

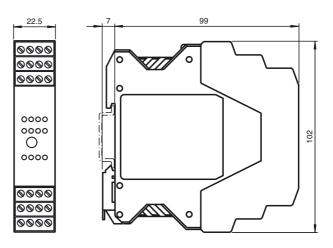


## **Electrical connection**

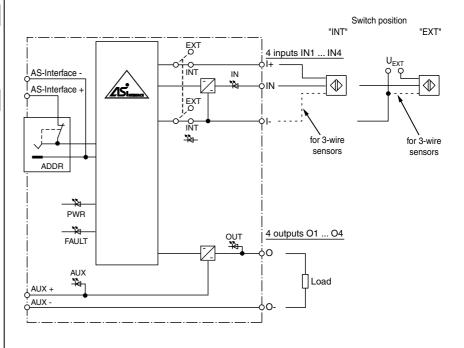


# **Indicating / Operating means**

#### ATTENTION

Do not connect the terminals I+, IN and I- with any external potential when switch set to "INT"

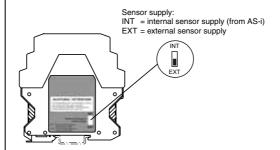

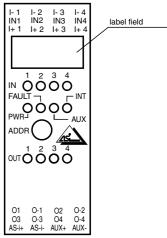

Technical data			
eneral specifications			
Slave type		A/B slave	
AS-Interface specification		V3.0	
Required master specification		≥ V3.0	
UL File Number		E87056	
unctional safety related parame	ters		
MTTF <sub>d</sub>		190 a	
Mission Time (T <sub>M</sub> )		20 a	
Diagnostic Coverage (DC)		0 %	
ndicators/operating means			
LED FAULT		Error display; red LED red: communication error, i.e. a red flashing: overload internal i interruption outputs	
LED INT		Internal input supply active; LE	D green
LED PWR		AS-Interface voltage; green LE green: voltage OK flashing green: address 0	=
LED AUX		ext. auxiliary voltage U <sub>AUX</sub> ; dua green: voltage OK red: reverse voltage	al LED green/red
LED IN		switching state (input); 4 LED y	vellow
LED OUT		switching state (output); 4 LED yellow: output active red: output overload or lead int	yellow/red
Electrical specifications			
Auxiliary voltage (input)	$U_{EXT}$	12 30 V DC PELV	
Auxiliary voltage (output)	U <sub>AUX</sub>	20 30 V DC PELV	
Rated operating voltage	U <sub>e</sub>	26.5 31.6 V from AS-Interfac	ce
Rated operating current	l <sub>e</sub>	$\leq$ 35 mA (without sensors) / ma	ax. 190 mA
Protection class		III	
Surge protection		U <sub>EXT</sub> , U <sub>AUX</sub> , U <sub>e</sub> : Over voltage of supplies (PELV)	ategory III, safe isolated powe
Number/Time		A inpute for Q ar Q	(PNP) DC
Number/Type		4 inputs for 2- or 3-wire sensors	· /·
Supply Voltage		from AS-Interface (switch posit U <sub>EXT</sub> (switch position EXT) 21 31 V DC (INT)	ion IN I, basic setting) or exte
Current loading capacity		≤ 150 mA, overload- and short-	-circuit protected (INT)
Input current		≤ 9 mA (limited internally)	
Switching point		according to DIN EN 61131-2 (	(Type 2)
0 (unattenuated)		≤3 mA	
1 (attenuated)		≥ 5 mA	
Signal delay		< 1 ms (input/AS-Interface)	
Output		, , , , , , , , , , , , , , , , , , ,	
Number/Type		4 electronic outputs, PNP, over	load and short-circuit proof
Supply		from external auxiliary voltage	·
Current		2 A per output, sum 4A ( $T_B \le 4$ 0.5 A per output, total 2A ( $T_B \le 9$ gaps) 2 A per output, total 4A ( $T_B \le 9$ mm gap)	0 °C) 60 °C, arranged in series with
Voltage		≥ (U <sub>AUX</sub> - 0.5 V) DC-13	
Usage category		DO-19	
Programming instructions		S 7 A 7	
Profile		S-7.A.7 7	
IO code ID code			
ID code ID1 code		A 7	
ID1 code ID2 code		7	
	(م	•	Outnut
Data bits (function via AS-Interface	c)	input IN1	<b>output</b> O1
130		IN I IN2	01
D0			
D1		INIB	( ):3
D1 D2		IN3 IN4	O3 O4
D1 D2 D3	a AS-i\	IN4	O3 O4
D1 D2	a AS-i)	IN4	O4  puts maintain the status if con  ommunication fails, the output
D1 D2 D3 Parameter bits (programmable via	a AS-i)	IN4 function Communication monitoring P0 = 0 monitoring = off, the out munication fails P0 = 1 monitoring = on, i.e. if or are deenergised (basic setting) Input filter P1 = 0 input filter on, pulse sup P1 = 1 input filter off (basic setting)	O4  sputs maintain the status if concommunication fails, the output  pression ≤ 2 ms
D1 D2 D3 Parameter bits (programmable via	a AS-i)	IN4 function Communication monitoring P0 = 0 monitoring = off, the out munication fails P0 = 1 monitoring = on, i.e. if or are deenergised (basic setting) Input filter P1 = 0 input filter on, pulse sup	O4  Eputs maintain the status if communication fails, the output  oppression ≤ 2 ms  ting)

## **Function**

The AS-Interface I/O module VBA-4E4A-KE-ZEJQ/E2L is a control cabinet module with 4 inputs and 4 electronic outputs. The housing is only 22.5 mm wide and takes up little space in the control cabinet. The module is mounted by snapping onto the 35-mm DIN rail in compliance with EN 50022.

The connection is made via plug-in terminals. Four-terminal blocks (black) are used for the inputs and outputs. The connection of the external bulk power and the AS Interface is via 2-terminal blocks (bulk power grey, AS-Interface yellow). Terminals for the inputs and outputs are mechanically coded to prevent incorrect connection.

The supply to the inputs and the connected sensors can be fed either from the internal supply of the module (from the AS-Interface) or via an external voltage source. A switch located on the side of the module changes the supply source. The choice of internal input supply is displayed via the INT LED. The IN and OUT LEDs display the current switching status of the relevant inputs and outputs. The OUT LED also indicates an overload or a lead breakage at the associated

#### Note:

The device is equipped with a communication monitor, which deactivates the outputs if the AS-Interface does not communicate with the module for more than 40 ms. The communication monitor can be deactivated via the parameter P0. Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1.

Parameter P2 activates a lead breakage detection system for the outputs. This function detects and reports a missing load, providing the relevant output is deactivated. The associated OUT LED and the 'peripheral fault' function display the signal transmitted to the AS-Interface master. A signal indicating an overload of the internal input supply or the outputs is also transmitted to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface continues even if a peripheral fault is set.

#### **Accessories**

## VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

## **VBP-HH1-V3.0**

AS-Interface Handheld

## VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

Date of issue: Release date: 2014-09-15 08:42

EN 61000-6-2:2005, EN 61000-6-4:2007, EN 50295:1999

EN 61000-6-2:2005, EN 61326-1:2006, EN 50295:1999

Ambient conditions	
Ambient temperature	-25 60 °C (-13 140 °F)
Storage temperature	-25 85 °C (-13 185 °F)
Relative humidity	90 % , noncondensing
Pollution Degree	2
Mechanical specifications	
Degree of protection	IP20
Connection	removable terminals rated connection capacity: rigid/flexible (with and without wire-end ferrules): 0.25 mm² 2.5 mm² for multiple-wire connection with two wires of equal cross-section: flexible with twin wire-end ferrules: 0.5 mm² 1.5 mm²
Material	
Housing	PA 66-FR
Mass	150 g
Mounting	DIN mounting rail
Compliance with standards and directives	-
Directive conformity	

# Notes

EMC Directive 2004/108/EC

Standard conformity

Noise immunity

Emitted interference

Degree of protection

Fieldbus standard

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

EN 61000-6-4:2007 EN 61131-2:2004

EN 50295:1999, IEC 62026-2:2006

EN 60529:2000