




**Model number**

**VBA-4E-KE5-ZEJQ**  
Cabinet module  
4 inputs (PNP)


**Features**

- Housing with push-in connection technology and mechanically coded terminal blocks
- Housing width 19 mm, installation in the switch cabinet on DIN mounting rail
- Selectable supply to the sensors: External or from the module
- Function display for bus, internal sensor supply, and inputs


**Dimensions**

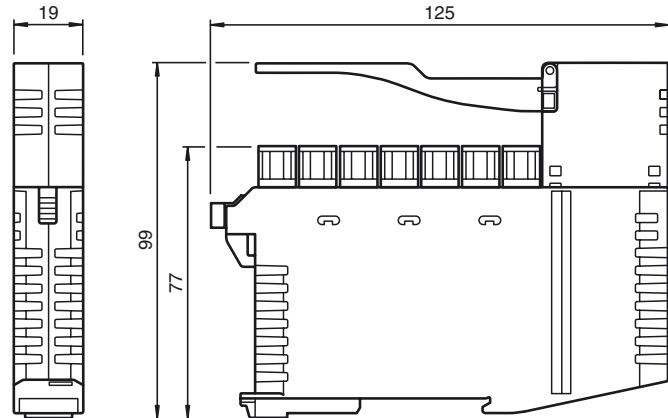

**Electrical connection**

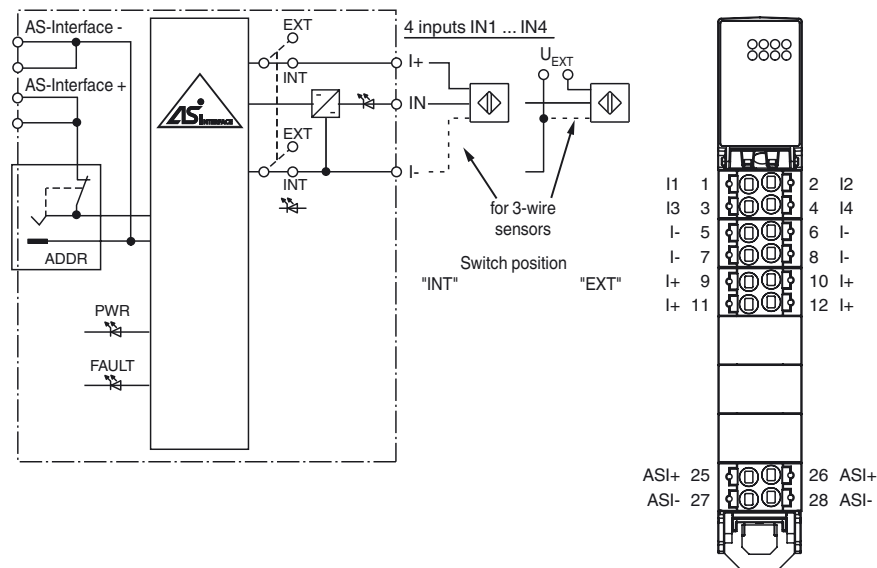

**Indicating / Operating means**

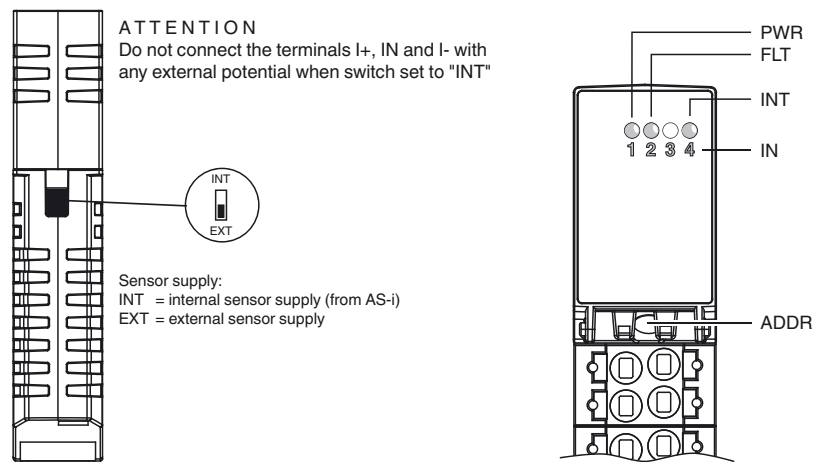

Release date: 2016-04-14 10:43 Date of issue: 2016-07-11 263812\_eng.xml

**Technical data****General specifications**

Slave type	A/B slave
AS-Interface specification	V3.0
Required master specification	≥ V3.0
UL File Number	E223772

**Indicators/operating means**

LED FAULT	Fault display; Red LED red: Communication fault or address is 0 red, flashing: Overload, internal input supply
LED INT	Internal input supply active; LED green
LED PWR	AS-Interface voltage; green LED green: voltage OK flashing green: address 0
LED IN	switching state (input); 4 LED yellow

**Electrical specifications**

Auxiliary voltage (input)	$U_{EXT}$	12 ... 30 V DC PELV
Rated operating voltage	$U_e$	26.5 ... 31.6 V from AS-Interface
Rated operating current	$I_e$	≤ 35 mA (without sensors) / max. 190 mA
Protection class		III
Surge protection	$U_{EXT}$ , $U_e$ :	Over voltage category III, safe isolated power supplies (PELV)

**Input**

Number/Type	4 inputs for 3-wire sensors (PNP), DC
Supply	from AS-Interface (switch position INT, default settings) or external $U_{EXT}$ (switch position EXT)
Voltage	21 ... 31 V DC (INT)
Current loading capacity	≤ 150 mA, overload- and short-circuit protected (INT)
Input current	≤ 5.6 mA (max.)
Switching point	according to DIN EN 61131-2 (type 1)
0 (unattenuated)	≤ 0.5 mA
1 (attenuated)	≥ 2 mA
Signal delay	< 1 ms (input/AS-Interface)

**Programming instructions**

Profile	S-0.A.0
IO code	0
ID code	A
ID1 code	7
ID2 code	0

Data bits (function via AS-Interface)	input	output
D0	IN1	
D1	IN2	
D2	IN3	
D3	IN4	

**Parameter bits (programmable via AS-i) function**

P0	not used
P1	Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (default settings)
P2	Synchronous mode P2 = 0 synchronous mode on P2 = 1 synchronous mode off (default settings)
P3	not used

**Ambient conditions**

Ambient temperature	-25 ... 70 °C (-13 ... 158 °F)
Storage temperature	-25 ... 85 °C (-13 ... 185 °F)
Relative humidity	85 % , noncondensing
Climatic conditions	For indoor use only
Altitude	≤ 2000 m above MSL
Shock and impact resistance	15 g, 11 ms in 6 spatial directions, 3 shocks 10 g, 16 ms in 6 spatial directions, 1000 shocks
Vibration resistance	0.35 mm 10 ... 57 Hz , 5 g 57 ... 150 Hz, 20 cycles
Pollution degree	2

**Mechanical specifications**

Degree of protection	IP20 For safety applications: Installation in an enclosure with a minimum protection class of IP54 required
Connection	Removable push-in terminals rated connection capacity; rigid: 0.20 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> flexible (without wire end ferrule): 0.20 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> flexible (with wire end ferrule): 0.25 mm <sup>2</sup> ... 1.5 mm <sup>2</sup>
Material	
Housing	PA 66-FR
Mass	110 g
Mounting	DIN mounting rail

**Compliance with standards and directives****Function**

The AS-Interface connecting module VBA-4E-KE5-ZEJQ is a switch cabinet module with 4 inputs and. The housing is only 19 mm wide and takes up little space in the switch cabinet. The module is mounted by snapping onto the 35 mm DIN rail in compliance with EN 50022.

The connection is made via removable 4-pin push-in terminal blocks. For AS-i+ and AS-i-, two connections are available in each case; these connections are bridged in the terminal block. If the terminal block is disconnected from the module, the link between these connections is retained. The terminal blocks are mechanically coded.

The supply to the inputs and the connected sensors can be fed either from the internal supply of the module from the AS-Interface or via an external  $U_{EXT}$  voltage source. A switch located on the side of the module changes the source.

The internal input supply is displayed via the INT LED. The relevant IN LEDs display the current switching status of the inputs.

**Notes:**

Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1.

Parameter P2 activates the synchronous mode.. A signal indicating an overload of the internal input supply is transmitted to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface continues even if a peripheral fault is set.

**Accessories****VBP-HH1-V3.0-KIT**

AS-Interface Handheld with accessory

**VBP-HH1-V3.0**

AS-Interface Handheld

**VAZ-PK-1,5M-V1-G**

Adapter cable module/hand-held programming device

Directive conformity		
EMC Directive 2004/108/EC		EN 61000-6-2:2005, EN 61000-6-4:2007, EN 62026:2013
Standard conformity		
Noise immunity		EN 61000-6-2:2005, EN 61326-1:2006, EN 62026:2013
Emitted interference		EN 61000-6-4:2007
Input		EN 61131-2:2004
Degree of protection		EN 60529:2000
Fieldbus standard		EN 62026:2013
Electrical safety		IEC 61140:2009

### Notes

Do not connect inputs, which are supplied via the module from AS-interface, with power supply and signal circuits with external potentials.