
Dimensions





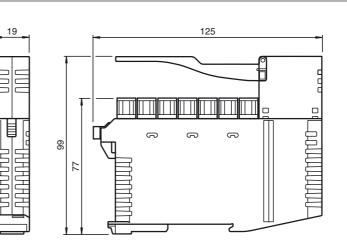

Electrical connection

Model number

VBA-4E4A-KE5-ZEJQ/R


Cabinet module 4 inputs and 4 relay outputs

Features

- Housing with push-in connection technology and mechanically coded terminal blocks
- Housing width 19 mm, installation in the switch cabinet on DIN mounting rail
- Selectable supply to the sensors: External or from the module
- Function display for bus, internal sensor supply, inputs, and outputs

AS-Interface EXT D 4 inputs IN1. IN4 8888 0000 AS-Interface 1 15 EXT D 10 -O-11 1003 2 12 1 * 13 MO 4 14 3 for 3-wire sensors 1001 1001 1-6 1-5 ADDR 1-7 8 1-Switch position "EXT" l+ 9 10 l+ "INT" ഹത്ര PWR l+ 11 卪 12 l+ 14 13 1005 O13 15 16 014 FAULT 4 outputs O1 ... O4 O23 17 1003 18 O24 O33 19 ðŌĠ 20 O34 O43 21 1007 22 044 013...043 out ______ 23 24 ASI+ 25 26 ASI+ ASI- 27 28 ASI-014 ... 044

Indicating / Operating means

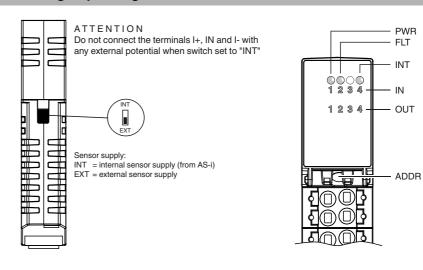



www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"
Pepperl+Fuchs Group
USA: +1 330 486 0001
G

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



AS-Interface sensor/actuator module

Technical data				
General specifications				
Slave type		A/B slave		
AS-Interface specification		V3.0		
Required master specification		≥ V3.0		
UL File Number		E223772		
Indicators/operating means				
LED FAULT		Fault display; Red LED red: Communication fault or red, flashing: Overload, inter		
LED INT		Internal input supply active; LED green		
LED PWR		AS-Interface voltage; green green: voltage OK flashing green: address 0	LED	
LED IN		switching state (input); 4 LED yellow		
LED OUT		Switching state (output); 4 L	ED yellow	
Electrical specifications				
Auxiliary voltage (input)	U _{EXT}			
Rated operating voltage	Ue	26.5 31.6 V from AS-Inter		
Rated operating current Surge protection	le	\leq 35 mA (without sensors) / O1 O4: Over voltage category U _{EXT} , U _e : overvoltage category (PELV)		
Input				
Number/Type		4 inputs for 3-wire sensors (PNP), DC		
Supply Voltage		from AS-Interface (switch position INT, default settings) or exter- nal U _{EXT} (switch position EXT) 21 31 V DC (INT)		
Current loading capacity		\leq 150 mA, overload- and short-circuit protected (INT)		
Input current		≤ 5.6 mA (max.)		
Switching point		according to DIN EN 61131-2 (type 1)		
0 (unattenuated)		≤ 0.5 mA		
1 (attenuated)		≥2 mA		
Signal delay		< 1 ms (input/AS-Interface)		
Output				
Number/Type		4 relay outputs, normally ope	en	
Supply Nominal load		none		
Nominal load Per contact		2 A/30 VDC; 2 A/250 VAC	e "Galvanic Isolation" section	
Per module		For more information, see the "Galvanic Isolation" section 8 A		
Control circuit		≤ 11 mA per relay (from AS-I	Interface)	
Switching delay		< 10 ms (AS-Interface/contact)		
Usage category		DC-13 and AC-14		
Switching				
Mechanical		5 x 10 ⁷		
Electrical		2×10^5 (250 VAC, 2 A, $\cos \phi = 0.4$)		
Electrical isolation				
Input/Output		safe isolation, Rated insulation voltage 252 Veff Switch position INT: None Switch setting EXT: safe isolation,		
Input/AS-Interface Output/Output		rated insulation voltage 92 Veff Basic insulation, rated insulation voltage 250 V _{eff} , in phase		
Output/AS-Interface		safe isolation, Rated insulation voltage 252 Veff		
Programming instructions			-	
Profile		S-7.A.7		
IO code		7		
ID code		Α		
ID1 code		7		
ID2 code		7		
Data bits (function via AS-Interface) D0		input IN1	O1	
D1 D2		IN2	02	
D3		IN3 IN4	O3 O4	
Parameter bits (programmable via AS-i)			<u>,</u>	
P0		Communication monitoring P0 = 0 monitoring = off, the outputs maintain the status if com- munication fails P0 = 1 monitoring = on, i.e. if communication fails, the outputs are deenergised (default settings)		
P1		Input filter P1 = 0 input filter on, pulse suppression $\leq 2 \text{ ms}$ P1 = 1 input filter off (default settings)		
P2		Synchronous mode P2 = 0 synchronous mode on P2 = 1 synchronous mode off (default settings)		
P3		not used		
Ambient conditions				

Function

The AS-Interface connecting module VBA-4E4A-KE5-ZEJQ/R is a switch cabinet module with 4 inputs and 4 relay contact outputs. The housing is only 19 mm wide and takes up little space in the switch cabinet. The module is mounted by snapping onto the 35 mm DIN rail in compliance with EN 50022. The connection is made via removable 4-pin push-in terminal blocks. For AS-i+ and AS-i-, two connections are available in each case; these connections are bridged in the terminal block. If the terminal block is disconnected from the module, the link between these connections is retained. The terminal blocks for the inputs and outputs are mechanically coded.

The supply to the inputs and the connected sensors can be fed either from the internal supply of the module from the AS-Interface or via an external U_{EXT} voltage source. A switch located on the side of the module changes the source.

The internal input supply is displayed via the INT LED. The relevant IN and OUT LEDs display the current switching status of the inputs and outputs.

Notes:

The device is equipped with a communication monitor, which deactivates the outputs if the AS-Interface does not communicate with the module for more than 40 ms. The communication monitor can be deactivated via the parameter P0. Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1. Parameter P2 activates the AS-Interface synchronous mode.

Installation, Commissioning, and Maintenance

Install the device in a closed electrical plant where only electricians or persons with appropriate electrical training have access.

The relevant laws, guidelines, and standards that apply for the application or intended use must be observed.

The device must be installed in a switch cabinet or switch box that meets protection class IP54 as a minimum.

Additional requirements for the AS-Interface power supply:

If voltages that are not in accordance with PELV/SELV are connected to the relay contact outputs, then it must be ensured that the AS-Interface supply voltage does not exceed 36 V, even in the event of a fault.

Daisy-Chaining Devices

Insulation to the outer surfaces of the housing: Basic insulation in accordance with EN 60664-1. To provide reliable and double insulation, devices in the direct vicinity must have basic insulation as a minimum.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"
Pepperl+Fuchs Group
USA: +1 330 486 0001
G

www.pepperl-fuchs.com

2

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

6 0001 Germany: +49 621 776 4411 fuchs.com fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com PEPPERL+FUCHS SENSING YOUR NEEDS

AS-Interface sensor/actuator module

Accessories VBP-HH1-V3.0-KIT

VBP-HH1-V3.0 AS-Interface Handheld VAZ-PK-1,5M-V1-G

gramming device

AS-Interface Handheld with accessory

Adapter cable module/hand-held pro-

VBA-4E4A-KE5-ZEJQ/R

Ambient temperature	-25 60 °C (-13 140 °F)	
Storage temperature	-25 85 °C (-13 185 °F)	
Relative humidity	85 % , noncondensing	
Climatic conditions	For indoor use only	
Altitude	≤ 2000 m above MSL	
Shock and impact resistance	15 g, 11 ms in 6 spatial directions, 3 shocks 10 g, 16 ms in 6 spatial directions, 1000 shocks	
Vibration resistance	0.35 mm 10 57 Hz , 5 g 57 150 Hz, 20 cycles	
Pollution degree	2	
Mechanical specifications		
Degree of protection	IP20 Installation in an enclosure with a minimum protection class of IP54 required	
Connection	Removable push-in terminals rated connection capacity: rigid: 0.20 mm ² 1.5 mm ² flexible (without wire end ferrule): 0.20 mm ² 2.5 mm ² flexible (with wire end ferrule): 0.25 mm ² 1.5 mm ²	
Material		
Housing	PA 66-FR	
Mass	125 g	
Mounting	DIN mounting rail	
Compliance with standards and direct ves	ii-	
Directive conformity		
Low Voltage Directive 2006/95/EC	EN 60664-1:2007	
EMC Directive 2004/108/EC	EN 61000-6-2:2005, EN 61000-6-4:2007, EN 62026:2013	
Standard conformity		
Noise immunity	EN 61000-6-2:2005, EN 61326-1:2006, EN 62026:2013	
Emitted interference	EN 61000-6-4:2007	
Input	EN 61131-2:2004	
Electrical isolation	EN 60664-1:2007	
	EN 60529:2000	
Degree of protection	2.1 00020.2000	
Degree of protection Fieldbus standard	EN 62026:2013	

Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Release date: 2016-09-01 16:38 Date of issue: 2016-09-19 263814_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



3