

VAA-4E4A-KE1-Z/E2

CE <u>//</u>3. C

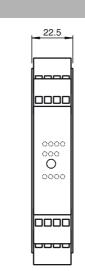

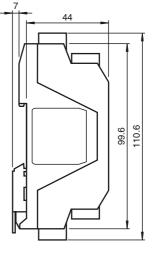

Electrical connection

Dimensions


Model number

VAA-4E4A-KE1-Z/E2


KE1 switch cabinet module 4 inputs and 4 outputs

Features

- Housing with removable terminals ٠
- Communication monitoring ٠
- Inputs for 2-wire sensors and mecha-• nical contacts
- Addressing jack ٠
- Power supply of the inputs and out-• puts from the external auxiliary voltage
- Function display for bus, ext. auxiliary • voltage, inputs and outputs

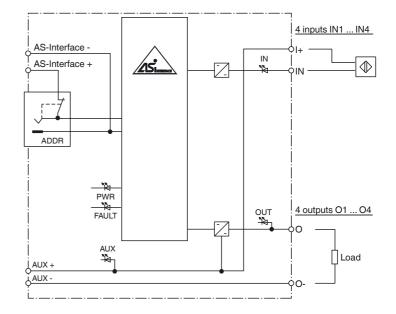

Indicating / Operating means

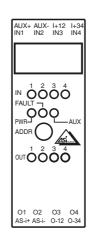

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



AS-Interface sensor/actuator module

VAA-4E4A-KE1-Z/E2

Technical data

Technical data			
General specifications			
Slave type		Standard slave	
AS-Interface specification		V3.0	
Required master specification		≥ V2.0	
UL File Number		E87056	
Functional safety related para	meters		
MTTF _d		90 a	
Mission Time (T _M)		20 a	
Diagnostic Coverage (DC)		0%	
Indicators/operating means			
LED FAULT		error display; LED red	
		red: communication error o red flashing: overload of ou	
LED PWR		AS-Interface voltage; LED	green
LED AUX		ext. auxiliary voltage U _{AUX} ; dual LED green/red green: voltage OK red: reverse voltage	
LED IN		switching state (input); 4 LE	ED yellow
LED OUT		Switching state (output); 4	LED yellow
Electrical specifications			
Auxiliary voltage (output)	UALIX	20 30 V DC PELV	
Rated operating voltage	Ue	26.5 31.6 V from AS-Inte	erface
Rated operating current	I _e	≤ 40 mA	
Protection class	Ū	III	
Surge protection		U _{AUX} , U _{in} : Over voltage cate (PELV)	egory III, safe isolated power supp
Input		(1 = = =)	
Number/Type		4 inputs for 2-wire sensors	(PNP), DC or for mechanical cont
Supply		from external auxiliary volta	age U _{AUX}
Input current		\leq 8 mA (limited internally)	
Switching point		according to DIN EN 6113	1-2 (Type 2)
0 (unattenuated)		≤2 mA	
1 (attenuated)		\geq 4 mA	
Signal delay		< 2 ms (input/AS-Interface)	
Signal frequency		≤ 250 Hz	
Output			
Number/Type		4 electronic outputs, PNP, o	overload and short-circuit proof
Supply		from external auxiliary voltage UAUX	
Current		0.5 A per output , 2 A per module	
Voltage		≥ (U _{AUX} - 0.5 V)	
Usage category		DC-13	
Programming instructions			
Profile		S-7.0	
IO code		7	
ID code		0	
ID1 code		F	
ID2 code		E	
Data bits (function via AS-Inter	face)	input	output
D0		IN1	01
D1		IN2	O2
D2		IN3	O3
D3		IN4	O4
Parameter bits (programmable	e via AS-i)	function	
P0		Communication monitoring P0 = 0 monitoring = off, the outputs maintain the status if communication fails P0 = 1 monitoring = on, i.e. if communication fails, the output are deenergised (basic setting)	
P1		Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (basic setting)	
P2		Synchronous mode P2 = 0 synchronous mode on P2 = 1 synchronous mode off (basic setting)	
P3		not used	
Ambient conditions			
Ambient temperature		-25 60 °C (-13 140 °F)	
Storage temperature		-25 85 °C (-13 185 °F)	
Relative humidity		90 % , noncondensing	
Pollution Degree		2	
Mechanical specifications			

Function

The AS-Interface Module VAA-4E4A-KE1-Z/E2 is a control cabinet with 4 inputs and 4 electronic outputs. The housing, only 22.5 mm in width and 48.5 mm in height, takes up little place in the switch cabinet. The module features an integrated addressing jack is mounted by snapping onto the 35 mm DIN rail in accordance with EN 50022.

For easy disconnection for commissioning and servicing, the connection is via plug-in black 4-pin spring terminals.

The external auxiliary voltage, the AS-Interface cable, the inputs and outputs (IN and O), as well as the plus potential of the inputs (I+) and the minus potential of the outputs (O-) are connected with the module via double terminals.

The inputs and outputs and the connected sensors and actuators are supplied via external auxiliary power U_{AUX} . Polarity reversal is signalled by a red light on the AUX-LED.

The current switching status is indicated for each input and output by means of an LED on the top of the module.

Note:

The device features communication monitoring. It switches off the power to the outputs when no communication has occurred on the AS-Interface cable for more than 40 ms. In the event of overloading of the outputs, e.g. due to short-circuiting, the FAULT-LED on the module flashes and a signal is communicated to the AS-Interface master via the "Peripheral error" function. Communication via the AS-Interface remains uninterrupted.

Accessories

VBP-HH1-V3.0-KIT AS-Interface Handheld with accessory

VBP-HH1-V3.0 AS-Interface Handheld

VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

Connection	removable spring double terminals rated connection capacity: rigid/flexible (with and without wire-end ferrules): 0.25 mm ² 1.5 mm ² recommended tools for 1.5 mm ² : PxC CRIMPFOX ZA3 or Weid- müller PZ 6 roto
Material	
Housing	PA 66-FR
Mass	80 g
Mounting	DIN mounting rail
Compliance with standards and direc ves	ti-
Directive conformity	
EMC Directive 2004/108/EC	EN 50295:1999
Standard conformity	
Noise immunity	EN 61326-1:2006
Emitted interference	EN 55011:2009
Input	EN 61131-2:2007
Protection degree	EN 60529:2000
Fieldbus standard	EN 50295:1999, IEC 62026-2:2006

Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group USA: +1 3 www.pepperl-fuchs.com fa-info@us.pe

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

