


## Anybus<sup>®</sup> PoE Injector

12–57 VDC

### STARTUP GUIDE

SP2385 1.3 en-US ENGLISH

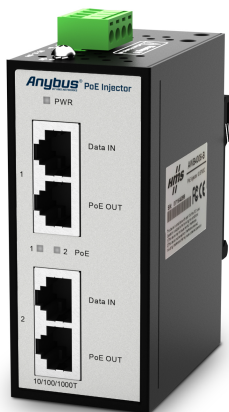

---

# Important User Information

## Disclaimer

The information in this document is for informational purposes only. Please inform HMS Industrial Networks of any inaccuracies or omissions found in this document. HMS Industrial Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Industrial Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Industrial Networks and is subject to change without notice. HMS Industrial Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Industrial Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Industrial Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

# 1 About This Document

This document describes how to install Anybus PoE Injector 12–57 VDC.

For additional documentation and technical support regarding this product, please visit [www.anybus.com/support](http://www.anybus.com/support).

## 1.1 Document Conventions

The following formatting conventions are used in this document to indicate safety information and other content of specific importance:



### **WARNING**

This instruction must be followed to avoid a risk of death or serious injury.



### **Caution**

This instruction must be followed to avoid a risk of personal injury.



This instruction must be followed to avoid a risk of reduced functionality and/or damage to the equipment, or to avoid a network security risk.



*This is additional information which may facilitate installation and/or operation.*

## 2 Safety

### 2.1 Intended Use

The intended use of this equipment is to provide DC power over Ethernet cables.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

## 3 Description

Anybus PoE Injector 12–57 VDC is a dual port 802.3af/at compliant Power over Ethernet injector with Midspan Intelligent Detection.


The PoE injector will not turn on power until it detects a valid PoE signature from the devices attached downstream on the Ethernet cable. This protects non-compliant equipment against damage.

Anybus PoE Injector 12–57 VDC will not function with equipment that is not fully compliant with the IEEE 802.3af/at PoE standards.

The unit requires an external 12–57 VDC power supply (not included).

## 4 Installation


### 4.1 DIN Rail Mounting

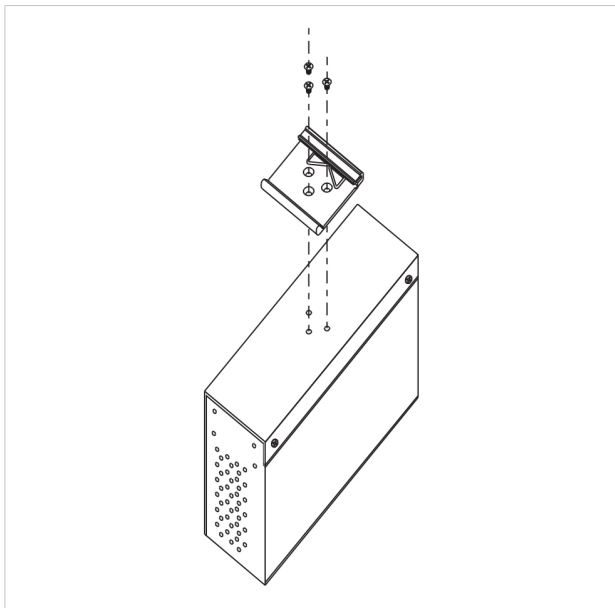

**Fig. 1** DIN rail mounting kit

1. Attach the DIN rail mounting plate (included) to the back of the unit using the 3 included screws.
2. Hook the unit onto the DIN rail and press it downwards and towards the rail until it snaps into place.
3. To remove the unit, press downwards and pull the unit free from the DIN rail.

## 4.2 Wall Mounting

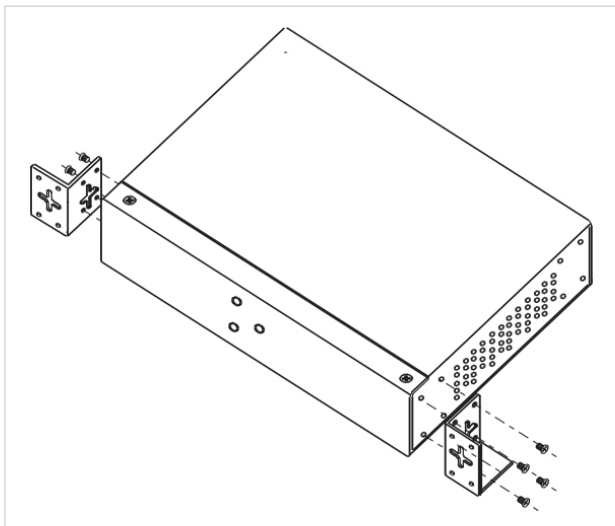

**Fig. 2** Wall mounting kit

1. Attach the 2 wall mounting brackets (included) to the top and bottom of the unit using the included screws.
2. Hold the unit upright against the wall and fasten it with suitable screws through the apertures in the brackets.

## 4.3 Overview

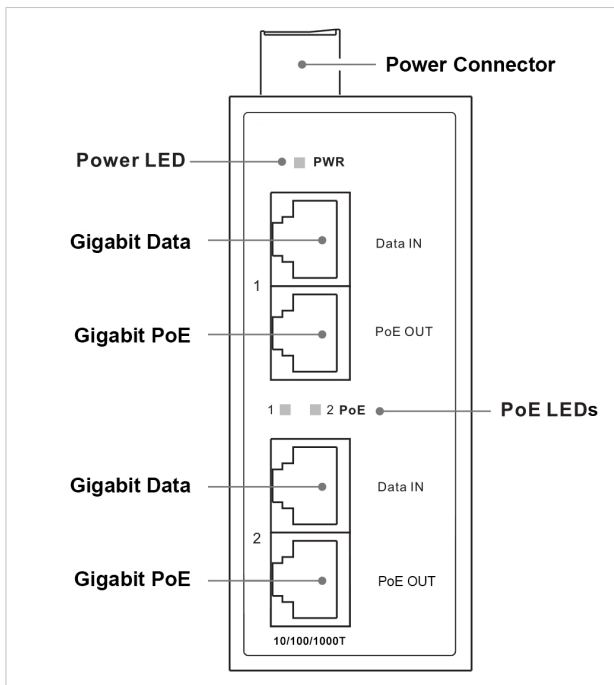


Fig. 3 Front panel

## 4.4 Ethernet/PoE Connectors

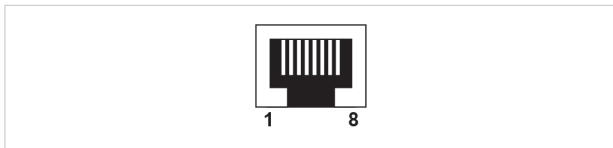


Fig. 4 Ethernet/PoE connector pinning (RJ45)

### 10/100 Mbit ports

Pin	Data IN (data only)	PoE OUT (data + power)
1	Data Receive	Data Receive and Power (+)
2	Data Receive	Data Receive and Power (+)
3	Data Transmit	Data Transmit and Power (-)
4	(not connected)	(not connected)
5	(not connected)	(not connected)
6	Data Transmit	Data Transmit and Power (-)
7	(not connected)	(not connected)
8	(not connected)	(not connected)

### Gigabit ports

Pin	Data IN (data only)	PoE OUT (data + power)
1	Data BI_DA+	Data BI_DA+ and Power(+)
2	Data BI_DA-	Data BI_DA- and Power(+)
3	Data BI_DB+	Data BI_DB+ and Power(-)
4	Data BI_DC+	Data BI_DC+
5	Data BI_DC-	Data BI_DC-
6	Data BI_DB-	Data BI_DB- and Power(-)
7	Data BI_DD+	Data BI_DD+
8	Data BI_DD-	Data BI_DD-



Do not connect pins 3 or 6 to ground.



## 4.5 Power Connector


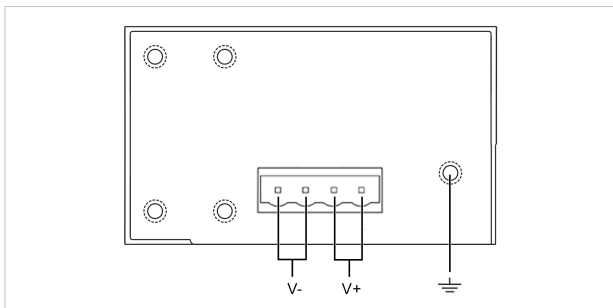


Fig. 5 Top panel

V-	Power Input -
V+	Power Input +
	Chassis ground



Connecting power with reverse polarity or using the wrong type of power supply may damage the equipment. Make sure that the power supply is connected correctly and of the recommended type.

## 4.6 LED Indicators

<b>PWR</b>	Green	Power on
	Off	No PoE device on port 1
<b>PoE 1</b>	Blue, blinking	Detecting PoE device on port 1
	Blue, steady	PoE device link on port 1
<b>PoE 2</b>	Off	No PoE device on port 2
	Blue, blinking	Detecting PoE device on port 2
	Blue, steady	PoE device link on port 2

## 5 Technical Data

### 5.1 Technical Specifications

<b>Order code</b>	<b>AWB4006-B</b>
<b>PoE standard</b>	IEEE 802.3at/802.3af
<b>Ethernet IN</b>	2x RJ45 (Data, 10/100/1000 Base-T(x))
<b>Ethernet OUT</b>	2 x RJ45 (Data and power, 10/100/1000 Base-T(x))
<b>Input voltage</b>	12-57 VDC on 4-pin screw terminal block For UL compliance: 24–50 VDC +/-10%
<b>Output voltage</b>	50 V / 600 mA, 30 W max. per port
<b>LED indicators</b>	PWR, PoE
<b>Short circuit protection</b>	Yes
<b>Overload protection</b>	Yes
<b>High voltage protection</b>	Yes
<b>Mounting</b>	DIN rail + wall mount (included)
<b>Weight</b>	370g
<b>Protection class</b>	IP30
<b>Storage temperature</b>	-40 to 80°C (-40 to 176°F)
<b>Operating temperature</b>	-20 to 70°C (-4 to 158°F)
<b>Housing</b>	Metal
<b>Dimensions W×H×D</b>	41 x 95 x 70
<b>Certifications</b>	See datasheet


#### Disposal and recycling



You must dispose of this product properly according to local laws and regulations. Because this product contains electronic components, it must be disposed of separately from household waste. When this product reaches its end of life, contact local authorities to learn about disposal and recycling options, or simply drop it off at your local HMS office or return it to HMS.

For more information, see [www.hms-networks.com](http://www.hms-networks.com).

## 5.2 Dimensions

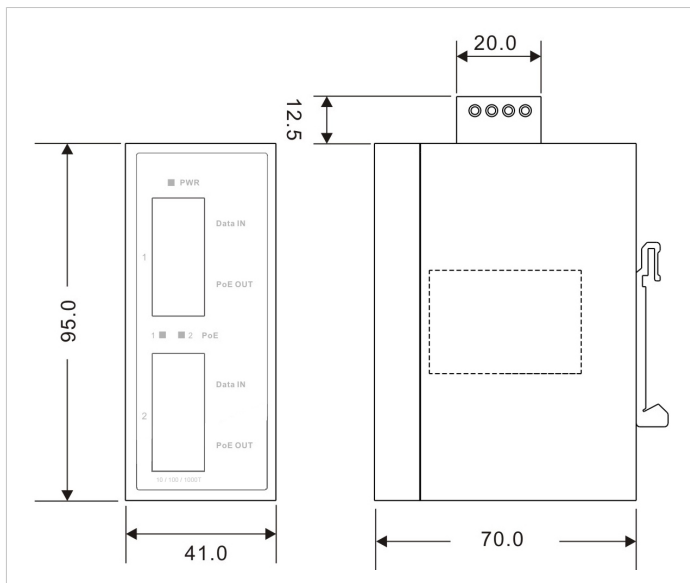

**Fig. 6** Dimensions

All measurements are in mm.

**© 2019 HMS Industrial Networks**  
Box 4126  
300 04 Halmstad, Sweden

[info@hms.se](mailto:info@hms.se)

SP2385 1.3 en-US / 2019-05-20 / 13361