







**ECOLAB** 

# **Model number**


# VAA-4E4A-G11-ZAJ/EA2L-FV1

G11 module 4 inputs and 4 outputs


### **Features**

- Inputs for 2-, 3-, and 4-wire sensors
- Power supply of outputs from the external auxiliary voltage
- · Supply of sensors from AS-Interface
- Function display for bus, external auxiliary voltage, in- and outputs
- Red LED per channel, lights up in the event of output overload
- Communication monitoring
- Switchable lead breakage detection (outputs)
- Cable piercing method with gold plated contact pins
- Degree of protection IP68 / IP69K
- AS-Interface POWER24


# **Dimensions**

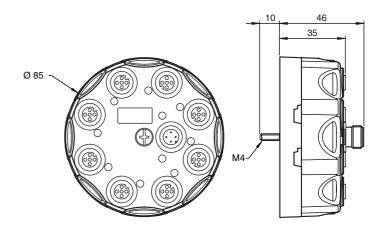

### **Electrical connection**

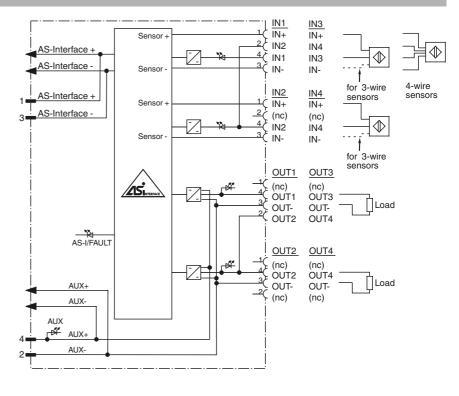

# **Indicating / Operating means**

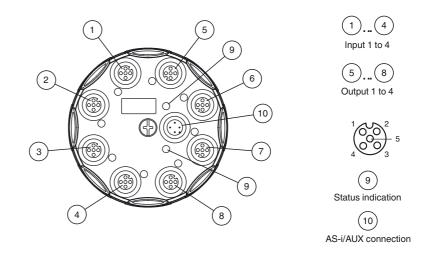

Technical data		
General specifications		
Slave type		Standard slave
AS-Interface specification		V3.0
Required master specification		≥ V2.1
UL File Number		E223772
ndicators/operating means		
LED AS-i/FAULT		Status display; multi-colour LED Green: normal operation Red: communication fault Flashing yellow/red: address 0 Flashing green/red: sensor supply i.e. overload or lead into tion outputs
LED AUX		ext. auxiliary voltage U <sub>AUX</sub> ; dual LED green/red green: voltage OK red: reverse voltage
LED IN		switching state (input); 4 LED yellow
LED OUT		switching state (output); 4 LED yellow/red yellow: output active red: output overload or lead interruption
Electrical specifications		
Auxiliary voltage (output)	$U_{AUX}$	20 30 V DC PELV
Rated operating voltage	U <sub>e</sub>	18,0 31.6 V from AS-Interface
Rated operating current	l <sub>e</sub>	≤ 40 mA (without sensors) / max. 240 mA
Protection class		III
Surge protection		$U_{AUX}$ , $U_{in}$ : Over voltage category III, safe isolated power su (PELV)
nput		
Number/Type		4 inputs for 2- or 3-wire sensors (PNP), DC option 2 inputs for 4-wire sensors (PNP), DC
Supply		from AS-Interface
Voltage		12 31 V
Current loading capacity		≤ 200 mA, overload and short-circuit protected
Input current		≤ 9 mA (limited internally)
Switching point		according to DIN EN 61131-2 (Type 2)
0 (unattenuated)		≤ 3 mA
1 (attenuated)		≥ 5 mA
Signal delay		< 1 ms (input/AS-Interface)
Output		
Number/Type		4 electronic outputs, PNP, overload and short-circuit proof
Supply		from external auxiliary voltage U <sub>AUX</sub>
Current		2 A per output $TB \leq 40  ^{\circ}\text{C: 6 A total}$ $TB \leq 70  \hat{A}^{\circ}\text{C: sum O1} + \text{O2 max. 2 A, sum O3} + \text{O4 max. 2}$
Voltage		≥ (U <sub>AUX</sub> - 0.5 V)
Electrical isolation		
Input/Output		safe isolation, rated insulation voltage 40 V DC
Output/AS-Interface		safe isolation, rated insulation voltage 40 V DC
Programming instructions		
Profile		S-7.F
IO code		7
ID code		F
ID1 code		F
ID2 code		E
Data bits (function via AS-Interface	e)	input output
DO		IN1 O1
D1		IN2 O2
D2		IN3 O3
D3		IN4 O4
Parameter bits (programmable via	a AS-i)	
P0	.,	Communication monitoring P0 = 0 monitoring = off, the outputs maintain the status if c munication fails P0 = 1 monitoring = on, i.e. if communication fails, the outputs
		are deenergised (default settings)
P1		Input filter P1 = 0 input filter on, pulse suppression $\leq$ 2 ms P1 = 1 input filter off (default settings)
P1 P2		Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms
		Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (default settings) Lead breakage outputs P2 = 0 lead breakage on
P2		Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (default settings) Lead breakage outputs P2 = 0 lead breakage on P2 = 1 lead breakage off (default settings)
P2		Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (default settings) Lead breakage outputs P2 = 0 lead breakage on P2 = 1 lead breakage off (default settings)
P2 P3 Ambient conditions		Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (default settings) Lead breakage outputs P2 = 0 lead breakage on P2 = 1 lead breakage off (default settings) not used
P3 Ambient conditions Ambient temperature		Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (default settings) Lead breakage outputs P2 = 0 lead breakage on P2 = 1 lead breakage off (default settings) not used  -25 70 °C (-13 158 °F)
P3 Ambient conditions Ambient temperature Storage temperature		Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (default settings) Lead breakage outputs P2 = 0 lead breakage on P2 = 1 lead breakage off (default settings) not used  -25 70 °C (-13 158 °F) -25 85 °C (-13 185 °F)

# **Function**

The VAA-4E4A-G11-ZAJ/EA2L-FV1 is an AS-Interface switch-on module with 4 inputs and 4 outputs. 2. 3 and 4 wire sensors can also be connected as mechanical contacts to the 4 sourcing electronic inputs. The 4 electronic outputs are overload and short-circuit protected.

The housing with a central screw enables fast mounting on the base plate.

The connection to the AS-Interface cable, to the external power supply and to the sensors/actuators is via M12x1 plug-in connections on the top side of the device.

You can also make the connection to the AS-Interface and to the external energy supply with insulation piercing technology via an AS-Interface flat cable on the underside of the module.

The inputs and the connected sensors are powered by the internal supply of the module (from the AS-Interface). The outputs and the connected actuators are powered by an external voltage source (from the AUX).

The current switching state of each input and output is indicated via an IN or OUT LED. The OUT LED also indicates an overload or a lead breakage at the associated output. The ASi/FAULT LED indicates the status of the AS-Interface (normal operation, communication error, peripheral fault, address 0). The AUX LED indicates the external power supply. The switch-on module is compatible with AS-Interface POWER24.

#### Note:

The device is equipped with a communication monitor, which deactivates the outputs if the AS-Interface does not communicate with the module for more than 40 ms. The communication monitor can be deactivated via the parameter P0. Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1.

Parameter P2 activates a lead breakage detection system for the outputs. This function detects and reports a missing load, providing the relevant output is deactivated. The associated OUT LED and the 'peripheral fault' function display the signal transmitted to the AS-Interface master. An overload of the input supply or the outputs is also reported to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface continues even if a peripheral fault is set.

#### **Accessories**

### VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

# VΔ7-V1-R3

Blind plug for M12 sockets

### VBP-HH1-V3.0

AS-Interface Handheld

#### V11-G-1M-PUR-V11-G

Connecting cable, M12 to M12, PUR cable 3-pin

### VAZ-FK-S-BK-SEAL

AS-Interface flat cable seal

www.pepperl-fuchs.com

Shock and impact resistance	30 g, 11 ms in 6 spatial directions 3 shocks 10 g, 16 ms in 6 spatial directions 1000 shocks
Vibration resistance	0.75 mm 10 57 Hz , 5 g 57 150 Hz, 20 cycles
Pollution degree	3
Mechanical specifications	
Degree of protection	IP68 / IP69K
Connection	AS-Interface/U <sub>AUX</sub> : AS-Interface flat cable or M12 round con- nector Inputs/outputs: M12 round connector
Material	inputo outputo. In 12 round connector
Housing	PBT PC
Mounting screw	Stainless steel 1.4305 / AISI 303
Mass	200 g
Tightening torque, housing screws	1.8 Nm
Tightening torque, cable gland	0.4 Nm
Mounting	Mounting plate
Compliance with standards and directives	-
Directive conformity	
EMC Directive 2004/108/EC	EN 61000-6-2:2005, EN 61000-6-4:2007, EN 50295:1999


ves	
Directive conformity	
EMC Directive 2004/108/EC	EN 61000-6-2:2005, EN 61000-6-4:2007, EN 50295:1999
Standard conformity	
Noise immunity	EN 61000-6-2:2005, EN 61326-1:2006, EN 50295:1999
Emitted interference	EN 61000-6-4:2007
Input	EN 61131-2:2007
Degree of protection	EN 60529:2000
Fieldbus standard	EN 50295:1999, IEC 62026-2:2006

# **Notes**

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

# **Mounting instructions**

Screw the device onto a level mounting surface using two M5 attachment screws. The attachement screws are not included.

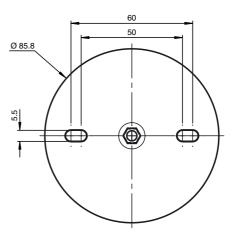

Screw a blind plug onto spare connections to ensure the protection category.