5 Port Solenoid Valve



Increased Flow For The SY Series

SY3000

Ø32[Conventional] Increased up to Ø50 (300 mm/s)*

10 mm width can drive a ø50 cylinder.

SY5000

ø50 [Conventional] Increased up to Ø63 (300 mm/s)*

15 mm width can drive a Ø63 cylinder.

*Values based on comparison with the conventional SMC model. Refer to page 4 for common conditions.

Thanks to the flow increase, valve size can be reduced. Energy and space savings.

New

- Added the EX260 Integrated-type (For Output) Serial Transmission System.
- Added EtherNet/IP™ and EtherCAT to the EX600 Integrated-type (For Input/Output) Serial Transmission System (Fieldbus System).
- Additional Options: Interface regulator assembly Individual SUP block assembly Individual EXH block assembly Dual flow fitting Name plate for manifolds




Power Consumption

Power consumption is reduced by power saving circuit.

Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.) Refer to the electrical power waveform as shown on the right.

[Electrical power waveform with power saving circuit]

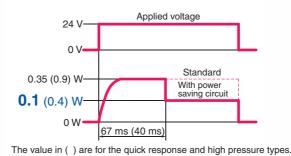

Metal seal

Rubber seal

70 million cycles 200 million cycles

Series SY3000/5000



(Metal seal)

5 Port Solenoid Valve Series SY3000/5000


Connector type manifold




Note) Refer to page 6 for details on IP67. Space saving / Improved operability



Direction, size and type of the piping can be changed.

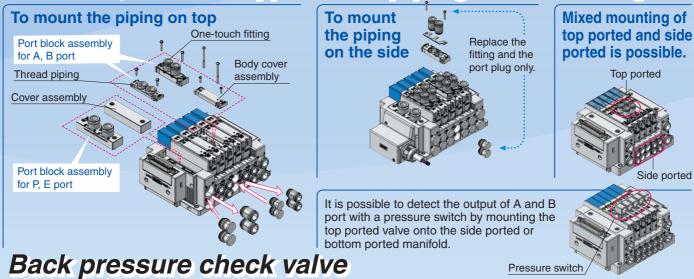


This prevents cylinder malfunction caused by the exhaust from other valves.

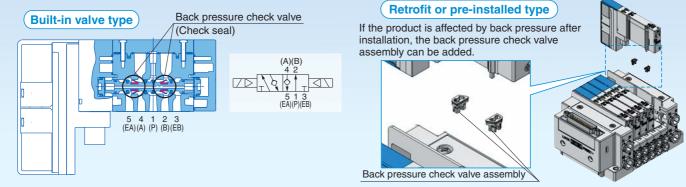


Double check spacer with residual pressure release valve

Long time of intermediate stop and position holding are possible.
[Intermediate stop] [Drop prevention]



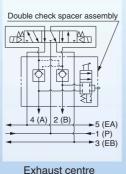

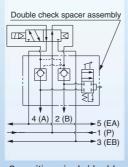


2-position single/double

SUP stop valve spacer with residual pressure release valve


Air supply to each valve can be stopped individually. The valve and cylinder can be replaced without stopping other devices and equipment.



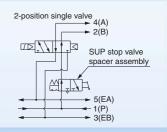


2-position single valve example

Applicable to various type of serial wiring

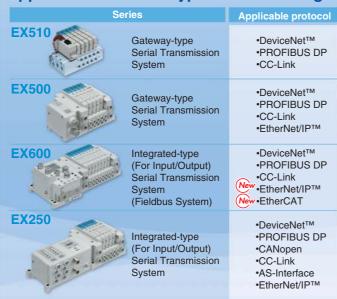

Series	Applicable protocol
New Integrated-type (For Output) Serial Transmission System	•DeviceNet™ •PROFIBUS DP •CC-Link •EtherCAT •PROFINET
EX126 Integrated-type (For Output) Serial Transmission System	•CC-Link
Integrated-type (For Output) Serial Transmission System	•DeviceNet [™] •CC-Link •OMRON CompoBus/S •CompoNet [™]

Slide manual override provides better visibility.

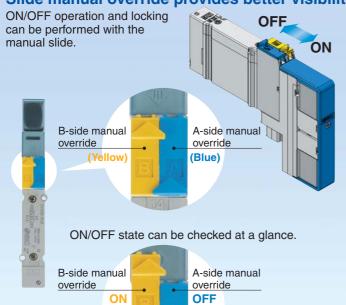

4-position dual 3-port valve available

(Only rubber seal type)

- Two 3-port valves built into one body
- 3-port valves on the A and B sides can operate independently.
- · When used as a 3-port valve, only half the number of stations is required.
- Can also be used as a 4-position, 5-port valve.
- 4-position dual 3-port valve with back pressure check valve is available.

A side	B side	JIS symbol
N.C. valve	N.C. valve	(A) (B) 2 SOLa SOLa (EA) (B) 3 (EB)
N.O. valve	N.O. valve	(A) (B) 2 SOLa 1 1 3 (EA) 1 (B) 1 1 1 3 3 (B)
N.C. valve	N.O. valve	(A) (B) 2 SOLa 5 SOLb 1 3 (EB) (P)



Manifold Variations

											٧	Virir	ng							
				Valve						Со	nne	ctio	n					Com specifi		
				Series								Ser	ial t	ran	smi	ssic	n			
		Manifold Variations		ector		Flat ribbon cable	<u></u>	ck box	ē	nector								nomu	mmon	
			5 ports	2 bouts D-sub connector		PC wiring	Terminal block box	Lead wire	Circular connector	EX510	EX500	EX600	EX250	EX260	EX126	EX120	Positive common	Negative common		
	Side ported	avel to	Туре	SY3□0□								_	_							
Base			50 □	SY5□0□	P. 15	P. 15	P. 15				P.35									
Plug-in Metal Base	Bottom ported	The state of the s	Туре	SY3□0□																
-in M		100	51□	SY5□0□	P. 15	P. 15	P. 15				P.35									
Plug	Top ported	Control of the contro	Туре	SY3□3□																
	Top		52□	SY5□3□	P. 29	P. 29	P. 29				P.43									
Base	Side ported		Туре	SY3□0□																
ecting		9.50	10□	SY5□0□	P. 49		P. 49		P. 67	P. 75		P. 83	P. 89	P. 97	P. 103	P. 109	P. 115			
Plug-in Connector Connecting Base	Bottom ported		Type 11□	SY5□0□	P. 49	P. 49	P. 49	P. 59	P. 67	P. 75		P. 83	P. 89	P. 97	P. 103	P. 109	P. 115			
-in Con	Top ported		Type	SY3□3□																
Plug	Top	The state of the s	12□	SY5□3□	P. 55	P. 55	P. 55	P. 63	P. 71	P. 79		P. 87	P. 95	P. 101	P. 107	P. 113	P. 119			

Standard ○ Option ▲ Made-to-Order (Refer to page 14.)

Wiring

Plug-in Metal Base

D-sub connector



[IP40]



[IP40]

Serial transmission: **EX510**

[IP20]

Plug-in Connector Connecting Base



D-sub connector

[IP40] * Partially IP67

Plug-in Connector Connecting Base



Serial transmission: **EX500**









Manifold Options (Pages 141 to 148) A, B Port Size														Valve Options																				
	spacer	spacer	release valve	release valve	or	sembly	sembly	disk	disk	ssembly	_	ction type)							On	e-to	ouc	h fi	ttin	gs		ounting	turbine oil)	ion	cation	es	e	0	S	
plate	P spa	H spa	al pressure	al pressure	gulat	ock as	ock as	king	king	valve	fitting	g conne	nite)	late	late			C2	C3 (N1)		;4 l3)	C (N	6 17)	C (N		ed mo	signated	ificat	pecifi	essur	essur	rottle	g size	1P67
Blanking plate	Individual SUP	Individual EXH	SUP stop valve spacer with residual pressure release valve	Double check spacer with residual pressure release valve	Interface regulator	Individual SUP block assembly	Individual EXH block assembly	SUP/EXH blocking disk	Label for blocking disk	Back pressure check valve assembly	Dual flow fitting	Silencer (One-touch fitting connection type)	Plug (White)	Name plate	M5	1/8	1/4	Straight piping	Straight piping	-	_		Elbow piping 1)		Elbow piping 1)	SY3000/5000 mixed mounting	Oil resistant (Other than designated turbine oil)	Vacuum specification	Low pressure specification	Different pressures	Reverse pressure	Exhaust throttle	Mixed fitting sizes	Enclosure IP67
0	0	0	0	0	0		_	_					0		_	•		_	_	•	_	•	_		_	_	•	External Pilot	External Pilot	Individual SUP	External Pilot	O Individual EXH		_
0	0	0	0	0	0				_				0		_	•		_	_	•		•	_		<u> </u>	_	•			Individual SUP	_	Individual EXH		_
0	0	0	0		0		_	_	_	_			0		_			<u> </u>	_	•		•			_	_	•	External Pilot	External Pilot	O Individual SUP	External Pilot	O Individual EXH		_
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		_		_	_	•	•	•	•	_	•	P.127	•	External Pilot	External Pilot	O Individual SUP	External Pilot	O Individual EXH		Note 2)
0	0	0	0	0	0	0	0	0	0	0		0	0	0		_			_				_		_	P.127	•	External Pilot	External Pilot	O Individual SUP	External Pilot	Individual EXH		Note 2)
0	0	0	0		0	0	0	0	0	0		0	0		_			_	_	•		•			_	P.131	•	External Pilot	External Pilot	O Individual SUP	External Pilot	O Individual EXH		Note 2)

Note 1): Elbow piping may specify size only in millimeters, depending on the port size. Refer to How to Order Manifold for details. Note 2): Refer to Manifold Specifications for details on IP67.

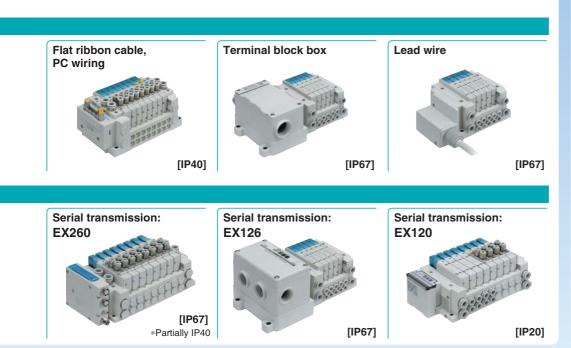

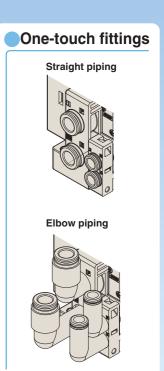

INDEX

Manifold Variations ·····	····· P. 1
Optimum Actuation Size Chart of Air Cylinder ······	····· P. 4
Plug-in Metal Base ·····	····· P. 5
Plug-in Connector Connecting Base ·····	····· P. 6
Valve Specifications (Specifications, Response Time, Weight) ······	P. 8
Valve Construction ·····	P. 10
Valve Replacement Parts ·····	P. 13
Made-to-Order for Valve ·····	P. 14
	0

Plug-in Metal Base







Type 50/Side Ported, Type 51/Bottom Ported, Type 52/Top Ported P. 15



PC wiring










D-sub Connector, Flat Ribbon Cable, PC Wiring System [IP40]	
Type 50/Side Ported ····· P	P. 15
Type 51/Bottom Ported · · · · P	² . 15
Type 52/Top Ported ····· P	P. 29
Wiring Specifications P	. 33
EX510 Gateway-type Serial Transmission System [IP20]	
Type 50/Side Ported · · · · P	P. 35
Type 51/Bottom Ported · · · · P	2. 35
Type 52/Top Ported · · · · P	P. 43
Manifold Exploded View [Exploded View, Manifold Parts No.] P	P. 47


Plug-in Connector Connecting Base

Safety Instructions



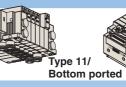




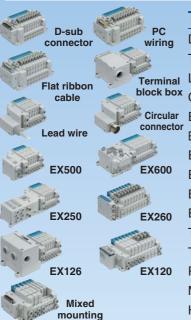

No state of the		Section 1	Type 10/Side Ported, Type 11/Bottom Ported, Type 12/Top Ported	P. 49
COUNTY AND ADDRESS.	D-sub onnector	PC wiring	D-sub Connector, Flat Ribbon Cable, PC Wiring System [IP40] ·····	·· P. 49
Na Namue	1		Terminal Block Box [IP67] ·····	·· P. 59
Fla	at ribbon	Terminal	Lead Wire [IP67] ·····	·· P. 67
	cable	block box	Circular Connector [IP67]	·· P. 7
THE REAL PROPERTY.		Circular	EX500 Gateway-type Serial Transmission System [IP67]	·· P. 83
Le	ad wire	Connector	EX600 Integrated-type (For Input/Output) Serial Transmission System (Fieldbus System) [IP67] · · ·	·· P. 89
No. of the last		Supplied to	EX250 Integrated-type (For Input/Output) Serial Transmission System [IP67]	·· P. 97
Balancia E	EX500	EX600	EX260 Integrated type (For Output) Serial Transmission System [IP67]	P. 103
	i.	Samuel Control of the	EX126 Integrated-type (For Output) Serial Transmission System [IP67]	P. 109
in the latest	EX250	EX260	EX120 Integrated-type (For Output) Serial Transmission System [IP20]	P. 118
	z.	100	Type 11/Bottom Ported Common Dimensions	P. 123
1	illi.	C. JELLEY	Type 12/Top Ported Common Dimensions	P. 124
E	EX126	EX120	Plug-in 3000/5000 Manifold Mixed Mounting Type	P. 127
	u.		Manifold Exploded View [Exploded View, Manifold Parts No.]	P. 134
Children.	Mixed mounting	g	How to Increase Connector Type Manifold	P. 138
One-touch	h Fitting:	s, Plug Assemb	ly/Part No. ·····	P. 139

Manifold Options [Plug-in Metal Base, Plug-in Connector Connecting Base] P. 140

Optimum Actuation Size Chart of Air Cylinder

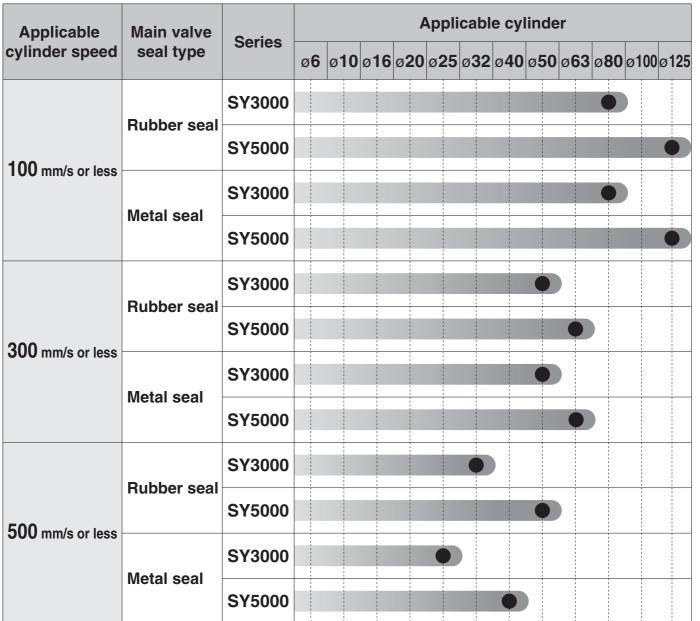

[Common conditions] • Pressure: 0.5 MPa

• Piping length: 1 m • Load ratio: 50% • Stroke: 200 mm

• Connector type manifold. Side and bottom ported type

* Use as a guide for selection.

Please check the actual conditions with SMC Sizing Program.

Construction

Replacement Parts

Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring EX510

Plug-in Connector Connecting Base D-sub Connector Flat Ribbon Cable PC Wiring

Terminal Block Box Lead Wire Circular Connector

EX120 EX126 EX260 EX250 EX600 EX500



Series SY3000/5000 Type 50, 51, 52 Plug-in Metal Base

Manifold Specifications

			D-sub connector		Flat ribbon cable		Serial wiring		
	Model		F type	P type	PG type J type	PH type	S5 type (EX510)		
Manifold typ	е				Plug-in metal base				
SUP/EXH po	rt type				Common SUP/EXH				
Valve station	All double wiring	I	2 to 12	stations	2 to 9 stations (J type: 2 to 8 stations)	2 to 4 stations	2 to 8 stations		
	All single wiring				2 to 12 stations	2 to 8 stations	2 to 12 stations		
Applicable c	onnector		D-sub connector Conforming to MIL-C-24308		at ribbon cable connect with strain relief of mforming to MIL-C-83 Socket: 20 pins		_		
			JIS-X-5101	MIL type					
Internal wiri	ng			Positive	common, Negative of	common			
	1(P), 3/5(E) port	SY3000			1/8				
	1(P), 3/3(E) port	SY5000			1/4				
Port size	A(A) 2(B) nort	SY3000		•	M5 x 0.8, 1/8 couch fitting, ø4 One-t 5/32" One-touch fitting	•	•		
	4(A), 2(B) port	SY5000		0	1/8, 1/4 ø6 One-touch fitting, ø1/4" One-touch fitting		•		
Enclosure (E	Based on IEC60529)	•	IP40 IP20						

Manifold Flow-rate Characteristics Note 1)/Manifold Weight

Valve Seal Type: Rubber Seal

	Port	size			Valve flow-r		Weight: W [g] Note 2)			
Model		4.0	1→4	/2 (P-	→A/B)	4/2→5/	/3 (A/E	3→E)	(n: sta	ations)
	1, 5, 3 (P, EA, EB)	4, 2 (A, B)	C [dm ³ /(s·bar)]	b	Q [L/min] (ANR) Note 3)	C [dm³/(s·bar)]	b	Q [L/min] (ANR) Note 3)	Fixed: C□	Replaceable: KC
SS5Y3-50 (Side ported)	01	C6	1.1	0.19	262	1.1	0.15	256	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	01	C6	1.2	0.31	307	1.2	0.14	278	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	01	C6	1.1	0.29	278	1.2	0.20	287	44n -	+ 247
SS5Y5-50 (Side ported)	02	C8	2.6	0.28	653	2.6	0.14	603	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	02	C8	2.7	0.35	709	2.8	0.20	671	93n + 413	113n + 413
SS5Y5-52 (Top ported)	02	C8	2.6	0.26	645	3.1	0.13	715	103n	+ 379

Valve Seal Type: Metal Seal

varve ocar Type: Metal e	- Cui									
	Port	size		,	Valve flow-rat		Weight: W [g] Note 2)			
Model	1.5.0	4.0	1→4,	/2 (P-	→A/B)	4/2→5	5/3 (A/l	B→E)	(n: sta	ations)
	1, 5, 3 (P, EA, EB)	4, 2 (A, B)	C [dm ³ /(s·bar)]	b	Q [L/min] (ANR) Note 3)	C [dm³/(s·bar)]	b	Q [L/min] (ANR) Note 3)	Fixed: C□	Replaceable: KC
SS5Y3-50 (Side ported)	01	C6	0.9	0.14	209	1.0	0.12	229	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	01	C6	1.0	0.21	241	1.1	0.10	250	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	01	C6	1.1	0.15	256	1.1	0.14	255	44n -	+ 247
SS5Y5-50 (Side ported)	02	C8	2.2	0.20	527	2.3	0.13	530	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	02	C8	2.4	0.26	595	2.5	0.16	586	93n + 413	113n + 413
SS5Y5-52 (Top ported)	Y5-52 (Top ported) 02 C8		2.4	0.18	568	2.6	0.12	596	103n	+ 379

 $[\]ast$ Calculation of effective area S and sonic conductance C: S = 5.0 x C

Nota 3) These valves have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.



Note 1) The value is for manifold base with 5 stations and individually operated 2-position type.

Note 2) 'Weight: W' is the value for the D-sub connector manifold.

To obtain the weight with valves attached, add the valve weights given on page 9 for the appropriate number of stations.

Series SY3000/5000 Type 10, 11, 12 Plug-in Connector Connecting Base

Manifold Specifications

			_	-sub nector	Fla	at ribbon ca	ble	Terminal block box	Lead wire	Circular connector		Serial	wiring				
	Model		F type	FW type	P type	PG type J type	PH type	T type	L type	M type	S6□ type (EX600)	SA2 type (EX500) S4□ type (EX126)	S□ type (EX250) (EX260)	S3□ type (EX120)			
Manifold	type						·	Plug-in con	nector conr	ecting bas	е						
SUP/EXH	l port type						Com	mon SUP/E	EXH (Comr	non for 3/5	port)						
Valve sta	lve stations 2 to 24 stations 2 to 18 stations (J type: 2 to 16 stations) 2 to 18 stations 2 to 26 stations 2 to 27 stations 2 to 28 stations 2 to 29 stations 2 to 24 stations 2 to 24 stations									2 to 16 stations							
Annlicah	ole connector	,	D-sub			on cable co th strain rel ing to MIL-	ief										
Аррноиз			MIL-C-24308														
Internal	wiring		Positive common, Negative common														
	1(P), 3/5(E)	SY3000							One-touch f	U							
Port	port	SY5000							One-touch	•							
size	4(A), 2(B)	SY3000			ø2 (•	One-touch ting, ø5/32"	•		•		tting				
	port	SY5000						fitting, ø6 C tting, ø1/4"		٥,		0					
Enclosure	e (Based on IE	C60529)	IP40	IP67		IP40			IP67		IP67 (I/O unit: (partially IP40)	IP67 (EX500 gateway) unit, input unit: IP65	IP67 (Partially IP40)	IP20			

Manifold Flow-rate Characteristics Note 1)/Manifold Weight

Valve Seal Type: Rubber Seal

	Port	size		V	alve flow-rate		Marianta MC - 1 Noto 2)		
Model	4 0/5	4.0	1→4/	/2 (P→	A/B)	4/2→5	5/3 (A/	B→E)	Weight: W [g] Note 2) (n: stations)
	1, 3/5 (P, E)	4, 2 (A, B)	C [dm ³ /(s·bar)]	b	Q [L/min] (ANR) Note 3)	C [dm³/(s·bar)]	b	Q [L/min] (ANR) Note 3)	(n. stations)
SS5Y3-10 (Side ported)	C8	C6	1.4	0.30	356	1.6	0.19	381	28.9n + 293
SS5Y3-12 (Top ported)	C8	C6	1.2	0.29	303	1.3	0.19	310	25.1n + 314
SS5Y5-10 (Side ported)	C10	C8	3.3	0.30	839	3.6	0.17	848	74.7n + 398
SS5Y5-11 (Bottom ported)	C10	C8	3.3	0.29	834	4.2	0.26	1042	76.8n + 445
SS5Y5-12 (Top ported)	C10	C8	2.8	0.27	699	3.8	0.23	926	66.3n + 417

Valve Seal Type: Metal Seal

Tanto com Type mount com									
	Port size			V	alve flow-rate				
Model			1→4/	⁄2 (P→	A/B)	4/2→5/3 (A/B→E)			Weight: W [g] Note 2)
	1, 3/5 (P, E)	4, 2 (A, B)	C [dm ³ /(s·bar)]	b	Q [L/min] (ANR) Note 3)	C [dm³/(s·bar)]	b	Q [L/min] (ANR) Note 3)	(n: stations)
SS5Y3-10 (Side ported)	C8	C6	1.2	0.19	286	1.3	0.18	308	28.9n + 293
SS5Y3-12 (Top ported)	C8	C6	1.2	0.16	281	1.3	0.18	308	25.1n + 314
SS5Y5-10 (Side ported)	C10	C8	2.7	0.24	662	3.1	0.17	730	74.7n + 398
SS5Y5-11 (Bottom ported)	C10	C8	2.8	0.25	690	3.5	0.15	816	76.8n + 445
SS5Y5-12 (Top ported)	C10	C8	2.6	0.18	616	3.0	0.16	703	66.3n + 417

 $[\]ast$ Calculation of effective area S and sonic conductance C: S = 5.0 x C

Note 1) The value is for manifold base with 5 stations and individually operated 2-position type.

To obtain the weight with valves attached, add the valve weights given on page 9 for the appropriate number of stations.

Nota 3) These valves have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.




Note 2) 'Weight: W' is the value of the internal pilot, and D-sub connector manifold (IP40) with one-touch fitting straight piping type.

Connector Wiring Layout


For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

■ Single solenoid valve is installed to all double wiring (in case of all double wiring). (Manifold specification sheet is not necessary.)

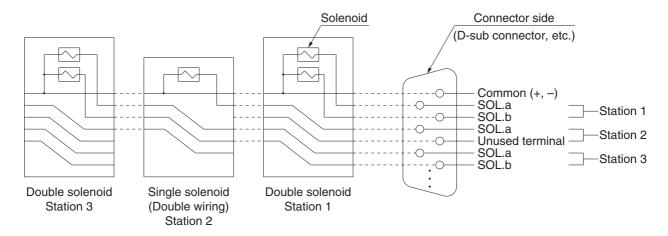

■ Single/double wiring are mixed.

(Manifold specification sheet is necessary.)

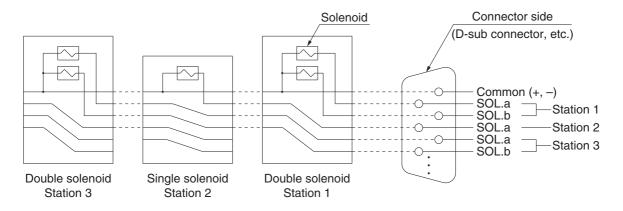

Note) These diagrams are for the purpose of explanation, and differ from the connector wiring used for testing.

Specific Product Precautions

Valve Specifications

Series SY3000/5000

Valve Specifications 1

V	alve type		Rubber seal	Metal seal	
Fluid			А	ir	
	2-position single		0.15 to 0.7		
Internal pilot	2-position double		0.1 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)	
operating pressure range [MPa]	3-position	1	0.2 to 0.7		
[WF a]	4-position	dual 3-port valve	0.15 to 0.7	_	
	Operating	pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.6)	-100 kPa to 0.7 (High pressure type: -100 kPa to 1)	
External pilot	Pilot	2-position single			
operating pressure range	pressure	2-position double	0.25 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)	
[MPa]	range	3-position			
	runge	4-position dual 3-port valve	Operating pressure + 0.1 or more (Min. 0.25) to 0.7	_	
Ambient and fluid tempera			–10 to 50 (N	No freezing)	
Max. operating frequency	2-position	single/double	5	20 Note 1)	
[Hz]		dual 3-port valve	3	20	
[]	3-position	1	3	10 Note 1)	
			Non-locking push type		
Manual override			Push-turn locking slotted type		
			Push-turn locking lever type		
			Slide locking type		
Pilot exhaust type	Internal p		Main/Pilot valve common exhaust		
	External p	oilot	Pilot valve individual exhaust		
Lubrication			Not required		
Mounting orientation			Unrestricted	Single: Unrestricted Double/3-position: Main valve is horizontal.	
Impact/Vibration resistance	e Note 2) [m/s	2]	150	0/30	
Enclosure			IP67 (Based	on IEC60529)	
Coil rated voltage [DC]	Coil rated voltage [DC]			12 V	
Allowable voltage fluctuation [V]			±10% of rated	d voltage Note 3)	
	Standard		· · · · · · · · · · · · · · · · · · ·	cator light: 0.4)	
Power consumption [W]	High pressure	type, Quick response type	0.9 (With indicator light: 0.95)		
	With power	saving circuit	Standard: 0.1 (With indicator light only), High pressure type: 0.4 (With indicator light only)		
Surge voltage suppressor			Diode (Varistor for non-polar type)		
Indicator light			LE	ED	

Note 1) Use below 5 Hz for with power saving circuit.

Note 2) Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in

the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Due to voltage drops by the internal circuit in S/Z type and T type (with power saving circuit), use within the allowable voltage fluctuation as follows.

S/Z type 24 VDC: -7% to +10% 12 VDC: -4% to +10% T type $\begin{cases} 24 \text{ VDC: } -8\% \text{ to } +10\% \\ 12 \text{ VDC: } -6\% \text{ to } +10\% \end{cases}$

Response Time

						_				
				Response time [ms]						
				Ç	Standard		Quick	response ty	pe	
Series	Seal type	Model	Type of actuation	Without light/	With ligh	nt/surge	Without light/	With ligh	nt/surge	
				surge voltage	voltage si	uppressor	surge voltage	voltage si	uppressor	
				suppressor	S/Z type	R/U type	suppressor	S/Z type	R/U type	
	Rubber seal	SY31□0	O position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less	
	Metal seal	SY31□1	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less	
	Rubber seal	SY32□0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
SY3000	Metal seal	SY32□1		12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
	Rubber seal	SY33/4/5□0	2 position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less	
	Metal seal	SY33/4/5□1	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less	
	Rubber seal	SY3A/B/C□0	4-position dual 3-port valve	18 or less	22 or less	18 or less	15 or less	19 or less	15 or less	
	Rubber seal	SY51□0	2-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less	
	Metal seal	SY51□1	z-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less	
	Rubber seal	SY52□0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
SY5000	Metal seal	SY52□1	z-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
	Rubber seal	SY53/4/5□0	2 position	30 or less	34 or less	30 or less	24 or less	28 or less	24 or less	
	Metal seal	SY53/4/5□1	3-position	28 or less	30 or less	28 or less	23 or less	25 or less	23 or less	
	Rubber seal	SY5A/B/C□0	4-position dual 3-port valve	35 or less	42 or less	35 or less	28 or less	35 or less	28 or less	

Valve Specifications 2

Valve Weight

Series SY3000

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	74
		2-position	Double	83
SY3□00	Rubber seal	3-position	Closed centre	
31300	nubbei seai		Exhaust centre	87
			Pressure centre	
		4-position	Dual 3-port valve	83

	Seal			Port size	Weight
Valve model	type	Тур	e of actuation	4, 2 (A, B)	[g]
	-71		Single	1, 2 (71, 2)	74
0V0=00 M5		2-position	Double		83
			Closed centre	1	
SY3□30-M5		3-position	Exhaust centre	M5 x 0.8	87
			Pressure centre		
		4-position	Dual 3-port valve		83
		'	Single		82
		2-position	Double	00	91
CVO TOO CO			Closed centre	C2	
SY3□30-C2		3-position	Exhaust centre	ø2 One-touch	95
		'	Pressure centre	fitting	
		4-position	Dual 3-port valve	1	91
	Rubber	2-position	Single		85
			Double	C3	94
SY3□30-C3		3-position	Closed centre	ø3.2 One-touch	
313030-03	seal		Exhaust centre	fitting	98
			Pressure centre	litting	
		4-position	Dual 3-port valve		94
		2-position	Single		77
		2-position	Double	C4	86
SY3□30-C4			Closed centre	ø4 One-touch	
313030-04		3-position	Exhaust centre	fitting	90
			Pressure centre	litting	
		4-position	Dual 3-port valve		86
		2-position	Single		80
		2-position	Double	C6	89
SY3□30-C6			Closed centre	ø6 One-touch	
0130000		3-position	Exhaust centre	fitting	93
			Pressure centre	l mailing	
		4-position	Dual 3-port valve		89

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	76
		2-position	Double	86
SY3□01	Metal seal		Closed centre	
		3-position	Exhaust centre	90
			Pressure centre	

Valve model	Seal	Type	of actuation	Port size	Weight
	type	,,		4, 2 (A, B)	[g]
		2-position	Single		76
		2 position	Double		86
SY3□31-M5			Closed centre	M5 x 0.8	
		3-position	Exhaust centre		90
			Pressure centre		
		2-position	Single		84
		2-position	Double	C2	94
SY3□31-C2			Closed centre	ø2 One-touch	
		3-position	Exhaust centre	fitting	98
			Pressure centre		
		2 position	Single		87
	Metal	2-position	Double	C3	97
SY3□31-C3	seal		Closed centre	ø3.2 One-touch	
	Seai	3-position	Exhaust centre	fitting	101
			Pressure centre		
		2 position	Single		79
		2-position	Double	C4	89
SY3□31-C4			Closed centre	ø4 One-touch	
		3-position	Exhaust centre	fitting	93
			Pressure centre	1	
		2 position	Single		82
		2-position	Double	C6	92
SY3□31-C6			Closed centre	ø6 One-touch	
		3-position	Exhaust centre	fitting	96
			Pressure centre] -	

Series SY5000

Valve model	Seal type	Type of actuation		Weight [g]	
		2-position	Single	82	
		2-position	Double	90	
SY5□00	Rubber seal		Closed centre		
31300	nubbei seai	3-position	Exhaust centre	100	
			Pressure centre		
		4-position	Dual 3-port valve	90	

Valve model	Seal	Turn	a of actuation	Port size	Weight
valve model	type	Тур	e of actuation	4, 2 (A, B)	[g]
		2-position	Single		102
		2-005111011	Double		110
SY5□30-01			Closed centre	1/8	
3130-01		3-position	Exhaust centre	1/6	120
			Pressure centre		
		4-position	Dual 3-port valve		110
		2-position	Single		115
		2-position	Double	C4	123
SY5□30-C4			Closed centre	ø4 One-touch	133
313030-04		3-position	Exhaust centre	fitting	
			Pressure centre	litting	
	Rubber	4-position	Dual 3-port valve		123
	seal	2-position	Single		110
		2-003111011	Double	C6	118
SY5□30-C6			Closed centre	ø6 One-touch	
313030-00		3-position	Exhaust centre	fitting	128
			Pressure centre	IIIIIIII	
		4-position	Dual 3-port valve		118
		2-position	Single		99
		2-position	Double	C8	107
SY5□30-C8			Closed centre	ø8 One-touch	
		3-position	Exhaust centre	fitting	117
			Pressure centre	littiig	
		4-position	Dual 3-port valve		107

Valve model	Seal type	Type of actuation		Weight [g]
		Opposition	Single	91
		2-position	Double	101
SY5□01	Metal seal		Closed centre	
		3-position	Exhaust centre	111
			Pressure centre	

Valve model	Seal	Type	of actuation	Port size	Weight
vaive model	type	Турс	or actuation	4, 2 (A, B)	[g]
		2-position	Single		111
		2-position	Double		121
SY5□31-01			Closed centre	1/8	
		3-position	Exhaust centre		131
			Pressure centre		
		2-position	Single		124
		2-position	Double	C4	134
SY5□31-C4		3-position	Closed centre	ø4 One-touch	
			Exhaust centre	fitting	144
	Metal		Pressure centre		
	seal	2-position	Single		120
		2-position	Double	C6	130
SY5□31-C6			Closed centre	ø6 One-touch	
		3-position	Exhaust centre	fitting	140
			Pressure centre		
		2-position	Single		108
		2-position	Double	C8	118
SY5□31-C8			Closed centre	ø8 One-touch	
		3-position	Exhaust centre	fitting	128
			Pressure centre		



Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring EX510

Dsub Connector Plug-in Connector Fat Ribbon Cable Connecting Base

Terminal Block Box


Lead Wire Circular


Specific Product Precautions


Series **SY3000/5000**


Valve Construction 1

Rubber Seal

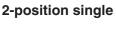


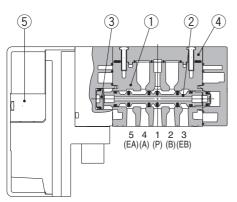


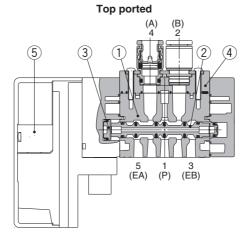

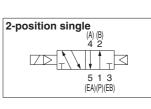



2-position double

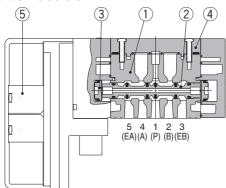


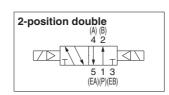


3-position closed centre/exhaust centre/pressure centre

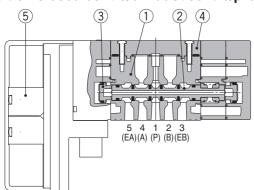

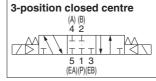

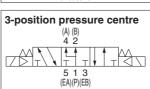

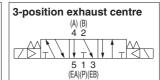


Component Parts


	pononi i anto		
No.	Description	Material	Note
1	Body	SY3000: Zinc die-casted SY5000: Aluminium die-casted	
2	Spool valve	Special resin/HNBR (3-position valve: (Aluminium/HNBR)	
3	Piston	Resin	
	Body cover assembly	Resin	For side/bottom ported
4	Port block assembly	Resin (SY5000 series threaded type: Zinc die-casted	For top ported
5	Pilot valve assembly	_	Refer to page 14.

Valve Construction 2


Rubber Seal


4-position dual 3-port valve

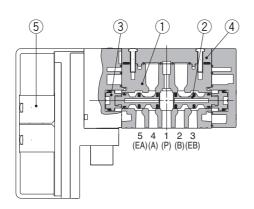

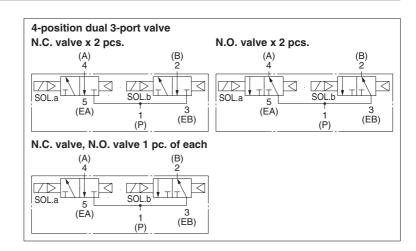



2-position double with back pressure check valve (Built-in valve type)

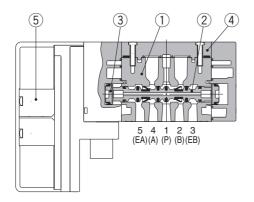

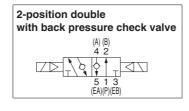


4-position dual 3-port valve with back pressure check valve (Built-in valve type)

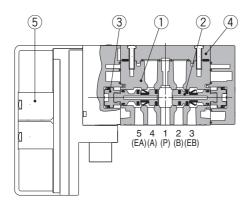

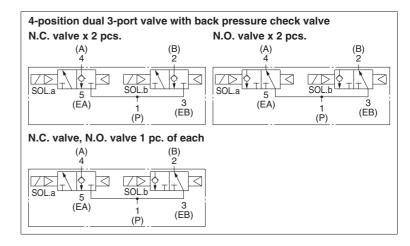



Valve Construction 3

Metal Seal

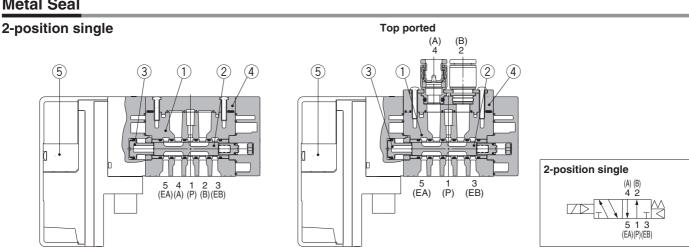



2-position double

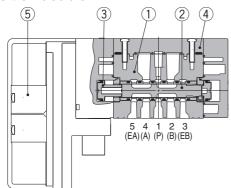


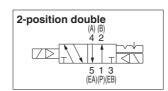

3-position closed centre/exhaust centre/pressure centre

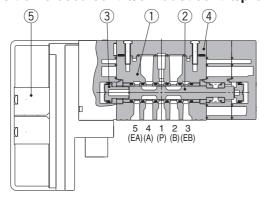

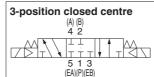

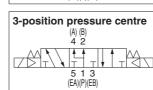

3-position exhaust centre

Component Parts

No.	Description	Description Material			
1	Body	SY3000: Zinc die-casted SY5000: Aluminium die-casted			
2	Spool, Sleeve	Stainless steel/HNBR			
3	Piston	Resin			
4	Body cover assembly	Resin	For side/bottom ported		
	Port block assembly	Resin (SY5000 series threaded type: Zinc die-casted	For top ported		
5	Pilot valve assembly	_	Refer to page 14.		

Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring EX510

Dsub Connector Flat Ribbon Cable Connecting Base PC Wiring

Terminal Block Box Lead Wire

Circular


EX120 EX126 EX260 EX250 EX600 EX500

One-touch Fittings and Plug Assembly/ Part No. Manifold Options

Specific Product Precautions

Valve Replacement Parts 1

How to Order Port Block Assembly

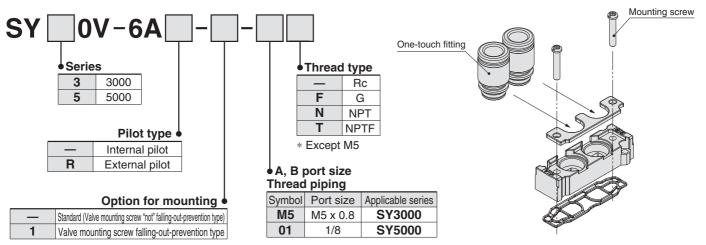

One-touch fitting (Metric)

0110 10	one todon name (means)					
Cumbal	Dowt size	Applicable series				
Symbol	Port size	SY3000	SY5000			
C2	ø2 One-touch fitting	•	_			
C3	C3 ø3.2 One-touch fitting		_			
C4	ø4 One-touch fitting					
C6	ø6 One-touch fitting					
C8	C8 ø8 One-touch fitting					

One-touch fitting (Inch)

Symbol	Port size	Applicable series		
Symbol Port size		SY3000	SY5000	
N1	ø1/8" One-touch fitting		_	
N3	ø5/32" One-touch fitting	•		
N7	ø1/4" One-touch fitting			
N9 ø5/16" One-touch fitting		_		


Possible to replace only the one-touch fitting.

Port size		SY3000	SY5000
	ø2 One-touch fitting	VVQ1000-50A-C2	_
	ø3.2 One-touch fitting	VVQ1000-50A-C3	_
Metric size	ø4 One-touch fitting	VVQ1000-50A-C4	VVQ1000-51A-C4
	ø6 One-touch fitting	VVQ1000-50A-C6	VVQ1000-51A-C6
	ø8 One-touch fitting	_	VVQ1000-51A-C8
	ø1/8" One-touch fitting	VVQ1000-50A-N1	_
Inch size	ø5/32" One-touch fitting	VVQ1000-50A-N3	VVQ1000-51A-N3
IIICII SIZE	ø1/4" One-touch fitting	VVQ1000-50A-N7	VVQ1000-51A-N7
	ø5/16" One-touch fitting	_	VVQ1000-51A-N9

Refer to pages 156 and 157 for how to replace the port block assembly, one-touch fitting and body cover assembly.

Body Cover Assembly


* Used when the top ported is changed to the side or bottom ported.

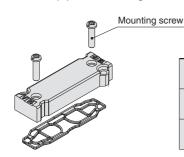

Series		Part no.			
		Standard (Valve mounting screw "not" falling-out-prevention type)	Valve mounting screw falling-out-prevention type		
SY3000	Internal pilot	SY30V-16A	SY30V-16A-1		
313000	External pilot	SY30V-16AR	SY30V-16AR-1		
CVEOO	Internal pilot	SY50V-16A	SY50V-16A-1		
SY5000	External pilot	SY50V-16AR	SY50V-16AR-1		

Valve Replacement Parts 2

How to Order Pilot Valve Assembly (With a gasket and two mounting screws)

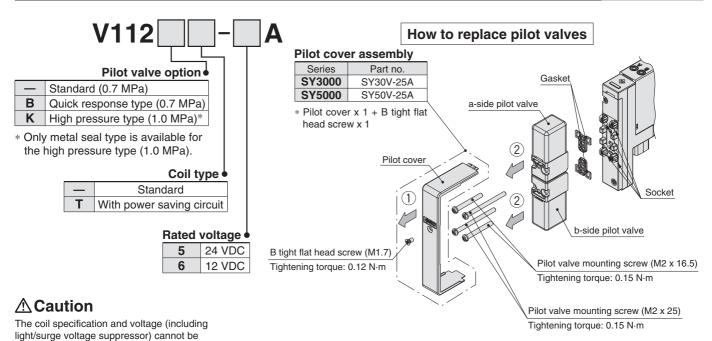

- Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow 1.
- Remove the pilot valve mounting screws.
- Remove the pilot valve in the direction indicated by the arrow 2.
- * Assemble by following the removal procedure in reverse.

Note 1) Ensure the gasket is mounted, and take care not to bend the socket. Note 2) Be noted for mounting that there are two types of lengths for the pilot valve mounting screws

Made-to-Order for Valve

changed by changing the pilot valve assembly.




Please contact SMC for detailed dimensions, specifications, and lead times.

Main Valve Fluororubber Specification

Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.

• When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.

Applicable valve series $SY3\Box_3^00$, $SY5\Box_3^00$ (Only rubber seal type)

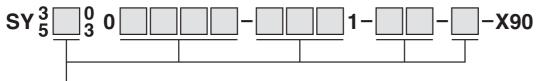

Entry is the same as standard products.

The specification and performance are the same as those of standard products.

SMC

Plug-in Metal Base

EX510

Plug-in Connector Connecting Base

D-sub Connector Flat Ribbon Cable PC Wiring Terminal Block Box

Lead Wire

Circular Connector

EX500

EX600

EX126 | EX260 | EX250 | EX120


Type 50 Side Ported **Type 51 Bottom Ported**

Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring

Series SY3000/5000 ()

How to Order Manifold

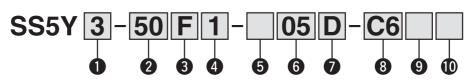


Series SY3000 SY5000

2 Type Side ported Bottom ported


50R

* External pilot is not available for the bottom ported type.

Side ported, External pilot

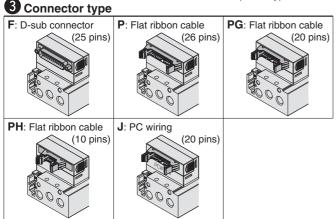

How to Order Manifold Assembly

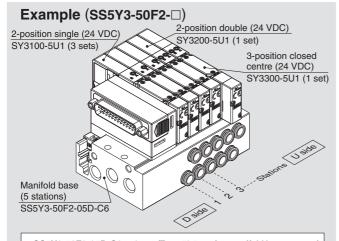

 $\ensuremath{\mathsf{SS5Y3\text{-}50F2\text{-}05D\text{-}C6}}\xspace \cdots$ 1 set (Type 50 5-station manifold base part no.) *SY3100-5U1-----3 sets (2-position single part no.) *SY3200-5U1------1 set (2-position double part no.)


*SY3300-5U1...... 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

- The valve arrangement is numbered as the 1st station from the D side.
- · Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 30 In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

4 Connector entry direction

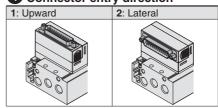

Wiring type

	• trining type				
_	All double wiring Note 1)				
S	All single wiring Note 2)				

- Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.
- Note that 2-position double, 3- or 4-position valves cannot be used. Note 3) Please contact SMC if a mixture of single wiring and double wiring is required.

6 Valve stations

F : D-9	F: D-sub connector (25 pins)			P: Flat ribbon cable (26 pins)			PG : Flat ribbon cable (20 pins)		
Symbol	Stations	Note	Symbol	Stations	Note	Symbol	Stations	Note	
02	2 stations	All	02	2 stations	All	02	2 stations	All	
:		double	:	:	double	:	:	double	
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring	
02	2 stations	All	02	2 stations	All	02	2 stations	All	
÷	:	single	:	:	single	:	:	single	
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring	
12	12 SIGNOTIS	wiinig	12	12 SIGNOTIS	wiilig	12	12 SIDUUTIS	wiilig	

PH: Flat ribbon cable (10 pins) J: PC wiring (20 pins)

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
:	:	double	:	:	double
04	4 stations	wiring	08	8 stations	wiring
02	2 stations	All	02	2 stations	All
:	:	single	:	:	single
08	8 stations	wiring	12	12 stations	wiring

* This also includes the number of blanking plate assembly.


P. E port entry

	<u> </u>					
U	U side Note 1)					
D	D side Note 1) Note 2)					
B Both sides						

Note 1) Plugs are mounted on the opposite side of the selected ports.

Note 2) Only D side is available for Type 51 (Bottom ported).

Refer to the page on the right for 8.

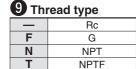

Mounting

<u> </u>	mounting						
_		Direct mounting					
D	DIN ra	DIN rail mounting (With DIN rail)					
D0	DIN rail	DIN rail mounting (Without DIN rail)					
D3	For 3 stations	stations					
÷	:	Specify a longer rail than					
D12	For 12 stations	the standard length.					

* Only direct mounting is available for Type 51 (Bottom ported).

Specific Product Precautions

8 A, B port size (Thread piping)

Symbol	A, B port	SY3000	SY5000
M5	M5 x 0.8		_
01	1/8		
02	1/4	_	

A, B port size (Metric)

Sy	/mbol	A, B port	SY3000	SY5000		
	C2	ø2 One-touch fitting	•	_		// .
	СЗ	ø3.2 One-touch fitting	•	_		
Fixed	C4	ø4 One-touch fitting	•		- / (
ш	C6	ø6 One-touch fitting	•		6	
	C8	ø8 One-touch fitting	_		, see	
	KC2	ø2 One-touch fitting		_	Type 50	Type 51
<u>e</u>	KC3	ø3.2 One-touch fitting			(Side ported)	(Bottom ported)
Replaceable	KC4	ø4 One-touch fitting	•			
plac	KC6	ø6 One-touch fitting				
Re	KC8	ø8 One-touch fitting	_			
	M*	Mixed sizes	1/0	1/4		
Р	, E por	t size (Thread piping)	1/8	1/4		


A, B port size (Inch)

	A, B port one (mon)					
Symbol		A, B port	SY3000	SY5000		
	N1	ø1/8" One-touch fitting	•	_		
Fixed	N3	ø5/32" One-touch fitting				6 0
iÊ	N7	ø1/4" One-touch fitting				
	N9	ø5/16" One-touch fitting	_	•		
	KN1	ø1/8" One-touch fitting	•	_	Type 50 (Side ported)	Type 51 (Bottom ported)
aple	KN3	ø5/32" One-touch fitting	•	•	(Side ported)	(Bottom ported)
ace	KN7	ø1/4" One-touch fitting	•	•		
Replaceable	KN9	ø5/16" One-touch fitting	_	•	000	
_	M*	Mixed sizes	1/2	•		
P, E port size (Thread piping)		1/8	1/4			

* When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

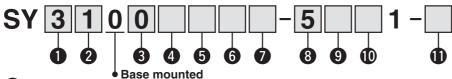

Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4 3-position exhaust centre		
5 3-position pressure centre		
\mathbf{A}^*	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal	_
1	Metal seal	

4 Pilot type

	71
	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K*	High pressure type (1.0 MPa)	

 \ast Only metal seal type is available for the high pressure type.

Coil type

Coll type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- *Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Note the specified energizing time when power saving circuit is selected. Refer to page 154.

Rated voltage


<u> </u>	
5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

	and common specimeation		
	_	Without light/surge voltage suppressor (Non-polar)	
	R	With surge voltage suppressor (Non-polar)	
	U	With light/surge voltage suppressor (Non-polar)	
	S	With surge voltage suppressor (Positive common)	
Z With light/surge voltage suppressor (Positive		With light/surge voltage suppressor (Positive common)	
	NS	With surge voltage suppressor (Negative common)	
	NZ	With light/surge voltage suppressor (Negative common)	

* Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

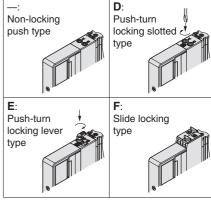


Type of mounting screw

	Type of meaning colon	
 Round head combination screw 		Round head combination screw
	В	Hexagon socket head cap screw
	K	Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 47 for part numbers of the base gasket and mounting screw.


* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

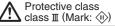






Dimensions: Type 50/D-sub Connector/Series SY3000


SS5Y3-50(R)F $_2^1$ -Stations $_{\mathsf{B}}^{\mathsf{U}}$ -C $_{\mathsf{KC}}^{\mathsf{M5}}$, $_{\mathsf{NC}}^{\mathsf{U}}$

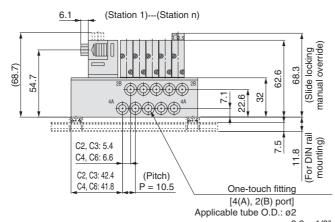

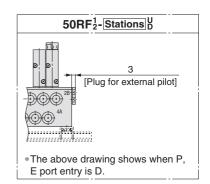

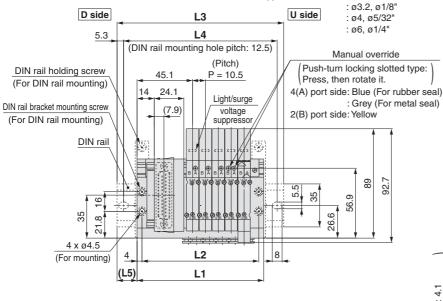

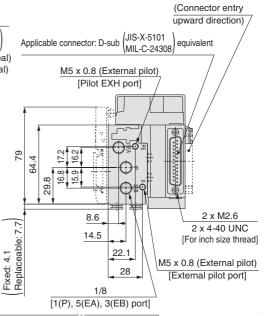

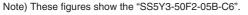



Port size M5	One-touch fitting (Replaceable)
28 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	(Pitch) P = 10.5 One-touch fitting [4(A), 2(B) port] Applicable tube O.D.: ø2 : ø3.2, ø1/8" : ø4, ø5/32" : ø6, ø1/4"


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

Dimensions: Type 50/D-sub Connector/Series SY3000

SS5Y3-50(R) F_2^1 -Stations $\stackrel{\text{U}}{p}$ -01 \square (D)

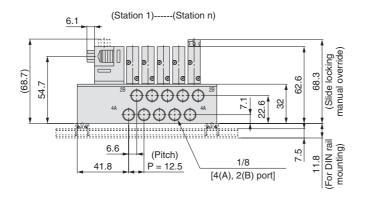

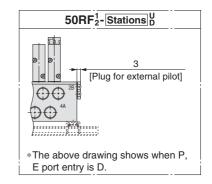


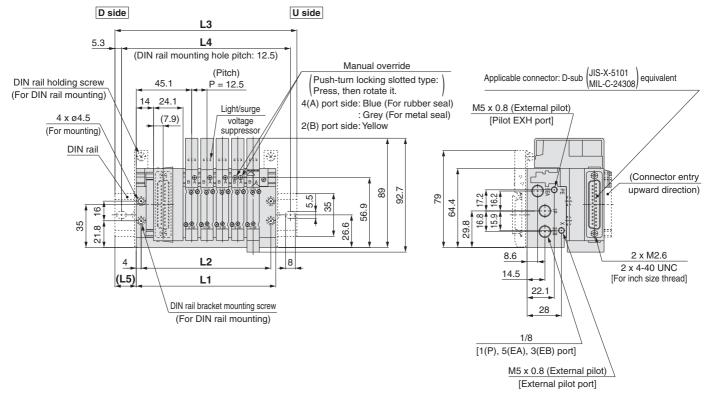

Note) These figures show the "SS5Y3-50F2-05B-01".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

Dimensions: Type 50/D-sub Connector/Series SY5000

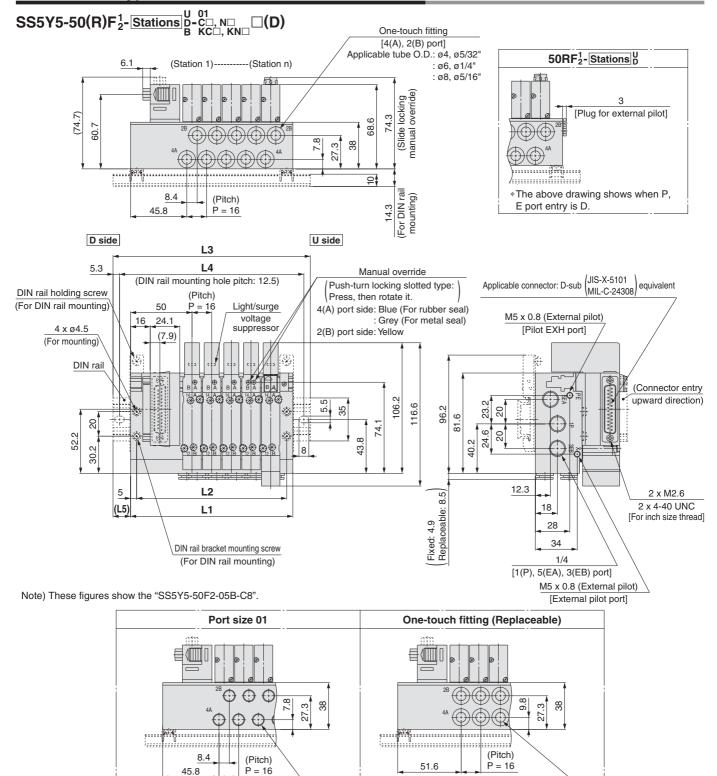

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

1/8

[4(A), 2(B) port]


One-touch fitting


[4(A), 2(B) port]


Applicable tube O.D.: ø4, ø5/32"

: ø6, ø1/4" : ø8, ø5/16"

Dimensions: Type 50/D-sub Connector/Series SY5000

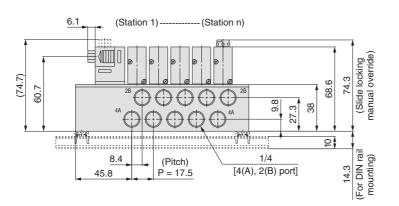

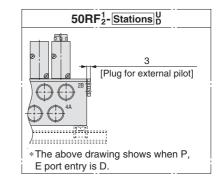


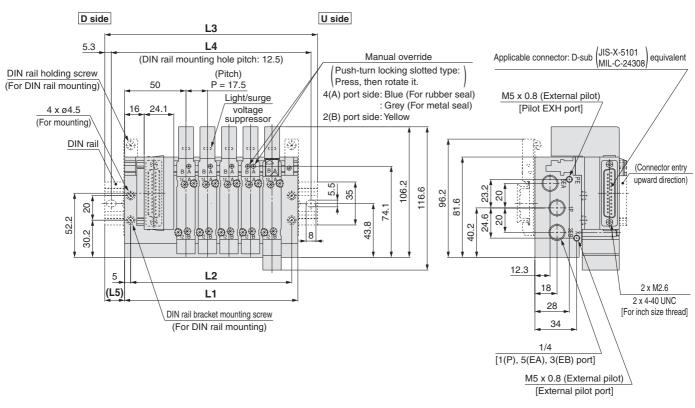



Note) These figures show the "SS5Y5-50F2-05B-02".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

Dimensions: Type 50/Flat Ribbon Cable/Series SY3000

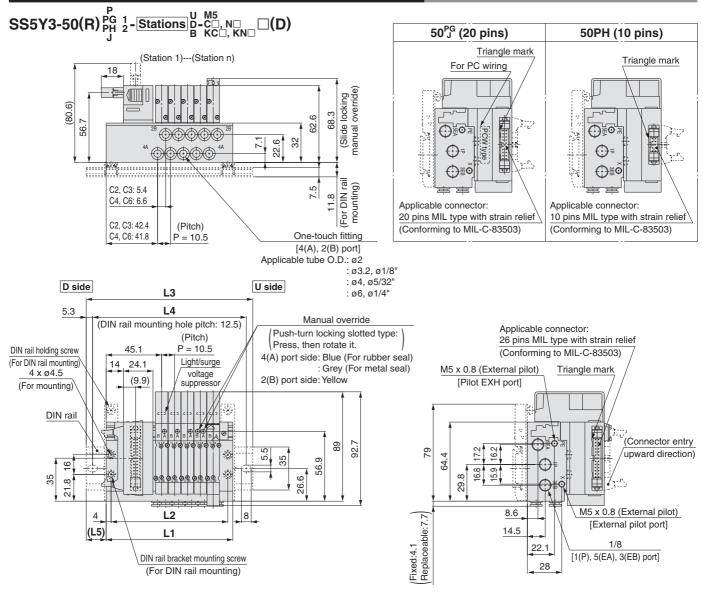

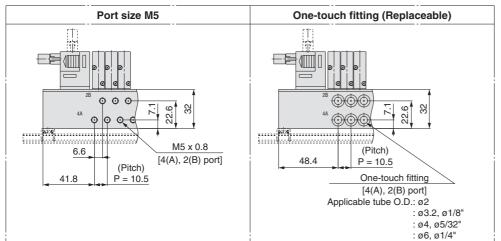

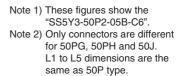

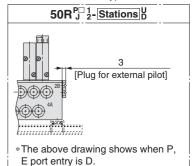



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


Specific Product


Dimensions: Type 50/Flat Ribbon Cable/Series SY3000

SS5Y3-50(R) $_{PH}^{PG}$ $_{2}^{1}$ -Stations $_{B}^{U}$ -01 \square (D)

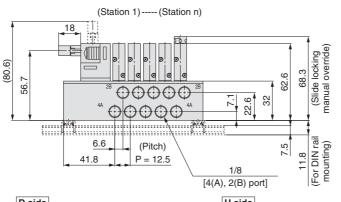

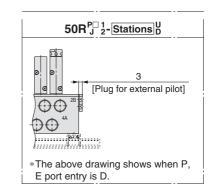

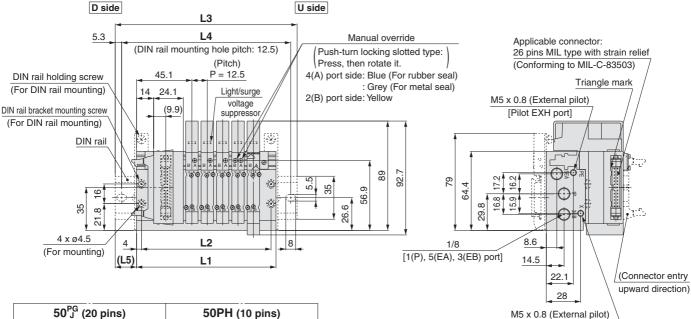

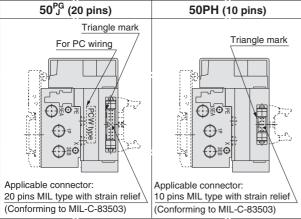

Note 1) These figures show the "SS5Y3-50P2-05B-01".


Note 2) Only connectors are different for 50PG, 50PH and 50J.


L1 to L5 dimensions are the same as 50P type.


[External pilot port]

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

Dimensions: Type 50/Flat Ribbon Cable/Series SY5000

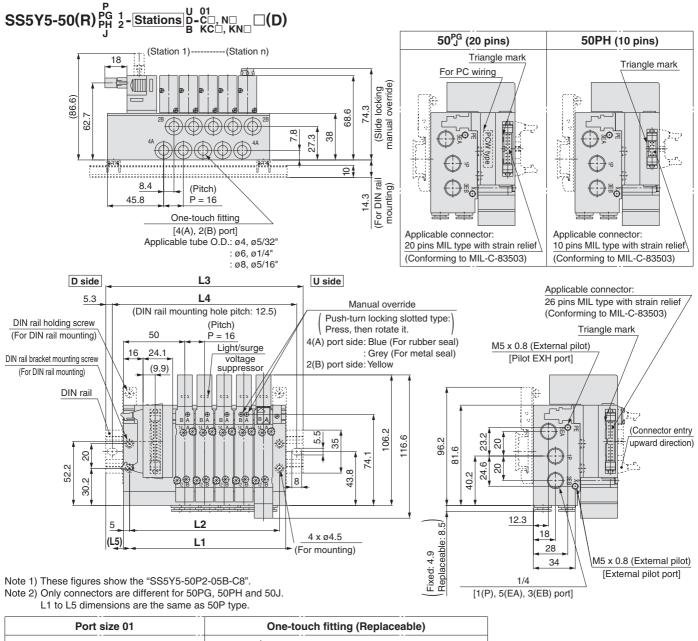

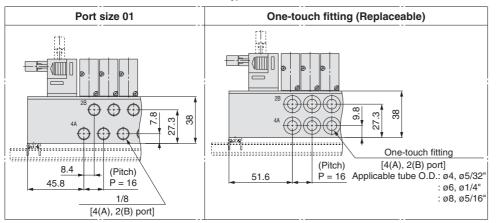

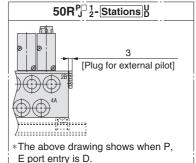



	1										
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Specifications


Dimensions: Type 50/Flat Ribbon Cable/Series SY5000


SS5Y5-50(R) $_{PH}^{PG}$ $_{2}^{1}$ -Stations $_{B}^{U}$ -02 \square (D)

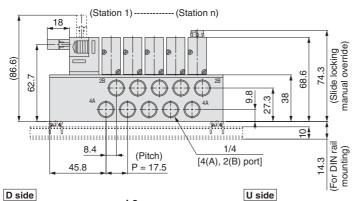

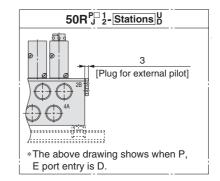

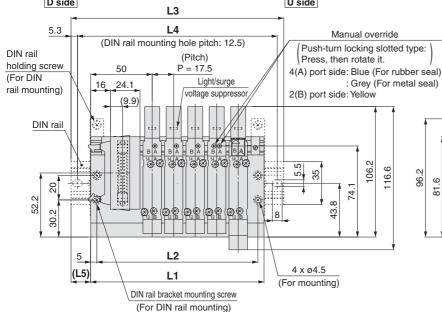

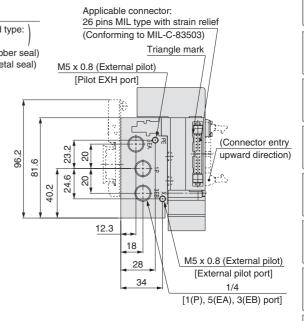


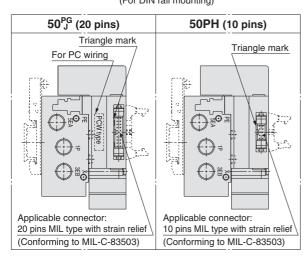

Note 1) These figures show the "SS5Y5-50P2-05B-02". Note 2) Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

Dimensions: Type 51/D-sub Connector/Series SY3000

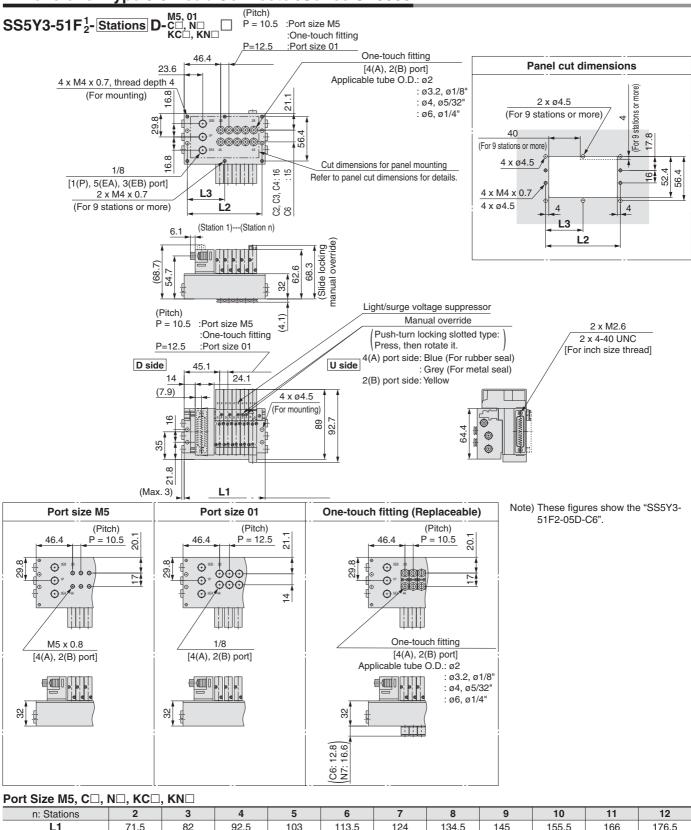

Dort	Siza	Λ1

L2

L3

63.5

74

84.5

95

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

105.5

116

126.5

137

68.5

147.5

73.8

158


79


168.5

84.3

Specific Product Orecautions

Dimensions: Type 51/D-sub Connector/Series SY5000

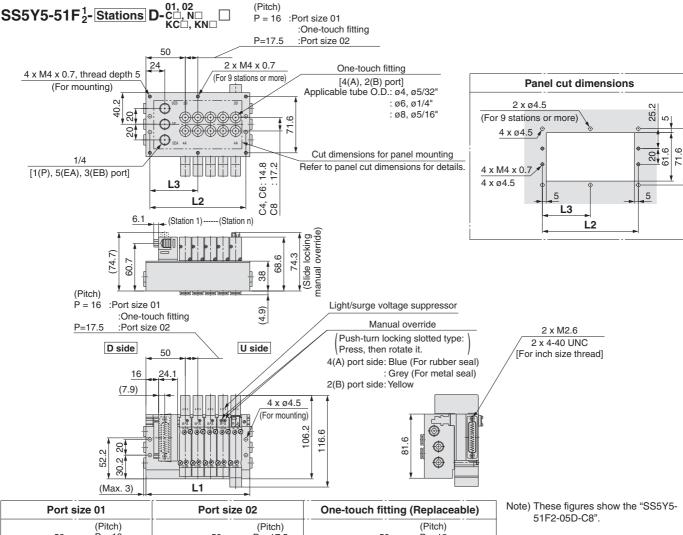

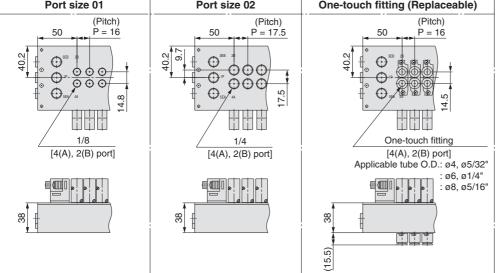


Port Size 01, C□, N□, KC□, KN□

	,,										
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117

Port Size 02

I OIT OIZC OZ											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
1.3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

Dimensions: Type 51/Flat Ribbon Cable/Series SY3000

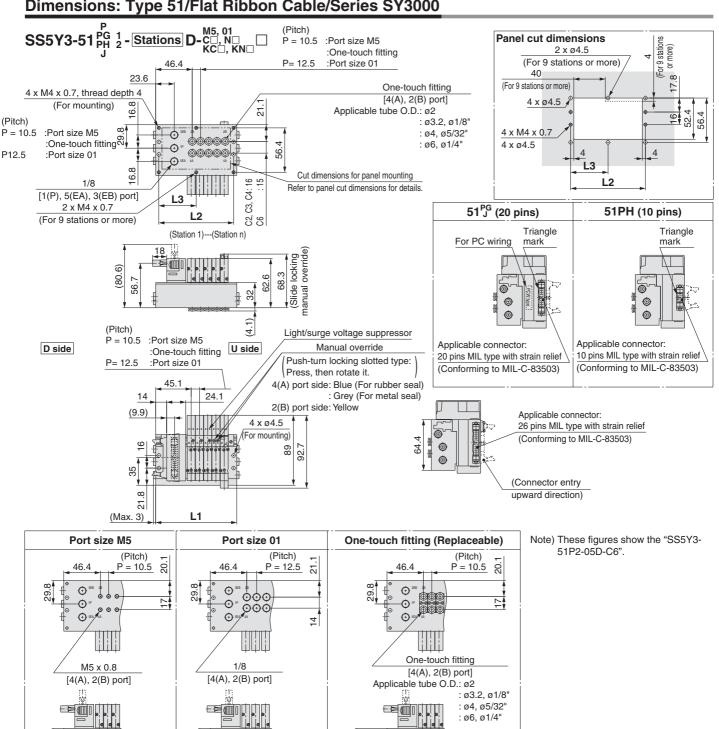

Port Size M5, C□, N□, KC□, KN□											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
12	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5

68.5

73.8

79


84.3


32

12.8

Port Size 01											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

L3

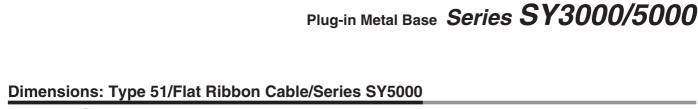

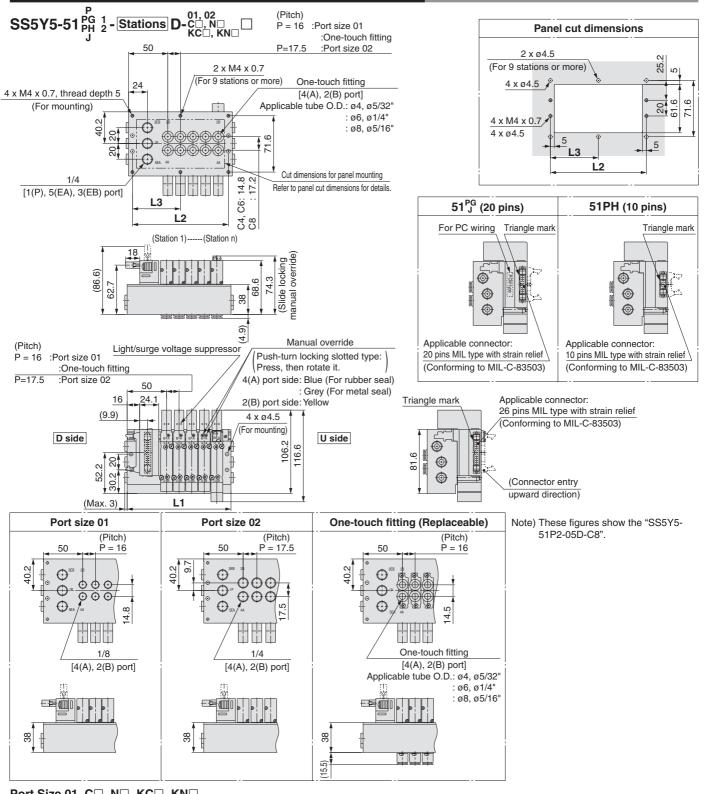

Port Size 01, C□, N□, KC□, KN□											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117

Port Size 02											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

EX51

Plug-in Connector

D-sub Connector Flat Ribbon Cable PC Wiring

Terminal Block Box

Lead Wire

Circular Connector

EX250 | EX600 | EX500

EX260

EX126

EX120

One-touch Fittings and Plug Assembly/ Part No.

Manifold Options

Specific Product


Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring

Type 52 Top Ported

Series SY3000/5000 CE

How to Order Manifold

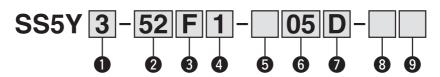


1 Series

Correc								
3	SY3000							
5	SY5000							


2 Type

<u>• ')</u>	
52	Top ported
52R	Top ported, External pilot

3 Connector type

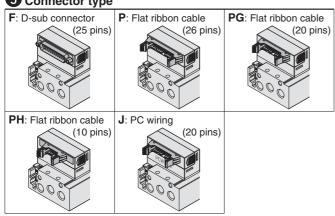

How to Order Manifold Assembly

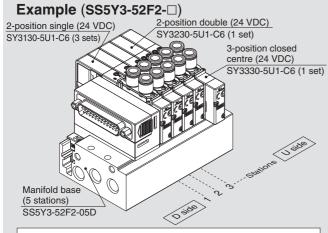


SS5Y3-52F2-05D....... 1 set (Type 52 5-station manifold base part no.) *SY3130-5U1-C6...... 3 sets (2-position single part no.)

*SY3230-5U1-C6...... 1 set (2-position double part no.) *SY3330-5U1-C6------ 1 set (3-position closed centre part no.)

- The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

• The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification

4 Connector entry direction

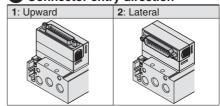

6 Wiring type

	0 7:
_	All double wiring Note 1)
S	All single wiring Note 2)

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used.

Note 3) Please contact SMC if a mixture of single wiring and double wiring is required.

6 Valve stations

F : D-9	sub con	nector (25 pins)	P: Fla	t ribbon	cable (26 pins)	PG: Flat ribbon cable (20 pins)			
Symbol	Stations	Note		Symbol	Stations	Note		Symbol	Stations	Note
02	2 stations	All		02	2 stations	All		02	2 stations	All
:	:	double		:	:	double		:	:	double
12	12 stations	wiring		12	12 stations	wiring		09	9 stations	wiring
02	2 stations	All		02	2 stations	All		02	2 stations	All
:	:	single		:	:	single		:	:	single
12	12 stations	wiring		12	12 stations	wiring		12	12 stations	wiring

PH: Flat ribbon cable (10 pins) J: PC wiring (20 pins)

Symbol	Stations	Note		Symbol	Stations	Note
02	2 stations	All		02	2 stations	All
:	:	double	e		:	double
04	4 stations	wiring		08	8 stations	wiring
02	2 stations	All		02	2 stations	All
:	:	single		:	:	single
08	8 stations	wiring		12	12 stations	wiring

* This also includes the number of blanking plate assembly.

P F port entry

• , .	- port ontry
U	U side Note)
D	D side Note)
В	Both sides

Note) Plugs are mounted on the opposite side of the selected ports.

8 Thread type


_	Rc
00F	G
00N	NPT
00T	NPTF

9 Mounting

	Direct mounting DIN rail mounting (With DIN rail)									
D										
D0	DIN rail mounting (Without DIN rai									
D3	For 3 stations	0								
:	:	Specify a longer rail than the standard length.								
D12	For 12 stations	ine standard length.								

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

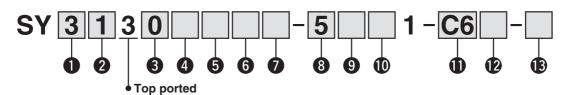

1 Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

	or type
_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	
_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Oon type	
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage


O Hai	ou voilago
5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

and	and common specification		
_	Without light/surge voltage suppressor (Non-polar)		
R	With surge voltage suppressor (Non-polar)		
U	With light/surge voltage suppressor (Non-polar)		
S	With surge voltage suppressor (Positive common)		
Z	With light/surge voltage suppressor (Positive common)		
NS	With surge voltage suppressor (Negative common)		
NZ	With light/surge voltage suppressor (Negative common)		

* Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

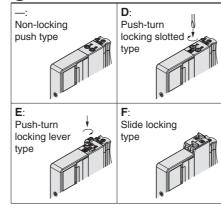

A, B port size

Thread piping

	· · · · · ·	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

one touch many (monte)			
Symbol	A, B port	SY3000	SY5000
C2	ø2 One-touch fitting		_
C3	ø3.2 One-touch fitting		_
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	_	•

One-touch fitting (Inch)

ene teach many (men)			
Symbol	A, B port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting	_	
		•	

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF

* Only — is available for M5.


Type of mounting screw

_ ,	
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- *For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 47 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

Dimensions: Type 52/D-sub Connector, Flat Ribbon Cable/Series SY3000

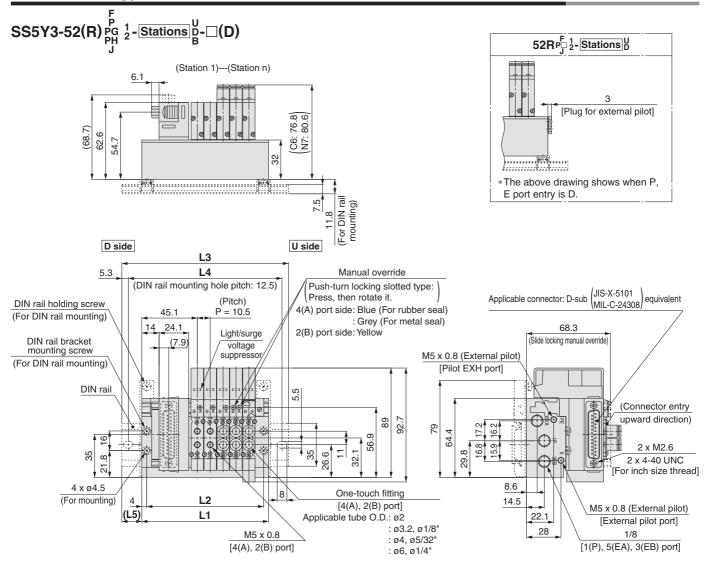


Note) These figures show the "SS5Y3-52F2-05B".

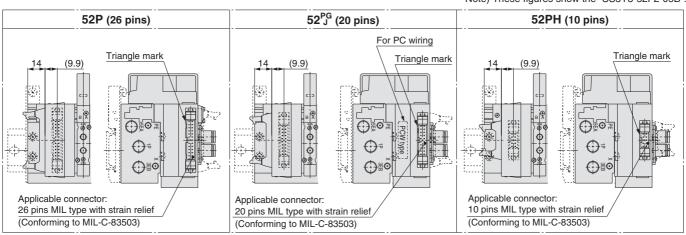


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

Specific Product Manifold
Precautions Options

Dimensions: Type 52/D-sub Connector, Flat Ribbon Cable/Series SY5000

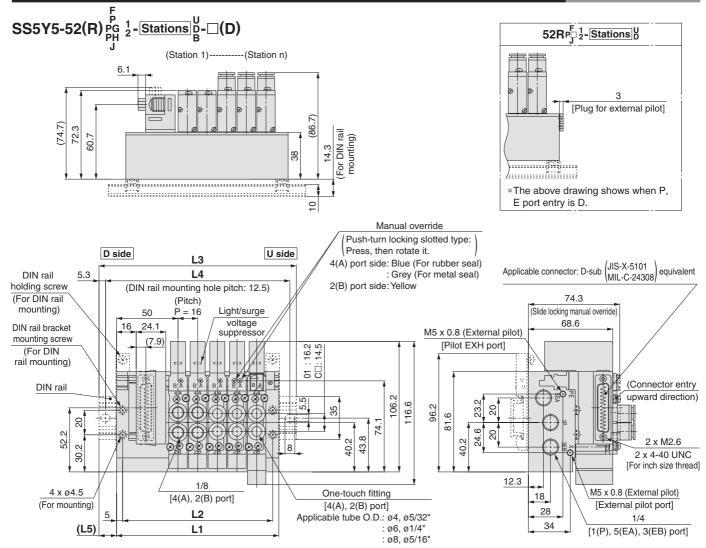


Note) These figures show the "SS5Y5-52F2-05B".

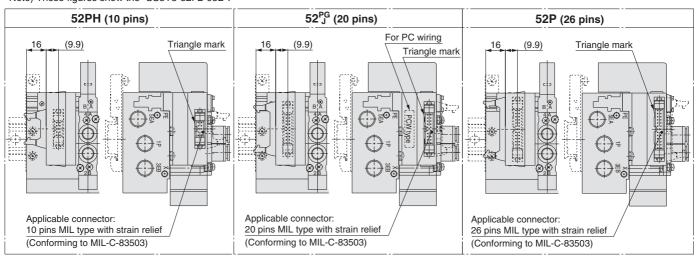


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Electrical Wiring Specifications

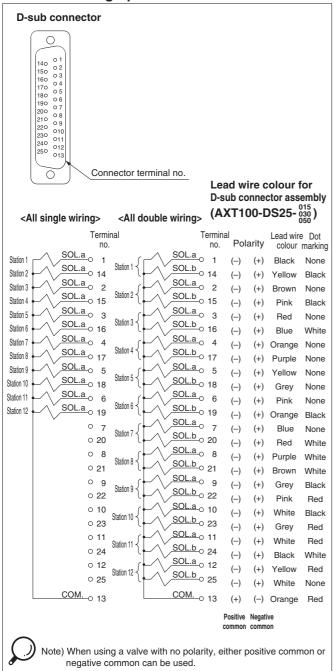

Cable Assembly

AXT100-DS25-030 050

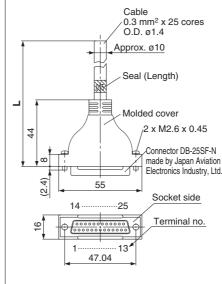

Lead wire colour for D-sub connector cable assembly by terminal number

Terminal no.	Lead wire colour	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Grey	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Grey	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Grey	Red
24	Black	White
25	White	None

D-sub connector cable assembly

Assembly part no.	Note
AXT100-DS25-015	Coble
AXT100-DS25-030	Cable 0.3 mm ² x 25 cores
AXT100-DS25-050	0.011111
	AXT100-DS25-015 AXT100-DS25-030

- When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.
- * Cannot be used for movable wiring.
- Lengths other than the above are also available. Please contact SMC for details.

Electrical characteristics C

Item	Property
ILEIII	Floperty
Conductor resistance /km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance M/km, 20°C	5 or more

Connector Manufacturers' Example

- Fujitsu, Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Hirose Electric Co., Ltd.




Note) The minimum bending radius of the D-sub connector cable is 20 mm.




Manifold Options

Specific Product

Electrical Wiring Specifications

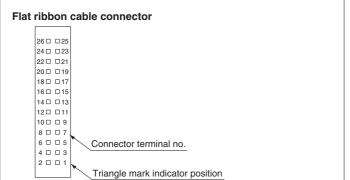


	P: Flat	ribbon c	able (26	pins)		
<all single<="" th=""><th>e wiring></th><th>> <aii< th=""><th>double w</th><th>iring></th><th>_</th><th></th></aii<></th></all>	e wiring>	> <aii< th=""><th>double w</th><th>iring></th><th>_</th><th></th></aii<>	double w	iring>	_	
	Termina			Terminal i	no. Pola	arity
Station 2 Station 3 Station 4 Station 5 Station 6 Station 7 Station 8 Station 7 Station 8 Station 10 Station 11 Station 12 Station 13 Station 14 Station 15 Station 15 Station 16 Station 17 Station 17 Station 17 Station 17 Station 18 Station 19 Station 19	Termina D. a 2 D. a 2 D. a 6 D. a 6 D. a 7 D. a 8 D. a 9 D. a 9 D. a 9 D. a 10 D. a 11 D. a 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0 24 DM. 0 25 DM. 0 26	Station 1 { Station 2 { Station 2 { Station 3 { Station 4 { Station 5 { Station 7 { Station 7 { Station 8 { Station 10 { Station 11 { Station 11 { Station 12 {	SOL:	1 2 0 1 2 1 2 1 0 1 0 1 1 1 1 1 1 1 1 1	(-) (-) (-) (-) (-) (-) (-) (-) (-) (-)	(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
1					r ositive	iveyative

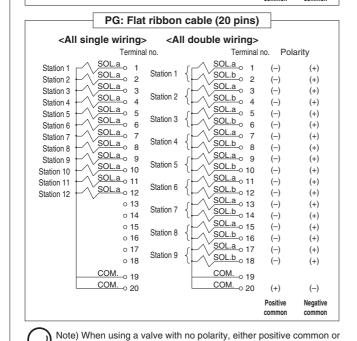

negative common can be used.

Cable Assembly

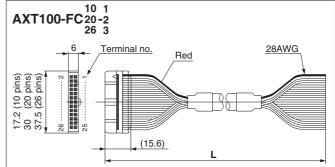

Flat ribbon cable connector assembly

Cable	Assembly part no.						
length (L)	26 pins	20 pins	10 pins				
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1				
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2				
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3				

- * When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- * Cannot be used for movable wiring.
- * Lengths other than the above are also available. Please contact SMC for

Connector Manufacturers' Example

- Hirose Electric Co., Ltd.
- Japan Aviation Electronics Industry, Ltd.
- Sumitomo 3M Limited
- J.S.T. Mfg. Co., Ltd.
- Fujitsu, Ltd.
- · Oki Electric Cable Co., Ltd.

PH: Flat ribbon cable (10 pins) <All single wiring> <All double wiring> Terminal no. Polarity Terminal no SOL.a ∘ 1 SOL.a o 1 Station 1 SOL.a 2 SOL.b 2 Station 2 SOL.a 3 SOL.a 3 Station 3 SOL.a 4 SOL.b Station 4 SOL.a 5 SOL.a o 5 Station 5 (+) SOL.b 6 SOL.a 6 Station 6 (+) SOL.a 7 SOL.a 7 Station 7 (+) SOL.a 8 Station 4 SOL.b 8 Station 8 (-)(+) СОМ. 9 COM. 9 COM. ○ 10 COM. ○ 10 (-) Positive Negative common common

J: Flat r	ibbon	cabl	e (20 pins) PC wiring	J]
<all single="" th="" wiring<=""><th>j></th><th colspan="3"><all double="" wiring=""></all></th><th></th></all>	j>	<all double="" wiring=""></all>			
Termir	ial Pola	arity	Termin	al Pola	arity
Station 1	(-) (-) (-) (-) (-) (-) (-) (-) (-) (-)	(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)	Sol.a 20 Sol.b 18 Sol.a 16 Sol.b 14 Sol.a 16 Sol.b 18 Sol.b 14 Sol.b 10 Sol.b 10 Sol.b 10 Sol.b 10 Sol.b 17 Sol.b 17 Sol.b 17 Sol.b 15 Sol.b 17 Sol.b 17 Sol.b 17 Sol.b 18 Sol.b 19 Sol.b 10 Sol	(-) (-) (-) (-) (-) (-) (-) (-) (-) (-)	(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
0 4			0 4		
COM. 0 2 COM. 0 1	(+) (+)	(-) (-)	COM. o 2	(+)	(-)
		Negative common			Negative common

Type 50 Side Ported


Type 51
Bottom Ported

Plug-in Metal Base

EX510

Series SY3000/5000 (€

How to Order Manifold

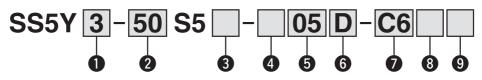

Series

3	SY3000					
5	SY5000					

3 SI unit output polarity

_	Positive common
N	Negative common

2 Type

50	Side ported						
51	Bottom ported						
50R	Side ported, External pilot						

* External pilot is not available for the bottom ported type.

6 P, E port entry

U	U side Note 1)
D	D side Note 1) Note 2)
В	Both sides

Note 1) Plugs are mounted on the opposite side of the selected ports.

Note 2) Only D side is available for Type 51 (Bottom ported).

A, B port size (Thread piping)

A, B port

M5 x 0.8

8 Thread type

_	Rc		
F	G		
N	NPT		
Т	NPTF		

4 Wiring type

_	All double wiring Note 1)
S	All single wiring Note 2)

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.


Note that 2-position double, 3- or 4-position valves cannot be used. Note 3) Please contact SMC if a mixture of single wiring and double wiring is required.

6 Valve stations

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All double	02	2 stations	All single
:	:		÷	:	All single
08	8 stations	wiring	12	12 stations	wiring

^{*} This also includes the number of blanking plate assembly.

How to Order Manifold Assembly

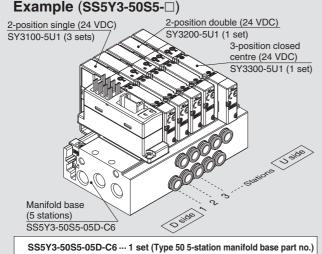

SS5Y3-50S5-05D-C6 ··· 1 set (Type 50 5-station manifold base part no *SY3100-5U1 ························ 3 sets (2-position single part no.) *SY3200-5U1 ·························· 1 set (2-position closed centre part no.) *SY3300-5U1 ·························· 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 44.

In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

01 1/8 02 1/4

Symbol

M5

Α,	A, B port size (Metric)							
Sy	/mbol	A, B port	SY3000	SY5000				
	C2	ø2 One-touch fitting		_				
5	C3	ø3.2 One-touch fitting	•	_				
Fixed	C4	ø4 One-touch fitting						
"	C6	ø6 One-touch fitting						
	C8	ø8 One-touch fitting	_					
	KC2	ø2 One-touch fitting		_	Type 50	Type 51		
e	KC3	ø3.2 One-touch fitting		_	(Side ported)	(Bottom ported)		
Seal	KC4	ø4 One-touch fitting						
Replaceable	KC6	ø6 One-touch fitting	•	•				
8	KC8	ø8 One-touch fitting	_	•				
	M*	Mixed sizes						
Р	P, E port size (Thread piping)			1/4				

SY3000 SY5000

A, B port size (Inch)

ŕ	/mbol	A, B port	SY3000	SY5000			
	N1	ø1/8" One-touch fitting	•	_			
Fixed	N3	ø5/32" One-touch fitting	•				
iĚ	N7	ø1/4" One-touch fitting					
	N9	ø5/16" One-touch fitting	_				
m	KN1	ø1/8" One-touch fitting		_	Type 50 (Side ported)	Type 51 (Bottom ported)	
aple	KN3	ø5/32" One-touch fitting			(Side ported)	(Bottom ported)	
ace	KN7	ø1/4" One-touch fitting					
Replaceable	KN9	ø5/16" One-touch fitting	_				
	M*	Mixed sizes					
P	, E por	t size (Thread piping)	1/8	1/4			

* When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

9 Mounting

9	w								
_	Direct mounting								
D	DIN rail mounting (With DIN rail)								
D0	DIN rail mounting (Without DIN rail)								
D3	For 3 stations	0							
:	:	Specify a longer rail than the standard length.							
D12	For 12 stations	the standard length.							


 Only direct mounting is available for Type 51 (Bottom ported).

Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX510 Gateway-type Serial Transmission System.



How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

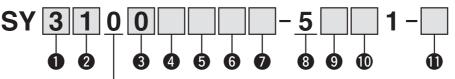

♦ Base mounted

1 Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single					
2	2-position double					
3	3-position closed centre					
4	3-position exhaust centre					
5	3-position pressure centre					
A *	4-position dual 3-port valve (N.C./N.C.)					
B *	4-position dual 3-port valve (N.O./N.O.)					
C*	4-position dual 3-port valve (N.C./N.O.)					

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal	
1	Metal seal	

4 Pilot type

Internal pilot					
External pilot					

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

	•
_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Oon type						
_	Standard					
Т	With power saving circuit (Continuous duty type)					

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage

	<u> </u>
5	24 VDC


9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)					
U	With light/surge voltage suppressor (Non-polar)					
S	S With surge voltage suppressor (Positive common)					
Z	Z With light/surge voltage suppressor (Positive common)					
NS	With surge voltage suppressor (Negative common)					
NZ	NZ Without light/surge voltage suppressor (Negative commo					

* Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve from R, U, S or Z when the SI unit output polarity is positive common.

Select a valve from R, U, NS or NZ when the SI unit output polarity is negative common.


Manual override

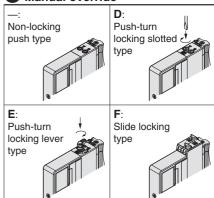

Type of mounting screw

	_	Round head combination screw				
	В	Hexagon socket head cap screw				
	K	Round head combination screw (Falling-out-prevention type)				
	Hexagon socket head cap screw (Falling-out-prevention type)					


- *For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
 - Refer to page 47 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

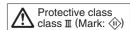



Dimensions: Type 50/EX510/Series SY3000

SS5Y3-50(R)S5 - Stations D - C - , N - C - (D)

(Station 1)---(Station n) (Slide locking manual override) 68.3 65.6 62.6 32 ဖ 22 (For DIN rail mounting) C2, C3: 5.4 One-touch fitting C4, C6: 6.6 [4(A), 2(B) port] Applicable tube O.D.: ø2 C2, C3: 42.4 (Pitch) : ø3.2, ø1/8" C4, C6: 41.8 P = 10.5: ø4, ø5/32"

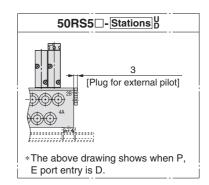

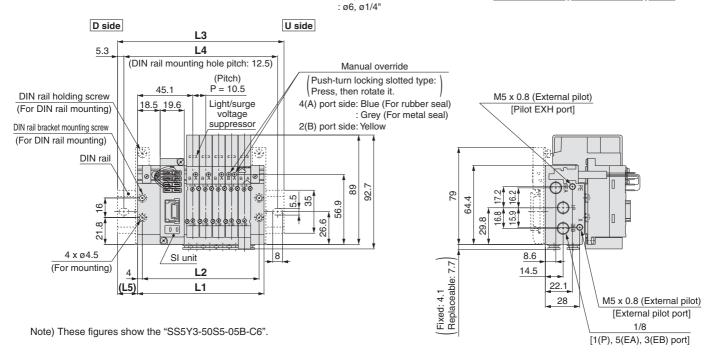

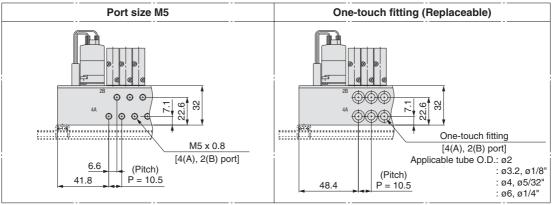



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


Specific Product Precautions

Dimensions: Type 50/EX510/Series SY3000

SS5Y3-50(R)S5□-Stations D-01□(D)

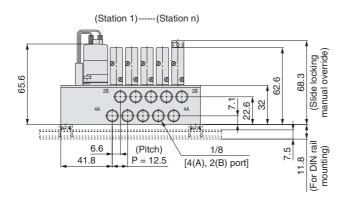

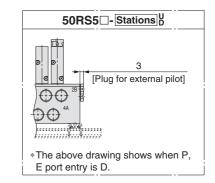

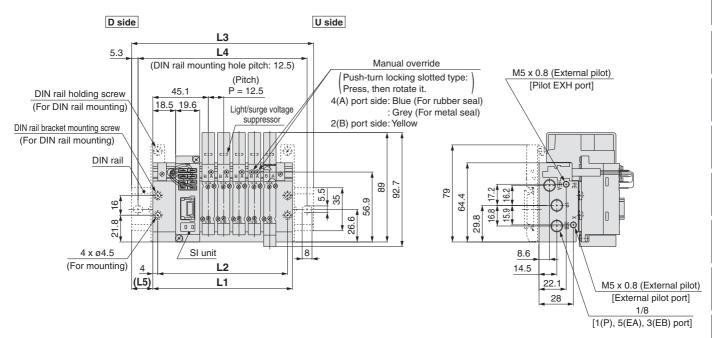



Note) These figures show the "SS5Y3-50S5-05B-01".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5


Dimensions: Type 50/EX510/Series SY5000

SS5Y5-50(R)S5 - Stations D - C -, N - U 01, N

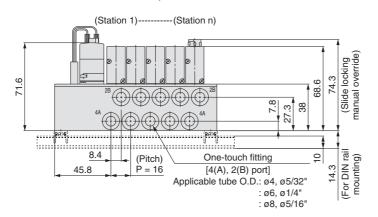

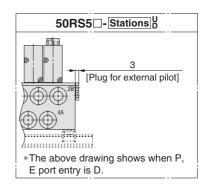

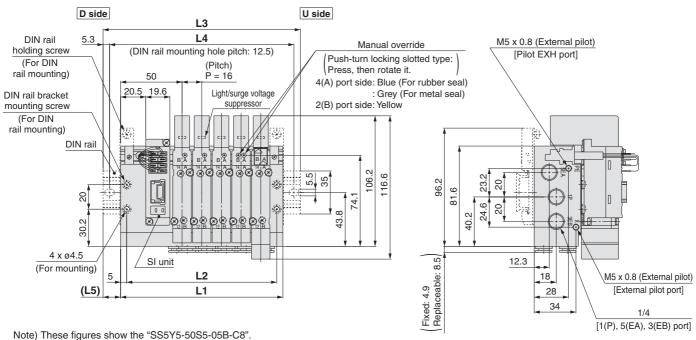


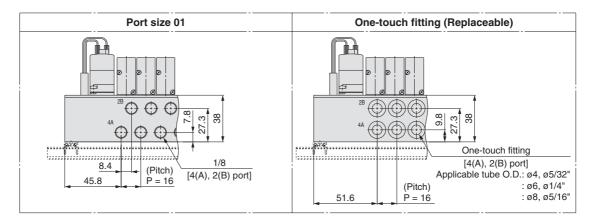



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

EX510

Dimensions: Type 50/EX510/Series SY5000

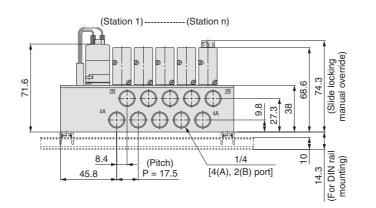

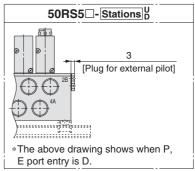


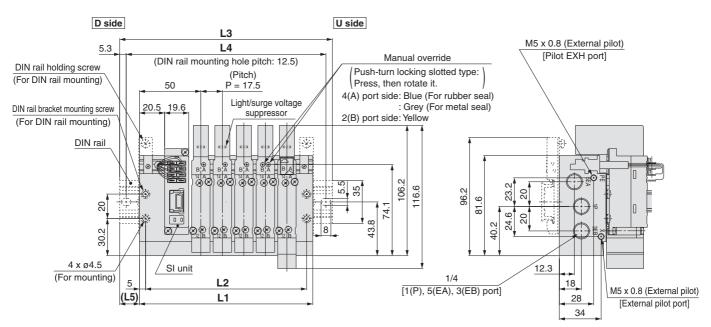

Note) These figures show the "SS5Y5-50S5-05B-02".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

Dimensions: Type 51/EX510/Series SY3000

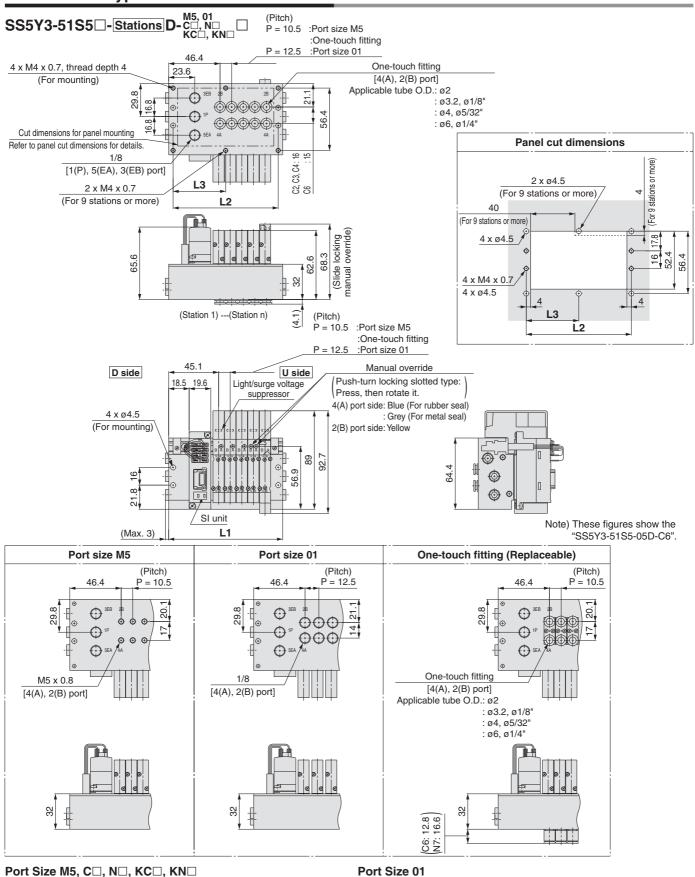

n: Stations

L1

L2

L3

2

76 88.5

68

3

80.5

4

101 113.5

93 | 105.5

5

6

126

118

7

138.5

130.5

9

163.5

155.5

10

176

168

11

188.5 201

180.5

90.3 96.5

8

151

143

12

193

n: Stations

L₁

L2

L3

2

71.5

63.5

4 5

92.5

84.5

103 | 113.5

95 | 105.5

3

82

74

6

7

124

116

9

8

134.5 145

126.5 137

11

166

158

10


155.5


147.5

12

176.5

168.5

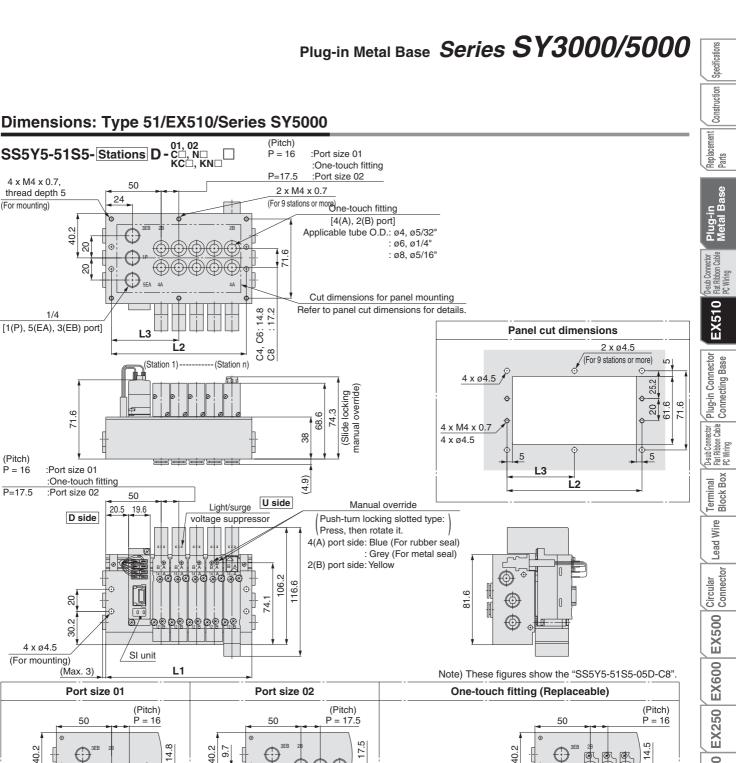

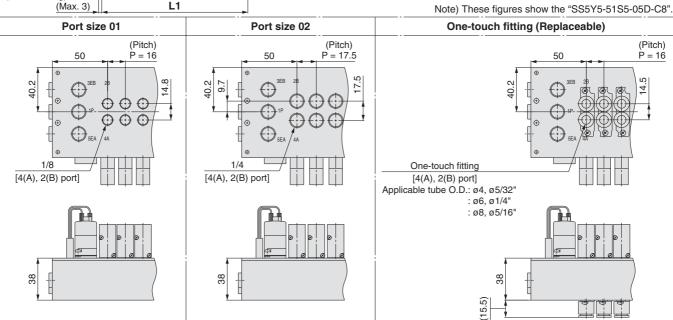

Port Size 02

2

88.5

78.5

3

106

96 113.5

4

123.5

5

141

131

6

158.5

148.5

176

166

8

193.5 211

183.5 201

9

100.5 109.3

10

228.5

218.5

11

246

236

n: Stations

L2

L3

SMC

01, 02 C□, N□ □ KC□, KN□

P=17.5

7

88

(4.9)

106.2

74.1

. 06:

Light/surge U side

voltage suppressor

--- (Station n)

0,4 0,8

SS5Y5-51S5-Stations D

50

(Station 1)

####

30 30 30 30 30

24

4 x M4 x 0.7.

thread depth 5

1/4 [1(P), 5(EA), 3(EB) port]

7

:Port size 01

:Port size 02

:One-touch fitting

D side

Port Size 01, C□, N□, KC□, KN□

4

116 132

5

122

6

148 164

138

154

8

180

170

9

196

186

93

10

212

11

228

3

100

90 106

n: Stations

L1

L2

L3

2

84

74

50

0

SI unit

20.5 19.6

(For mounting)

(Pitch)

P = 16

P=17.5

4 x ø4.5

(For mounting)

234 202 218 101 109 117

12

244

42

12

263.5

253.5

126.8

EX260 EX126

EX120 One-touch Fittings and Plug Assembly/ Part No.

Manifold Options Specific Product


Plug-in Metal Base

EX510

Type 52 Top Ported

Series SY3000/5000 C€

How to Order Manifold

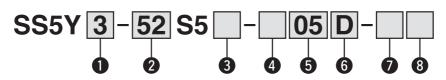

Series

3	SY3000
5	SY5000

2 Type

52	Top ported
52R	Top ported, External pilot

3 SI unit output polarity

	Positive common
N	Negative common

4 Wiring type

_	All double wiring Note 1)
S	All single wiring Note 2)

- Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used.

Note 3) Please contact SMC if a mixture of single wiring and double wiring is required.

5 Valve stations

Symbol	Stations	Note	
02	2 stations	All double	
:	:	wiring	
08	8 stations	wiiiig	
02	2 stations	All single	
:	:	wiring	
12	12 stations	wiiiig	


* This also includes the number of blanking plate assembly.

6 P, E port entry

U	U side Note)
D	D side Note)
В	Both sides

Note) Plugs are mounted on the opposite side of the selected ports.

How to Order Manifold Assembly

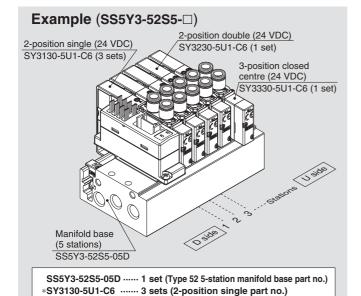

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification

*SY3230-5U1-C6 1 set (2-position double part no.)

*SY3330-5U1-C6 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly.

Prefix it to the part nos. of the valve, etc.

Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX510 Gateway-type Serial Transmission System.

7 Thread type

_	Rc
00F	G
00N	NPT
00T	NPTF


8 Mounting

_	Direct mounting				
D	DIN rail mounting (With DIN rail)				
D0	DIN rail mounting (Without DIN rail)				
D3	For 3 stations	Consider a lamana mail than			
	:	Specify a longer rail than the standard length.			
D12	For 12 stations				



How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

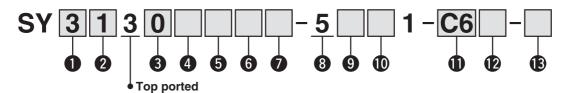

1 Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B *	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	7.
0	Rubber seal
1	Metal seal

A Pilot type

Pilot type		
_	Internal pilot	
R	External pilot	

Back pressure check valve (Built-in valve type)

— None		
Н		Built-in

- * Only rubber seal type
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_		
_	— Standard (0.7 MPa)	
B Quick response type (0.7 MPa)		
K*	High pressure type (1.0 MPa)	

* Only metal seal type is available for the high pressure type.

Coil type

		71
— Standard		Standard
	Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage


5	24 VDC
---	--------

9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)

* Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve from R, U, S or Z when the SI unit polarity is — (Positive common). Select a valve from R, U, NS or NZ when the SI unit output polarity is N (Negative common).

Manual override

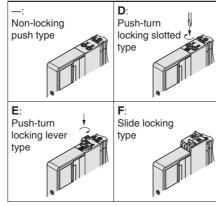

A, B port size

Thread piping

micau piping		
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

one todan numg (means)			
Symbol	A, B port	SY3000	SY5000
C2	ø2 One-touch fitting		_
C3	ø3.2 One-touch fitting		_
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	_	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting	_	

12 Thread type

	7.1	
_	Rc	
F	G	
N	NPT	
Т	NPTF	

* Only — is available for M5.

13 Type of mounting screw

_ ,.	
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head can screw (Falling-out-prevention type)


- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 47 for part numbers of the base gasket and mounting screw.


* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

Dimensions: Type 52/EX510/Series SY3000

SS5Y3-52(R)S5□-Stations D-□(D)

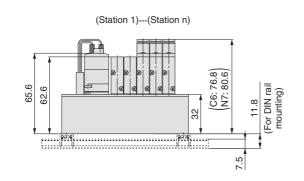

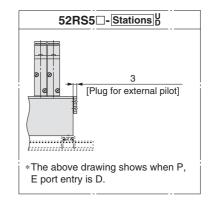

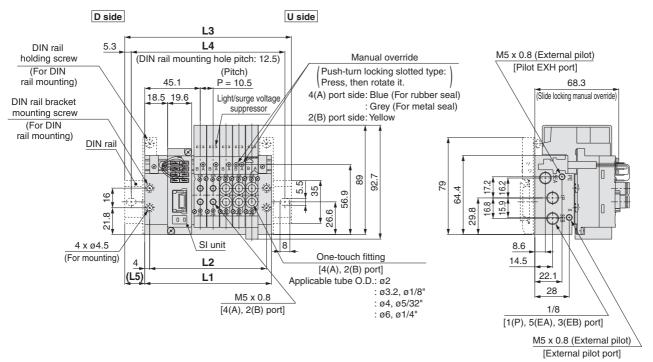

Note) These figures show the "SS5Y3-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17





One-touch Fittings and Plug Assembly/ Part No.


Manifold Options Specific Product

Dimensions: Type 52/EX510/Series SY5000

$SS5Y5-52(R)S5\Box - \underline{Stations} \overset{U}{\overset{}{p}} - \Box(D)$

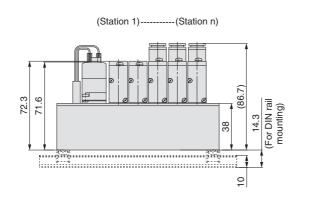

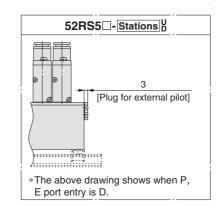


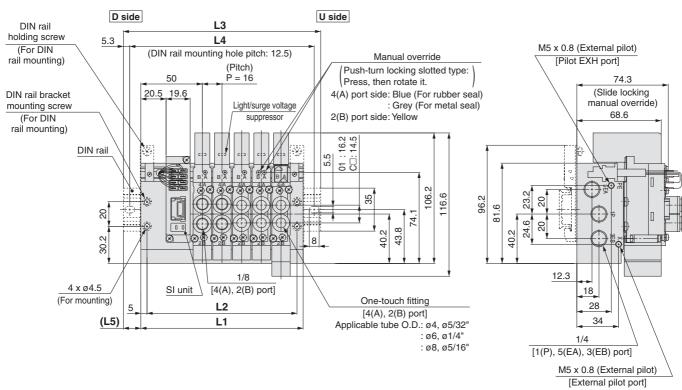

Note) These figures show the "SS5Y5-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Series SY3000/5000 Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View

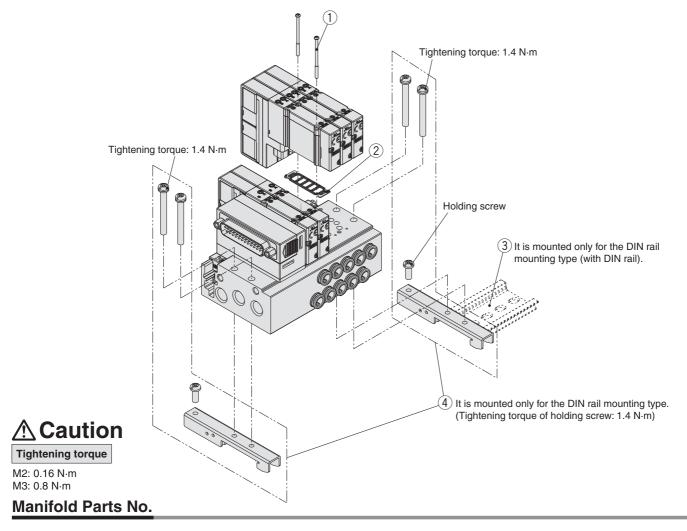

No.	Description		Par	t no.	Note
INO.			SY3000	SY5000	Note
(1)	Valve mounting screw	Round head combination screw	SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	Part numbers shown on the left are for 10 valves (20 pcs.).
	valve mounting screw	Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	Part numbers shown on the left are for 10 valves (20 pcs.).
2	Base gasket (for plug-in metal base)		SY30M-11-1A	SY50M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
3	DIN rail		VZ1000-11-1-□	VZ1000-11-4-□	Refer to page 140.
4	Clamp bracket assembly (for plug-in metal base)		SY30M-15-2A	SY50M-15-2A	Part numbers shown on the left are for the clamp bracket assembly for one manifold (two sets of clamp brackets).

■Blanking plate assembly (With two mounting screws)


Used when expecting valve additions, or for maintenance. A structure to prevent screws falling out is in place on the blanking plate, making it much harder for the mounting screws to fall out.

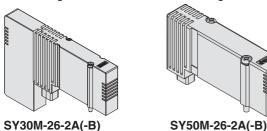

Refer to pages 149 and 151 for dimensions.

Refer to pages 141 to 148 for individual SUP/EXH and other options.

How to Order Blanking Plate Assembly

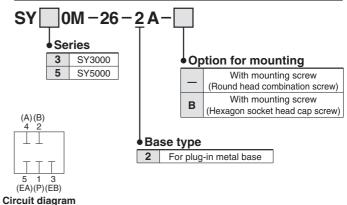




Type 10 Side Ported Type 11 **Bottom Ported**


Plug-in Connector Connecting Base

D-sub Connector (IP40/IP67) X Flat Ribbon Cable (IP40) X PC Wiring (IP40)

Series SY3000/5000


How to Order Manifold

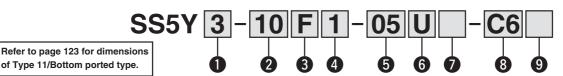

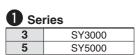


2 Ty _l	ре
10	Side ported
11	Bottom ported*

The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

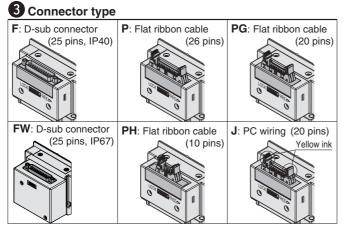

How to Order Manifold Assembly

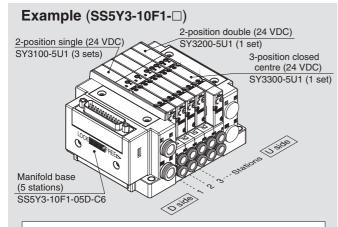

 $\ensuremath{\mathsf{SS5Y3\text{--}10F1-05D\text{--}C6}}{}\cdots 1$ set (Type 10 5-station manifold base part no.) *SY3100-5U1----- 3 sets (2-position single part no.)


*SY3200-5U1------ 1 set (2-position double part no.) *SY3300-5U1...... 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

- The valve arrangement is numbered as the 1st station from the D side.
- · Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 56 In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

4 Connector entry direction

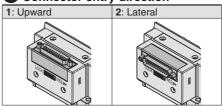

Valve stations

F/FV	V : D-s	ub connector (25 pins)	P: Flat ribbon cable (26 pins)			
Symbol	Stations	Note	Symbol	Stations	Note	
02	2 stations		02	2 stations		
:	:	Double wiring Note 1)	:	:	Double wiring Note	
12	12 stations		12	12 stations		
02	2 stations	Specified Javout Note 2)	02	2 stations	Specified Javout Note	

Symbol	Stations	Note		Symbol	Stations	Note
02	2 stations			02	2 stations	
:	:	Double wiring Note 1)	ĺ	:	:	Double wiring Note 1)
12	12 stations			12	12 stations	
02	2 stations	Specified layout Note 2)		02	2 stations	Specified layout Note 2
:	:	(Available up to		:		(Available up to
24	24 stations	24 solenoids)		24	24 stations	24 solenoids)
DO				D		

PG: Flat ribbon cable (20 pins)

<u>. u.</u>	Παιπ	bboli cable (20 pilis)	
Symbol	Stations	Note	
02	2 stations		
- :	:	Double wiring Note 1)	
09	9 stations		
02	2 stations	Specified layout Note 2)	
:	:	(Available up to	
18	18 stations	18 solenoids)	

PH: Fla	at ribbo	n cable (10) pins)
Symbol Sta	itions	Note	

1	Symbol	Stations	Note
]	02	2 stations	
	:	:	Double wiring Note 1)
	04	4 stations	
	02	2 stations	Specified layout Note 2)
	:	:	(Available up to
	08	8 stations	8 solenoids)

J: PC wiring (20 pins)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
08	8 stations	
02	2 stations	Specified layout Note 2)
:	:	(Available up to
16	16 stations	16 solenoids)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

6 P. F port entry

• ,	= port ontry
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

Refer to the page on the right for 8.

SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

* 3/5(E) port is plugged for the

9 Mounting and Option

Symbol	Mounting	Option
_	Direct mounting	None
AA		Name plate (With station number)
BA		Name plate (Without station number)
D□	DINI "	Without name plate
A□	DIN rail mounting	Name plate (With station number)
B□		Name plate (Without station number)

built-in silencer type. **DIN Rail Option**

ont rian option					
_	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Specify a longer rail			
:	:	than the total length			
24	For 24 stations	of specified stations.			

Note 1) Enter the number of stations inside \square . (Refer to "DIN Rail Option" below.) Note 2) Only direct mounting is available for Type 11 (Bottom ported).



Manifold Options

Circular Connector

EX500

EX250

EX260 EX126

Specific Product Precautions

8 A, B port size (Metric)

			Type Side p	e 10/ ported	Type 11/ Bottom ported		
Symbol		A, B port		SY3000		SY5000	
C2		ø2	One-touch fitting	•	_	_	
СЗ		ø3	.2 One-touch fitting	•	_	_	
C4	ight	ø4	One-touch fitting	•	•	•	
C6	Straight	ø6	One-touch fitting	•	•	•	
C8	0,	ø8	One-touch fitting	_			01983
CM*		Stı	aight port, mixed sizes		•	•	
L4		rd	ø4 One-touch fitting		•	_	
L6		pward	ø6 One-touch fitting	•	•	_	
L8	ote)		ø8 One-touch fitting	_		_	ol Sasser
B 4	Elbow Note)	ard	ø4 One-touch fitting			_	
B6	oq!:	Downward	ø6 One-touch fitting		•	_	
B8	۱"	Do	ø8 One-touch fitting	_		_	Told the second
LM*	Elbow port, mixed sizes (Including upward and downward pipin		•	•	_		
P, E	port size (One-touch fittings)			ø8	ø10	ø10	
Note) To avoid interference with the body or nining, coloct downward alboy							


A. B port size (Inch)

Symbol	A B nort			e 10/ ported	Type 11/ Bottom ported		
Syllibol			A, B port	SY3000	SY5000	SY5000	
N1		ø1	/8" One-touch fitting	•	_	_	
N3	þ	ø5	/32" One-touch fitting	•		•	
N7	Straight	ø1	/4" One-touch fitting	•	•	•	
N9	Š	ø5	/16" One-touch fitting	_	•	•	0 0 0 0 0
CM*		Str	aight port, mixed sizes	•		•	
LN3		rd	ø5/32" One-touch fitting		_	_	
LN7		pward	ø1/4" One-touch fitting	•	•	_	
LN9	Note)		ø5/16" One-touch fitting	_		_	el Sassan
BN3	ž ≥	ard	ø5/32" One-touch fitting	•	_	_	
BN7	Elbow	ownward	ø1/4" One-touch fitting			_	
BN9	Ш	ρo	ø5/16" One-touch fitting		•	_	
LM*			ow port, mixed sizes uding upward and downward piping)	•	•	_	
P, E	P, E port size (One-touch fittings)				ø3/8"	ø3/8"	

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

- * Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction

How to Order Valves (With two mounting screws) Refer to page 8 for valve specifications.

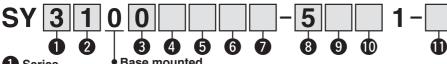

Series	• Dase mounted	
3	SY3000	
5	SY5000	

Type of actuation

Type of actuation				
1	2-position single			
2	2-position double			
3	3-position closed centre			
4	3-position exhaust centre			
5	3-position pressure centre			
A *	4-position dual 3-port valve (N.C./N.C.)			
B*	4-position dual 3-port valve (N.O./N.O.)			
C*	4-position dual 3-port valve (N.C./N.O.)			

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

Pilot type

U	-1.1) -
_	Internal pilot
R	External nilot

Back pressure check valve

	(Built iii vaive type)	
_	None	
Н	Built-in	

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

9 1 1101 1		
	_	Standard (0.7 MPa)
	В	Quick response type (0.7 MPa)
	K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Cail turns

	ii type
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor

ani	a confinion specification
_	Without light/surge voltage suppressor (Non-polar)
R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common

* Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

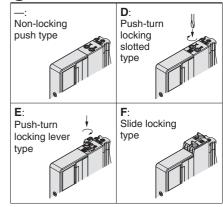


Type of mounting screw

<u>ועי עטע</u>	be of infounding screw
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 136 for part numbers of the base gasket and mounting screw.


"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

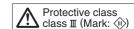





Dimensions: Type 10/D-sub Connector/Series SY3000

SS5Y3-10F₂-Stations D-C2, N1 (D)

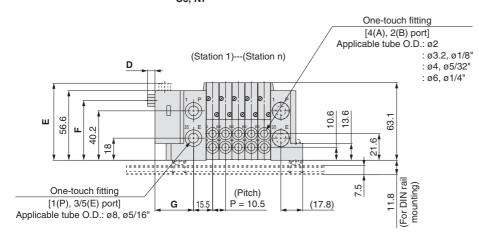

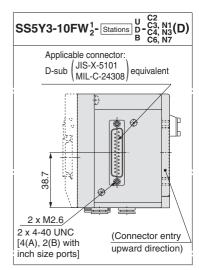

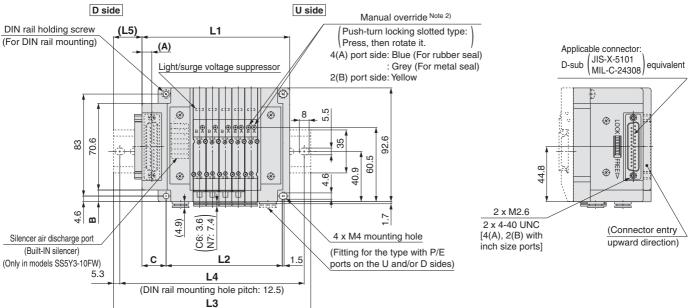

Note 1) These figures show the "SS5Y3-10F2-05D-C6".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 124 for dimensions of A or B port top-ported type.

Model	Α	В	С	D	Е	F	G
SS5Y3-10F	8	9.5	19.6	6.1	62.7	48.6	31.4
SS5Y3-10FW	15	3.4	36.5	4.5	61.1	18	48.3

Note) Measures to any number of stations.

SS5Y3-10F - 1 Stations - U C2 C3, N1 (D)


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5


SS5Y3-10FW₂¹- Stations - U C3, N1 (D)


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5	242	252.5	263	273.5	284	294.5	305	315.5	326	336.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5


Dimensions: Type 10/D-sub Connector/Series SY5000

SS5Y5-10F₂¹-Stations D-C6, N7 (D)

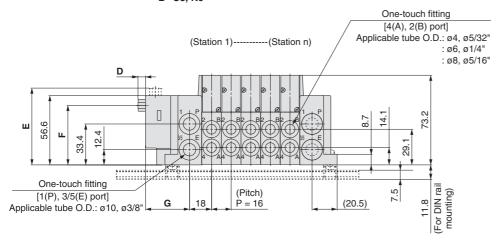

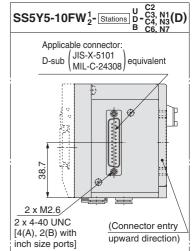

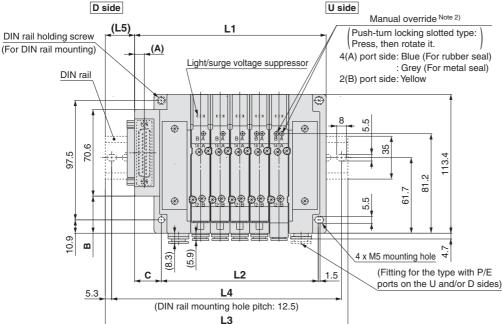

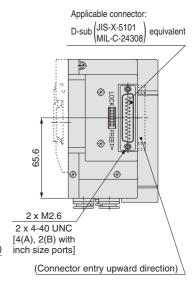

Note 1) These figures show the "SS5Y5-10F2-05D-C8".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 124 for dimensions of A or B port top-ported type.

Model	Α	В	С	D	Е	F	G
SS5Y5-10F	8	30.3	21.9	6.1	62.7	48.6	35.9
SS5Y5-10FW	15	24.2	38	4.5	61.1	23	50

Note) Measures to any number of stations.

SS5Y5-10F - 1 Stations - U C3, N1 (D)

				D C0,	147																		
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

SS5Y5-10FW₂¹- Stations - U C3, N1 (D)

					CO, 147																		
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	362.5	378.5	394.5	410.5	426.5	442.5	458.5	474.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	500
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5

Replacement Co

Cable Metal Base

EX510 Psub Connector Flat Ribbon Cable PC Wiring

nnector Plug-in Co on Cable Connectin

Terminal D-sub Connec Flat Ribbon C Block Box PC Wiring


EX500 Circular Lead Wire

EX126 EX260 EX250 EX600 EX500

One-touch Fittings and Plug Assembly/ Part No.

Specific Product Manifold One-to

Dimensions: Type 10/Flat Ribbon Cable/Series SY3000

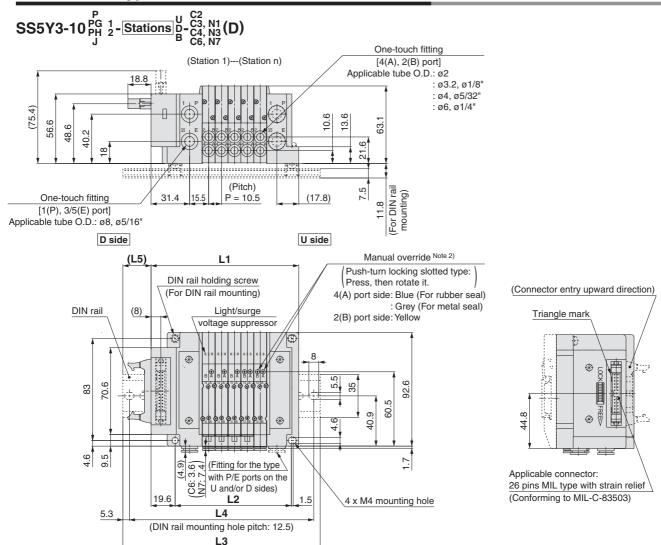


Note 1) These figures show the "SS5Y3-10P2-05D-C6".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


Note 3) Refer to page 124 for dimensions of A or B port top-ported type.


Note 4) Only connectors are different for 10PG, 10PH and 10J. L1 to L5 dimensions are the same as 10P type.

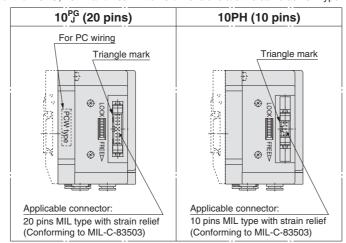


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5

Dimensions: Type 10/Flat Ribbon Cable/Series SY5000

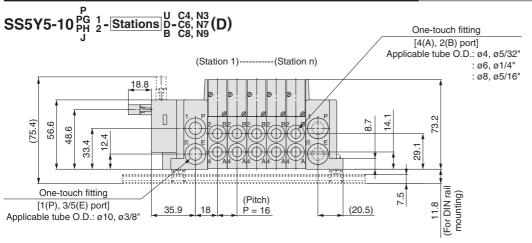

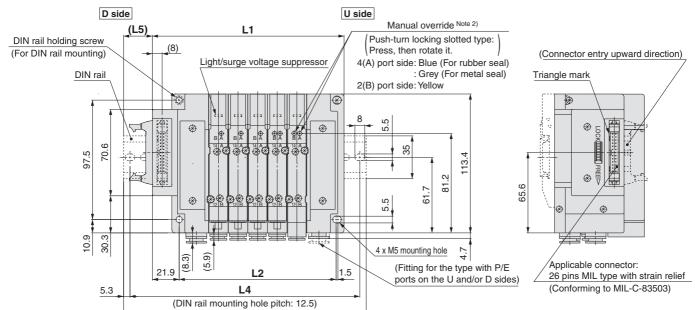

- Note 1) These figures show the "SS5Y5-10P2-05D-C8".
- Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- Note 3) Refer to page 125 for dimensions of A or B port top-ported type.
- Note 4) Only connectors are different for 10PG, 10PH and 10J. L1 to L5 dimensions are the same as 10P type.

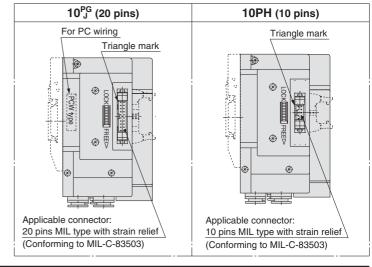

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

Plug-in Metal Base D-sub Connector Flat Ribbon Cable PC Wiring

Lead Wire Circular

EX126 | EX260 | EX250 | EX600 | EX500

EX120

One-touch Fittings and Plug Assembly/ Part No. Manifold Options

Specific Product


Plug-in Connector Connecting Base

D-sub Connector (IP40/IP67) X Flat Ribbon Cable (IP40) X PC Wiring (IP40)

Type 12 Top Ported

Series SY3000/5000


How to Order Manifold

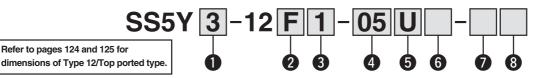

Series

3	SY3000
5	SY5000

2 Connector type

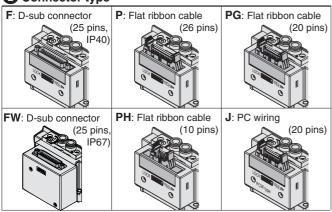


6 P, E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

Note) 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P

How to Order Manifold Assembly

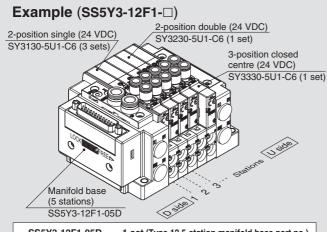

SS5Y3-12F1-05D 1 set (Type 12 5-station manifold base part no.) *SY3130-5U1-C6 3 sets (2-position single part no.)

*SY3230-5U1-C6 1 set (2-position double part no.)


*SY3330-5U1-C6 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

• The valve arrangement is numbered as the 1st station from the D side.

• Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet

3 Connector entry direction

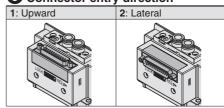

4 Valve stations

F/FW: D-sub connector (25 pins) mbol Stations **02** 2 stations Double wiring Note 1)

12 12 station **02** 2 stations Specified layout Note 2) (Available up to 24 solenoids)

PG: Flat ribbon cable (20 pins) PH: Flat ribbon cable (10 pins)

02

Symbol Stations

02 2 stations

12 12 stations

24 stations

Symbol	Stations	Note	Symbol	Stations
02	2 stations		02	2 stations
	:	Double wiring Note 1)	:	:
09	9 stations		04	4 stations
02	2 stations	Specified layout Note 2)	02	2 stations
:	:	(Available up to	:	:
18	18 stations	18 solenoids)	80	8 stations

Symbol Stations **02** 2 stations Double wiring Note 1) 08 8 stations 02 2 stations Specified layout Note 2) (Available up to 16 solenoids)

J: PC wiring (20 pins)

16 16 stations

8 solenoids) Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold

P: Flat ribbon cable (26 pins)

Double wiring Note 1)

Specified layout Note 2)

(Available up to

24 solenoids)

Double wiring Note 1)

Specified layout Note 2) (Available up to

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

6 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot,Built-in silencer
R	External pilot

* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

P, E port size

(One-touch littings)			
Symbol	SY3000	SY5000	
_	ø8	ø10	
N	ø5/16"	ø3/8"	

* For N, sizes are in inches.

8 Mounting


_	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer	
:	:	rail than the	
D24	For 24 stations	standard length.	



20

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

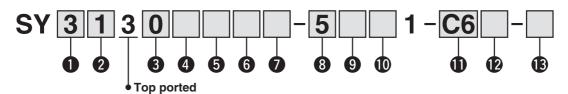

Series

<u> </u>	
3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

O con type	
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

_	Without light/surge voltage suppressor (Non-polar)
R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)

 Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

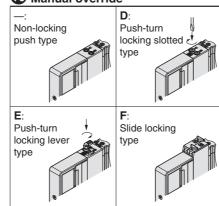

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

	10 11011 11111113 (
Symbol	A, B port	SY3000	SY5000
C2	ø2 One-touch fitting		_
C3	ø3.2 One-touch fitting		_
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	_	•

One-touch fitting (Inch)

	<u> </u>			
Symbol	A, B port	SY3000	SY5000	
N1	ø1/8" One-touch fitting		_	
N3	ø5/32" One-touch fitting			
N7	ø1/4" One-touch fitting	•	•	
N9	ø5/16" One-touch fitting	_	•	

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF

* Only — is available for M5.

13 Type of mounting screw


- /	3
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 136 for part numbers of the base gasket and mounting screw.


* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

Electrical Wiring Specifications

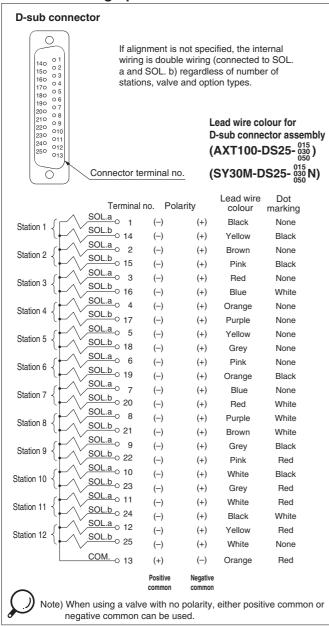

Specified Layout


(25 pins)

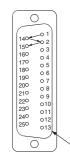

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position. COM.

Cable Assembly (IP40)

AXT100-DS25-030

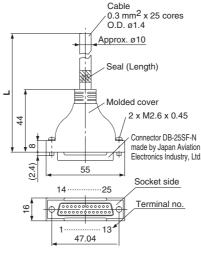

D-sub connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable
3 m		0.3 mm ² x 25 cores
5 m	AXT100-DS25-050	0.511111 X 25 COIES

- * When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.
- Cannot be used for movable wiring.
- * Lengths other than the above are also



- available. Please contact SMC for details.

Electrical characteristics | Connector Manufacturers' Example

15

16

17

18

19

20

21

22

23

24

25

Pink

Blue

Purple

Grey

Orange

Red

Brown

Pink

Grey

Black

White

Black

White

None

None

Black

White

White

Red

Red

White

None

Item	Property
Conductor resistance Ω/km , 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more


- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.

• Fujitsu, Ltd.

· Hirose Electric Co., Ltd

Note) The minimum bending radius of the D-sub connector cable is 20 mm.


Cable Assembly (IP67)

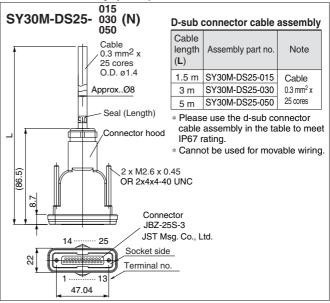




20

Electrical Wiring Specifications

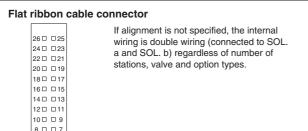

Triangle mark indicator position


Connector terminal no.

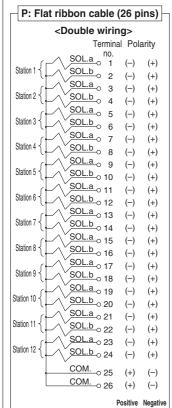

6 🗆 🗆 5


4 🗆 🗆 3


2 🗆 🗆 1

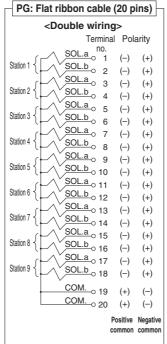


PH: Flat ribbon cable (10 pins) <Double wiring> Terminal Polarity no. SOL.a ○ 1 (+) Station 1 SOL.b 2 (-)(+)SOL.a 3 (-)(+) Station 2 SOL.b 0 4 (-)(+)SOL.a 5 (-)(+)SOL.b 6 Station 3 (-)(+) SOL.a o 7 (-)(+) Station 4 SOL.b 8 (-)(+) COM. o 9 (+) (-)COM. ○ 10 (+) (-) Positive Negative common common

common common

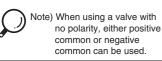

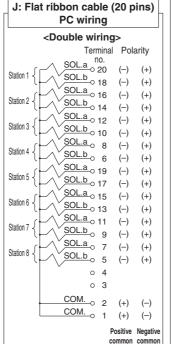

Cable Assembly

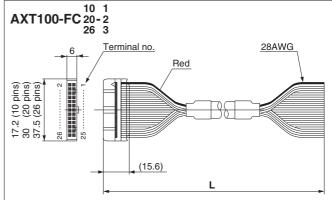

Flat ribbon cable connector assembly


Cable		Assembly part no.	
length (L)	26 pins	20 pins	10 pins
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3


- * When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- * Cannot be used for movable wiring
- * Lengths other than the above are also available. Please contact SMC for details.

Connector Manufacturers' Example

- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu, Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd..

Specified Layout

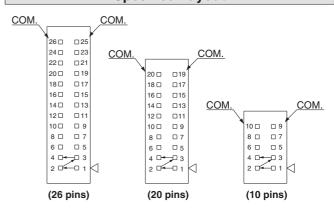

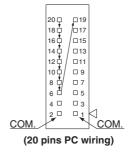

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.


Type 10 Side Ported **Type 11 Bottom Ported**

Plug-in Connector Connecting Base

Terminal Block Box

Series SY3000/5000 C€

How to Order Manifold

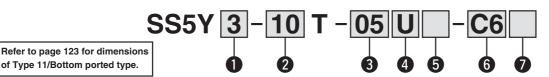

Series

3	SY3000
5	SY5000

2 Type

- 1/10	
10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

3 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
10	10 stations	-
02	2 stations	Cracified Invest Note 2)
•	:	Specified layout Note 2) (Available up to 20 solenoids)
20	20 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

P. E port entry

<u> </u>	 •
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)


5 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 6.

How to Order Manifold Assembly

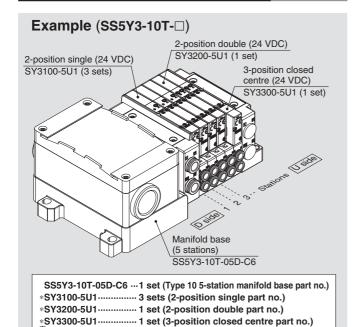

becomes complicated, specify on a manifold specification sheet. Note) When mixing top ported configurations, select from page 64. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

• The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement

Mounting and Option

Symbol	Mounting	Option
Nil	<u>.</u>	None
AA	Direct mounting	Name plate (With station number)
BA	mounting	Name plate (Without station number)
D□	DIN well	Without name plate
A□	11100011111111111111111111111111111111	Name plate (With station number)
B□		Name plate (Without station number)

Note 1) Enter the number of stations inside \square . (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

DIN Rail Option

•				
_	Direct mounting			
0	Without DIN rail (with bracket)			
3	For 3 stations	Consider a language wail the on the		
:	:	Specify a longer rail than the total length of specified stations.		
24	For 24 stations	total length of specified stations.		



Specific Product Precautions

6 A, B port size (Metric)

Symbol	A, B port			e 10/ ported	Type 11/ Bottom ported										
Syllibol			A, b port	SY3000	SY5000	SY5000									
C2		ø2	One-touch fitting	•	_	_									
C 3		ø3	.2 One-touch fitting	•	_	_									
C4	ight	ø4	One-touch fitting	•	•	•									
C6	Straight	ø6	One-touch fitting	•	•	•									
C8	"	ø8	One-touch fitting	_	•	•	o I Singer								
CM*		Stı	raight port, mixed sizes	•	•	•									
L4		5	ø4 One-touch fitting	•	•	_									
L6	- 1			pward	ø6 One-touch fitting		•	_							
L8		ž	ø8 One-touch fitting	_	•	_	9 9 9 9								
B4		w wodi:	EIDOW N	ard	ard	ard	ard	ard	ard :	ard ∝	ø4 One-touch fitting	•	•	_	
B6				ø6 One-touch fitting	•	•	_								
B8	ا ا ا		ø8 One-touch fitting	_	•	_	Tell Property of the Property								
LM*	Elbow port, mixed sizes (Including upward and downward piping)			•	•	_									
P, E	P, E port size (One-touch fittings)			ø8	ø10	ø10									
	_														

A, B port size (Inch)

	· · · · · · · · · · · · · · · · · · ·						
Symbol	A, B port		Side p	e 10/ ported	Type 11/ Bottom ported		
				SY3000	SY5000	SY5000	
N1		ø1	/8" One-touch fitting			_	
N3	Ħ	ø5	/32" One-touch fitting				
N7	traight	ø1	/4" One-touch fitting				
N9	St	ø5	/16" One-touch fitting	_	•	•	0 1585
CM*		Str	raight port, mixed sizes	•	•	•	
LN3		5	ø5/32" One-touch fitting		_	_	
LN7		Upward	ø1/4" One-touch fitting			_	
LN9	Note)	ž	ø5/16" One-touch fitting	_	•	_	9 15935 P
BN3	ž	ard	ø5/32" One-touch fitting	•	_	_	
BN7	Elbow	Downward	ø1/4" One-touch fitting			_	
BN9	ш	õ	ø5/16" One-touch fitting	_	•	_	
LM*	Elbow port, mixed sizes (Including upward and downward piping)			•	•	_	
P, E	P, E port size (One-touch fittings)				ø3/8"	ø3/8"	
						•	

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With two mounting screws) Refer to page 8 for valve specifications.

3 1 0 0 - 5 1 1 - 6

D 00.	100 - Bacc illouittou
3	SY3000
5	SY5000

2 Type of actuation

1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
A *	4-position dual 3-port valve (N.C./N.C.)
B *	4-position dual 3-port valve (N.O./N.O.)
C*	4-position dual 3-port valve (N.C./N.O.)

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot	
R	External pilot	

Back pressure check valve (Built-in valve type)

	71 /
_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valveis not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)						
В	Quick response type (0.7 MPa)						
K*	High pressure type (1.0 MPa)						

* Only metal seal type is available for the high pressure type.

7 Coil type

_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Note the specified energizing time when power saving circuit is selected. Refer to page 154.

Rated voltage


5	24 VDC
6	12 VDC

Light/surge voltage suppressor and common specification

_	Without light/surge voltage suppressor (Non-polar)					
R	With surge voltage suppressor (Non-polar)					
U	With light/surge voltage suppressor (Non-polar)					
S	With surge voltage suppressor (Positive common)					
Z	With light/surge voltage suppressor (Positive common					
NS	With surge voltage suppressor (Negative common)					
NZ	With light/surge voltage suppressor (Negative common					
	U S Z NS					

* Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

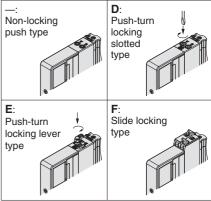


Type of mounting screw

Type of mounting coren								
_	Round head combination screw							
В	Hexagon socket head cap screw							
K	Round head combination screw (Falling-out-prevention type)							
н	Hexagon socket head can screw (Falling-out-prevention type)							

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 136 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

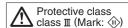




Dimensions: Type 10/Terminal Block Box/Series SY3000

SS5Y3-10T-Stations D-C3, N1 (D)

2 x M5 mounting hole

5.3

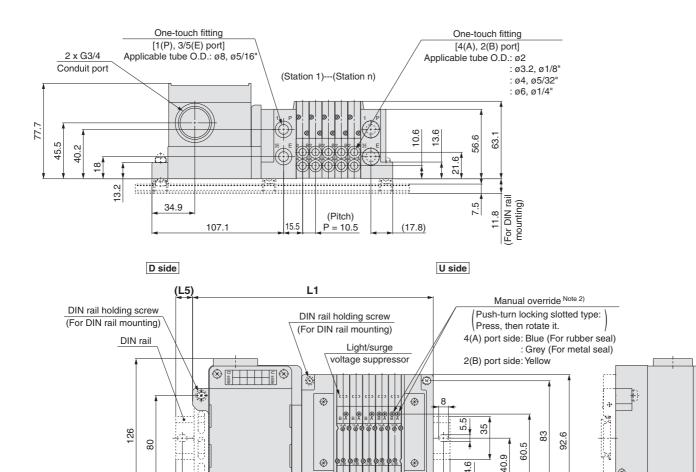

Note 1) These figures show the "SS5Y3-10T-05D-C6".

⊗

88.2

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

8

4 x M4 mounting hole

(Fitting for the type with P/E ports on the U and/or D sides)

Note 3) Refer to page 124 for dimensions of A or B port top-ported type.

3.6

C6: 77:

(4.9)

L4

(DIN rail mounting hole pitch: 12.5) **L3**


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	321.8	332.3	342.8	353.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16



Specific Product Manifold Precautions

Dimensions: Type 10/Terminal Block Box/Series SY5000

SS5Y5-10T-Stations D-C6, N7 (D)

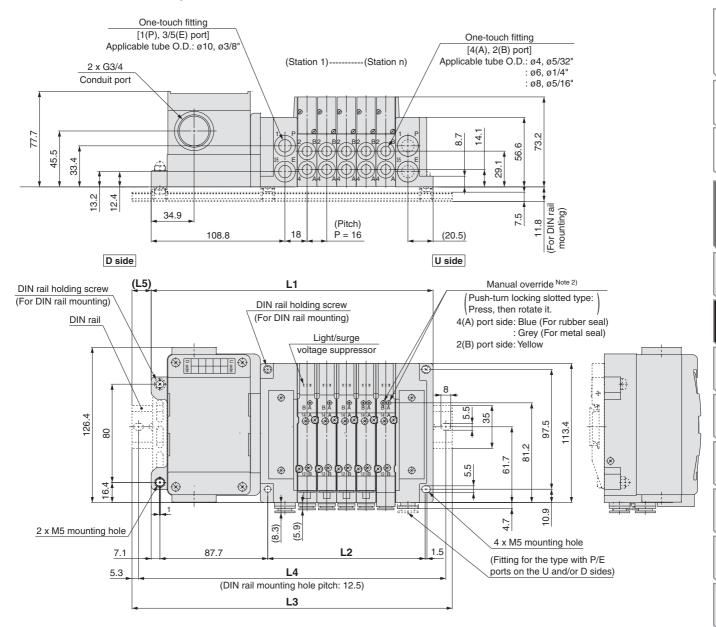

Note 1) These figures show the "SS5Y5-10T-05D-C8".

Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5



Plug-in Connector Connecting Base


Terminal Block Box

Type 12 **Top Ported**

Refer to pages 124 and 125 for

Series SY3000/5000 (€

How to Order Manifold

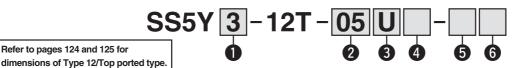

1 Series

1 36	1100					
3	SY3000					
5	SY5000					

3 P, E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

Note) 4 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

2 Valve stations

Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring Note 1)				
10	10 stations	-				
02	2 stations	Considered Invest Note 2)				
:	:	Specified layout Note 2) (Available up to 20 solenoids)				
20	20 stations	(Available up to 20 solerloids)				

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

4 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot


- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

P, E port size (One-touch fittings)

(Gile todell intilige)								
Symbol	SY3000	SY5000						
_	ø8	ø10						
N	ø5/16"	ø3/8"						

* For N. sizes are in inches.

How to Order Manifold Assembly

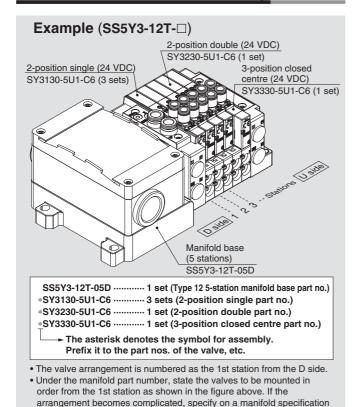


6 Mounting

_	-	Direct mounting		
D			DIN rail mounting	
	•		(With DIN rail)	
	DIN rail mounting		DIN rail mounting	
D	U	(Without DIN rail)		
D	3	For 3 stations Specify a longer rail than		
:		the standard length.		
D2	20	For 20 stations		

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

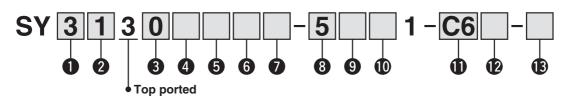

1 Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C* 4-position dual 3-port valve (N.C./N.		

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

	-
_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

 Without light/surge voltage suppressor (Non-polar) 	
R With surge voltage suppressor (Non-polar)	
U With light/surge voltage suppressor (Non-polar)	
S With surge voltage suppressor (Positive common)	
Z With light/surge voltage suppressor (Positive common)	
NS With surge voltage suppressor (Negative common)	
NZ With light/surge voltage suppressor (Negative commo	

* Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

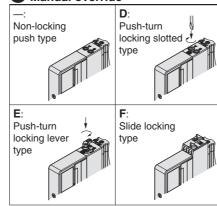

SMC

A, B port size

Thread piping

	· · · · · ·	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

	10 11011 11111113 (
Symbol	A, B port	SY3000	SY5000
C2	ø2 One-touch fitting		_
C3	ø3.2 One-touch fitting	•	_
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	_	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting	•	•
N9	ø5/16" One-touch fitting	_	•

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF

* Only — is available for M5.


Type of mounting screw

 Round head combination screw 				
В	Hexagon socket head cap screw			
K	Round head combination screw (Falling-out-prevention type)			
Н	Hexagon socket head cap screw (Falling-out-prevention type)			

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 136 for part numbers of the base gasket and mounting screw.


"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

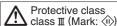

Terminal Block Connection


Step 1. Removing the terminal block cover

Loosen the 4 mounting screws (M4) to remove the terminal block cover.

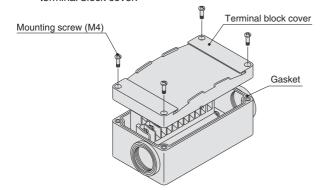

Step 2. The below diagram shows the terminal block wiring.
All stations are provided with double wiring
regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

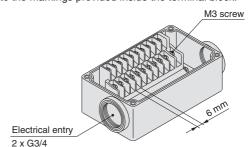


Step 3. Mounting the terminal block cover

Securely tighten the screws to the torque shown in the below table only after confirming that the gasket is installed correctly.

Proper tightening torque N⋅m 0.7 to 1.2


- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G3/4): AXT100-B06A

Electrical Wiring Specifications (IP67 compatible)

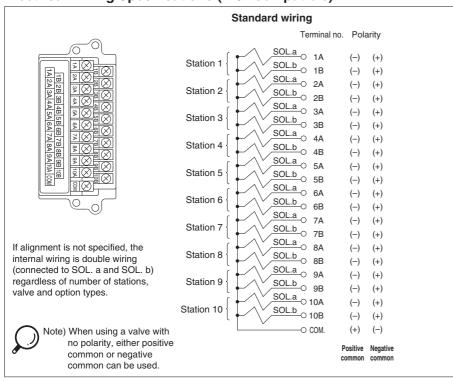

Specified Layout

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

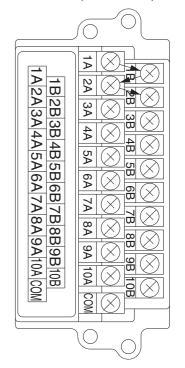


Type 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

Lead Wire

Series SY3000/5000 ()

How to Order Manifold

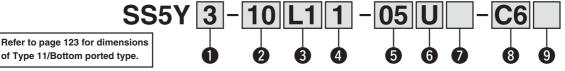

Series

9 00	1100
3	SY3000
5	SY5000

3 Number of cores (Lead wire)

L1	34 cores
L2	17 cores
L3	9 cores

Type 10 Side ported Bottom ported

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

4 Lead wire length

	ad wire length
1	0.6 m
2	1.5 m
3	3 m

Valve stations

(L1	□)		(L3	□)	
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
i	:	Double wiring Note 1)	•	- ;	Double wiring Note 1)
16	16 stations		04	4 stations	
02	2 stations	Specified layout Note 2)	02	2 stations	Specified layout Note 2)
÷	:	(Available up to	:	:	(Available up to
24	24 stations	32 solenoids)	80	8 stations	8 solenoids)

L2	□)	
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
80	8 stations	
02	2 stations	Specified layout Note 2)


(Available up to 16 solenoids)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

How to Order Manifold Assembly

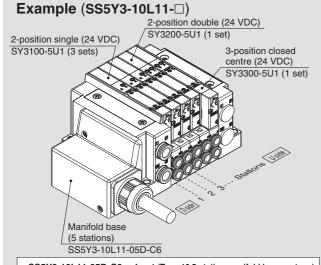

SS5Y3-10L11-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.) *SY3100-5U1------ 3 sets (2-position single part no.) *SY3200-5U1 1 set (2-position double part no.) *SY3300-5U1------1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

• The valve arrangement is numbered as the 1st station from the D side.

• Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 72 In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

6 P, E port entry U side (2 to 10 stations) ח D side (2 to 10 stations) В Both sides (2 to 24 stations)

SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
vR	External pilot

* 3/5(E) port is plugged for the built-in silencer type.

* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 8.

Mounting and Option Symbol Mounting Option None Direct AA Name plate (With station number) mounting BΔ Name plate (Without station number) $\mathbf{D} \square$ Without name plate DIN rail $A\Box$ Name plate (With station number) mounting В Name plate (Without station number)

Note 1) Enter the number of stations inside □. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported). **DIN Rail Option**

· · · · · · · · · · · · · · · · · · ·					
_	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Charify a langur rail than the			
÷	:	Specify a longer rail than the total length of specified stations.			
24	For 24 stations	total length of specified stations.			

8 A, B port size (Metric)

Cumbal	A B port		Type Side p	e 10/ ported	Type 11/ Bottom ported				
Symbol		A, B port			SY5000	SY5000			
C2		ø2	One-touch fitting	•	_	_			
СЗ	_	ø3	.2 One-touch fitting	•	_	_			
C4	ight	ø4	One-touch fitting	•	•	•			
C6	Straight	ø6	One-touch fitting	•	•	•			
C8	0)	ø8	One-touch fitting	_	•	•	O DAS		
CM*		Stı	raight port, mixed sizes	•	•	•			
L4	Elbow Note)	ote)	ote)	rd	ø4 One-touch fitting	•	•	_	
L6				Upward	ø6 One-touch fitting		•	_	
L8				ote)	ote)	ĭ	ø8 One-touch fitting		•
B4		ard	ø4 One-touch fitting	•	•	_			
B6		oq	g	<u>a</u>	ownward	ø6 One-touch fitting	•	•	_
B8	Ш	Dov	ø8 One-touch fitting		•	_			
LM*	Elbow port, mixed sizes (Including upward and downward piping		•	•	_				
P, E port size (One-touch fittings)			ø8	ø10	ø10				

A, B port size (Inch)

			Type	e 10/ ported	Type 11/ Bottom ported			
Symbol			A, B port	SY3000		SY5000		
N1		ø1.	/8" One-touch fitting	•	_	_		
N3	ŧ	ø5	/32" One-touch fitting	•	•	•		
N7	Straight	ø1.	/4" One-touch fitting	•	•	•		
N9	ŝ	ø5	/16" One-touch fitting	_	•	•	S SECTION AND ADDRESS OF THE PERSON ADDRESS OF THE PERSON AND ADDRESS OF THE PERSON ADDRESS OF	
CM*		Str	aight port, mixed sizes	•	•	•		
LN3		5	ø5/32" One-touch fitting	•	_	_		
LN7		Upward	ø1/4" One-touch fitting	•	•	_		
LN9	o _N woqlΞ	ਤੱ	ø5/16" One-touch fitting	_	•	_	e Bassan	
BN3		ž >	ard	ø5/32" One-touch fitting	•	_	_	
BN7		Downward	ø1/4" One-touch fitting	•		_		
BN9		ш	õ	ø5/16" One-touch fitting	_		_	To the state of th
LM*			ow port, mixed sizes uding upward and downward piping)	•	•	_		
P, E	P, E port size (One-touch fittings)				ø3/8"	ø3/8"		
. , –	ро.		20 (0110 100011 11111190)	ø5/16"	00/0	00/0		

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

- * Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With two mounting screws)

2 Type of actuation

1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
A *	4-position dual 3-port valve (N.C./N.C.)
B *	4-position dual 3-port valve (N.O./N.O.)
C*	4-position dual 3-port valve (N.C./N.O.)

* Only rubber seal is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type.

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

	ii type
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Note the specified energizing time when power saving circuit is selected. Refer to page 154.

Rated voltage


5	24 VDC
6	12 VDC

Light/surge voltage suppressor and common specification

Without light/surge voltage suppressor (Non-polar)
With surge voltage suppressor (Non-polar)
With light/surge voltage suppressor (Non-polar)
With surge voltage suppressor (Positive common)
With light/surge voltage suppressor (Positive common)
With surge voltage suppressor (Negative common)
With light/surge voltage suppressor (Negative common)

* Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

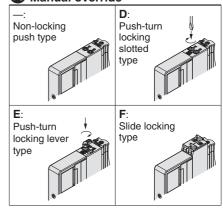

Refer to page 8 for valve specifications.

Type of mounting screw

_	Round head combination screw						
B Hexagon socket head cap screw							
K	Round head combination screw (Falling-out-prevention type)						
Н	Hexagon socket head cap screw (Falling-out-prevention type)						


- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 136 for part numbers of the base gasket and mounting screw.


* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

Dimensions: Type 10/Lead Wire/Series SY3000

SS5Y3-10L $_{3}^{1}$ \square -Stations $_{D}^{U}$ - $_{C3}^{C2}$, $_{N1}^{N1}$ (D)

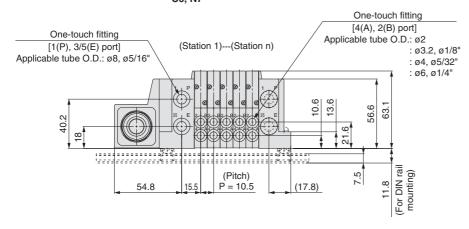

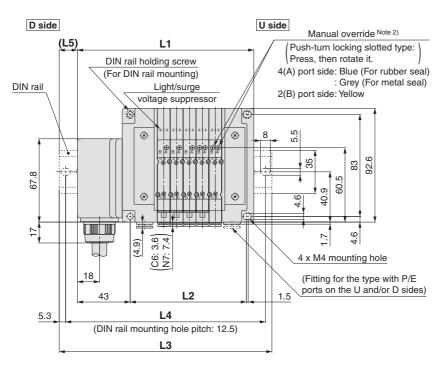

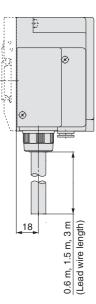

Note 1) These figures show the "SS5Y3-10L1□-05D-C6".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


Note 3) Refer to page 124 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15




Manifold Options Specific Product

Dimensions: Type 10/Lead Wire/Series SY5000

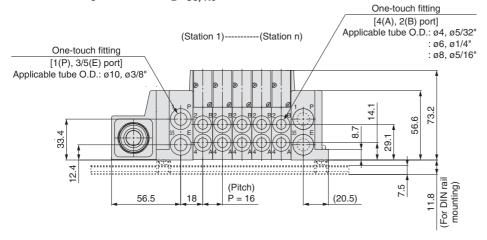

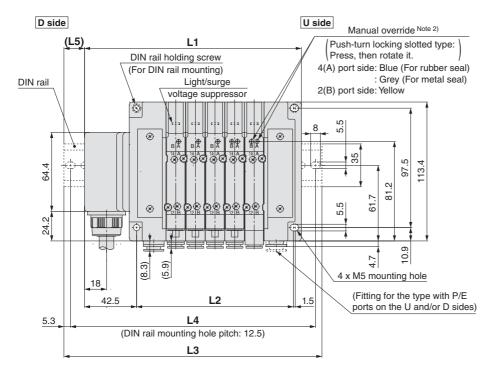

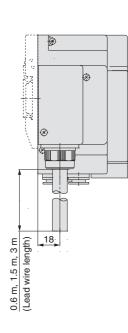

Note 1) These figures show the "SS5Y5-10L1□-05D-C8".

Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15


Plug-in Connector Connecting Base

Lead Wire

Type 12
Top Ported

Series SY3000/5000 €

How to Order Manifold

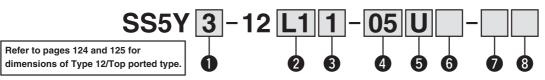

1 Series

3	SY3000
5	SY5000

Number of cores (Lead wire)

	,
L1	34 cores
L2	17 cores
L3	9 cores

3 Lead wire length


1	0.6 m
2	1.5 m
3	3 m

5 P, E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

Note) **6** For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

How to Order Manifold Assembly

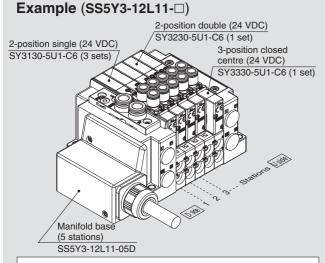

SS5Y3-12L11-05D ··· 1 set (Type 12 5-station manifold base part no.)

*SY3130-5U1-C6...... 3 sets (2-position single part no.)

*SY3230-5U1-C6...... 1 set (2-position double part no.)
*SY3330-5U1-C6...... 1 set (3-position closed centre part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

• The valve arrangement is numbered as the 1st station from the D side.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

4 Valve stations

⊐)			(L3	□)	
Stations	Note		Symbol	Stations	Note
2 stations			02	2 stations	
:	Double wiring Note 1)		:	:	Double wiring Note 1)
16 stations			04	4 stations	
2 stations	Specified layout Note 2)		02	2 stations	Specified layout Note 2
:	(Available up to		:	:	(Available up to
24 stations	32 solenoids)		80	8 stations	8 solenoids)
	16 stations 2 stations	Stations	Stations Note 2 stations : Double wiring Note 1) 16 stations 2 stations Specified layout Note 2) : (Available up to	Stations	Stations

(L2 |)

Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring Note 1)	
80	8 stations		
02	2 stations	(Available up to	
÷	:		
16	16 stations		

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

6 SUP/EXH block assembly

<u> </u>				
Internal pilot				
S	Internal pilot, Built-in silencer			
R External pilot				

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

P, E port size (One-touch fittings)

		<u> </u>
Symbol	SY3000	SY5000
_	ø8	ø10
N	ø5/16"	ø3/8"

* For N. sizes are in inches.


8 Mounting

Wilding			
_	Direct mounting		
D	DIN rail mounting		
ש	(With DIN rail)		
D0	DIN rail mounting		
	(Without DIN rail)		
D3	For 3 stations	Specify a longer rail than the standard length.	
:			
D24 For 24 station		the standard length.	

Specific Product | Manifold | Precautions |

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

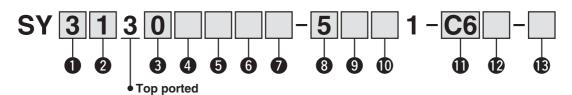

Series

<u> </u>		
3	SY3000	
5	SY5000	

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal Metal seal	
1		

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

— None		
	Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	-	
— Standard (0.7 MPa)		
B Quick response type (0.7 MPa)		
K*	K* High pressure type (1.0 MPa)	

 Only metal seal type is available for the high pressure type.

Coil type

	-71
_	Standard
T	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

_	— Without light/surge voltage suppressor (Non-polar)	
R	R With surge voltage suppressor (Non-polar)	
U	U With light/surge voltage suppressor (Non-polar)	
S	S With surge voltage suppressor (Positive common)	
Z	Z With light/surge voltage suppressor (Positive common)	
NS With surge voltage suppressor (Negative common)		
NZ	NZ With light/surge voltage suppressor (Negative common)	

* Only "Z" and "NZ" types are available for the product with power saving circuit.

10 Manual override

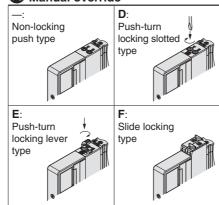

A, B port size

Thread piping

11110	au piping	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

chie trach manag (memer)			
Symbol	A, B port	SY3000	SY5000
C2	ø2 One-touch fitting		_
C3	ø3.2 One-touch fitting		_
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	_	

One-touch fitting (Inch)

<u> </u>				
Symbol	A, B port	SY3000	SY5000	
N1	ø1/8" One-touch fitting		_	
N3	ø5/32" One-touch fitting			
N7	ø1/4" One-touch fitting	•	•	
N9	ø5/16" One-touch fitting	_	•	
. 10	Borro Che todori illing			

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF


* Only — is available for M5.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 136 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

Electrical Wiring Specifications

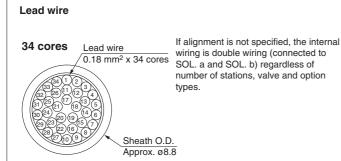

Lead w	ire no.	Polarity	Lead wire	Printed (Both s	
SOL.a 1	(-) (+)	colour	Type	Colour
Station 1 SOL.b 2	(-	(+)	Orange	_	Red Black
Station 2 SOL.b	,		Light		Red
SOL.a 5	,		Grey	_	Black
Station 3 SOL.b 6			White		Red
SOL.a 7	,		vvriite	_	Black
Station 4 SOL.b 8	,		Vallann		Red
SOL.a 9	(-		Yellow	_	Black
Station 5 SOL.b 10	(-		Pink		Red
SOL.a 11	(-		PILIK	_	Black
Station 6 SOL.b 12	(-		0		Red
SOL.a 13	(-		Orange		Black
Station 7 SOL.b 14	. (–		Light		Red
SOL.a o 15	(-		Grey		Black
Station 8 SOL.b 16	(-		White		Red
SOL.a o 17	· (–		vvriite		Black
Station 9 SOL.b 18	(-		Yellow		Red
SOL.a o 19	(-		Yellow		Black
Station 10 SOL.b 20	(-		Pink		Red
SOL.a 21	(-	, ,	PILIK		Black
Station 11 SOL.b 22	(-		0		Red
SOL.a 23	(-		Orange		Black
Station 12 SOL.b 24	(-		Light		Red
SOL.a 25	(-		Grey		Black
Station 13 SOL.b 26	(-	, ,	White		Red
SOL.a 27	(-		vvriite		Black
Station14 SOL.b 28	(-		Yellow		Red
SOL.a 29	(-		Yellow		Black
Station 15 SOL.b 30	(-		Pink		Red
SOL.a 31	(-		FILIK		Black
Station 16 SOL.b 32	(-		Orongs		Red
° СОМ. _{○ 33}	(+		Orange		Black
COM. 0 34	(+		Light		Red
-	Posit	, , ,	Grey		Black
	comm				

Electrical characteristics

Item	Property
Conductor resistance /km, 20°C	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance M/km, 20°C	10 or more



Note) Cannot be used for movable wiring. The minimum bending radius of the cable is 55 mm.

Specified Layout

Note) For negative common specification, a valve for negative common or a valve without polarity should be used.


Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.



Specific Product Precautions


Electrical Wiring Specifications

Lead wire

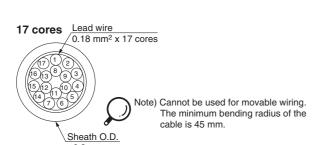

ø6.8	3			
	Lead	wire	no. Pol	arity
	OL.a_	1	(-)	(+)
Station 1	OL.b	2	(-)	(+)
	SOL.a_	3	(-)	(+)
Station 2	OL.b	4	(-)	(+)
	SOL.a	5	(-)	(+)
Station 3	OL.b	6	(-)	(+)
	SOL.a	7	(-)	(+)
Station 4	OL.b_	8	(-)	(+)
	OL.a	9	(-)	(+)
Station 5	OL.b	10	(-)	(+)
	SOL.a	11	(-)	(+)
Station 6	OL.b	12	(-)	(+)
	SOL.a	13	(-)	(+)
Station 7	OL.b	14	(-)	(+)
	SOL.a	15	(-)	(+)
Station 8	SOL.b_o	16	(-)	(+)
	COM	17	(+)	(-)
			Positive common	Negative common

Lead wire	Printed mark (Both sides)		
colour	Type	Colou	
0		Red	
Orange	_	Black	
Light		Red	
Grey		Black	
White		Red	
vvnite	_	Black	
Yellow	-	Red	
		Black	
		Red	
		Black	
Orongo		Red	
Orange		Black	
Light		Red	
Grey		Black	
White		Red	
vvriitė		Black	
Yellow		Red	

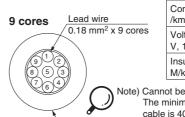

Sheath O.D.

Electrical characteristics

Note) Cannot be used for movable wiring. The minimum bending radius of the cable is 40 mm.

	Lead	wire	no. Pola	rity
Station 1 { Station 2 { Station 3 { Station 4 {	SOL.a SOL.b SOL.a SOL.b SOL.a SOL.b SOL.a SOL.b COM.	1 2 3 4 5 6 7 8 9	(-) (-) (-) (-) (-) (-) (-) (+) Positive common	(+) (+) (+) (+) (+) (+) (+) (+) (-) Negative common

	Lead wire	Printed mark (Both sides)		
	colour	Type	Colour	
	0		Red	
	Orange	_	Black	
	Light Grey	_	Red	
			Black	
			Red	
	White	_	Black	
	Vallann		Red	
	Yellow		Black	
	Pink	=	Red	

Q

Note) For negative common specification, a valve for negative common or a valve without polarity should be used.

Type 10 Side Ported **Type 11 Bottom Ported**

Plug-in Connector Connecting Base

Circular Connector

Series SY3000/5000 ()

How to Order Manifold

SS5Y 5 - 10 M -Refer to page 123 for dimensions

Series

3	SY3000
5	SY5000

of Type 11/Bottom ported type.

2 Type

<u> </u>		
	10	Side ported
	11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

3 Valve stations

Symbol	Stations	Note
02	2 stations	
÷	:	Double wiring Note 1)
12	12 stations	
02	2 stations	Considered Lawrent Note 2)
:	:	Specified layout Note 2) (Available up to 24 solenoids)
24	24 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

4 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


5 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 6.

How to Order Manifold Assembly

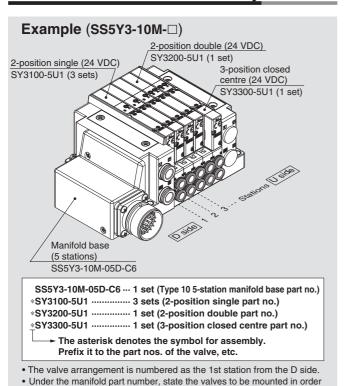

Note) When mixing top ported configurations, select from page 80 In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Mounting and Option

Symbol	Mounting	Option
_	Direct mounting	None
AA		Name plate (With station number)
BA		Name plate (Without station number)
D□	DIN rail mounting	Without name plate
A□		Name plate (With station number)
B□		Name plate (Without station number)

Note 1) Enter the number of stations inside \square . (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

DIN Rail Option

_	Direct mounting		
0	Without DIN rail (with bracket)		
3	For 3 stations	Chaoifu a langer rail than the	
:	:	Specify a longer rail than the total length of specified stations.	
24	For 24 stations	total length of specified stations.	



Specific Product Nanifold Precautions

6 A, B port size (Metric)

Symbol	A P port		Type Side p	e 10/ ported	Type 11/ Bottom ported							
Syllibol	A, B port			SY3000	SY5000	SY5000						
C2		ø2	One-touch fitting		_	_						
C 3		ø3	.2 One-touch fitting		_	_						
C4	igh	ø4	One-touch fitting		•	•						
C6	Straight	ø6	One-touch fitting	•	•	•						
C8	0,	ø8	One-touch fitting	_	•		o Sast					
CM*		Straight port, mixed sizes		•	•	•						
L4		rd	ø4 One-touch fitting		•	_						
L6	lbow Note)	Elbow Note)	ote)	ote)	ote)		Upward	ø6 One-touch fitting	•	•	_	
L8						5	ø8 One-touch fitting	_		_	el Basses	
B4			ard	ø4 One-touch fitting			_	and the same				
B6			:Ibo	Jownward	ø6 One-touch fitting			_				
B8	ш	ρον	ø8 One-touch fitting	_		_	Tell Tell					
LM*	Elbow port, mixed sizes (Including upward and downward piping)			•	•	_						
P, E	P, E port size (One-touch fittings)				ø10	ø10						

A, B port size (Inch)

Cumbal	Symbol A, B port		Type 10/ Side ported		Type 11/ Bottom ported					
Syllibol			A, B port	SY3000	SY5000	SY5000				
N1		ø1	/8" One-touch fitting	•	_	_				
N3	Ħ	ø5	/32" One-touch fitting	•		•				
N7	Straight	ø1	/4" One-touch fitting	•		•				
N9	Š	ø5	/16" One-touch fitting	_	•	•	0 Day			
CM*		Str	aight port, mixed sizes							
LN3		rd	ø5/32" One-touch fitting	•	_	_				
LN7					Upward	ø1/4" One-touch fitting	•		_	
LN9	8 %	ž	ø5/16" One-touch fitting	_	•	_	ol Sales			
BN3		∾ wodi:	ard	ø5/32" One-touch fitting		_	_			
BN7			oq!:	9	Downward	ø1/4" One-touch fitting			_	
BN9			ø5/16" One-touch fitting	_		_	Tell Property of the Property			
LM*			ow port, mixed sizes uding upward and downward piping)	•	•					
P, E	por	t siz	ze (One-touch fittings)	ø5/16"	ø3/8"	ø3/8"				

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

D 00.	100
3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
\mathbf{A}^*	4-position dual 3-port valve (N.C./N.C.)	
B *	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

_	
_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

(Built iii vaivo typo)	
_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Con type				
_	Standard			
Т	With power saving circuit (Continuous duty type)			

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Without light/surge voltage suppressor (Non-polar)
With surge voltage suppressor (Non-polar)
With light/surge voltage suppressor (Non-polar)
With surge voltage suppressor (Positive common)
With light/surge voltage suppressor (Positive common)
With surge voltage suppressor (Negative common)
With light/surge voltage suppressor (Negative common)

* Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

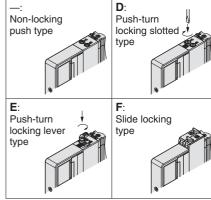


Type of mounting screw

<u> </u>	
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head can screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 136 for part numbers of the base gasket and mounting screw.


* "B" and "H" cannot be selected for the individual SUP/ EXH spacer assembly or double check spacer assembly with residual pressure release valve.

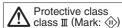




Dimensions: Type 10/Circular Connector/Series SY3000

SS5Y3-10M-<u>Stations</u> D C2 C3, N1 (D)

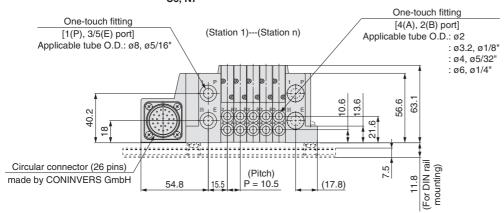

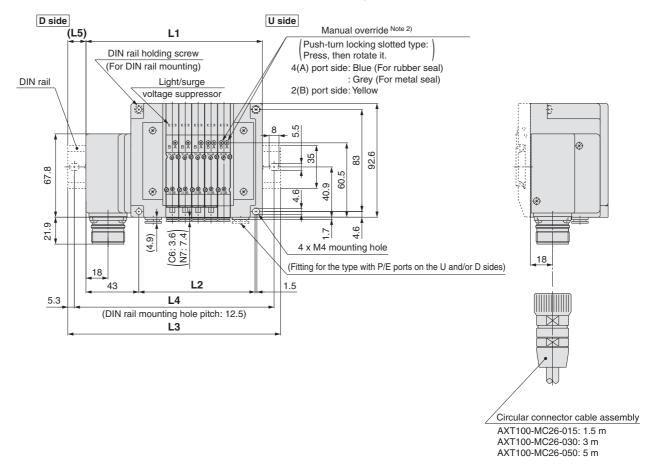

Note 1) These figures show the "SS5Y3-10M-05D-C6".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


Note 3) Refer to page 124 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15



Dimensions: Type 10/Circular Connector/Series SY5000



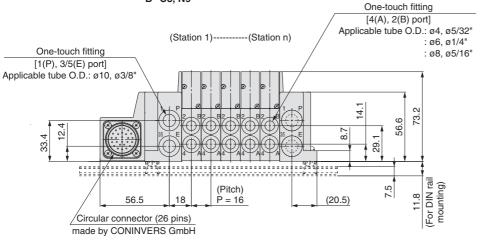

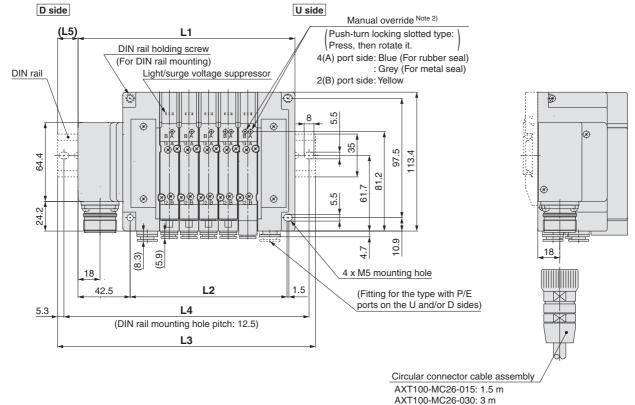

Note 1) These figures show the "SS5Y5-10M-05D-C8".

Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

AXT100-MC26-050: 5 m

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15


Plug-in Connector Connecting Base

Circular Connector

Type 12
Top Ported

Series SY3000/5000 €

How to Order Manifold

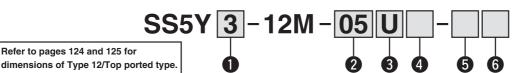

1 Series

9 00	7100
3	SY3000
5	SY5000

2 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
12	12 stations	
02	2 stations	Cracified Invest Note 2)
÷	:	Specified layout Note 2) (Available up to 24 solenoids)
24	24 stations	(Available up to 24 soleriolus)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

3 P, E port entry

<u> </u>	. ,
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


Note) **4** For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

4 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

How to Order Manifold Assembly

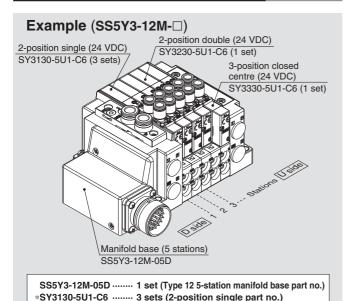

- *SY3230-5U1-C6 1 set (2-position double part no.)

 *SY3330-5U1-C6 1 set (3-position closed centre part no.)
 - The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.
- The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

P, E port size (One-touch fittings)

	<u> </u>	- /
Symbol	SY3000	SY5000
	ø8	ø10
N	ø5/16"	ø3/8"


^{*} For N. sizes are in inches.

6 Mounting

		Direct mounting								
D		DIN rail mounting								
D		(With DIN rail)								
DO		DIN rail mounting								
D0		(Without DIN rail)								
D3	For 3 stations	Specify a longer rail than								
:	the standard length.									
D24	For 24 stations	the standard length.								



How to Order Valves (With two mounting screws) Refer to page 8 for valve specifications.

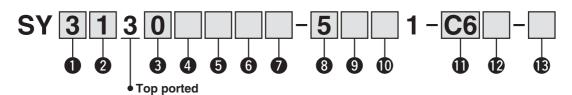

1 Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3 3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

	or type
_	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

_	None	
Н	Built-in	

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

_	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

Rated voltage


<u> </u>	
5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

_	Without light/surge voltage suppressor (Non-polar)
R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)

* Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

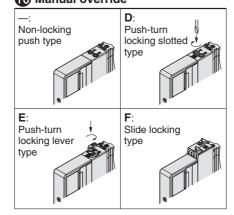

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

<u> </u>			
Symbol	A, B port	SY3000	SY5000
C2	ø2 One-touch fitting		_
C3	ø3.2 One-touch fitting		_
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	_	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting	•	•
N9	ø5/16" One-touch fitting	_	•

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF


* Only — is available for M5.

13 Type of mounting screw

 Round head combination screw 			
B Hexagon socket head cap screw			
K	Round head combination screw (Falling-out-prevention type)		
Н	Hexagon socket head cap screw (Falling-out-prevention type)		

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 136 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.


Electrical Wiring Specifications

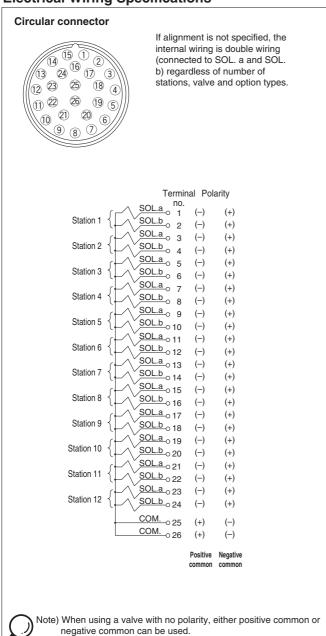

Specified Layout

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

Cable Assembly

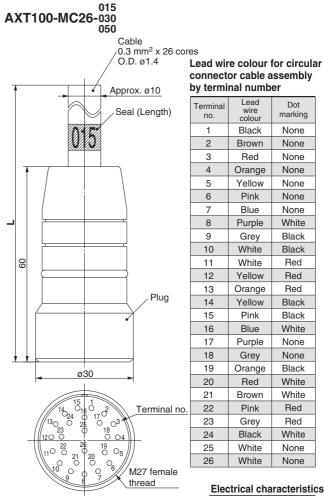

/km, 20°C

Circular connector cable assembly					
Cable	Assembly part no.				
length (L)	26 pins				
1.5 m	AXT100-MC26-015				
3 m	AXT100-MC26-030				
5 m	AXT100-MC26-050				

- * Cannot be used for movable wiring.
- Lengths other than the above is also available. Please contact SMC for details.

	Electrical criar	acteristi
	Item	Property
	Conductor resistance /km, 20°C	65 or less
	Voltage limit V, 1 minute, AC	1000
	Insulation resistance M/km, 20°C	5 or more



Note) The minimum bending radius of the circular connector cable is 20 mm.





Type 10
Side Ported

Type 11
Bottom Ported


Plug-in Connector Connecting Base

EX500

Series SY3000/5000 (6

RoHS

How to Order Manifold

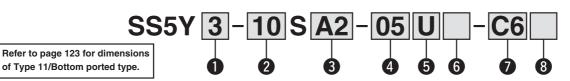

Series

3	SY3000
5	SY5000

2 Type

10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

P, E port entry

U	U side (2 to 10 stations)		
D	D side (2 to 10 stations)		
В	Both sides (2 to 16 stations)		

3 SI unit

0	Without SI unit		
A2	DeviceNet [™] / PROFIBUS DP / CC-Link / EtherNet/IP [™] (Positive common)		
A2N	DeviceNet [™] / PROFIBUS DP / CC-Link / EtherNet/IP [™] (Negative common)		

Note) Ensure that the valve's common specifications match.

6 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

* 3/5/E) port is plugged for


Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
08	8 stations	
02	2 stations	Cracifical Invest Note 2)
:	:	Specified layout ^{Note 2)} (Available up to 16 solenoids)
16	16 stations	(Available up to 10 solellolus)

4 Valve stations

- Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

 Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- Note 3) This also includes the number of blanking plate assembly.
- Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

How to Order Manifold Assembly

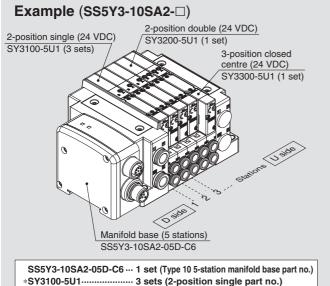

The valve arrangement is numbered as the 1st station from the D side.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 88.

In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

Refer to the page on the right for 7.

8 Mounting and Option

Symbol	Mounting	Option				
_	DIN rail	None				
AA		Name plate (With station number)				
BA		Name plate (Without station number)				
D□		Without name plate				
A□		Name plate (With station number)				
B□		Name plate (Without station number)				

Note 1) Enter the number of stations inside □. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

DIN Rail Option

Dirt Hair	rian option				
_	Direct mounting				
0	With	out DIN rail (with bracket)			
3	For 3 stations	Consider a language wail them the			
:	:	Specify a longer rail than the			
16	For 16 stations	total length of specified stations.			

* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 140 for the DIN rail part number.)

Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX500 Gateway-type Serial Transmission System.



20

Specific Product

A, B port size (Metric)

Cumbal	A, B port		Type Side p	e 10/ ported	Type 11/ Bottom ported					
Symbol			SY3000	SY5000	SY5000					
C2		ø2	One-touch fitting		_	_				
C 3		ø3	.2 One-touch fitting		_	_				
C4	Straight	ø4	One-touch fitting							
C6	Stra	ø6	One-touch fitting							
C8	,	ø8	One-touch fitting	_			0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0			
CM*		Str	raight port, mixed sizes							
L4		5	ø4 One-touch fitting			_				
L6		Upward	ø6 One-touch fitting			_				
L8	Elbow Note)	ote)	ote)	ote)	ž	ø8 One-touch fitting	_		_	el Sax
B 4		ard	ø4 One-touch fitting	•	•	_				
B6		Downward	ø6 One-touch fitting			_				
B8	"	8	ø8 One-touch fitting	_		_	To be			
LM*			pow port, mixed sizes uding upward and downward piping)	•	•	_				
P, E port size (One-touch fittings)			ø8	ø10	ø10					
Note) To avoid interference with the body or pining, select downward elboy										

A, B port size (Inch)


Symbol			A B nort	Type Side p	e 10/ ported	Type 11/ Bottom ported					
Syllibol			A, B port	SY3000	SY5000	SY5000					
N1		ø1	/8" One-touch fitting		_	_					
N3	Ħ	ø5	/32" One-touch fitting	•	•	•					
N7	raig	ø1	/4" One-touch fitting	•	•	•					
N9	Š	ø5	/16" One-touch fitting		•	•	0 1983				
CM*		Str	aight port, mixed sizes	•		•					
LN3		5	ø5/32" One-touch fitting	•	_						
LN7		wa	ø1/4" One-touch fitting	•	•						
LN9	ote)	ĭ	J	ø5/16" One-touch fitting		•	_	e 1985			
BN3	ž >	ard	ø5/32" One-touch fitting	•	_	_					
BN7	Elbo	Elbc	WUW	۸u۸	WUW	WUW	ø1/4" One-touch fitting	•			
BN9			ш	ш	ш	ô	ø5/16" One-touch fitting			_	Tell
LM*			ow port, mixed sizes uding upward and downward piping)	•	•						
P, E p	por	t siz	ze (One-touch fittings)	ø5/16"	ø3/8"	ø3/8"					
CM* LN3 LN7 LN9 BN3 BN7 BN9 LM*	Elbow Note) Straight	Str Str Downward Downward Downward Obni	aight port, mixed sizes ø5/32" One-touch fitting ø1/4" One-touch fitting ø5/16" One-touch fitting ø5/32" One-touch fitting ø5/32" One-touch fitting ø1/4" One-touch fitting ø1/4" One-touch fitting ø5/16" One-touch fitting ow port, mixed sizes uding upward and downward piping)	● — — — — — — — — Ø5/16"	• • • • • • • • • • • • • • • • • • •	●					

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

- * Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

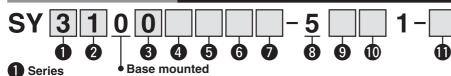

SY5000 2 Type of actuation

	·
1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
\mathbf{A}^*	4-position dual 3-port valve (N.C./N.C.)
B *	4-position dual 3-port valve (N.O./N.O.)
C*	4-position dual 3-port valve (N.C./N.O.)

SY3000

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	_	None
H	1	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

	-
_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

00	ii typo
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage


E	24 VDC

Q Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)
	U S Z NS

* Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve from R, U, S or Z when the SI unit specification is A2 (Positive common). Select a valve from R, U, NS or NZ when the SI unit specification is A2N (Negative common).

Manual override

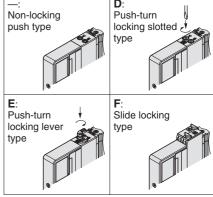


Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 136 for part numbers of the base gasket and mounting screw.


"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

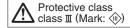

Dimensions: Type 10/EX500/Series SY3000

$\textbf{SS5Y3-10SA2-} \underbrace{\overset{\text{U}}{\text{Stations}}}_{B}^{\text{U}} \overset{\text{C2}}{\underset{\text{C6, N7}}{\text{C4, N3}}} \overset{\text{N1}}{\text{(D)}}$

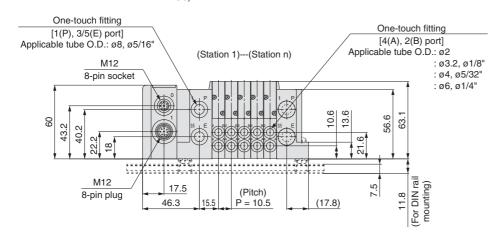

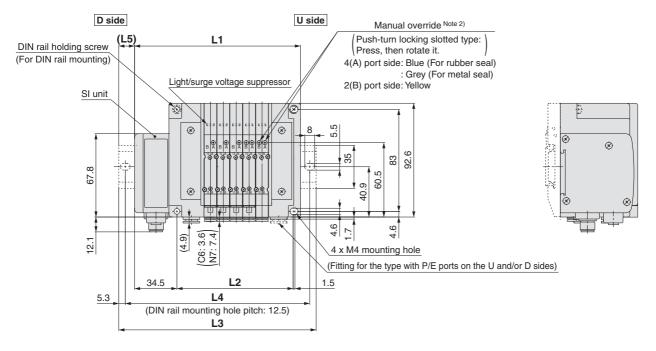

Note 1) These figures show the "SS5Y3-10SA2-05D-C6".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 124 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240	250.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5





One-touch Fittings and Plug Assembly/ Part No.


Specific Product Precautions

Dimensions: Type 10/EX500/Series SY5000

SS5Y5-10SA2-Stations D - C6, N7 (D)

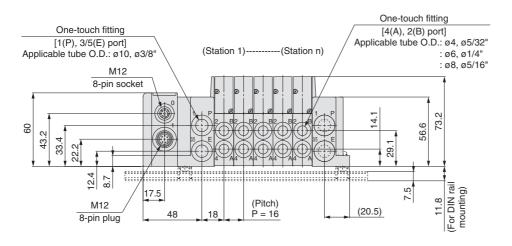

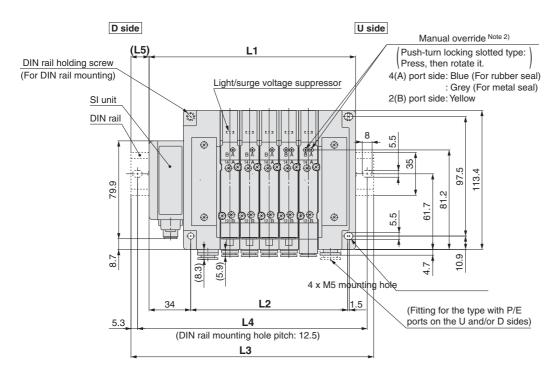

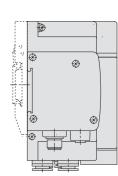

Note 1) These figures show the "SS5Y5-10SA2-05D-C8".

Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.5	136.5	152.5	168.5	184.5	200.5	216.5	232.5	248.5	264.5	280.5	296.5	312.5	328.5	344.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	18	16	14.5

Plug-in Connector Connecting Base

EX500

Type 12
Top Ported

Series SY3000/5000 (§

How to Order Manifold

SS5Y 3 -12S A2 - 05 U - Refer to pages 124 and 125 for dimensions of Type 12/Top ported type.

1 Series

3	SY3000
5	SY5000

2 SI unit

0 Without SI unit	
A2	DeviceNet™/PROFIBUS DP/ CC-Link/EtherNet/IP™ (Positive common)
A2N	DeviceNet [™] /PROFIBUS DP/ CC-Link/EtherNet/IP [™] (Negative common)

Note) Ensure that the valve's common specifications match.

4 P, E port entry

	<u> </u>
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

Note) **⑤**For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

5 SUP/EXH block assembly

_	
_	Internal pilot
S	Internal pilot/Built-in silencer
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.


3 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
08	8 stations	
02	2 stations	Considered Invested Note 2)
:	:	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	(Available up to 16 soleriolds)

- Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

 Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified lavout.
- Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- Note 3) This also includes the number of blanking plate assembly.
- Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

How to Order Manifold Assembly

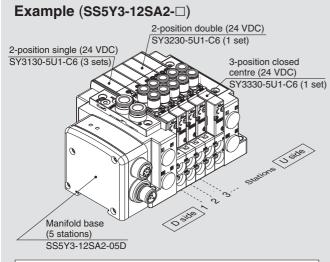

SS5Y3-12SA2-05D ··· 1 set (Type 12 5-station manifold base part no.)
*SY3130-5U1-C6 ········ 3 sets (2-position single part no.)
*SY3230-5U1-C6 ······· 1 set (2-position double part no.)
*SY3330-5U1-C6 ······ 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

• The valve arrangement is numbered as the 1st station from the D side.
• Under the manifold part number, state the valves to be mounted in order

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

6 P, E port size (One-touch fittings)

(-,
Symbol	SY3000	SY5000
	ø8	ø10
N	ø5/16"	ø3/8"

* For N, sizes are in inches.

Mounting

_	Direct mounting	
_		DIN rail mounting
D		(With DIN rail)
D0		DIN rail mounting
		(Without DIN rail)
D3	For 3 stations Specify a longer rail tha	
:	the standard length.	
D16	For 16 stations	the standard length.

* When mounted on the DIN rail without the SI unit, please select D0 and refer to L3 of the dimensions for the DIN rail length, then order separately. (Refer to page 140 for the DIN rail part number.)

Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX500 Gateway-type Serial Transmission System.




20

Specific Product Manifold Precautions

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

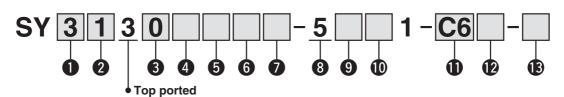

Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2 2-position double		
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

	· · · · · · · · · · · · · · · · · · ·	
	_	Standard (0.7 MPa)
B Quick response type		Quick response type (0.7 MPa)
	K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

9 00	ii typo
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Note the specified energizing time when power saving circuit is selected. Refer to page

8 Rated voltage


 24 VDC
 24 VDC

9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)	
U	U With light/surge voltage suppressor (Non-polar)	
S	With surge voltage suppressor (Positive common)	
Z	With light/surge voltage suppressor (Positive common)	
NS	With surge voltage suppressor (Negative common)	
NZ	NZ Without light/surge voltage suppressor (Negative common	

* Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve from R, U, S or Z when the SI unit specification is A2 (Positive common). Select a valve from R, U, NS or NZ when the SI unit

Manual override

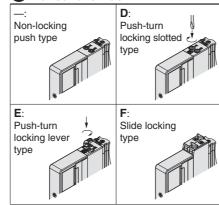

SMC

A, B port size

Thread piping

	· · · · · ·	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

3(11 1)				
Symbol	A, B port	SY3000	SY5000	
C2	ø2 One-touch fitting		_	
C3	ø3.2 One-touch fitting	•	_	
C4	ø4 One-touch fitting			
C6	ø6 One-touch fitting			
C8	ø8 One-touch fitting	_		

One-touch fitting (Inch)

	one reach many				
Symbol	A, B port	SY3000	SY5000		
N1	ø1/8" One-touch fitting		_		
N3	ø5/32" One-touch fitting				
N7	ø1/4" One-touch fitting				
N9	ø5/16" One-touch fitting	_			
INS	95/16 One-touch litting				

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF

* Only — is available for M5.

13 Type of mounting screw

_	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 136 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

Type 10
Side Ported

Type 11
Bottom Ported


Plug-in Connector Connecting Base

EX600

Series SY3000/5000 ()

RoHS

How to Order Manifold

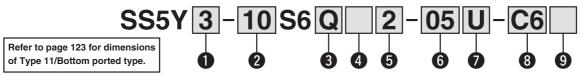

1 Series 3 SY3000 5 SY5000

2 Type

10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

3 SI unit

0	Without SI unit	
Q	DeviceNet™	
N	PROFIBUS DP	
V	CC-Link	
ZE	EtherNet/IP™	
D	EtherCAT	

Note 1) I/O unit cannot be mounted without SI unit.

Note 2) Valve plate which connects manifold and
SI unit is not mounted to a valve without
SI unit. Refer to the EX600 catalogue
(CAT.E02-24) for mounting.

4 SI unit output polarity, end plate type

SI unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector
Without SI unit	_	
SI unit positive common	2	3
SI unit negative common	4	5

Note 1) Ensure a match with the common specifications of the value to be used.

Note 2) Without SI unit, the symbol is -..

5 I/O unit stations

_	None
1	1 station
:	:
9	9 stations

Note 1) Without SI unit, the symbol is —. Note 2) SI unit is not included in I/O unit stations.

Note 3) When I/O unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting.

6 Valve stations


_	· aiv	otationo
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	
02	2 stations	Consisted Invent Note 2)
:	:	Specified layout Note 2) (Available up to 32 solenoids)
24	24 stations	(Available up to 32 soleriolds)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

How to Order Manifold Assembly

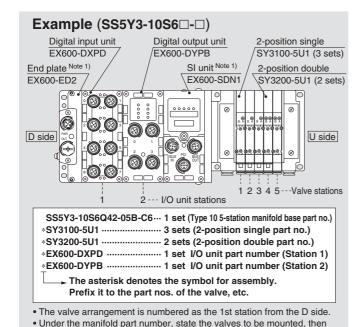

Note 1) Do not enter the SI unit part number and the end plate part number together. Note 2) When mixing top ported configurations, select from page 96.

the I/O units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold

In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

P, E port entry, SUP/EXH block assembly

	Internal	Internal pilot,	External
	pilot	Built-in silencer	pilot
P, E port entry U side (2 to 10 stations)	U	С	G
P, E port entry D side (2 to 10 stations)	D	E	Н
P, E port entry both sides (2 to 24 stations)	В	F	J

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 8.

Mounting and Option

Symbol	Mounting	Option		
_	DIN rail mounting	None		
AA		Name plate (With station number)		
BA		Name plate (Without station number)		
D□		Without name plate		
A□		Name plate (With station number)		
ВП		Name plate (Without station number)		

Note 1) Enter the number of stations inside □. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

DIN Rail Option

	- 1		
_	Direct mounting		
0	With	out DIN rail (with bracket)	
3	For 3 stations	Charles a lawren weil them the	
:	:	Specify a longer rail than the	
24	For 24 stations	total length of specified stations.	

* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 140 for the DIN rail part number.)

Refer to Series EX600 Fieldbus System (For Input/Output) (CAT.E02-24) for details on the EX600 Integrated-type (For I/O) Serial Transmission System. (IP40 specifications apply depending on the selected I/O unit.)

specification sheet.

8 A, B port size (Metric)

0 1			A. D. mart	Type Side p	e 10/ ported	Type 11/ Bottom ported	
Symbol			A, B port	SY3000	SY5000	SY5000	
C2		ø2	One-touch fitting		_	_	
C3		ø3	.2 One-touch fitting		_	_	
C4	ig	ø4	One-touch fitting	•	•	•	
C6	Straight	ø6	One-touch fitting				
C8		ø8	One-touch fitting	_		•	
CM*		Sti	raight port, mixed sizes	•	•	•	
L4		5	ø4 One-touch fitting	•	•	_	
L6		Upward	ø6 One-touch fitting			_	
L8	Note)	os One-touch fitting		_		_	
B4	∾ wodi	Elbow ^N	ard	ø4 One-touch fitting			_
B6			Downward	ø6 One-touch fitting			_
B8	ш	á	ø8 One-touch fitting	_		_	
LM*	Elbow port, mixed sizes (Including upward and downward piping)			•	•	_	
P, E port size (One-touch fittings)			ø8	ø10	ø10		
Note) To avoid interference with the body or pining, select downward elb							

A, B port size (Inch)


Symbol		A, B port		Type Side p	e 10/ ported	Type 11/ Bottom ported
Syllibol			A, b port	SY3000	SY5000	SY5000
N1		ø1	/8" One-touch fitting		_	_
N3	ht	ø5	/32" One-touch fitting	•		•
N7	Straight	ø1	/4" One-touch fitting	•		•
N9	Şţ	ø5	/16" One-touch fitting	_	•	•
CM*		Str	aight port, mixed sizes	•	•	•
LN3		5	ø5/32" One-touch fitting	•	_	_
LN7		Upward	ø1/4" One-touch fitting	•		_
LN9	Note)	2	ø5/16" One-touch fitting	_		_
BN3	ž	ard	ø5/32" One-touch fitting		_	_
BN7	Elbow	Downward	ø1/4" One-touch fitting	•		_
BN9	" &		ø5/16" One-touch fitting	_		_
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	_	
P, E	por	t si	ze (One-touch fittings)	ø5/16"	ø3/8"	ø3/8"

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

* Indicate the sizes on the manifold specification sheet in the case of "CM". "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction

How to Order Valves (With two mounting screws) Refer to page 8 for valve specifications.

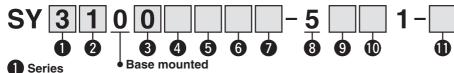

SY5000 2 Type of actuation

1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
A *	4-position dual 3-port valve (N.C./N.C.)
B *	4-position dual 3-port valve (N.O./N.O.)
C*	4-position dual 3-port valve (N.C./N.O.)

SY3000

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

		7	
		Internal pilot	_
	R	External nilot	

Back pressure check valve (Built-in valve type)

(24111 111111111111111111111111111111111	
_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

	_
_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

0 00	птуре
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154

8 Rated voltage


l	_	24 VDC
ш	ວ	24 100

9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)

- * Select a valve from R, U, S or Z when the SI unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI unit output polarity is negative common.
- *Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

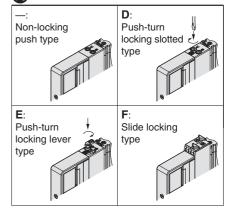

Type of mounting screw


-	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 136 for part numbers of the base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

Dimensions: Type 10/EX600 (M12 Connector)/Series SY3000

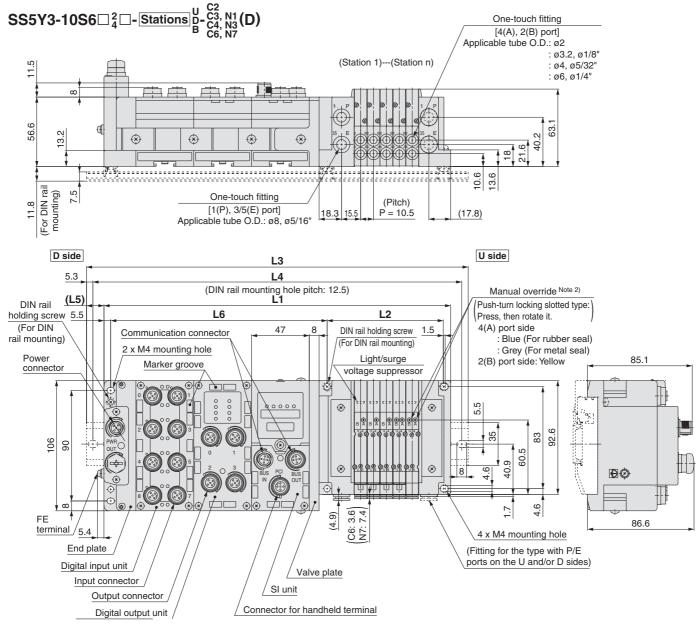

L1 = 10.5 x n1 + 135.5 + 47 x n2

 $L2 = 10.5 \times n1 + 42$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = 47 x n2 + 82


Note 1) These figures show the "SS5Y3-10S6Q22-05D-C6".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 124 for dimensions of A or B port top-ported type.

Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	235.5	248	248	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5
2	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	485.5	485.5	498	510.5
3	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5
4	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5
5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648
6	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698
7	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748
8	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798
9	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	760.5	773	785.5	798	810.5	823	835.5	835.5

Dimensions: Type 10/EX600 (7/8 Inch Connector)/Series SY3000

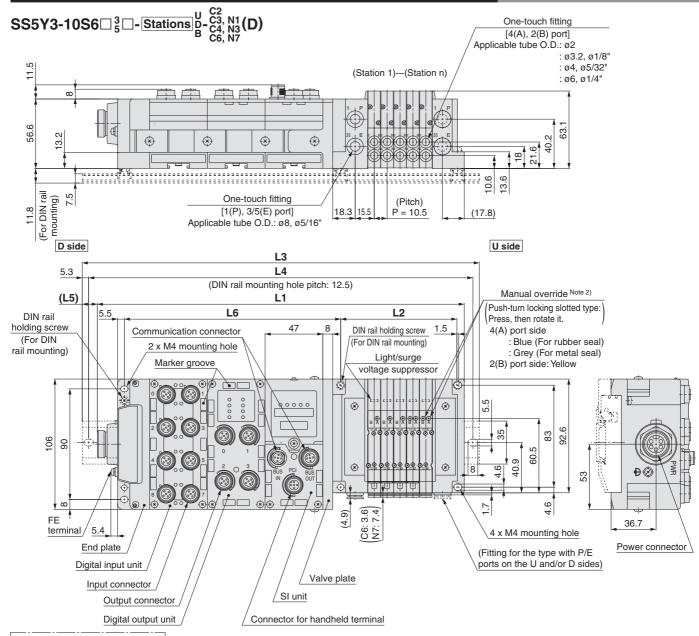

L1 = 10.5 x n1 + 152 + 47 x n2

L2 = 10.5 x n1 + 42

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 47 \times n2 + 82$


Note 1) These figures show the "SS5Y3-10S6Q32-05D-C6".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 124 for dimensions of A or B port top-ported type.

LO. DIN III	u • .	0	=05	,																			
Valve stations (n1) unit stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	523	523
3	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573
4	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673
6	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	798	810.5	823	835.5	848	860.5

Dimensions: Type 10/EX600 (M12 Connector)/Series SY5000

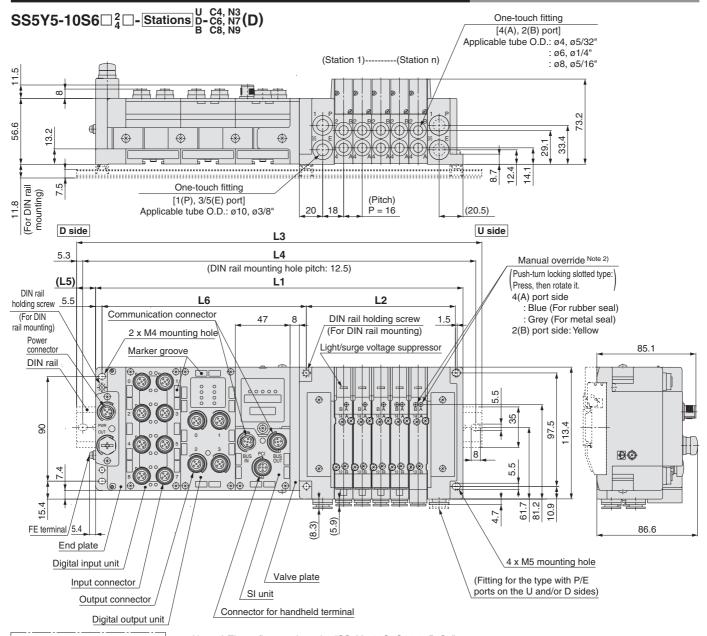

 $L1 = 16 \times n1 + 141.5 + 47 \times n2$

 $L2 = 16 \times n1 + 48$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = 47 x n2 + 81.5

Note 1) These figures show the "SS5Y5-10S6Q22-05D-C8".


Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

Valve stations (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648
3	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5
6	485.5	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5
9	623	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973

20

Dimensions: Type 10/EX600 (7/8 Inch Connector)/Series SY5000

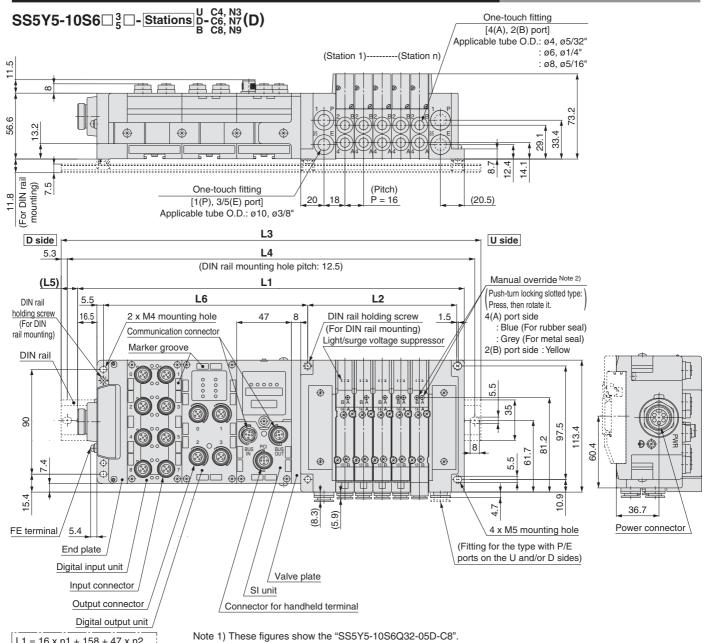

L1 = 16 x n1 + 158 + 47 x n2 L2 = 16 x n1 + 48

L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = 47 x n2 + 81.5

L3: DIN Rail Overall Length

EO. BIIT III	<u> </u>	or an	=0	9																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623
2	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5
5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5
6	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948
9	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973	_

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Plug-in Connector Connecting Base

EX600

Type 12 Top Ported

Series SY3000/5000 CE

How to Order Manifold


SS5Y 3-12S6 Q

Refer to pages 124 and 125 for dimensions of Type 12/Top ported type







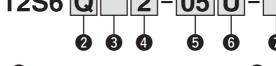

Series

3	SY3000
5	SY5000

SI unit

0	Without SI unit						
Q	DeviceNet™						
N	PROFIBUS DP						
V	CC-Link						
ZE EtherNet/IP™							
D	EtherCAT						

Note 1) I/O unit cannot be mounted without SI unit.

Note 2) Valve plate which connects manifold and SI unit is not mounted to a valve without SI unit. Refer to the EX600 catalogue (CAT.E02-24) for mounting.

3 SI unit output polarity, end plate type

SI unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector
Without SI unit	_	_
SI unit positive common	2	3
SI unit negative common	4	5

Note 1) Without SI unit, the symbol is -..

Note 2) Ensure a match with the common specifications of the value to be used.

4 I/O unit stations

_	None
1	1 stations
:	
9	9 stations

Note 1) Without SI unit, the symbol is -.. Note 2) SI unit is not included in I/O unit stations.

Note 3) When I/O unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting.

5 Valve stations


Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	
02	2 stations	Considered Invested Note 2)
:	:	Specified layout Note 2) (Available up to 32 solenoids)
24	24 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified lavout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

How to Order Manifold Assembly

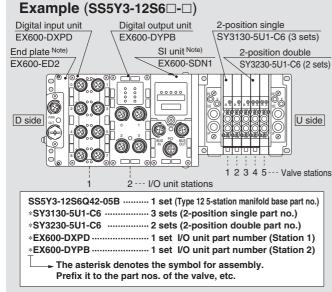

- The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted, then the I/O units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification
- Note) Do not enter the SI unit part number and the end plate part number

6 P, E port entry, SUP/EXH block assembly

	Internal	Internal pilot,	External
	pilot	Built-in silencer	pilot
P, E port entry U side (2 to 10 stations)	U	C Note)	G
P, E port entry D side (2 to 10 stations)	D	E Note)	Н
P, E port entry both sides (2 to 24 stations)	В	_	J

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Note) For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000
_	ø8	ø10
N	ø5/16"	ø3/8"

* For N, sizes are in inches.

8 Mounting


_	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations Specify a longer rail than		
÷	:	the standard length.	
D24	For 24 stations	the standard length.	

* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 140 for the DIN rail part number.)

Refer to Series EX600 Fieldbus System (For Input/Output) (CAT.E02-24) for details on the EX600 Integrated-type (For I/O) Serial Transmission System. (IP40 specifications apply depending on the selected I/O unit.)

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

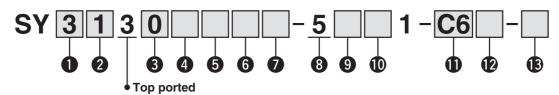

1 Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

5 Back pressure check valve

_	•	
_	No	ne
Н	Rui	lt-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

	-	
_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K*	High pressure type (1.0 MPa)	

* Only metal seal type is available for the high pressure type.

Coil type

Oon type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page

Rated voltage


Tia	ieu voitage		
5		24 VDC	

9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)	
U	With light/surge voltage suppressor (Non-polar)	
S	S With surge voltage suppressor (Positive common)	
Z	Z With light/surge voltage suppressor (Positive common)	
NS	With surge voltage suppressor (Negative common)	
NZ	NZ With light/surge voltage suppressor (Negative common	

- * Select a valve from R, U, S or Z when the SI unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI unit output polarity is negative common.
- *Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

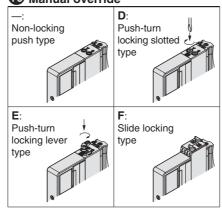

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

	one reason manig (means)			
Symbol	A, B port SY3000 SY500			
C2	©2 Ø2 One-touch fitting ■ —			
C3	ø3.2 One-touch fitting		_	
C4	ø4 One-touch fitting			
C6	ø6 One-touch fitting			
C8	ø8 One-touch fitting	_		

One-touch fitting (Inch)

	one reason maning (mon)		
Symbol	A, B port SY3000 SY500		SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting	_	
		•	

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF

* Only — is available for M5.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 136 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

Manifold Options

Specific Product




Type 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base EX250

Series SY3000/5000 C€

How to Order Manifold

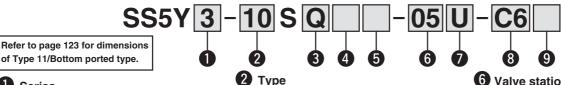

Series

3	SY3000
5	SY5000

SI unit

O or unit		
0	Without SI unit	
Q	DeviceNet™ (Negative common)	
N	PROFIBUS DP (Negative common)	
V	CC-Link (Positive common)	
TA	AS-Interface, (Negative common)	
17	(8 in/8 out, 31 slave modes, 2 isolated common type)	
ТВ	AS-Interface, (Negative common)	
10	(4 in/4 out, 31 slave modes, 2 isolated common type)	
тс	AS-Interface, (Negative common)	
10	(8 in/8 out, 31 slave modes, 1 common type)	
TD	AS-Interface, (Negative common)	
וט	(4 in/4 out, 31 slave modes, 1 common type)	
Υ	CANopen (Negative common)	
ZE	EtherNet/IP™ (Negative common)	

Note 1) Ensure that the specifications match those of the common specifications of the valve to be

Note 2) Input block cannot be mounted without SI unit. Note 3) The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to

the input block and valve is limited.

10	Side ported
11	Bottom ported*
* The SY5000 manifold base is used for the	

bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

4 Input block stations

_	None
1	1 station
÷	:
8	8 stations

Note) Without SI unit, the symbol is -. The maximum number of stations is limited for the AS-Interface applicable SI unit.

5 Input block type

	PNP input (Positive common)	NPN input (Negative common)
Without input block	_	-
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F

Note) Without SI unit, the symbol is -..

6 Valve stations

_	<u> </u>		
Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring Note 1)	
16	16 stations	_	
02	2 stations	Specified layout Note 2) (Available up to 32 solenoids)	
:	:		
24	24 stations		

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.


Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been

When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows.

- 8 in/8 out specification: Max. 8 solenoids
- 4 in/4 out specification: Max. 4 solenoids Note 3) This also includes the number of blanking
- plate assembly. Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of

the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

How to Order Manifold Assembly

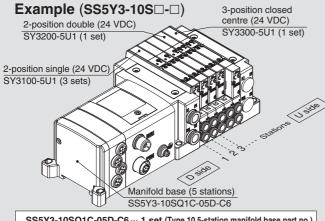

SS5Y3-10SQ1C-05D-C6 ... 1 set (Type 10 5-station manifold base part no.) *SY3100-5U1----- 3 sets (2-position single part no.) *SY3200-5U1----- 1 set (2-position double part no.) *SY3300-5U1 ······ 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 102. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side

P, E port entry, SUP/EXH block assembly

	Internal	Internal pilot,	External
	pilot	Built-in silencer	pilot
P, E port entry U side (2 to 10 stations)	U	С	G
P, E port entry D side (2 to 10 stations)	D	E	Н
P, E port entry both sides (2 to 24 stations)	В	F	J

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 8.

Mounting and Option

9 1110	b mounting and option	
Symbol	Mounting	Option
_	Direct mounting	None
AA		Name plate (With station number)
BA		Name plate (Without station number)
D□	DIN rail mounting	Without name plate
		Name plate (With station number)
B□		Name plate (Without station number)

DIN Rail Ontion

on nan option			
_	Direct mounting		
		N rail (with bracket)	
3	For 3 stations	Specify a longer rail	
:	:	than the total length of	
24	For 24 stations	specified stations.	

Note 1) Enter the number of stations inside □. (Refer to "DIN Rail Option"

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to page 140 for part numbers of DIN rail.

Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX250 Integrated-type (For Input/Output) Serial Transmission System.

20

Specific Product Precautions

8 A, B port size (Metric)

0		A, B port			e 10/ ported	Type 11/ Bottom ported	
Symbol				SY3000	SY5000	SY5000	
C2		ø2 One-touch fitting			_	_	
C 3		ø3	.2 One-touch fitting		_	_	
C4	igh	ø4	One-touch fitting				
C6	Straight	ø6	One-touch fitting				
C8	"	ø8	One-touch fitting	_	•		0 198
CM*		Stı	raight port, mixed sizes	•	•	•	
L4		5	ø4 One-touch fitting	•	•	_	
L6		pward	ø6 One-touch fitting		•	_	
L8	oNote)	2	ø8 One-touch fitting	_	•	_	elsassas
B4	No >	ard	ø4 One-touch fitting	•	•	_	and the same of th
B6	Elbow	ownward	ø6 One-touch fitting	•	•	_	
B8	▥	Õ	ø8 One-touch fitting	_		_	To be
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	_		
P, E	P, E port size (One-touch fittings)			ø8	ø10	ø10	
Note:	\ T	21/	oid interference with the	hody or	ninina	coloct do	wnward albo

A, B port size (Inch)


Symbol		A, B port		Type Side p	e 10/ oorted	Type 11/ Bottom ported	
Syllibol				SY3000	SY5000	SY5000	
N1		ø1	/8" One-touch fitting	•			
N3	þţ	ø5	/32" One-touch fitting	•	•	•	
N7	Straight	ø1	/4" One-touch fitting	•	•	•	
N9	Ş	ø5	/16" One-touch fitting	_	•	•	o San
CM*		Str	aight port, mixed sizes	•	•	•	
LN3		rd	ø5/32" One-touch fitting			_	
LN7		Upward	ø1/4" One-touch fitting	•	•	_	
LN9	te)	J	ø5/16" One-touch fitting	_		_	01983
BN3	Ž ≥	ard	ø5/32" One-touch fitting				
BN7	Elbow Note)	Jownward	ø1/4" One-touch fitting	•	•	_	
BN9		Do	ø5/16" One-touch fitting	_	•	_	
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	_		
P, E	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø3/8"	

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

- * Indicate the size on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

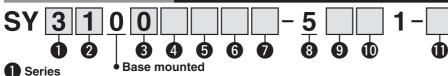

5 SY5000

2 Type of actuation

1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
A *	4-position dual 3-port valve (N.C./N.C.)
B*	4-position dual 3-port valve (N.O./N.O.)
C*	4-position dual 3-port valve (N.C./N.O.)

SY3000

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

_		
0	Rubber seal	R
1	Metal seal	N

A Pilot type

T Hot typo		
		Internal pilot
	R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Con type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page

Rated voltage


5	24 VDC

9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common

- * "R" and "U" are applicable for every SI unit. However, "S" and "Z" can be used only for CC-Link applicable unit and "NS" and "NZ" are for units which are not CC-Link applicable.
- * Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

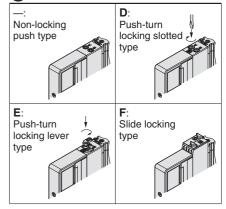


Type of mounting screw


<u> </u>	
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head can screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
 - Refer to page 136 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

Dimensions: Type 10/EX250/Series SY3000



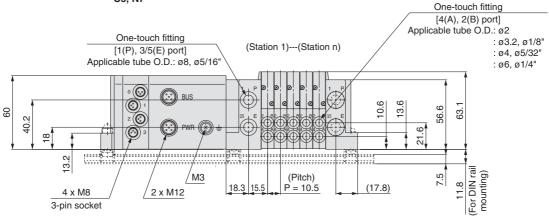

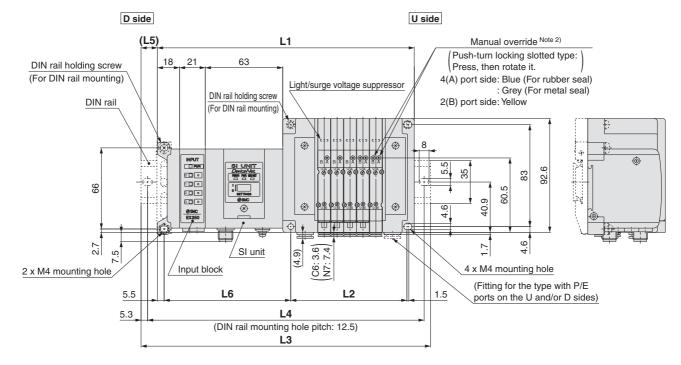

Note 1) These figures show the "SS5Y3-10SQ1A-05D-C6".


Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


Note 3) Refer to page 124 for dimensions of A or B port top-ported type.

L1 = 10.5 x n1 + 135.5 + 21 x n2 L2 = 10.5 x n1 + 42 L4 = L3 - 10.5 L5 = (L3 - L1)/2 L6 = 21 x n2 + 82

LO. DIIVITE		0	=05	<u>,</u>																			
Valve stations (n1) lnput block stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5
2	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5
3	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
4	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548
7	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5
8	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5

Dimensions: Type 10/EX250/Series SY5000

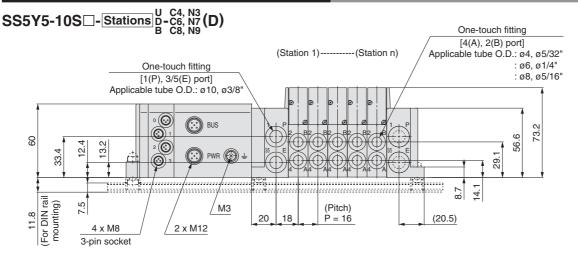

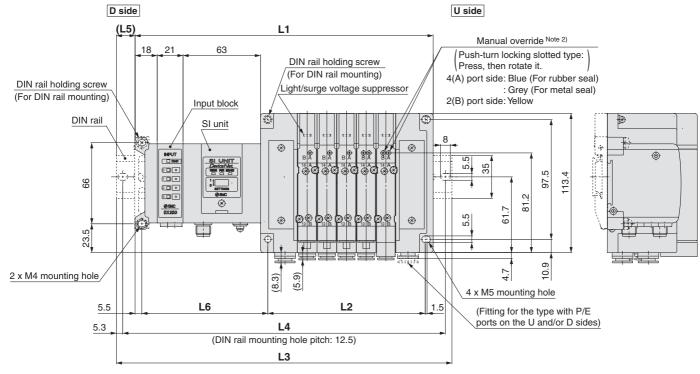

L1 = 16 x n1 + 141.5 + 21 x n2

L2 = 16 x n1 + 48

L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = 21 x n2 + 81.5

Note 1) These figures show the "SS5Y5-10SQ1A-05D-C8".

Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

Valve stations (n1) lnput block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5	573
2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598
3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623
4	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5
5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5
6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5
7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698
8	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5	673	685.5	710.5	723

Plug-in Connector Connecting Base

EX250

Type 12
Top Ported

Series SY3000/5000 €

How to Order Manifold



Series

3	SY3000
5	SY5000

3 Input block stations

_	None
1	1 station
:	:
8	8 stations

Note) Without SI unit, the symbol is —. The maximum number of stations is limited for the AS-Interface applicable SI unit.

4 Input block type

	PNP input (Positive common)	NPN input (Negative common)
Without input block	_	_
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F

Note) Without SI unit, the symbol is -..

2 SI unit

0	Without SI unit							
Q	DeviceNet™ (Negative common)							
N	PROFIBUS DP (Negative common)							
V	CC-Link (Positive common)							
TA	AS-Interface, (Negative common)							
- 17	(8 in/8 out, 31 slave modes, 2 isolated common type)							
ТВ	AS-Interface, (Negative common)							
	(4 in/4 out, 31 slave modes, 2 isolated common type)							
тс	AS-Interface, (Negative common)							
10	(8 in/8 out, 31 slave modes, 1 common type)							
TD	AS-Interface, (Negative common)							
10	(4 in/4 out, 31 slave modes, 1 common type)							
Υ	CANopen (Negative common)							
ZE	EtherNet/IP™ (Negative common)							

- Note 1) Ensure a match with the common specifications of the value to be used.
- Note 2) Input block cannot be mounted without SI unit.
- Note 3) The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

5 Valve stations


_		
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	, and the second
02	2 stations	O = = :#: = 1 = = = + Note 2)
:	:	Specified layout Note 2) (Available up to 32 solenoids)
24	24 stations	(Available up to 32 solellolus)

- Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

 When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows.
 - 8 in/8 out specification: Max. 8 solenoids
- 4 in/4 out specification: Max. 4 solenoids Note 3) This also includes the number of blanking plate
- assembly.

 Note 4) For the porduct without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet

How to Order Manifold Assembly

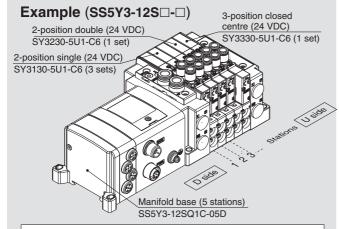

SS5Y3-12SQ1C-05D ··· 1 set (Type 12 5-station manifold base part no.)
*SY3130-5U1-C6 ·········· 3 sets (2-position single part no.)
*SY3230-5U1-C6 ·········· 1 set (2-position double part no.)

*SY3330-5U1-C6.....1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

6 P, E port entry, SUP/EXH block assembly

	Internal	Internal pilot,	External
	pilot	Built-in silencer	pilot
P, E port entry U side (2 to 10 stations)	U	C Note)	G
P, E port entry D side (2 to 10 stations)	D	E Note)	Н
P, E port entry both sides (2 to 24 stations)	В	_	J

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.
- Note) For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000
	ø8	ø10
N	ø5/16"	ø3/8"

* For N, sizes are in inches.

Mounting

_		Direct mounting	1
		DIN rail mounting	1
D		(With DIN rail)	
D 0		DIN rail mounting	1
D0		(Without DIN rail)	
D3	For 3 stations	Specify a longer rail than	1
:	:	the standard length.	
D24	For 24 stations	the standard length.	

If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 140 for the DIN rail part number.) (Refer to page 140 for the DIN rail part number.)

Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX250 Integrated-type (For Input/Output) Serial Transmission System.




20

Specific Product

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

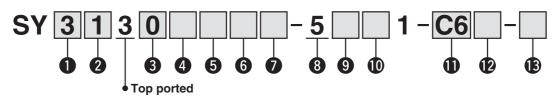

1 Series

<u> </u>	
3	SY3000
5	SY5000

2 Type of actuation

<u> </u>		
1	2-position single	
2	2-position double	
3	3-position closed center	
4	3-position exhaust center	
5	3-position pressure center	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Metal seal
1	Rubber seal

4 Pilot type

_	Rubber seal
R	Metal seal

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa) High pressure type (1.0 MPa)	
K*		

* Only metal seal type is available for the high pressure type.

Coil type

	Toon type	
— Standard		Standard
	Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page

8 Rated voltage


5	24 VDC

Light/surge voltage suppressor and common specification

R	R With surge voltage suppressor (Non-polar)	
U	With light/surge voltage suppressor (Non-polar)	
S	S With surge voltage suppressor (Positive common)	
Z	With light/surge voltage suppressor (Positive common)	
NS	NS With surge voltage suppressor (Negative common)	
NZ	NZ With light/surge voltage suppressor (Negative common	

- * "R" and "U" are applicable for every SI unit. However, "S" and "Z" can be used only for CC-Link applicable unit and "NS" and "NZ" are for units which are not CC-Link applicable.
- * Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

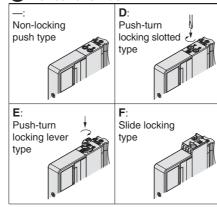

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

	- · · · · · · · · · · · · · · · · · · ·			
Symbol	A, B port	SY3000	SY5000	
C2	ø2 One-touch fitting		_	
C3	ø3.2 One-touch fitting		_	
C4	ø4 One-touch fitting			
C6	ø6 One-touch fitting			
C8	ø8 One-touch fitting	_		

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting	_	

12 Thread type

_	Rc	
F	G	
N	NPT	
Т	NPTF	

* Only — is available for M5.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 136 for part numbers of the
- base gasket and mounting screw. * "B" and "H" cannot be selected for the
- individual SUP/EXH spacer assembly.

Type 10 **Side Ported**

Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

EX260

Series SY3000/5000 CE

How to Order Manifold

Refer to page 123 for Type 11/Bottom ported dimensions.

Series SY3000 SY5000

2 Type 10 Side ported Bottom ported

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Type Manifold (from page 127).

SI unit specifications

Or arm opcomoations				
Symbo	Protocol	Number of outputs	Communication connector	
0	W	ithout SI un	it	
QA	DeviceNet™	32	M12	
QB	Devicemet	16	IVI I Z	
NA		32	M12	
NB	PROFIBUS	16	IVI I Z	
NC	DP	32		
ND		16	D-sub Note)	
VA	CC-Link	32	M12	
VB	CC-LITIK	16	IVI I Z	
DA	EtherCAT	32	M12	
DB	EllielCAI	16	IVI I Z	
FA	PROFINET	32	Mio	
FB	FUOLINE	16	M12	
EA	EtherNet/IP™	32	M12	
EB	Ellielivel/iF	16	IVITZ	

Note) IP40 for the D-sub applicable communication connector specification.

For SI unit part number, refer to page 136. DIN rail cannot be mounted without SI unit.

4 SI unit output polarity

_	Positive common
N	Negative common
A.L	

Note 1) Ensure a match with the common specifications of the value to be used.

Note 2) Without SI unit, the symbol is -

Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note			
02	2 stations				
:		Double wiring Note 1)			
16	16 stations				
02	2 stations	On a sitilated Lawrent Note 2)			
:	:	Specified layout Note 2) (Available up to 32 solenoids)			
24	24 stations	(Available up to 32 soleriolds)			

In the case of the 16-output SI unit

Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring Note 1)			
08	16 stations				
02	2 stations	On a sitilated Lawrent Note 2)			
:	:	Specified layout Note 2) (Available up to 16 solenoids)			
16	24 stations	(Available up to 16 soleriolds)			

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification

> (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

O 1, = port only			
U	U side (2 to 10 stations)		
D	D side (2 to 10 stations)		
В	Both sides (2 to 24 stations)		

SUP/EXH block assembly

	<u> </u>		
_	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Mounting and Option

Symbol Mounting		Option		
_	Divers	None		
AA	Direct	Name plate (With station number)		
BA	mounting	Name plate (Without station number)		
D□	DIM	Without name plate		
A□	DIN rail mounting	Name plate (With station number)		
B□	mounting	Name plate (Without station number)		

Note 1) Enter the number of stations inside \square . (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

DIN Rail Option

_	Direct mounting			
0	Without DIN rail (with bracket)			
3	For 3 stations	Charify a langur rail than the		
÷	:	Specify a longer rail than the total length of specified stations.		
24	For 24 stations	total length of specified stations.		

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to page 140 for part numbers of DIN rail.


8 A, B port size (Metric)

_	7., 2 por con2 (mon to)						
Symbol	ol A, B port			Type Side p	e 10/ ported	Type 11/ Bottom ported	
Syllibol		А, в рогт		SY3000	SY5000	SY5000	
C2		ø2	One-touch fitting	•	_	_	
СЗ		ø3	.2 One-touch fitting	•	_	_	
C4	igh	ø4	One-touch fitting	•	•	•	
C6	Straigh	ø6 One-touch fitting ø8 One-touch fitting Straight port, mixed sizes		•			
C8				_	•	•	O SESSE
CM*				•	•		
L4		Б	ø4 One-touch fitting	•		_	
L6		Upward	ø6 One-touch fitting	•		_	
L8	- ≥ -	ž	ø8 One-touch fitting	_	•	_	e 1985
B4		ard	ø4 One-touch fitting	•	•	_	
B6		Downward	ø6 One-touch fitting	•	•	_	
B8		8	ø8 One-touch fitting	_	•	_	Tel Property of the Property o
LM*	Elbow port, mixed sizes (Including upward and downward piping)			•	•	_	
P, E	P, E port size (One-touch fittings)			ø8	ø10	ø10	

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143). * Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

ø5/32" One-touch fitting **N3** ø1/4" One-touch fitting **N7**

A, B port size (Inch)

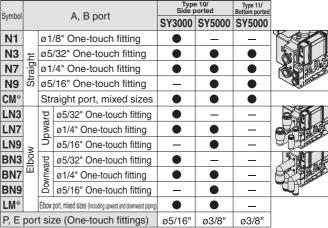


* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

Refer to Fieldbus System (CAT.E02-25) for details on the EX260 Integrated-type (For Output) Serial Transmission System.



EXT

How to Order Manifold Assembly

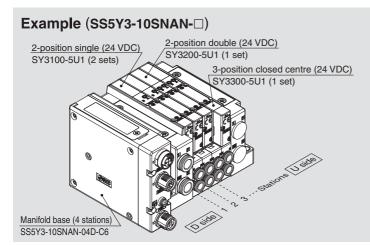

\$\$5Y3-10\$NAN-04D-C6...1 set (Type 10 4-station manifold base part no.)

*\$Y3100-5U1......2 sets (2-position single part no.)

*\$Y3200-5U1.....1 set (2-position double part no.)

*\$Y3300-5U1.....1 set (3-position closed centre part no.)


- ──➤The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure on the left.
- If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 108.

Specify on a manifold specification sheet if plugs are required on the A and B port on the manifold.

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

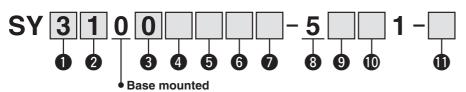

Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
A *	4-position dual 3-port valve (N.C./N.C.)
B*	4-position dual 3-port valve (N.O./N.O.)
C*	4-position dual 3-port valve (N.C./N.O.)

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

_	71
0	Rubber seal
1	Metal seal

Pilot type

_	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

	7. /
_	None
Н	Built-in

- * Only rubber seal type.
 - Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

	71.
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

Rated voltage

5	24 VDC


9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)

- * Select a valve from R, U, S or Z when the SI unit output polarity is positive common. Select a valve from R, U, NS or NZ when the SI unit output polarity is negative common.
- * Only "Z" and "NZ" types are available for the product with power saving circuit.

多SMC

Manual override

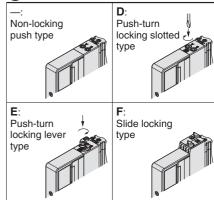


1 Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw
K	(Falling-out-prevention type)
	Hexagon socket head cap screw
Н	(Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 136 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

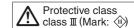

Dimensions: Type 10/For EX260/Series SY3000

SS5Y3-10S \square -Stations $_{D}^{U}$ - $_{C4, N3}^{C2, N1}$ (D)

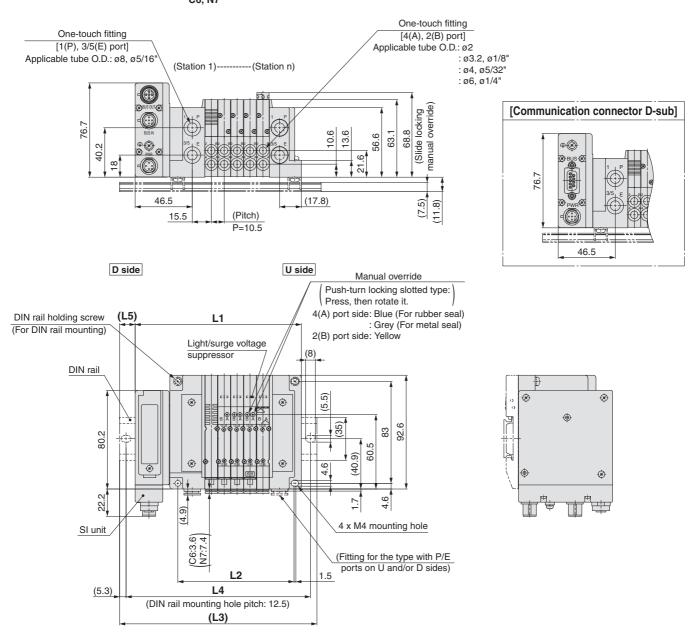

Note 1) These figures show the "SS5Y3-10SQA-05D-C6".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


Note 3) Refer to page 124 for dimensions of A or B port top-ported type.


n: stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12

n: stations	18	19	20	21	22	23	24
L1	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	231	241.5	252	262.5	273	283.5	294
L3	298	310.5	323	335.5	348	348	360.5
L4	287.5	300	312.5	325	337.5	337.5	350
L5	13	14	15	16	17	12	13



Dimensions: Type 10/For EX260/Series SY5000

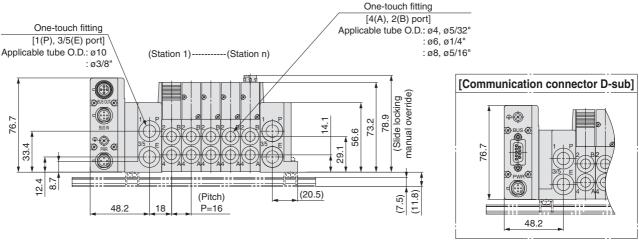

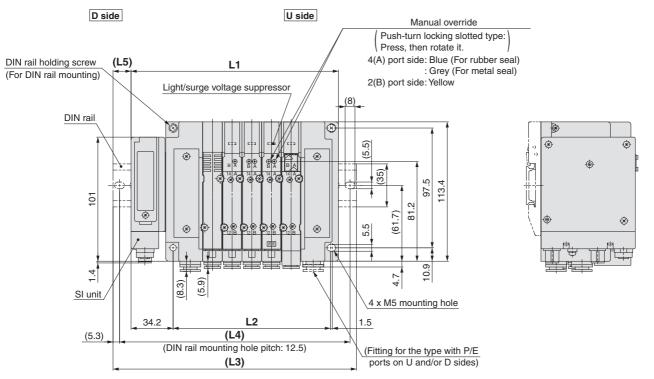

Note 1) These figures show the "SS5Y5-10SQA-05D-C8".

Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

n: stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5

n: stations	18	19	20	21	22	23	24
L1	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	336	352	368	384	400	416	432
L3	410.5	423	435.5	448	473	485.5	498
L4	400	412.5	425	437.5	462.5	475	487.5
L5	17	15	13.5	11.5	16	14.5	12.5

eplacement Cons

Plug-in Metal Base

EX510 Paub Connector Flat Ribbon Cable PC Wiring

Plug-in Connector Connector Connecting Base

Terminal Desub Connector Flat Ribbon Cable Block Box Pc Wiring

EX500 | Circular | Lead Wire

0 EX250 EX600 EX500

Specific Product Manifold Precautions

Plug-in Connector Connecting Base


EX260

Type 12
Top Ported

Series **SY3000/5000** (§

How to Order Manifold

Refer to pages 124, 125 for Type 12/Top ported dimensions.

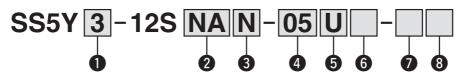

1 Series

<u> </u>		
3	SY3000	
5	SY5000	

2 SI unit specifications

Si utili specifications				
Symbol	Protocol	Number of		
		outputs	connector	
0	٧	/ithout SI un	it	
QA	DeviceNet™	32	M12	
QB	Devicervet	16	IVITZ	
NA		32	M12	
NB	PROFIBUS DP	16	IVIIZ	
NC		32	D I Note)	
ND		16	D-sub Note)	
VA	CC-Link	32	M12	
VB		16	IVI I Z	
DA	EtherCAT	32	M12	
DB	EllielCAI	16	IVIIZ	
FA	PROFINET	32	M12	
FB		16	IVI I Z	
EA	EtherNet/IP™	32	M12	
EB	Euleinel/IP	16	IVI I Z	

Note) IP40 for the D-sub applicable communication connector specification.

For SI unit part number, refer to page 136. DIN rail cannot be mounted without SI unit.

3 SI unit output polarity

	,
_	Positive common (NPN)
N	Negative common (PNP)

Note 1) Ensure a match with the common specifications of the value to be used. Note 2) Without SI unit, the symbol is —.

4 Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	-
02	2 stations	O
:	i	Specified layout Note 2) (Available up to 32 solenoids
24	24 stations	(Available up to 32 soleholds)

In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
÷	:	Double wiring Note 1)
08	8 stations	_
02	2 stations	O :#:
:	:	Specified layout Note 2)
16	16 stations	(Available up to 16 solenoids)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet.

(Note that 2-position double, 3-position

and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

6 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000
_	ø8	ø10
N	ø5/16"	ø3/8"

* For N, sizes are in inches

8 Mounting

_	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Consider a language wail thous	
:	:	Specify a longer rail than the standard length.	
D24	For 24 stations	the standard length.	

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to page 140 for part numbers of DIN rail.

5 P, E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


Note) **6** For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

Refer to Fieldbus System (CAT.E02-25) for details on the EX260 Integrated-type (For Output) Serial Transmission System.

Specific Product Precautions

108

How to Order Manifold Assembly

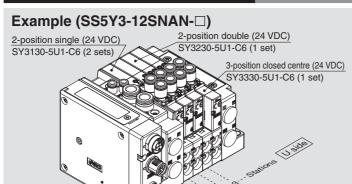


- →The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure on the left.

If the arrangement becomes complicated, specify on a manifold specification sheet.

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

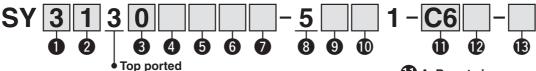

1 Series

0 001100		
3	SY3000	
5	SY5000	

2 Type of actuation

Manifold base (4 stations)
SS5Y3-12SNAN-04D

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B *	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

_	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- Note the specified energizing time when power saving circuit is selected. Refer to page 154.

Rated voltage


U Hate	a voitage	
-		241/00

9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)

- * Select a valve from R, U, S or Z when the SI unit output polarity is positive common. Select a valve from R, U, NS or NZ when the SI unit output polarity is negative common.
- * Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

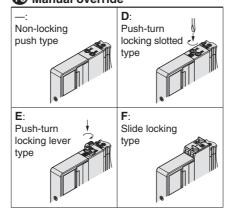

多SMC

1 A, B port size

Thread piping

111110	au pipilig	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

One.	touch hilling (wethic)		
Symbol	A and B port	SY3000	SY5000
C2	ø2 One-touch fitting		_
C3	ø3.2 One-touch fitting		_
C4	ø4 One-touch fitting	•	•
C6	ø6 One-touch fitting	•	•
C8	ø8 One-touch fitting	_	•

One-touch fitting (Inch)

	10 110111		
Symbol	A and B port	SY3000	SY5000
N1	ø1/8" One-touch fitting	•	_
N3	ø5/32" One-touch fitting	•	•
N7	ø1/4" One-touch fitting	•	•
N9	ø5/16" One-touch fitting	_	•

Thread type


Timeda type	
_	Rc
F	G
N	NPT
Т	NPTF

* Only — is available for M5.

Type of mounting screw

<u> </u>	<u> </u>
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 136 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

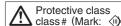


Type 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

EX126

Series SY3000/5000 ()

How to Order Manifold

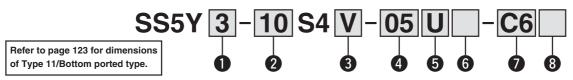

Series

<u> </u>			
3	SY3000		
5	SY5000		

2 Type

G Type						
	10	Side ported				
	11	Bottom ported*				

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

SI unit

0	Without SI unit
V	CC-Link (Positive common NPN)

* Only a terminal block plate is mounted for the valve without SI unit.

4 Valve stations

Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring Note 1)			
08	8 stations				
02	2 stations	Cracified Invest Note 2)			
:	:	Specified layout Note 2) (Available up to 16 solenoids)			
16	16 stations	(Available up to 10 solellolus)			

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

6 SUP/EXH block assembly

_			
— Internal pilot			
S	Internal pilot, Built-in silencer		
R	External pilot		

- * 3/5(E) port is plugged for the built-in silencer
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 7.



8 Mounting and Option

	Symbol	Mounting	Option	
	AA Direct mounting		None	
			Name plate (With station number)	
		inounting	Name plate (Without station number)	
	D□	DINI veil	Without name plate	
	A□	DIN rail mounting	Name plate (With station number)	
	В□	mounting	Name plate (Without station number)	

Note 1) Enter the number of stations inside \square . (Refer to "DIN Rail Option" below.)


Note 2) Only direct mounting is available for Type 11 (Bottom ported).

DIN Rail Option

_		Direct mounting				
0	With	out DIN rail (with bracket)				
3	For 3 stations	Creatify a law year wail them the				
:	- : ·	Specify a longer rail than the total length of specified stations.				
16	For 16 stations	lotal length of specified stations.				

Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX126 Integrated-type (For Output) Serial Transmission System.

How to Order Manifold Assembly

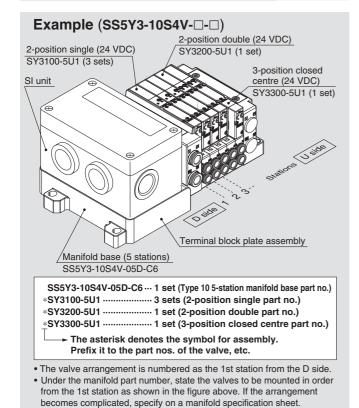

Note) When mixing top ported configurations, select from page 114. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.



Specific Product Precautions

7 A, B port (Metric)

Cumbal	A, B port			Type 10/ Side ported				
Symbol			SY3000	SY5000	SY5000			
C2		ø2	One-touch fitting		_	_		
C 3		ø3	.2 One-touch fitting		_	_		
C 4	igh	ø4	One-touch fitting					
C6	Straight	ø6	One-touch fitting					
C8	"	ø8	One-touch fitting	_	•	•	0 1900	
CM*		Stı	raight port, mixed sizes	•	•	•		
L4		5	ø4 One-touch fitting	•	•	_		
L6			pward	ø6 One-touch fitting			_	
L8				2	ø8 One-touch fitting	_	•	_
B 4	Elbow	ard	ø4 One-touch fitting	•	•	_		
B6		ownw	ø6 One-touch fitting			_		
B8		Õ	ø8 One-touch fitting	_		_	Told Service S	
LM*			pow port, mixed sizes uding upward and downward piping)	•	•	_		
P, E port size (One-touch fittings)			ø8	ø10	ø10			
Note)) To	av	Note) To avoid interference with the body or nining, select downward elboy					


A, B port (Inch)

Ó					Type 11/			
Symbol	A, B port		SY3000		SY5000			
N1		ø1.	/8" One-touch fitting	•	_	_		
N3	ht	ø5	/32" One-touch fitting	•	•	•		
N7	Straight	ø1	/4" One-touch fitting	•	•	•		
N9	Sţ	ø5	/16" One-touch fitting	_	•	•	0 10 83	
CM*		Str	aight port, mixed sizes	•	•	•		
LN3		5	ø5/32" One-touch fitting	•	_	_		
LN7		Upward	ø1/4" One-touch fitting	•	•	_		
LN9			3	ø5/16" One-touch fitting	_	•	_	o Service
BN3	Elbow	ard	ø5/32" One-touch fitting	•	_	_	ans and	
BN7	픮	Downward	ø1/4" One-touch fitting	•		_		
BN9		8	ø5/16" One-touch fitting	_	•	_		
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	_			
P, E	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø3/8"		
P, E	11 0/			ø5/16"	ø3/8"	ø3/8"		

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

- * Indicate the size on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With two mounting screws) Refer to page 8 for valve specifications.

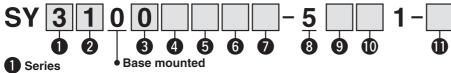

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single			
2	2-position double			
3	3-position closed centre			
4 3-position exhaust centre				
5	3-position pressure centre			
A *	4-position dual 3-port valve (N.C./N.C.)			
B*	4-position dual 3-port valve (N.O./N.O.)			
C*	4-position dual 3-port valve (N.C./N.O.)			

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal	
1	Metal seal	

Pilot type

<u> </u>	-1.176-
_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

<u> </u>	
_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)				
В	Quick response type (0.7 MPa)				
K*	High pressure type (1.0 MPa)				

* Only metal seal type is available for the high pressure type.

Coil type

•	A I						
_	Standard						
Т	With power saving circuit (Continuous duty type)						

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage


_	_
5	24 VDC

9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)

* Only "Z" type is available for the product with power saving circuit.

Manual override

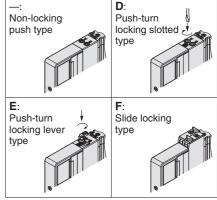


Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 136 for part numbers of base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

Dimensions: Type 10/EX126/Series SY3000

SS5Y3-10S4 - Stations D - C2, N1 (D)

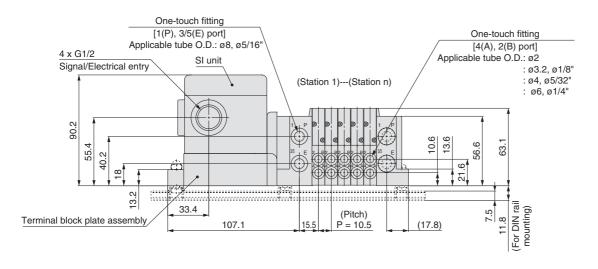

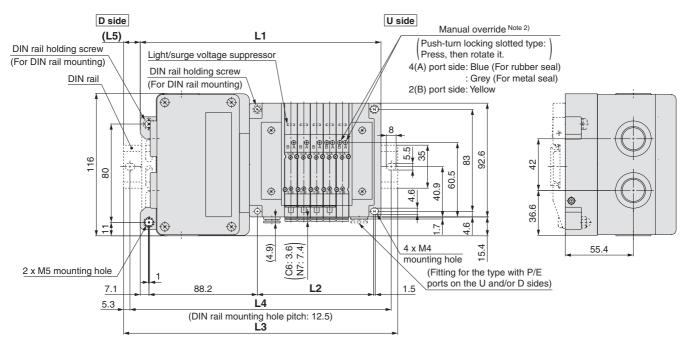

Note 1) These figures show the "SS5Y3-10S4□-05D-C6".

Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


Note 3) Refer to page 124 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12



Dimensions: Type 10/EX126/Series SY5000

SS5Y5-10S4 - Stations D - C6, N3 (D)

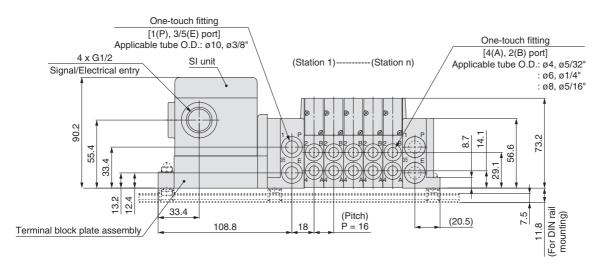

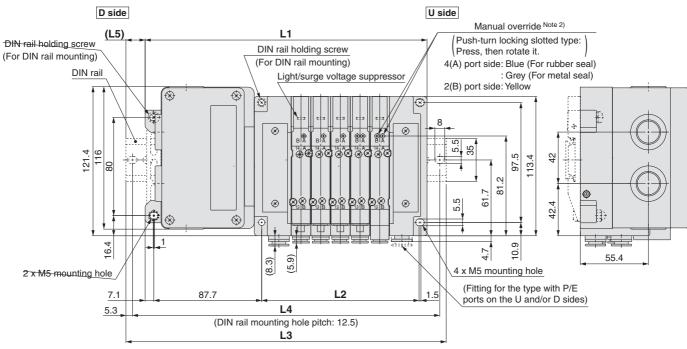

Note 1) These figures show the "SS5Y5-10S4□-05D-C8".

Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15

Plug-in Connector Connecting Base

EX126

Type 12
Top Ported

Series SY3000/5000 CE

How to Order Manifold

Series

3	SY3000
5	SY5000

2 SI unit

0	Without SI unit
٧	CC-Link (Positive common NPN)

* Only a terminal block plate is mounted for the valve without SI unit.

3 Valve stations

Symbo	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
08	8 stations	
02	2 stations	Cracified Invent Note 2)
:	1	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	(Available up to 16 solellolus)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

4 P. E port entry

<u> </u>	. ,
U Note)	(= 10 10 0101110110)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


Note) **⑤** For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

5 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

How to Order Manifold Assembly

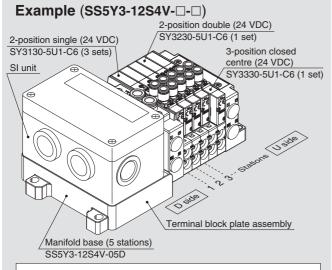

SS5Y3-12S4V-05D \cdots 1 set (Type 12 5-station manifold base part no.) *SY3130-5U1-C6 \cdots 3 sets (2-position single part no.)

*SY3230-5U1-C6----- 1 set (2-position double part no.)
*SY3330-5U1-C6------ 1 set (3-position closed centre part no.)

➤ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement

becomes complicated, specify on a manifold specification sheet.

6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000
_	ø8	ø10
N	ø5/16"	ø3/8"

* For N. sizes are in inches

Mounting

	- 3	
_		Direct mounting
D	DIN rail mounting (With DIN rail)	
D0	DIN rail	mounting (Without DIN rail)
D3	For 3 stations	Charify a langer rail than
:	:	Specify a longer rail than
D16	For 16 stations	the standard length.


Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX126 Integrated-type (For Output) Serial Transmission System.



EX1

Specific Product

How to Order Valves (With two mounting screws) Refer to page 8 for valve specifications.

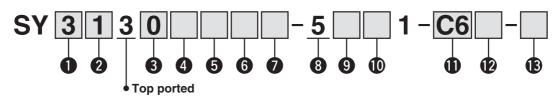

1 Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

	ant in vaivo typo,
	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	
_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Oon type	
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage

5 24 VDC	

9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)

* Only "Z" types are available for models with a power saving circuit.

Manual override

-: Non-locking push type	D: Push-turn locking slotted type
E: Push-turn locking lever type	F: Slide locking type

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

	10 11011 11111113 (
Symbol	A, B port	SY3000	SY5000
C2	C2 ø2 One-touch fitting		_
C3	C3 ø3.2 One-touch fitting		_
C4	C4 ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C8	C8 ø8 One-touch fitting		

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting	•	
N9	ø5/16" One-touch fitting	_	

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF

* Only — is available for M5.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \ast When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 136 for part numbers of base gasket and mounting screw.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

Type 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

EX120

Series SY3000/5000 CE

How to Order Manifold

Refer to page 123 for dimensions of Type 11/Bottom ported type.

Series

3	SY3000
5	SY5000

Type

<u> </u>	
10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Mounting Type Manifold (from page 127).

3 SI unit

0	Without SI unit	
Q	DeviceNet™ (Positive common NPN)	
R1	OMRON Corp.: CompoBus/S (16 outputs) (Positive common NPN)	
R2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common NPN)	
V	CC-Link (Positive common NPN)	
ZB	CompoNet™ (Positive common NPN)	
ZBN	CompoNet™ (Negative common PNP)	

Note) Ensure a match with the common specifications of the value to be used.

4 Valve stations

Symbol	Stations	Note
02	2 stations	
÷	:	Double wiring Note 1)
08	8 stations	
02	2 stations	Cracified Invest Note 2)
÷	:	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	(Available up to 10 soleriolus)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommo-

P. E port entry

• • •	_ p ,
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

6 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

* 3/5(E) port is plugged for the built-in silencer

Refer to the page on the right for 7.



Mounting and Option

Symbol	Mounting	Option
_		None
AA		Name plate (With station number)
BA		Name plate (Without station number)
D□	mounina F	Without name plate
A□		Name plate (With station number)
B□		Name plate (Without station number)

Note 1) Enter the number of stations inside \square (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).


DIN Rail Option

_	Direct mounting			
0	Without DIN rail (with bracket)			
3	For 3 stations	Chaoify a langur rail than the		
:	:	Specify a longer rail than the		
16	For 16 stations	total length of specified stations.		

* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 140 for the DIN rail part number.)

Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX120 Integrated-type (For Output) Serial Transmission System.

How to Order Manifold Assembly

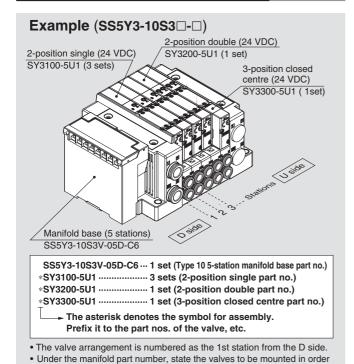

Note) When mixing top ported configurations, select from page 120. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.



A, B port size (Metric)

Symbol		A, B port			e 10/ ported	Type 11/ Bottom ported	
Syllibol			A, b port	SY3000	SY5000	SY5000	
C2		ø2	One-touch fitting	•	_	_	
СЗ		ø3	.2 One-touch fitting	•	_	_	
C4	Straight	ø4	One-touch fitting	•	•	•	
C6	tra	ø6	One-touch fitting	•	•	•	
C8	0,	ø8 One-touch fitting		_	•	•	O Date
CM*		Straight port, mixed sizes		•	•	•	
L4		5	ø4 One-touch fitting	•	•	_	
L6	ote)	pward	ø6 One-touch fitting	•	•	_	
L8			ø8 One-touch fitting	_	•	_	0 1905
B4	Elbow Note)	ard	ø4 One-touch fitting	•	•	_	
B6	l od	ownward	ø6 One-touch fitting	•	•	_	
B8	ш	D _O	ø8 One-touch fitting	_	•	_	To los
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	_	-	
P, E	P, E port size (One-touch fittings)			ø8	ø10	ø10	
Note) To avoid interference with the body or pining, collect downward albo							

A, B port size (Inch)

A. B port		Type Side p	e 10/ oorted	Type 11/ Bottom ported		
		A, B port	SY3000	SY5000	SY5000	
	ø1.	/8" One-touch fitting	•	_	_	
Ħ	ø5	/32" One-touch fitting				
raig	ø1	/4" One-touch fitting	•		•	
Š	ø5	/16" One-touch fitting	_	•	•	o Date
	Straight port, mixed sizes		•		•	
lbow Note)	5	ø5/32" One-touch fitting			_	
	wa	ø1/4" One-touch fitting	•	•	_	
	J	ø5/16" One-touch fitting	_		_	0 500
	ard	ø5/32" One-touch fitting	•		_	
	lpo	WUW	ø1/4" One-touch fitting		•	_
Ш	ρ	ø5/16" One-touch fitting		•	_	To large
Elbow port, mixed sizes (Including upward and downward piping)		•	•	_		
por	t siz	ze (One-touch fittings)	ø5/16"	ø3/8"	ø3/8"	
	Elbow Note) Straight	Elbow Note) Straight Downward Upward 29 8 8 8	Straight port, mixed sizes process pr	A, B port Side SY3000	SY3000 SY5000 SY5	A, B port Side ported Bottom ported SY3000 SY5000 SY5

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

- * Indicate the size on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.



O 000.00	
3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	5 3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

- 1100 17 100		7
	_	Internal pilot
	R	External pilot

Back pressure check valve (Built-in valve type)

<u> </u>	
_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

Only metal seal type is available for the high pressure type.

Coil type

	ii type
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage


5	24 VDC

9 Light/surge voltage suppressor and common specification

	R	With surge voltage suppressor (Non-polar)
	U	With light/surge voltage suppressor (Non-polar)
	S	With surge voltage suppressor (Positive common)
	Z	With light/surge voltage suppressor (Positive common)
ĺ	NS	With surge voltage suppressor (Negative common)
	NZ	With light/surge voltage suppressor (Negative common)

- * Select a valve from R, U, S or Z when the SI unit specification is ZBN (Positive common).
 Select a valve from R, U, NS or NZ when the SI unit specification is ZBN (Negative common).
- * Only "Z" and "NZ" types are available for the product with power saving circuit.

10 Manual override

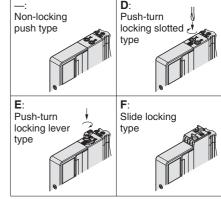

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 136 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

Dimensions: Type 10/EX120/Series SY3000

SS5Y3-10S3 - Stations B C2 C3, N1 (D)

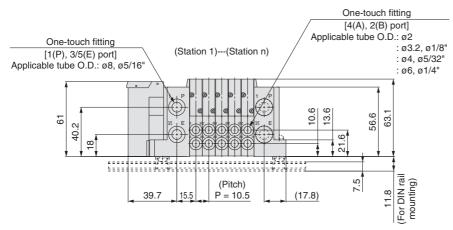

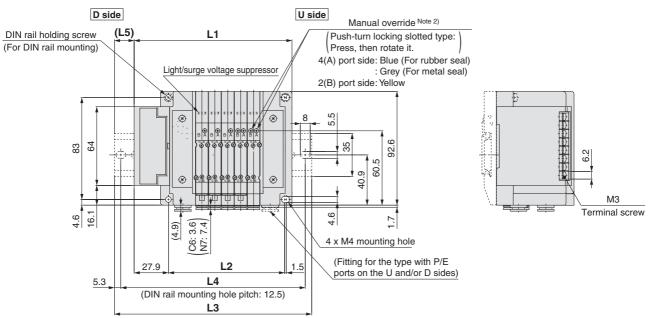

Note 1) These figures show the "SS5Y3-10S3□-05D-C6".


Note 2) Refer to page 121 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


Note 3) Refer to page 124 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	96.9	107.4	117.9	128.4	138.9	149.4	159.9	170.4	180.9	191.4	201.9	212.4	222.9	233.4	243.9
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273
L4	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L5	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5

Dimensions: Type 10/EX120/Series SY5000

SS5Y5-10S3 - Stations D - C6, N7 (D)

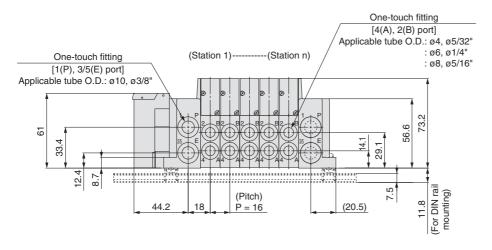

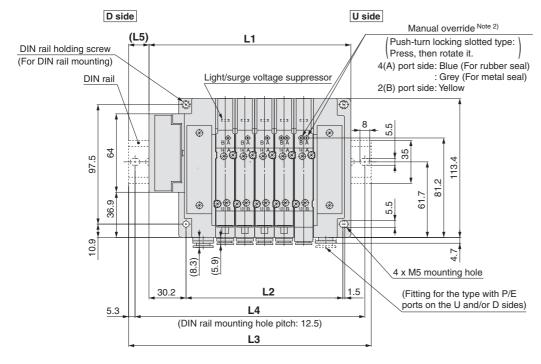

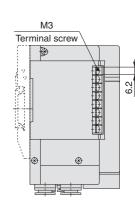

Note 1) These figures show the "SS5Y5-10S3□-05D-C8".

Note 2) Refer to page 122 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 125 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	116.7	132.7	148.7	164.7	180.7	196.7	212.7	228.7	244.7	260.7	276.7	292.7	308.7	324.7	340.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373
L4	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5
L5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16

Plug-in Connector Connecting Base

EX120

Type 12
Top Ported

Series SY3000/5000 ()

How to Order Manifold

dimensions of Type 12/Top ported type.

3 SY3000 5 SY5000

2 SI unit

0	Without SI unit				
Q	DeviceNet™(Positive common NPN)				
R1	OMRON Corp.: CompoBus/S (16 outputs) (Positive common NPN)				
R2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common NPN				
V	CC-Link (Positive common NPN)				
ZB	CompoNet™ (Positive common NPN)				
ZBN	CompoNet™ (Negative common PNP)				

Note 1) Ensure a match with the common specifications of the value to be used.

3 Valve stations

Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring Note 1)			
08	8 stations				
02	2 stations	Specified layout Note 2) (Available up to 16 solenoids)			
÷	:				
16	16 stations	(Available up to 16 solenoids)			

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

4 P, E port entry

	1
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

Note) • For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

5 SUP/EXH block assembly

_	Internal pilot			
S Internal pilot, Built-in silence				
R	External pilot			

* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000
_	ø8	ø10
N	ø5/16"	ø3/8"

* For N, sizes are in inches.

Mounting

_		Direct mounting					
D	DIN ra	DIN rail mounting (With DIN rail)					
D0	DIN rail	DIN rail mounting (Without DIN rail)					
D3	For 3 stations	Specify a longer rail than					
:	:	the standard length.					
D16	For 16 stations	ino otandara longini					

* When mounted on the DIN rail without the SI unit, please select D0 and refer to L3 of the dimensions for the DIN rail length, then order separately. (Refer to page 140 for the DIN rail part number.)

How to Order Manifold Assembly

Example (SS5Y3-12S-□-□)		
2-position single (24 VDC)	2-position dou SY3230-5U1-	uble (24 VDC) C6 (1 set)
SY3130-5U1-C6 (3 sets)		3-position closed centre (24 VDC) SY3330-5U1-C6 (1 set)
		(130.)
		State Sale
Manifold base (5 stations) SS5Y3-12S3V-05D	Oside	`n [®]
	sot (Type 12 5-stati	on manifold base part no.)
*SY3130-5U1-C6 3	sets (2-position s	ingle part no.)
*SY3230-5U1-C6 ······ 1 *SY3330-5U1-C6 ····· 1		
The asterisk deno	otes the symbol for rt nos. of the valve	

• The valve arrangement is numbered as the 1st station from the D side.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.


Refer to Reduced Wiring Fieldbus System (Serial Transmission) in Electric Products (CAT.E150) for details on the EX120 Integrated-type (For Output) Serial Transmission System.



Specific Product

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

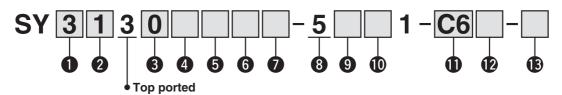

1 Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed centre	
4	3-position exhaust centre	
5	3-position pressure centre	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

		-
	_	Standard (0.7 MPa)
В		Quick response type (0.7 MPa)
	K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

_	
_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

Rated voltage


U nai	eu voitage	
5	24 VDC	

Q Light/surge voltage suppressor and common specification

<u> </u>		
R	With surge voltage suppressor (Non-polar)	
U	With light/surge voltage suppressor (Non-polar)	
S	S With surge voltage suppressor (Positive common)	
Z	With light/surge voltage suppressor (Positive common)	
NS With surge voltage suppressor (Negative common)		
NZ	With light/surge voltage suppressor (Negative common)	

- * Select a valve from R, U, S or Z when the SI unit specification is ZBV (Positive common). Select a valve from R, U, NS or NZ when the SI unit specification is ZBN (Negative common).
- * Only "Z" and "NZ" types are available for the product with power saving circuit.

Manual override

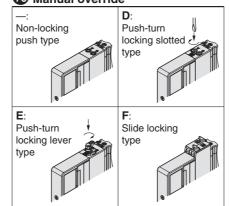

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

	to don maning (monito)		
Symbol	A, B port	SY3000	SY5000
C2	ø2 One-touch fitting		_
C3	ø3.2 One-touch fitting		_
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	_	

One-touch fitting (Inch)

one today many					
Symbol	A, B port	SY3000	SY5000		
N1	ø1/8" One-touch fitting		_		
N3	ø5/32" One-touch fitting				
N7	ø1/4" One-touch fitting				
N9	ø5/16" One-touch fitting —				
		•			

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF


* Only — is available for M5.


13 Type of mounting screw


 Round head combination screw 	
В	Hexagon socket head cap screw
K Round head combination screw (Falling-out-prevention ty	
Hexagon socket head cap screw (Falling-out-prevention	

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 136 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

Dimensions: Type 10/External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override/Series SY3000

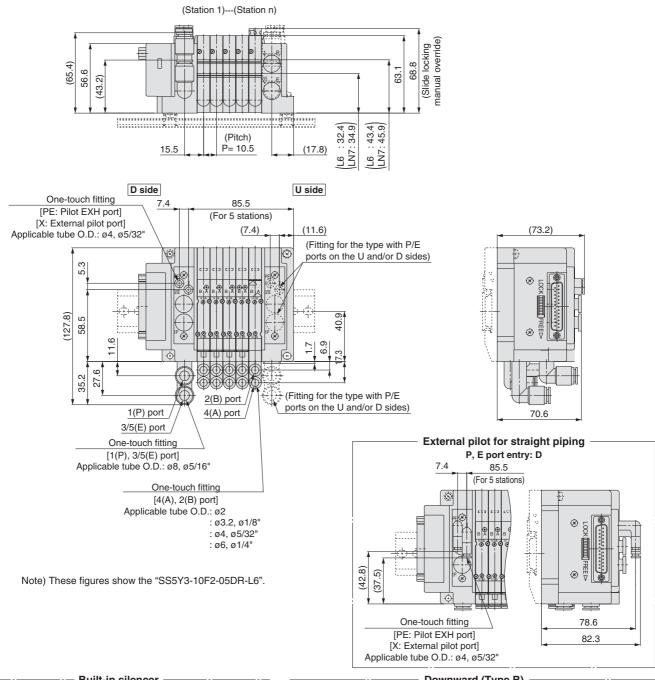


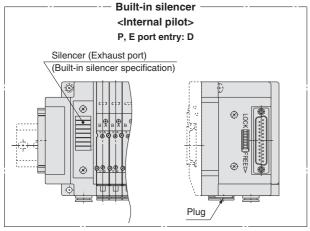


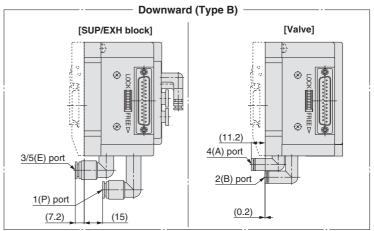



Dimensions: Type 10/External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override/Series SY5000


SS5Y5-10□-Stations U(S, R)-L□

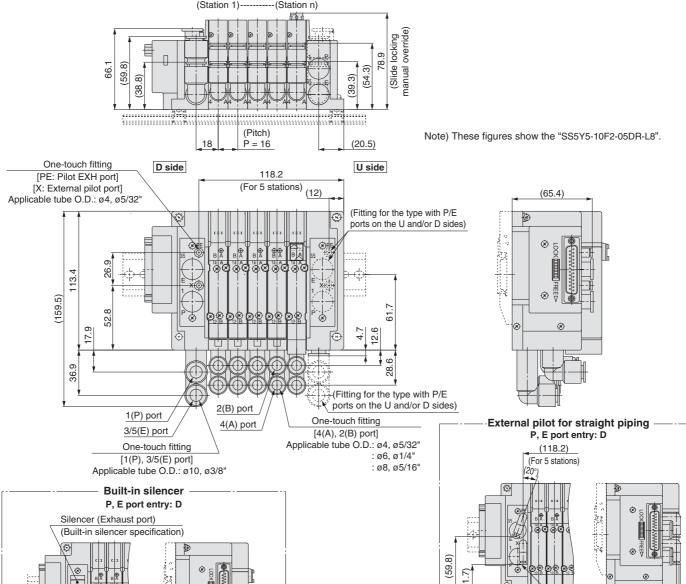

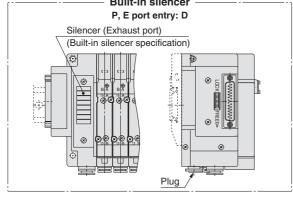

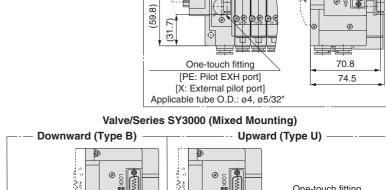

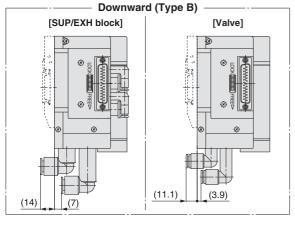

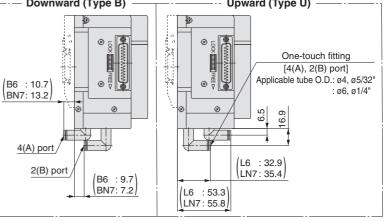

SMC

Replacement Parts

Construction

Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring EX510


Terminal Block Box Lead Wire


EX126 | EX260 | EX250 | EX600 | EX500

122

Dimensions: Type 11/All Wirings/Series SY5000

SS5Y5-11□-Stations D

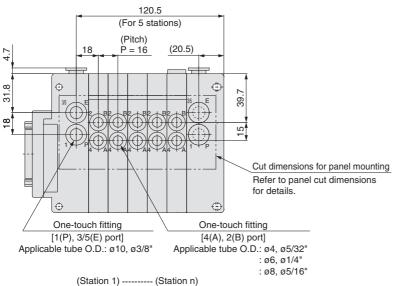

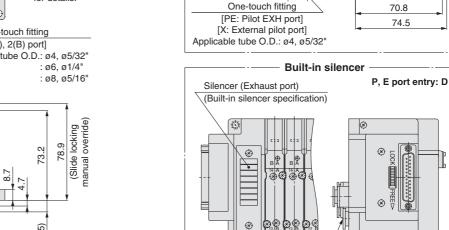

 Φ

(59.8)

(31.7)

External pilot

Plug

P, E port entry: D

PE port entry.


Refer to page 122 for X or


(X)


(118.2)

(For 5 stations)

8

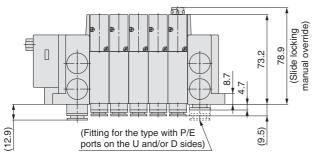

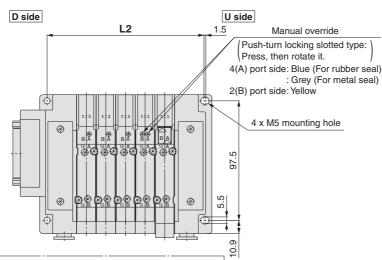


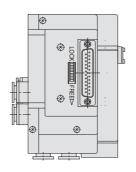

Note 1) These figures show the "SS5Y5-11F2-05D-C8".

Note 2) Refer to the below pages for L2 dimensions and other dimensions that are not specified in each wiring specification.


D-sub connector : P. 52 Flat ribbon cable : P. 54 Terminal block box: P. 62 : P. 70 Lead wire Circular connector: P. 78 EX500 : P. 86 EX600 : P. 93, 94 EX250 : P. 100 : P. 106 FX260 : P. 112 EX126 EX120 : P. 118

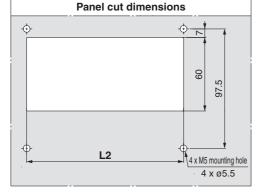


Dimensions: Type 12/All Wirings/Series SY3000

SS5Y3-12□-Stations ^U_R(R)

(Station 1)---(Station n)

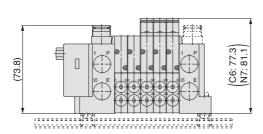

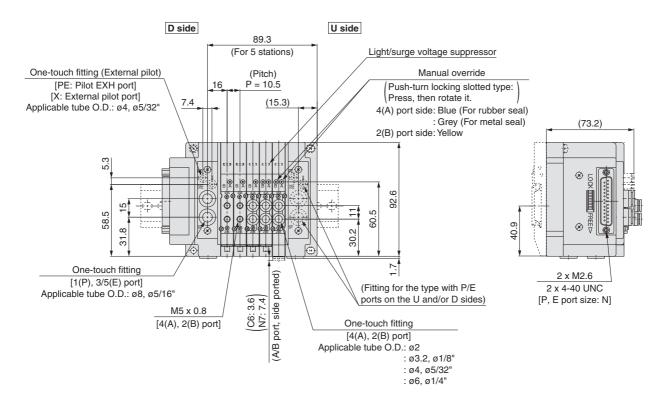


Note 1) These figures show the "SS5Y3-12F2-05D".

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 121 for dimensions of silencer.

Note 3) Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector : P. 51 Flat ribbon cable : P. 53 Terminal block box: P. 61 : P. 69 Lead wire Circular connector: P. 77 : P. 85 EX500 EX600 : P. 91, 92 EX250 : P. 99 : P. 105 EX260 : P. 111 EX126 : P. 117 EX120

Dimensions: Type 12/All Wirings/Series SY5000

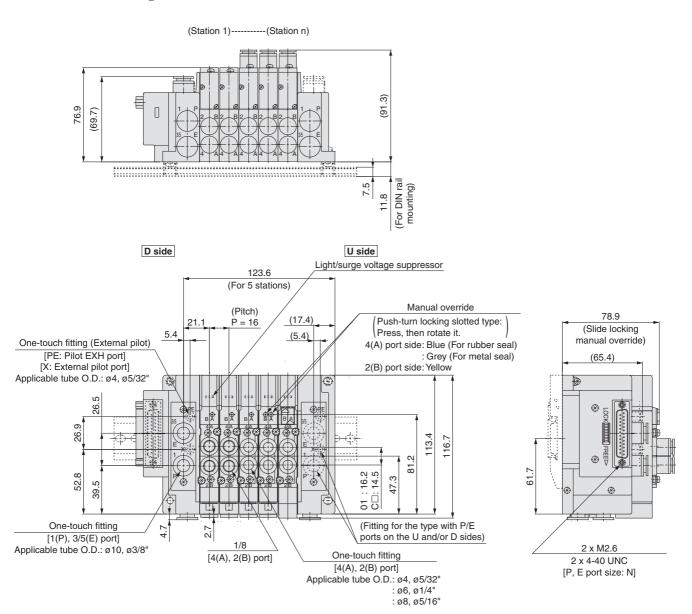

Note 1) These figures show the "SS5Y5-12F2-05D".

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 122 for dimensions of silencer.

Note 3) Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector : P. 52 Flat ribbon cable : P. 54 Terminal block box: P. 62 : P. 70 Lead wire Circular connector: P. 78 : P. 86 EX500 : P. 93, 94 EX600 EX250 : P. 100 EX260 : P. 106 : P. 112 EX126 : P. 118 EX120

Type 10 Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/IP67) Flat Ribbon Cable (IP40) PC Wiring (IP40)

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120 (IP20)

Series SY3000/5000 (€

The SY3000 can be mounted onto the SY5000 size manifold.

How to Order Manifold

Refer to page 130 for dimensions of Type 11/Bottom ported type.

SS5Y5 - M 10 F 1 - 05 U - C 8 6 Wixed Mounting Type 1 2 3 4 5 6 7 8 9 10

It is possible to mount the SY3000 size valves on all stations. In this case, there is no need to fill in part 3 in the order code. However, the manifold block width should be 12.5 mm.

1 Type

10	Side ported
11	Bottom ported

2 Connector type

Symbol	I Type Pag		
F	D-sub connector (25 pins, IP40)		
FW	D-sub connector (25 pins, IP67)		
Р	Flat ribbon cable (26 pins)		
PG	Flat ribbon cable (20 pins)	P. 49	
PH	Flat ribbon cable (10 pins)		
J	PC wiring (20 pins)		
Т	Terminal block box P. 59		
L1	Lead wire 34 cores		
L2	Lead wire 17 cores	P. 67	
Lad wire 9 cores			
M	Circular connector	P. 75	
S□	Serial transmission: EX500	P. 83	
S6□	Serial transmission: EX600	P. 89	
S□	Serial transmission: EX250 P. 97		
S□	Serial transmission: EX260 P. 10		
S4□	Serial transmission: EX126 P. 10		
S3 □	☐ Serial transmission: EX120 P. 11		

Refer to the pages shown in the table above for details.

3

• With Lead wire Lead wire length

Lead wire length		
1	0.6 m	
2	1.5 m	
3	3 m	

 With D-sub connector, Flat ribbon cable and PC wiring

Connector entry direction


ĺ	1	Upward
	2	Lateral

^{*} It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

4 Valve stations

•		o ctationio
Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
:		on the number of stations. Refer to
24	24 stations	the pages shown in the table "Connector type" for details.

How to Order Manifold Assembly

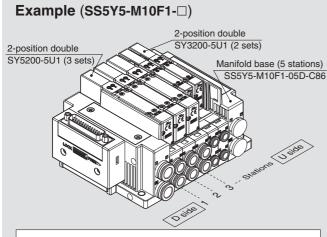

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 132.

In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

5 P. E port entry

• · , = p · · · · · · · ·		
U	U side (2 to 10 stations)	
D	D side (2 to 10 stations)	
В	Both sides (2 to 24 stations)	

Refer to page 89 for the EX600 and on page 97 for the EX250.

6 SUP/EXH block assembly

	,
 Internal pilot 	
S	Internal pilot, Built-in silencer
R	External pilot

- 3/5(E) port is plugged for the built-in silencer type.
- * Refer to page 89 for the EX600 and **1** on page 97 for the EX250.

Refer to the page on the right for 7, 8 and 9.

Mounting and Option

WIO INIO	Modriting and Option		
Symbol	Mounting	Option	
_	AA Direct mounting	None	
AA		Name plate (With station number)	
BA		Name plate (Without station number)	
D□	DIN rail mounting	Without name plate	
A□		Name plate (With station number)	
B□		Name plate (Without station number)	

Note 1) Enter the number of stations inside \square . (Refer to "DIN Rail Option" below.) Note 2) Only direct mounting is available for Type 11 (Bottom ported).

DIN Rail Option

_	Direct mounting		
0	Without DIN rail (with bracket)		
3	For 3 stations Specify a longer rail than the total length of specified station		
:	:	[The SY5000 valve is now at a mountable	
24	For 24 stations	24 stations length (manifold block length of 16 mm).]	

*Refer to page 129 to determine the L3 using "Calculation formula" for the DIN rail length.



Manifold Options

Fitting type

Symbol	A, B port
С	Metric size: Straight One-touch fitting
L	Metric size: One-touch fitting with upward elbow Note)
В	Metric size: One-touch fitting with downward elbow Note)
N	Inch size: Straight One-touch fitting
LN	Inch size: One-touch fitting with upward elbow Note)
BN	Inch size: One-touch fitting with downward elbow Note)
CM*	Straight port, mixed sizes
LM*	Elbow port, mixed sizes (Including upward and downward piping)

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 141 to 143).

- * Indicate the sizes on the manifold specification sheet in the case of "CM", "LM"
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.
- * Elbow fittings: ø2, ø3.2 and ø1.8" are not available for the SY3000 series. ø2, ø3.2, ø1.8" and ø5/32" are not available for the SY5000 series.

8 SY5000: A, B port size

(Metric)

Symbol	Port size	
4	ø4 One-touch fitting	
6	ø6 One-touch fitting	
8	ø8 One-touch fitting	
_	For all stations of SY3000	
. No seconda de la conde de la compactica de la		

9 For all stations of SY3000 * No symbol needs to be specified when fitting type "CM", "LM" is selected.

(Inch) Symbol

9 SY3000: A, B port size

(Metric)

,	
Symbol	Port size
2	ø2 One-touch fitting
3	ø3.2 One-touch fitting
4	ø4 One-touch fitting
6	ø6 One-touch fitting
8	ø8 One-touch fitting Note)

(Inch)

(******)			
		Symbol	Port size
		1	ø1/8" One-touch fitting
		3	ø5/32" One-touch fitting
		7	ø1/4" One-touch fitting
		9	ø5/16" One-touch fitting Note)

Port size ø5/32" One-touch fitting ø1/4" One-touch fitting

ø5/16" One-touch fitting

Note) The valve pitch is the same as the SY5000.

* No symbol needs to be specified when fitting type "CM", "LM" is selected.

How to Order Valves (With two mounting screws) Refer to page 8 for valve specifications.

Base mounted

A Sarias

T OC.	103
3	SY3000
5	SY5000

2 Type of actuation

1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
A *	4-position dual 3-port valve (N.C./N.C.)
B *	4-position dual 3-port valve (N.O./N.O.)
C*	4-position dual 3-port valve (N.C./N.O.)

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if back pressure check valve is required for the valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Cail tuma

Con type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

Rated voltage

5	24 VDC
6	12 VDC

* Only 24 VDC is available for the serial transmission type.

9 Light/surge voltage suppressor and common specification


_	Without light/surge voltage suppressor (Non-polar)	
R	With surge voltage suppressor (Non-polar)	
U	With light/surge voltage suppressor (Non-polar)	
S	With surge voltage suppressor (Positive common)	
Z	With light/surge voltage suppressor (Positive common)	
NS	With surge voltage suppressor (Negative common)	
NZ	With light/surge voltage suppressor (Negative common)	

- * "—" is not available for the SI unit manifold.
- * Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected.

Refer to the pages below for details

EX600: P. 90 EX250: P. 98 EX260: P. 104 EX126: P. 110 EX120: P. 116

Manual override

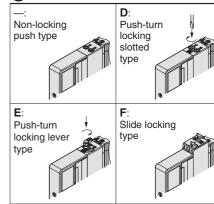

Type of mounting screw

	•
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 136 for part numbers of the base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release

 Without light/surge voltage suppressor (Non-polar) 				
R	With surge voltage suppressor (Non-polar)			
U	U With light/surge voltage suppressor (Non-polar)			
S	With surge voltage suppressor (Positive common)			
Z	With light/surge voltage suppressor (Positive common			
NS	With surge voltage suppressor (Negative common)			
NZ	With light/surge voltage suppressor (Negative common			
`				



Dimensions: Type 10/Mixed Mounting

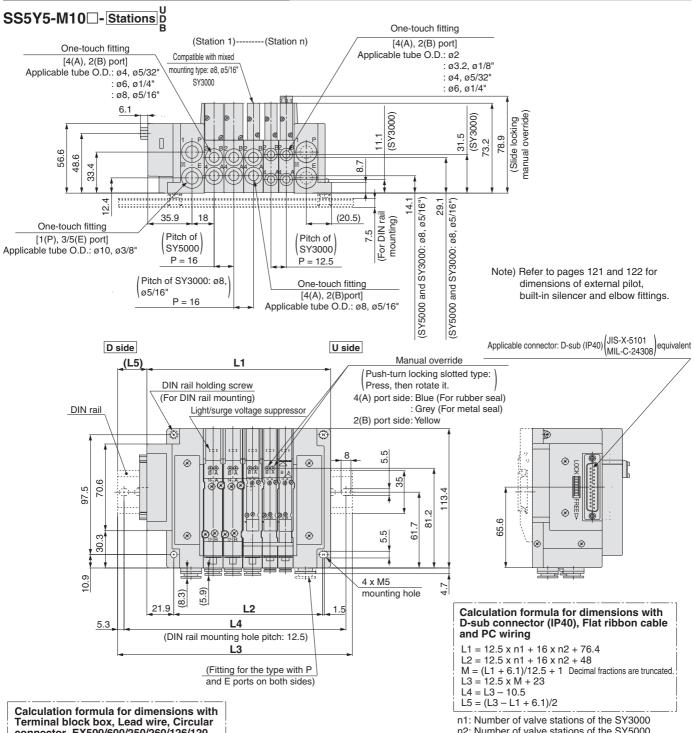

connector, EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ $L2 = 12.5 \times n1 + 16 \times n2 \times 48$

M = L1/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$

L4 = L3 - 10.5 L5 = (L3 - L1)/2

 $L6 = \dot{b} \times n3 + \dot{c}$

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000

n3: Number of I/O units or input block stations Note) Refer to pages 91 to 94 for dimensions of the EX600 serial transmission with I/O unit and pages 99 and 100 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

n1: Number of valve stations of the SY3000
n2: Number of valve stations of the SY5000
(Including the stations of the SY3000; ø8, ø5/16")

Coefficient	а	b	С
D-sub connector (IP40), Flat ribbon cable or Pc wiring	74.6	_	_
D-sub connector (IP67)	90.5	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
Serial transmission: EX500	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_



: ø4, ø5/32"

: ø6, ø1/4"

4 x M5 mounting hole

113.4 97 81.2

10.9

8

5


1.5

Dimensions: Type 11/Mixed Mounting

Applicable tube O.D.: ø4, ø5/32'

: ø6, ø1/4"

: ø8, ø5/16"

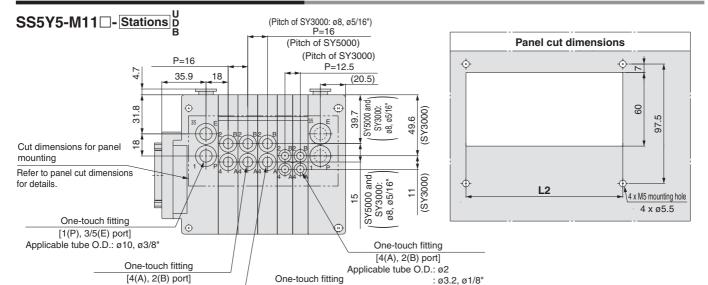

[4(A), 2(B) port]

Applicable tube O.D.: ø8, ø5/16'

Compatible with mixed mounting type: ø8, ø5/16 SY3000 (Slide locking manual override) 78.9 73.2 (3000) (9.5) (SY5000) (Fitting for the type with P (12.9)(7.3)and E ports on both sides) S U side D side Manual override Push-turn locking slotted type: Press, then rotate it.

4(A) port side: Blue (For rubber seal)

99

2(B) port side: Yellow ⊕

8

21.9

: Grey (For metal seal)

L2


(Station 1)-----(Station n)

Calculation formula for dimensions

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ $L2 = 12.5 \times n1 + 16 \times n2 + 48$ $L6 = b \times n3 + c$

- n1: Number of valve stations of the SY3000
- n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: ø8, ø5/16")
- n3: Number of I/O units or input block stations

Note) Refer to pages 91 to 94 for dimensions of the EX600 serial transmission with I/O unit and pages 99 and 100 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

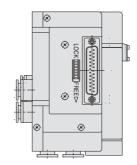

Coefficient	а	b	С
D-sub connector (IP40), Flat ribbon cable or PC wiring	74.6	_	_
D-sub connector (IP67)	90.5	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
Serial transmission: EX500	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_

Note) Refer to page 123 for dimensions of external pilots and built-in silencers, as well as their panel cuts.

Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/IP67) Flat Ribbon Cable (IP40) PC Wiring (IP40)

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120 (IP20)

Type 12 Top Ported

Series SY3000/5000 (€

SY3000 can be mounted onto SY5000 size manifold.

How to Order Manifold

Refer to pages 124 and 125 for dimensions of Type 12/Top ported type.

It is possible to mount the SY3000 size valves on all stations. However, the manifold block width should be 12.5 mm.

1 Connector type

O connector type				
Symbol	Type	Page		
F	D-sub connector (25 pins, IP40)			
FW	D-sub connector (25 pins, IP67)			
Р	Flat ribbon cable (26 pins)	P. 55		
PG	Flat ribbon cable (20 pins)			
PH	Flat ribbon cable (10 pins)			
J	PC wiring (20 pins)			
Т	Terminal block box	P. 63		
L1	Lead wire 34 cores			
L2	Lead wire 17 cores	P. 71		
L3	Lead wire 9 cores			
M	Circular connector	P. 79		
S□	Serial transmission: EX500	P. 87		
S6□	Serial transmission: EX600	P. 95		
S□	Serial transmission: EX250	P. 101		
S□	Serial transmission: EX260	P. 107		
S4□	Serial transmission: EX126	P. 113		
S3□	Serial transmission: EX120	P. 119		

 Refer to the pages shown in the table above for details.

5 | /00=>/= 11/0=/ =>

2

With Lead wire Lead wire length

0.6 m
1.5 m
3 m

 With D-sub connector, Flat ribbon cable and PC wiring

Connector entry direction

1	Upward	
2	Lateral	

* It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

3 Valve stations

Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
:	:	on the number of stations. Refer to
24	24 stations	the pages shown in the table "Connector type" for details.

4 P, E port entry

<u> </u>	1
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

* Refer to page 95 for the EX600 and **6** on page 101 for the EX250.

Note) For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

5 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- Refer to page 95 for the EX600 and 6 on page 101 for the EX250.

6 P, E port size (One-touch fittings)

_	ø10
N	ø3/8"

Mounting

_		Direct mounting	
D		DIN rail mounting (With DIN rail)	
D0		DIN rail mounting (Without DIN rail)	
D3	For 3 stations	Specify a longer rail than the standard length.	
:		[The SY5000 valve is now at a mountable	
D24	For 24 stations	length (manifold block length of 16 mm).]	
:	:	[The SY5000 valve is now at a mountable	

 Refer to page 133 to determine the L3 using "Calculation formula" for the DIN rail length.

How to Order Manifold Assembly

Example (SS5Y5-	·M12F1-□)
2-position double	2-position double
SY5230-5U1-C8 (3 sets)/	SY3230-5U1-C6 (2 sets)
	Manifold base (5 stations) SS5Y5-M12F1-05D
SS5V5-M12F1-05D 1	set (Type M12 5-station manifold hase part no.)

*SY3230-5U1-C6 2 sets (2-position double part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.


• The valve arrangement is numbered as the 1st station from the D side.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Specific Product Ma

How to Order Valves (With two mounting screws)

Refer to page 8 for valve specifications.

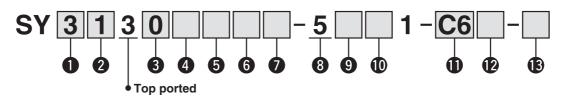

Series

O C C C C C C C C C C	
3	SY3000
5	SY5000

2 Type of actuation

1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
A *	4-position dual 3-port valve (N.C./N.C.)
B*	4-position dual 3-port valve (N.O./N.O.)
C*	4-position dual 3-port valve (N.C./N.O.)

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 147 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	-
_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

_	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected. Refer to page 154.

8 Rated voltage

5	24 VDC
6	12 VDC

* Only 24 VDC is available for the serial transmission type.

Light/surge voltage suppressor and common specification

_	Without light/surge voltage suppressor (Non-polar)
R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)

- * "-" is not available for the SI unit manifold.
- * Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected.

Refer to the pages below for details.

EX500: P. 88

EX600: P. 96


EX250: P. 102

EX260: P. 108

EX260: P. 108 EX126: P. 114

EX120. F. 114 EX120: P. 120

Manual override

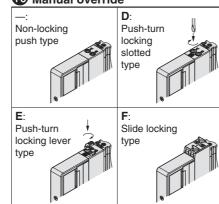

1 A, B port size

Thread piping

	~~ b.ba	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

	<u> </u>		
Symbol	A, B port	SY3000	SY5000
C2	ø2 One-touch fitting		
C3	ø3.2 One-touch fitting		_
C4	ø4 One-touch fitting		•
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	_	•
00	DO ONO LOGON ILLING		

One-touch fitting (Inch)

	3 (,		
Symbol	A, B port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting	•	•
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting	_	•

Thread type

_	Rc
F	G
N	NPT
T	NPTF

* Only — is available for M5.

B Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 136 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

Dimensions: Type 12/Mixed Mounting

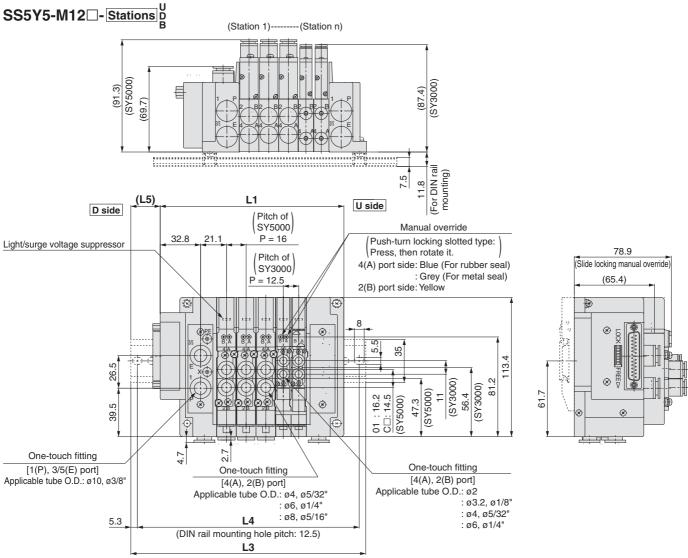

Calculation formula for dimensions with D-sub connector, Flat ribbon cable and PC wiring

 $L1 = 12.5 \times n1 + 16 \times n2 + 76.4$ $L2 = 12.5 \times n1 + 16 \times n2 + 48$

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$

L4 = L3 - 10.5

L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000

Calculation formula for dimensions with Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$

 $L2 = 12.5 \times n1 + 16 \times n2 \times 48$

M = L1/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$

L4 = L3 - 10.5

L5 = (L3 - L1)/2


 $L6 = b \times n3 + c$

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000 n3: Number of I/O units or input block stations

Note) Refer to pages 91 to 94 for dimensions of the EX600 serial transmission with I/O unit and pages 99 and 100 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

Coefficient	а	b	С
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
Serial transmission: EX500	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_

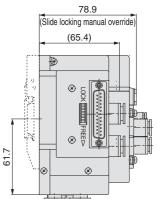

Note) Refer to pages 121 and 122 for


elbow fittings.

dimensions of external pilot and



Series SY3000/5000 Type 10, 11, 12

Plug-in Connector Connecting Base Manifold Exploded View

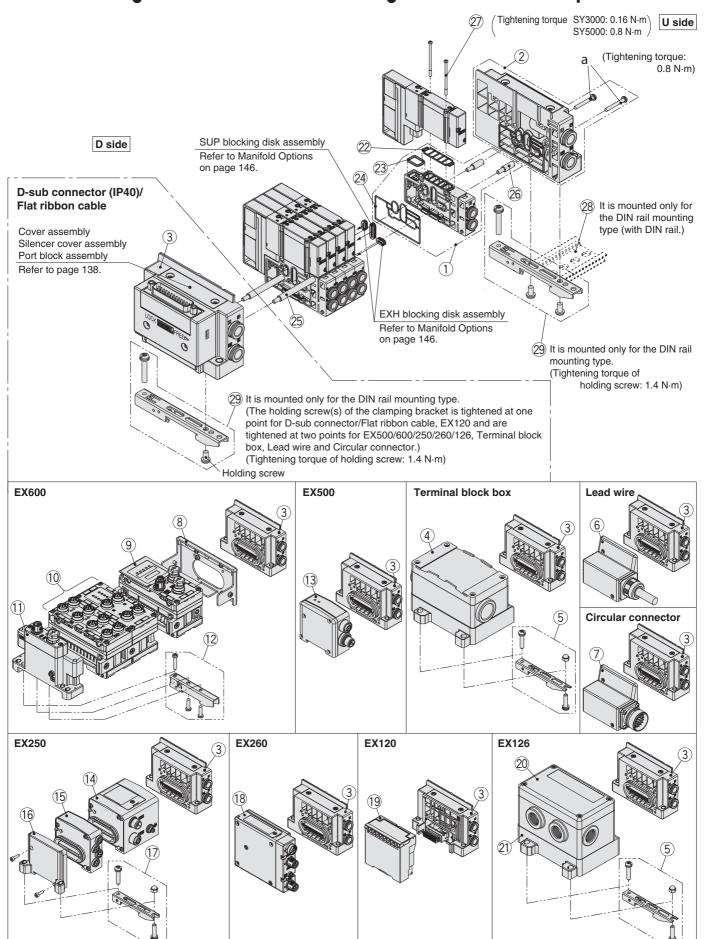

Plug-in Metal Base

EX120 EX126 EX260 EX250 EX600 EX500

Specific Product

134

Manifold Parts No.

No.	Description	Part no. SS5Y3-10/11/12 SS5Y5-(M)10/11/12	- Note
1	Manifold block assembly	Refer to page 137.	Includes 22 (1 pc.), 23, 24, and 26.
2	SUP/EXH end block assembly	Refer to page 137.	
3	SUP/EXH block assembly	Refer to page 137.	
4	Terminal block box housing assembly	VVQC1000-T0-1	
(5)	Clamp bracket assembly for terminal block box Clamp bracket assembly for EX126 SI unit	SY30M-15-4A	Supplied individually.
	•	SY30M-14-4A-1-1	34 cores, 0.6 m lead wire
		SY30M-14-4A-1-2	34 cores, 1.5 m lead wire
		SY30M-14-4A-1-3	34 cores, 3 m lead wire
		SY30M-14-4A-2-1	17 cores, 0.6 m lead wire
(6)	Lead wire connector block assembly	SY30M-14-4A-2-2	17 cores, 1.5 m lead wire
	,	SY30M-14-4A-2-3	17 cores, 3 m lead wire
		SY30M-14-4A-3-1	9 cores, 0.6 m lead wire
		SY30M-14-4A-3-2	9 cores, 1.5 m lead wire
		SY30M-14-4A-3-3	9 cores, 3 m lead wire
(7)	Circular connector block assembly	SY30M-14-5A	26 pins
(8)	Valve plate	EX600-ZMV2	With mounting screws (2 pcs. of M4 x 6 and 2 pcs. of M3 x 8)
0	valve plate	EX600-SDN1A	DeviceNet™ PNP (Negative common)
		EX600-SDN1A EX600-SDN2A	DeviceNet™ NPN (Positive common)
			CC-Link PNP (Negative common)
	-	EX600-SMJ1	CC-Link PNP (Negative common) CC-Link NPN (Positive common)
		EX600-SMJ2	,
9	EX600 SI unit	EX600-SPR1A	PROFIBUS DP PNP (Negative common)
		EX600-SPR2A	PROFIBUS DP NPN (Positive common)
		EX600-SEN1	EtherNet/IP™ PNP (Negative common)
		EX600-SEN2	EtherNet/IP™ NPN (Positive common)
		EX600-SEC1	EtherCAT PNP (Negative common)
		EX600-SEC2	EtherCAT NPN (Positive common)
		EX600-DXNB	NPN input, M12 connector, 5 pins (4 pcs.), 8 inputs
		EX600-DXPB	PNP input, M12 connector, 5 pins (4 pcs.), 8 inputs
		EX600-DXNC	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs
		EX600-DXNC1	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection
		EX600-DXPC	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs
	EX600 digital input unit	EX600-DXPC1	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection
		EX600-DXND	NPN input, M12 connector, 5 pins (8 pcs.), 16 inputs
		EX600-DXPD	PNP input, M12 connector, 5 pins (8 pcs.), 16 inputs
		EX600-DXNE	NPN input, D-sub connector, 25 pins, 16 inputs
		EX600-DXPE	PNP input, D-sub connector, 25 pins, 16 inputs
	-	EX600-DXNF	NPN input, Spring type terminal block, 32 pins, 16 inputs
		EX600-DXPF	PNP input, Spring type terminal block, 32 pins, 16 inputs
10		EX600-DYNB	NPN output, M12 connector, 5 pins (4 pcs.), 8 outputs
		EX600-DYPB	PNP output, M12 connector, 5 pins (4 pcs.), 8 outputs
	EX600 digital output unit	EX600-DYNE	NPN output, D-sub connector, 25 pins, 16 outputs
		EX600-DYPE	PNP output, D-sub connector, 25 pins, 16 outputs
		EX600-DYNF	NPN output, Spring type terminal block, 32 pins, 16 outputs
		EX600-DYPF	PNP input/output, Spring type terminal block, 32 pins, 16 outputs
		EX600-DMNE	NPN input/output, D-sub connector, 25 pins, 8 inputs/outputs
	EX600 digital input/output unit	EX600-DMPE	PNP input/output, D-sub connector, 25 pins, 8 inputs/outputs
		EX600-DMNF	NPN input/output, Spring type terminal block, 32 pins, 8 inputs/outputs
		EX600-DMPF	PNP input/output, Spring type terminal block, 32 pins, 8 inputs/outputs
	EX600 analogue input unit	EX600-AXA	M12 connector, 5 pins (2 pcs.), 2-channel input
	EX600 analogue output unit	EX600-AYA	M12 connector, 5 pins (2 pcs.), 2-channel output
	EX600 analogue input/output unit	EX600-AMB	M12 connector, 5 pins (4 pcs.), 2-channel input/output
		EX600-ED2	M12 connector, 5 pins, Max. supplied current 2 A
(11)	EX600 end plate	EX600-ED2-3	M12 connector, 5 pins, Max. supplied current 2 A, with DIN rail mounting bracket
		EX600-ED3	7/8 inch connector, 5 pins, Max. supplied current 8 A
		EX600-ED3-3	7/8 inch connector, 5 pins, Max. supplied current 8 A, with DIN rail mounting bracket
12	Clamp bracket for EX600	EX600-ZMA2	With mounting screws (1 pc. of M4 x 20 and 2 pcs. of M4 x 14)
(13)	EX500 SI unit	EX500-Q001	DeviceNet™, PROFIBUS DP, CC-Link, EtherNet/IP™ (Positive common)
19	2.330 Or drift	EX500-Q101	DeviceNet [™] , PROFIBUS DP, CC-Link, EtherNet/IP [™] (Negative common)
		EX250-SDN1	DeviceNet™ (Negative common)
		EX250-SPR1	PROFIBUS DP (Negative common)
		EX250-SMJ2	CC-Link (Positive common)
		EX250-SAS3	AS-Interface, 8 in/8 out, 31 slave modes, 2 isolated common type (Negative common)
14)	EX250 SI unit	EX250-SAS5	AS-Interface, 4 in/4 out, 31 slave modes, 2 isolated common type (Negative common)
		EX250-SAS7	AS-Interface, 8 in/8 out, 31 slave modes, 1 common type (Negative common)
		EX250-SAS9	AS-Interface, 4 in/4 out, 31 slave modes, 1 common type (Negative common)
		EX250-SCA1A	CANopen (Negative common)
		EX250-SEN1	EtherNet/IP™ (Negative common)
		EX250-IE1	M12, 2 inputs
15)	EX250 input block	EX250-IE2	M12, 4 inputs
-	•	EX250-IE3	M8, 4 inputs
16	EX250 end plate assembly	EX250-EA1	With mounting screws (2 pcs. of M3 x 10)
(17)	Clamp bracket assembly for EX250	SY30M-15-3A	Supplied individually.
	Clamp bracket assembly for EX250	5 t 3UIVI- 15-3A	Supplied individually.




5 Port Solenoid Valve Series SY3000/5000

Manifold Parts No.

No.	Dos	arintian	Par	t no.	Note					
INO.	Des	scription	SS5Y3-10/11/12	SS5Y5-(M)10/11/12	Note					
			EX260-S		DeviceNet™ M12 connector, 32 outputs (Negative common) (PNP)					
			EX260-S	DN2	DeviceNet™ M12 connector, 32 outputs (Positive common) (NPN)					
			EX260-S		DeviceNet™ M12 connector, 16 outputs (Negative common) (PNP)					
			EX260-S		DeviceNet™ M12 connector, 16 outputs (Positive common) (NPN)					
			EX260-S		PROFIBUS DP M12 connector, 32 outputs (Negative common) (PNP)					
		ŀ	EX260-S		PROFIBUS DP M12 connector, 32 outputs (Positive common) (NPN)					
			EX260-S		PROFIBUS DP M12 connector, 16 outputs (Negative common) (PNP)					
		-	EX260-S		PROFIBUS DP M12 connector, 16 outputs (Positive common) (NPN)					
			EX260-S		PROFIBUS DP D-sub connector, 32 outputs (Negative common) (PNP)					
			EX260-S		PROFIBUS DP D-sub connector, 32 outputs (Positive common) (NPN)					
			EX260-S		PROFIBUS DP D-sub connector, 16 outputs (Negative common) (PNP)					
			EX260-S		PROFIBUS DP D-sub connector, 16 outputs (Positive common) (NPN)					
			EX260-S		CC-Link M12 connector, 32 outputs (Negative common) (PNP)					
			EX260-S		CC-Link M12 connector, 32 outputs (Positive common) (NPN)					
			EX260-S	MJ3	CC-Link M12 connector, 16 outputs (Negative common) (PNP)					
(18)	EVOCO CI!		EX260-S	MJ4	CC-Link M12 connector, 16 outputs (Positive common) (NPN)					
(18)	EX260 SI unit		EX260-S	EN1	EtherNet/IP [™] 32 outputs (Negative common) (PNP)					
			EX260-S	EN2	EtherNet/IP™ 32 outputs (Positive common) (NPN)					
			EX260-S		EtherNet/IP™ 16 outputs (Negative common) (PNP)					
			EX260-S		EtherNet/IP™ 16 outputs (Positive common) (NPN)					
			EX260-S		EtherCAT M12 connector, 32 outputs (Negative common) (PNP)					
			EX260-S		EtherCAT M12 connector, 32 outputs (Positive common) (NPN)					
			EX260-S		EtherCAT M12 connector, 32 outputs (Negative common) (PNP)					
			EX260-S		EtherCAT M12 connector, 16 outputs (Negative common) (NPN)					
			EX260-S							
					PROFINET 32 outputs (Negative common) (PNP)					
			EX260-S		PROFINET 32 outputs (Positive common) (NPN)					
			EX260-S		PROFINET 16 outputs (Negative common) (NPN)					
			EX260-S		PROFINET 16 outputs (Positive common) (NPN)					
			EX120-S		DeviceNet™ (Positive common)					
			EX120-S		OMRON Corp.: CompoBus/S (16 outputs) (Positive common)					
(19)	EX120 SI unit		EX120-S		OMRON Corp.: CompoBus/S (8 outputs) (Positive common)					
	EX 120 Si dilit		EX120-S	MJ1	CC-Link (Positive common)					
			EX120-S	CM1	CompoNet™ (Positive common)					
			EX120-S	CM3	CompoNet™ (Negative common)					
20	EX126 SI unit		EX126D-	SMJ1	CC-Link (Positive common)					
21)	Terminal block pla	ate assembly	VVQC10	00-74A-2	For mounting EX126 SI unit					
22	Base gasket (for cor	nnector connecting base)	SY30M-9-1A	SY50M-9-1A	Part numbers shown on the left are for 10 valves. (10 pcs.)					
23	Connector gasket	t J	SX3000-	146-2	Supplied individually.					
24)	Manifold block ga		SY30M-9-2	SY50M-9-2	Supplied individually.					
	Tie-rod		VVQ1000-TR-□	SV2000-55-1-□-A	☐: Manifold stations 2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000)					
25)		000 on mixed mounting type manifolds)		SY50M-49-1-□-A	3 pcs. supplied.					
	Tie-rod for addition		SY30M-49-2-A	SV2000-55-2A-A	2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000) (Included in 1)					
26		ounting of SY3000: except A, B port size ø8, ø5/16")	3130W-43-2-A	SY50M-49-2-A						
20		ed mounting of SY3000: A, B port size 66, 65/16")		SV2000-55-2A-A	3 pcs. supplied. (Included in 1)					
	TIETOU TOT AUGULUONAL STATIONS (TOT MIXE	ru mounding of Statoot: A, B port size Ø8, Ø5/16")	0)/0000 00 041		3 pcs. supplied.					
	V-1	Round head combination screw	SY3000-23-24A	SY5000-221-1A	Part numbers shown on the left are for 10 valves. (20 pcs.)					
(27)	Valve mounting		(M2 x 32)	(M3 x 32.5)	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \					
_	screw	Hexagon socket head cap screw	SY3000-222-1A	SY5000-222-1A	Part numbers shown on the left are for 10 valves. (20 pcs.)					
		-	(M2 x 32)	(M3 x 32.5)	` ' '					
28	DIN rail		VZ1000-		Refer to page 140.					
29	Clamp bracket assembly (for connector connecting base)	SY30M-15-1A	SY50M-15-1A	Supplied individually.					



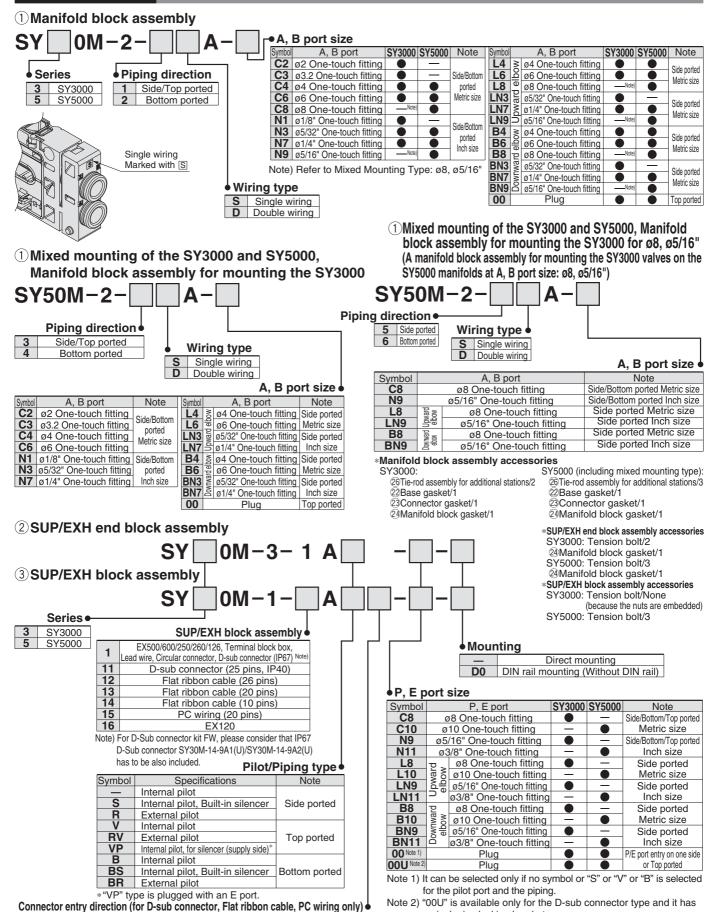


Upward Lateral an inch size locking bracket.


Specific Product

Manifold Parts No.

■ Cover assembly/Silencer cover assembly/Port block assembly for SUP/EXH (end) block assembly

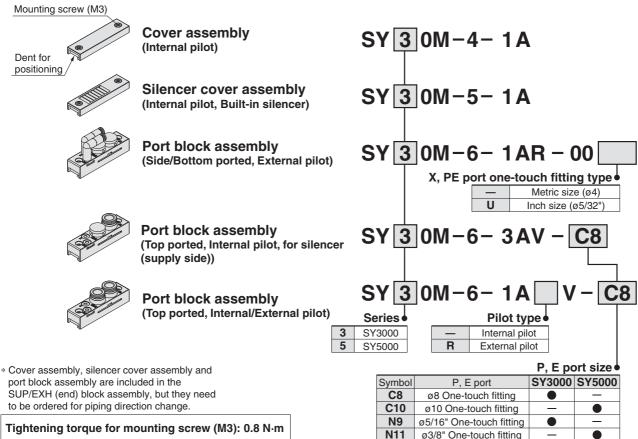

Type 10, 11, 12: How to Increase Connector Type Manifold

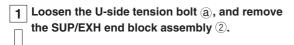


- 2 Screw in tie-rods for additional stations 26 to the manifold's tie-rod 25.
 - Screw them in until there is no gap between the tie-rods.
- 3 Connect the manifold block assembly 1 and SUP/EXH end block assembly 2 to be added, and tighten the tension bolt (a).

Tightening torque for tension bolt ⓐ (M3): 0.8 N⋅m

(Refer to page 134 for ①, ②, ② and ②.)

Caution

- 1. Be sure to shut off the power and air supplies before disassembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- 2. When disassembly and assembly are performed, air leakage may result if the tightening of the tension bolt is inadequate.

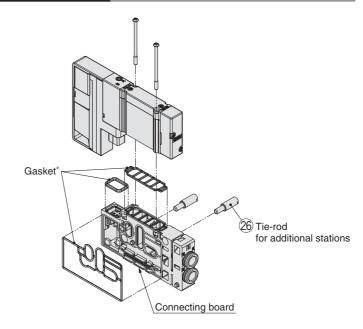

*Gaskets (in three places) are mounted.

One-touch Fittings and Plug Assembly/Part No.

Refer to Changing One-touch Fittings on page 157 for replacement method.

■One-touch fittings

		Port size	SY3000	SY5000
		ø2 One-touch fitting (Straight type)	VVQ1000-50A-C2	_
		ø3.2 One-touch fitting (Straight type)	VVQ1000-50A-C3	_
		ø4 One-touch fitting (Straight type)	VVQ1000-50A-C4	VVQ1000-51A-C4
	a)	ø6 One-touch fitting (Straight type)	VVQ1000-50A-C6	VVQ1000-51A-C6
	SiZ	ø8 One-touch fitting (Straight type)	_	VVQ1000-51A-C8
	Metric size	ø4 One-touch fitting (Elbow type)	SZ3000-73-1A-L4	SZ3000-74-1A-L4
	l et	ø6 One-touch fitting (Elbow type)	SZ3000-73-1A-L6	SZ3000-74-1A-L6
	~	ø8 One-touch fitting (Elbow type)	_	SZ3000-74-1A-L8
		ø4 One-touch fitting (Long elbow type)	SZ3000-73-2A-L4	SZ3000-74-2A-L4
port		ø6 One-touch fitting (Long elbow type)	SZ3000-73-2A-L6	SZ3000-74-2A-L6
ВВ		ø8 One-touch fitting (Long elbow type)	_	SZ3000-74-2A-L8
, ,		ø1/8" One-touch fitting (Straight type)	VVQ1000-50A-N1	_
		ø5/32" One-touch fitting (Straight type)	VVQ1000-50A-N3	VVQ1000-51A-N3
		ø1/4" One-touch fitting (Straight type)	VVQ1000-50A-N7	VVQ1000-51A-N7
	Ф	ø5/16" One-touch fitting (Straight type)	_	VVQ1000-51A-N9
	Inch size	ø5/32" One-touch fitting (Elbow type)	KJL03-95-X224	_
	뒫	ø1/4" One-touch fitting (Elbow type)	KJL07-95-X224	KQ2L07-14-X224
		ø5/16" One-touch fitting (Elbow type)	_	KQ2L09-14-X224
		ø5/32" One-touch fitting (Long elbow type)	KJL03-95-X225	_
		ø1/4" One-touch fitting (Long elbow type)	KJL07-95-X225	KQ2L07-14-X225
		ø5/16" One-touch fitting (Long elbow type)	_	KQ2L09-14-X225
		ø8 One-touch fitting (Straight type)	VVQ1000-51A-C8	_
	ze	ø10 One-touch fitting (Straight type)	_	VVQ2000-51A-C10
	S.	ø8 One-touch fitting (Elbow type)	SZ3000-74-1A-L8	_
	Metric size	ø10 One-touch fitting (Elbow type)	_	SZ3000-83-1A-L10
t	ž	ø8 One-touch fitting (Long elbow type)	SZ3000-74-2A-L8	_
port		ø10 One-touch fitting (Long elbow type)	_	SZ3000-83-2A-L10
Д,		ø5/16" One-touch fitting (Straight type)	VVQ1000-51A-N9	_
<u> </u>	g.	ø3/8" One-touch fitting (Straight type)	_	VVQ2000-51A-N11
	Siz	ø5/16" One-touch fitting (Elbow type)	KQ2L09-14-X224	_
	Inch size	ø3/8" One-touch fitting (Elbow type)	_	KQ2L11-14-X224
	_	ø5/16" One-touch fitting (Long elbow type)	KQ2L09-14-X225	_
		ø3/8" One-touch fitting (Long elbow type)	_	KQ2L11-14-X225

■ Plug assembly


	SY3000	SY5000
A, B port	VVQ0000-58A	VVQ1000-58A
P. E port	VVQ1000-58A	VVQ2000-58A

Manifold Options

■ DIN rail dimensions/weight for the SY3000 plug-in metal base and the SY3000/5000 plug-in connector connecting base

VZ1000-11-1-□

* Refer to the DIN rail dimensions table below and specify the number in the box \Box .

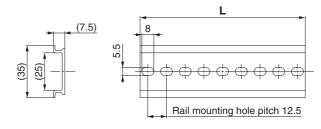


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	103.1	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				
Weight [g]	145.9	148 1	150 4	152 6	154.9	157.1	159.4	161.6	163.9	166 1	168 4	170.6	172 9	175 1	177 4				

■ DIN rail dimensions/weight for the SY5000 plug-in metal base

VZ1000-11-4-□

* Refer to the DIN rail dimensions table below and specify the number in the box \Box .

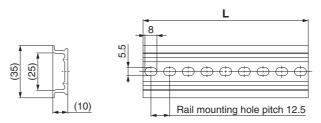

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	233.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	145	148.1	151.3	154.5	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2	192.4	195.6	198.7	201.9
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				
Weight [g]	205.1	208.2	211.4	214.5	217.7	220.9	224	227.2	230.4	233.5	236.7	239.8	243	246.2	249.3				

⚠ Caution

Tightening torque for mounting screw M2: 0.16 N⋅m M3: 0.8 N⋅m

Manifold Options

Refer to pages 149 and 151 for dimensions.


■Blanking plate assembly


(With two mounting screws)

Used when valve additions are expected or for maintenance. A structure is in place on the blanking plate to prevent the mounting screws from sliding.


Mounting screw

SY30M-26-□A (-B)

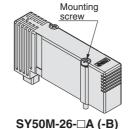

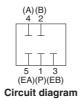


How to Order Blanking Plate Assembly

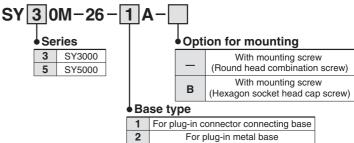

■Individual SUP spacer assembly

(With a connector gasket, a base gasket, and two mounting screws) When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

Note) When selecting an elbow type for one-touch fitting for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

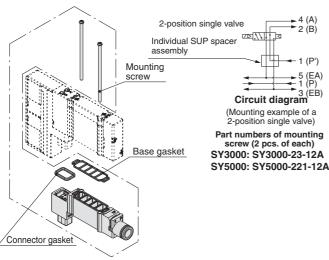


■Individual EXH spacer assembly


(With a connector gasket, a base gasket, and two mounting screws)

When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust.

Note) When selecting an elbow type for one-touch fitting for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

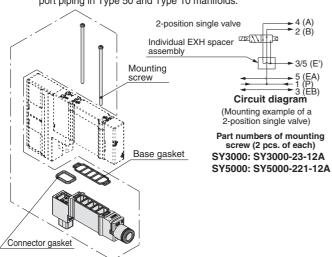

How to Order Individual SUP/EXH Spacer Assembly

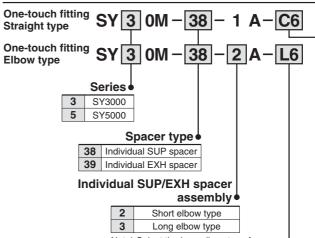

Note) Select the long elbow type for a 3-position valve when using Type 11 and Type 12 downwards. However, Type 11 of the SY3000 series for the mixed mounting of connector connecting bases cannot be used downwards.

Symbol	P, E port	SY3000	SY5000
L4	ø4 One-touch fitting		
L6	ø6 One-touch fitting		
L8	ø8 One-touch fitting	_	•

Port size (Inch)

Symbol	P, E port	SY3000	SY5000
LN3	ø5/32" One-touch fitting		_
LN7	ø1/4" One-touch fitting	•	•
LN9	ø5/16" One-touch fitting	_	

Port size (Metric)

Symbol	P, E port	SY3000	SY5000
C2	ø2 One-touch fitting		_
C3	C3 ø3 One-touch fitting		_
C4	ø4 One-touch fitting	•	•
C6	ø6 One-touch fitting		•
C8	ø8 One-touch fitting	_	•

Port size (Inch)

Symbol	P, E port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting	•	
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting	_	•



Base gasket

Mounting screw

Specific Product Precautions

Manifold Options


Refer to pages 149 and 152 for dimensions.

■ SUP stop valve spacer assembly with residual pressure release valve

(With a connector gasket, a base gasket and two mounting screws.)

It is used to shut off the supply air to valves individually.

Series	Part no.		
SY3000	SY30M-50-1A		
SY5000	SY50M-50-1A		

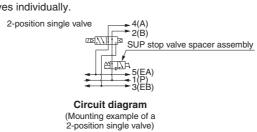

[How to mount SUP stop valve spacer assembly with residual pressure release valve] Insert the SUP stop valve mounting screw from the side of the spacer assembly,

and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque.

Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure exhaust valve.

Note 1) Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.

Note 2) When the elbows are facing upwards in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, please combine the A and B ports with straight types or elbows facing downwards.

Part numbers of mounting screw (2 pcs. of each) SY3000: SY30M-56-1A SY5000: SY50M-56-1A Valve mounting screw Tightening torque: Series SY3000: 0.16 N⋅m Series SY5000: 0.8 N·m For Hexagon socket head cap screws Nominal wrench size: Series SY3000: 1.5 Series SY5000: 2.5 Valve SUP stop valve spacer assembly with residual pressure Plate type nu Hexagon wrench Nominal wrench size: Series SY3000: 1.3 SUP stop valve mounting screw Series SY5000: 2 Tightening torque: Series SY3000: 0.16 N·m Series SY5000: 0.8 N·m

Connector gasket


■Double check spacer assembly with residual pressure release valve (Side/Bottom ported)

(With a connector gasket, a base gasket, and two mounting screws)

It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust centre valve when the double check spacer assembly with residual exhaust valve is used.

It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve.

Note) When the elbows are facing upwards in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, please combine the A and B ports with straight types or elbows facing downwards.

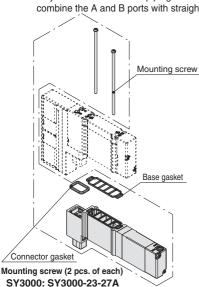

SY5000: SY5000-221-4A

Series	Part no.	
SY3000	SY30M-60-1A	
SY5000	SY50M-60-1A	

	Intermediate stop	Drop prevention
Applicable valve	SY ₅ 40 ₁	SY ₅₂ 0 ₁ 0


/Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage
- Combining with 3-position closed centre or pressure centre valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

<Example>


Double check spacer assembly with residual pressure release valve

3-position exhaust centre valve

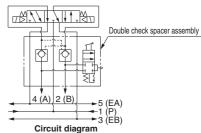

(Intermediate stop: When 3-position exhaust centre valve is mounted)

Double check spacer assembly with residual pressure release valve 2-position single valve

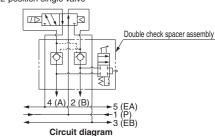

(Drop prevention: When 2-position single valve is mounted)

⚠ Caution

Tightening torque for mounting screw M2: 0.16 N·m M3: 0.8 N·m

Manifold Options


Refer to pages 150 and 152 for dimensions.

■Interface regulator

(With a connector gasket, a base gasket, and two mounting screws)

Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure).


How to Order

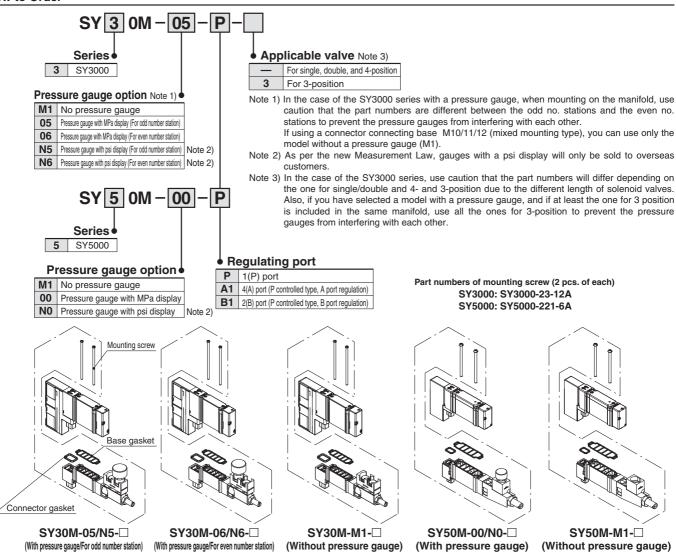

Specifications

Interface regulator model		SY30M-□-□-□	SY50M-□-□	
Applicable valve model Note 2)		SY3□30□(R)	SY5□30(R)	
Regulating port		1(P), 4(A), 2(B)		
Set pressure range		0.1 to 0.7 MPa		
Maximum operating pressure		1.0 MPa		
Fluid		Air		
Ambient and fluid temperature		-10 to 50 (N℃freezing)		
Weight [g] Note 3)	With pressure gauge	33(35) Note 4)	75	
weight [g] Note 3)	Without pressure gauge	27(29) Note 4)	69	

- Note 1) Always apply pressure from 1(P) port in the base for interface regulator.
- Note 2) 1(P) port pressure regulation is only available for 3-position closed centre and pressure centre, and 4-position dual 3-port valves.
- Note 3) Gasket and mounting screws are included in the weight.
- Note 4) (): Denotes the values of SY30M-\(\subseteq -\subseteq -3.

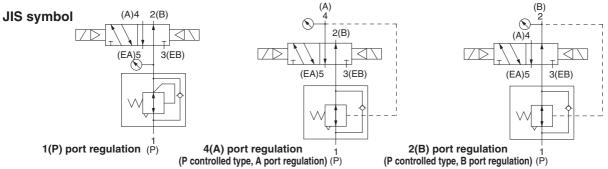

Tightening torque for mounting screw M2: 0.16 N·m M3: 0.8 N·m

Mounting Screw Part No. ① (when adding optional lamination layers)

	① SY3000 (M2) ② SY5000 (M3)				
Combination	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	` '	
Round head combination screw> 1:SY3000-23-24A	A Valve	SY3000-23-24A [for 10 valves (20 pcs.)]	SY3000-222-1A [for 10 valves (20 pcs.)]	SY5000-221-1A [for 10 valves (20 pcs.)]	SY5000-222-1A [for 10 valves (20 pcs.)]
2:SY5000-221-1A Hexagon socket head cap screw> 1:SY3000-222-1A 2:SY5000-222-1A 1:SY30M-56-2A 2:SY50M-56-2A	sap screw> 22-1A 22-1A 3- 22-1A 6-2A SOP stop valve spacer assembly with residual pressure release valve SY30M-56-2A		SY50M-56-2A (2 pcs.)		
Round head combination screw> ①:SY3000-23-33A	A Valve				
D:SY3000-23-33A 2:SY5000-221-5A	B Double check spacer assembly with residual pressure release valve	SY3000-23-33A (2 pcs.)	_	SY5000-221-5A (2 pcs.)	_
C -	Individual C SUP (EXH) spacer assembly				
Round head combination screw> ①:SY3000-23-32A	A Valve				
A 2:SY5000-221-3A	Individual B SUP (EXH) spacer assembly	SY3000-23-32A (2 pcs.)	_	SY5000-221-3A (2 pcs.)	_
C -	Individual C EXH (SUP) spacer assembly				
< Round head combination screw>	A Valve	SY3000-23-24A [for 10 valves (20 pcs.)]	SY3000-222-1A [for 10 valves (20 pcs.)]	SY5000-221-1A [for 10 valves (20 pcs.)]	SY5000-222-1A [for 10 valves (20 pcs.)]
1:SY3000-23-24A 2:SY5000-221-1A Hexagon socket head cap screws 1:SY3000-222-1A 2:SY5000-222-1A	SUP stop valve spacer assembly with residual pressure release valve				
①:SY30M-56-4A ②:SY50M-56-4A	Individual C SUP (EXH) spacer assembly		1-56-4A ocs.)		I -56-4A cs.)
(ZZ_Z)	Individual EXH (SUP) spacer assembly				

^{*} Mounting onto a manifold follows the order explained above.

144

| Replacement | Parts

cable Metal Base

EX510 Flat Ribbor PC Wiring

erminal Desub Connector Plug-in Connector Flat Ribbon Cable Connecting Base

EX500 Circular Lead Wire

EX120 EX126 EX260 EX250 EX600 EX500

d One-touch Fittings and Plug Assembly/ Part No.

Manifold One and Options

pecific Product ecautions

Note) The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

∆ Caution

Tightening torque for mounting screw M2: 0.16 N·m M3: 0.8 N·m

Mounting Screw Part No. 2 (when adding optional lamination layers)

Combination		① SY3000 (M2)		② SY5000 (M3)	
Combination		Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
A (Round head combination screw)	Valve	SY3000-23-24A [for 10 valves (20 pcs.)]	SY3000-222-1A [for 10 valves (20 pcs.)]	SY5000-221-1A [for 10 valves (20 pcs.)]	SY5000-222-1A [for 10 valves (20 pcs.)]
1:SY3000-23-24A 2:SY5000-221-1A Hexagon socket head cap screw 1:SY3000-222-1A 2:SY5000-222-1A	SUP stop valve spacer assembly with residual pressure release valve		I-56-3A	SY50N	1-56-3A
①:SY30M-56-3A ②:SY50M-56-3A	Double check spacer assembly with residual pressure release valve	(2 pcs.)		(2 pcs.)	
A (Round head combination screw)	Valve	SY3000-23-24A [for 10 valves (20 pcs.)]	SY3000-222-1A [for 10 valves (20 pcs.)]	SY5000-221-1A [for 10 valves (20 pcs.)]	SY5000-222-1A [for 10 valves (20 pcs.)]
1:SY3000-23-24A 2:SY5000-221-1A Hexagon socket head cap screw> 1:SY3000-222-1A 2:SY5000-222-1A	SUP stop valve spacer assembly with residual pressure release valve	SY30M-56-5A (2 pcs.)		SY50M-56-5A (2 pcs.)	
1:SY30M-56-5A 2:SY50M-56-5A	Double check spacer assembly with residual pressure release valve				
<u> </u>	Individual EXH (SUP) spacer assembly				
Round head combination screw> ①:SY3000-23-32A	Valve				
A	Interface regulator assembly	SY3000-23-32A (2 pcs.)	_	SY5000-221-7A (2 pcs.)	_
C	Individual SUP (EXH) spacer assembly				

 $[\]ast$ Mounting onto a manifold follows the order explained above.

Note) The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when

Manifold Options *Refer to pages 150 and 152 for dimensions.


■Individual SUP block assembly


Used as supply port for different pressures when using different pressures for plug-in connector connecting base. (Use for 1 station)


Used by disconnecting both sides of the number of stations used to supply pressure from the individual SUP block (as shown in example).

- * Specify the mounting position of the block as well as the position where the SUP passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 SUP blocking disks to block SUP is attached to individual SUP block.)
- * Electrical wiring is connected to a number of stations in the individual SUP block manifold.

Mounting screw SUP blocking disk assembly

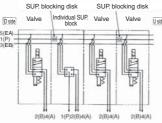

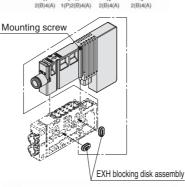

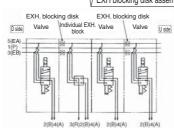

How to Order Individual SUP/EXH Block Assembly

One-touch fitting Straight type One-touch fitting 78 Elbow type

> Series • SY3000 Block type SY5000 78 Individual SUP block

> > Symbol

L4

L6

L8

Symbol

LN3

LN7

LN9

3

5

79 Individual EXH block Individual SUP/EXH block assembly

2 Short elbow type (Type 12) 3 Long elbow type (Type 11) Note) Long elbow type is for the SY5000 only.

P, E port

ø8 One-touch fitting

ø4 One-touch f

ø6 One-touch t

Port Size (Wetric)			
SY3000	SY5000		
	•		
•	•		

Port size (Metric)

I	Port size (Inch)		
P, E port	SY3000	SY5000	
ø5/32" One-touch fitting	•	_	
ø1/4" One-touch fitting		•	
ø5/16" One-touch fitting	_	•	

Port size (Metric) SY3000 SY5000 Symbol P, E port C2 ø2 One-touch fitting **C**3 ø3.2 One-touch fitting C4 ø4 One-touch fitting C₆ ø6 One-touch fitting C8 ø8 One-touch fitting

	Port size (Inch)		
Symbol	P, E port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting		•
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting	_	•

■Individual EXH block assembly

On the circuit of the plug-in connector connection base, used to individually exhaust the value when the exhaust from the valve will affect a number of stations. (Use for 1 station.) Used by blocking both sides of the number of stations when exhausting individually (as shown in example).

- * Specify the mounting position of the block as well as the position where the EXH passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 sets of EXH blocking disks (4 pcs.) to block EXH is attached to individual FXH block.)
- * Electrical wiring is connected to a number of stations in the individual EXH block manifold.

■SUP/EXH blocking disk assembly (for connector type manifold, Type 10, 11, 12)

[SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.

[EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pcs. are required to block both sides of the EXH.)



Series	SUP blocking disk assembly	EXH blocking disk assembly
SY3000	SY30M-40-1A	SY30M-40-2A
SY5000	SY50M-40-1A	SY50M-40-1A

■Label for blocking disk

Label to indicate and confirm on the manifold where the SUP/EXH blocking disk assemblies were inserted. (3 sheets each)

SUP/EXH blocking disk label




Series	Part no.	
SY3000	C 12000 1EE 1A	
SY5000	SJ3000-155-1A	


SUP blocking



EXH blocking disk label



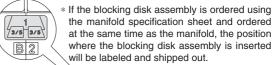

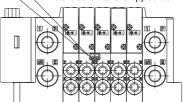

Series SY3000/5000

Manifold Options


■Back pressure check valve assembly (Retrofit or pre-installed type)


It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into EA/EB port (valve mounting side) on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used.

- * When ordering assemblies incorporated with a manifold, refer to the Ordering Example below (when installed in all stations.)
- Note) When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position on the manifold specification sheet.

<Precautions>

- 1. The back pressure check valve assembly is assembly parts with a check valve structure. However, since the valve has slight air leakage, take precautions for the exhaust air not to be restricted at the exhaust port.
- 2. When the back pressure check valve assembly is mounted, please contact SMC for valve flow-rate characteristics.

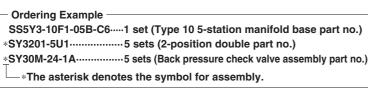

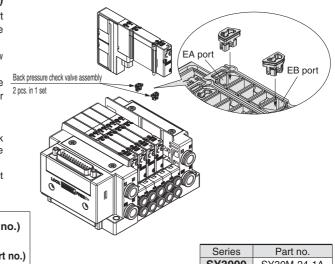


Series Part no.	
SY3000	SY30M-24-1A
SY5000	SY50M-24-1A


■Dual flow fitting (for connector connecting base, Type 10, side ported)


This is a fitting for cylinder ports which enables simultaneous actuation and increase in flow rate of valves for 2 stations.


* When ordering assemblies incorporated into a manifold, refer to the Ordering Example below and specify on the manifold specifications sheet.

How to Order Dual Flow Fitting

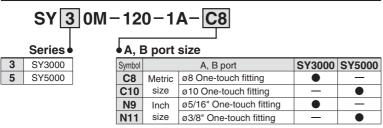

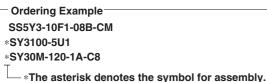

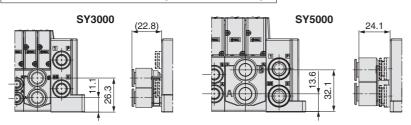

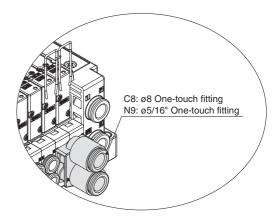


- Note 1) Specifically for side porting for a connector connecting base. Cannot be attached to bottom or top ported, or mixed mounting types that are metal or connector connecting bases.
- Note 2) When adding or changing clips, please push them into the very end of the manifold for each station. Also, please make sure to use the clip that was packed together, as the clip and the fitting for one station differ among products that can be used with the SY5000.

■Silencer

(One-touch fitting connection type)


This silencer can be mounted to the 3/5 (E: EXH) port of the manifold in one step.

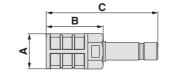

Series	Model	Effective area	Α	В	С
For SY3000 (ø8)	AN15-C08	14 mm ²	ø16	26	51
For SY5000 (ø10)	AN20-C10	26 mm ²	ø22	53.8	80.8

■Plug (White)

These are inserted in unused cylinder ports and P, E ports.

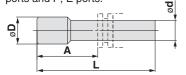

Dimensions

Applicable fitting size ø d (Metric size)	Model	Α	L	D
2	KJP-02	8.2	17	3
3.2	KQ2P-23	5	31.5	16
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08		39	10
10	KQ2P-10	22	43	12

Model	Α	L	D
KQ2P-01	16	31.5	5
KQ2P-03	16	32	6
KQ2P-07	18	35	8.5
KQ2P-09	20.5	39	10
KQ2P-11	22	43	11.5
	KQ2P-01 KQ2P-03 KQ2P-07 KQ2P-09	KQ2P-01 16 KQ2P-03 16 KQ2P-07 18	KQ2P-01 16 31.5 KQ2P-03 16 32 KQ2P-07 18 35 KQ2P-09 20.5 39



Manifold Options

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

■Name plate (for manifold)

SY3000: For SS5Y3-10 (Side ported)

SY5000: For SS5Y5-10/11 (Side/Bottom ported)

Name plate bracket assembly and name plate mounting instructions Insert it into the groove on the name plate bracket onto which a SUP/EXH (end) block is mounted, as shown in Fig. 2.

When ordering assemblies incorporated with a manifold, refer to the Ordering Example below.



Mounting and Option

Symbol	Mounting option
AA	Name plate (printed), (directly mounting)
Α	Name plate (printed), DIN rail mounted (With DIN rail)
A0	Name plate (printed), DIN rail mounted (Without DIN rail)
A3	Name plate (printed), DIN rail specified length (For 3 stations)
:	
A24	Name plate (printed), DIN rail specified length (For 24 stations)
BA	Name plate (no printing), (direct mounting)
В	Name plate (no printing), DIN rail mounted (With DIN rail)
B0	Name plate (no printing), DIN rail mounted (Without DIN rail)
B3	Name plate (no printing), DIN rail specified length (For 3 stations)
B24	Name plate (no printing), DIN rail specified length (For 24 stations)

Note) You cannot mount name plates onto Type 12 (top ported) and Type 10 (side ported) mixed mounting types with top ported valves, nor onto manifolds with optional laminated spacers. Also, no name plate settings are available for the SY3000/SY5000 mixed mounting types.

┌ Ordering Example ────	
SS5Y3-10F1-05UR-C6AA	1 set
*SY3200R-5U1 ·····	5 sets
* The asterisk denotes the symbol for a	ssembly.

■If adding a name plate

If adding a name plate to a manifold in use, you must order a name plate bracket assembly, in addition to ordering a name plate. Refer to the table below for the part number. and the amount.

Name plate part no.

Se	ries	SS5Y3-10	SS5Y5-10/11	Note
Name	Printed	SY30M-86-□N	SY50M-86-□N	☐:Number of stations
plate	No printing	SY30M-86-□	SY50M-86-□	(1 to 24)

Name plate bracket assembly part no. and number of items ordered


Series		SS5Y3-10	SS5Y5-10/11		
Name plate assem	nbly part no.	SY30M-85-1A	SY50M-85-1A		
Manifold SUP/EXH block assembly Pilot type and P, E port entry	Internal pilot U/D piping	2 pcs.			
	Internal pilot double sided piping	2 pcs.	2 pcs.		
	External pilot U/D piping	1 pc. Note)			
	External pilot double sided piping	Not required Note)			


Note) If the manifold is an external pilot, an insertion slot for name plates is on the port block of the SUP/EXH block assembly. Thus, a bracket assembly is no longer required on the port piping side.

Caution


- 1. Be sure to shut off the power and air supplies before mounting the name plate bracket assembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- 2. When disassembly and assembly are performed, air leakage may result if the tightening of the bracket mounting screws is inadequate.


<Series SY3000>

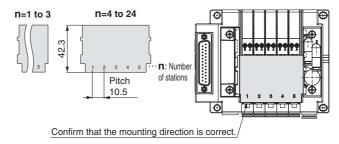

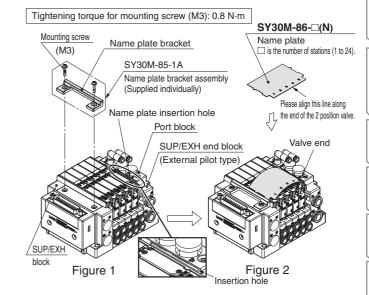

<Series SY5000>

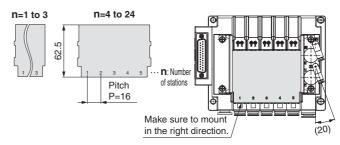

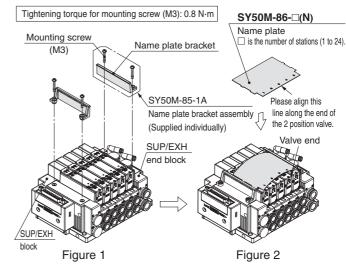

Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring EX510

Plug-in Connector Connecting

D-sub Connector Flat Ribbon Cable PC Wiring Terminal Block Box

Wire Lead V Circular Connector

EX500 EX600

EX250 EX260 EX126

EXT

20




Series **SY3000/5000**


Dimensions: Manifold Options/Series SY3000

■ Blanking plate assembly





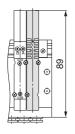


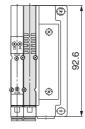


<Type 50, 51, 52>

<Type 10, 12>


■Individual SUP/EXH spacer assembly

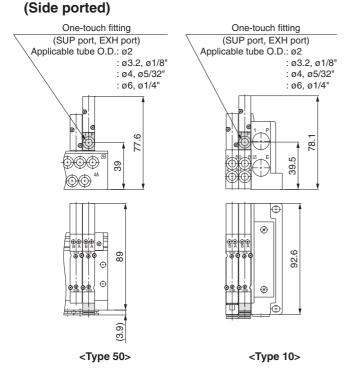



■Individual SUP/EXH spacer assembly (Top/Bottom ported)

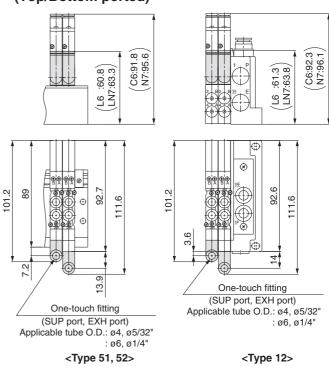

■SUP stop valve spacer assembly with residual pressure release valve

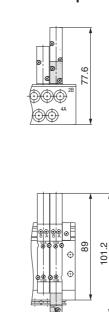

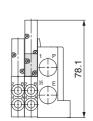

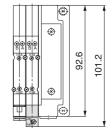



<Type 50, 51, 52>


<Type 10, 12>


Dimensions: Manifold Options/Series SY3000

■Double check spacer assembly with residual pressure release valve

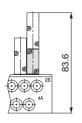

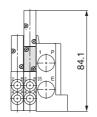

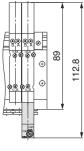


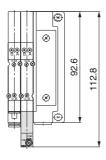

<Type 50, 51>


<Type 10>

■Interface regulator assembly

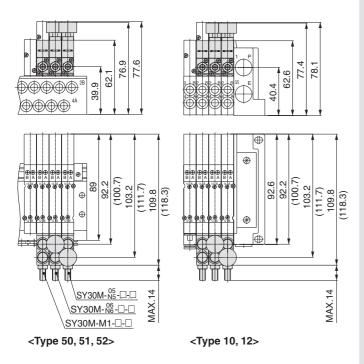


*The dimensions within () applies to the $\mbox{SY30M-}\square\mbox{-}\square\mbox{-}3.$


■Individual SUP/EXH block assembly (Top ported)

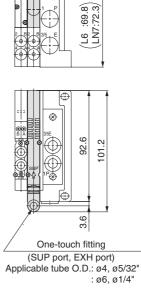

<Type 12>

■Individual SUP/EXH block assembly (Side ported)

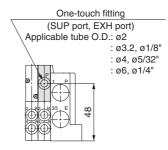

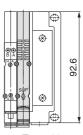


<Type 10>


Series SY3000/5000


Dimensions: Manifold Options/Series SY5000

■ Blanking plate assembly



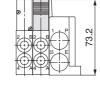

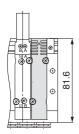


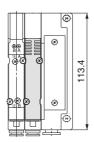


<Type 50, 51, 52>

<Type 10, 11, 12>


■Individual SUP/EXH spacer assembly (Side ported)

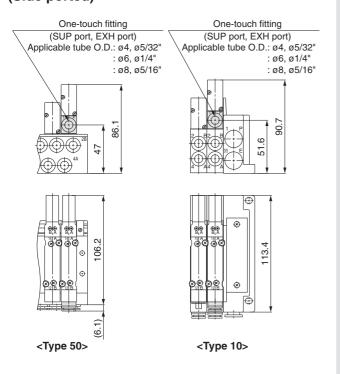



■Individual SUP/EXH spacer assembly (Top/Bottom ported)

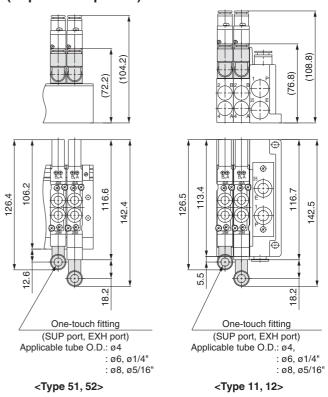

■SUP stop valve spacer assembly with residual pressure release valve

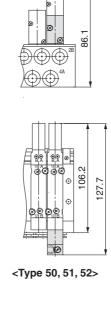

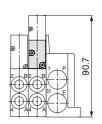

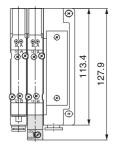



<Type 10, 11, 12>


5 Port Solenoid Valve Series SY3000/5000


Dimensions: Manifold Options/Series SY5000

■Double check spacer assembly with residual pressure release valve

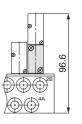

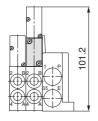

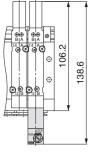


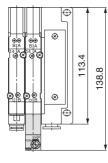


<Type 50, 51>

<Type 10, 11>

■Individual SUP/EXH block assembly (Top ported)

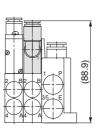

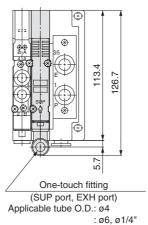

<Type 12>

■Individual SUP/EXH block assembly (Side ported)

Construction

Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring

EX510

Plug-in Connector

D-sub Connector Flat Ribbon Cable PC Wiring

Terminal Block Box

Lead Wire

Circular Connector

EX500


EX600


EX250

EX260

EX126


EX120

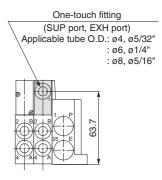


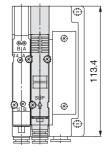



<Type 10>

■Interface regulator assembly

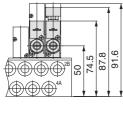

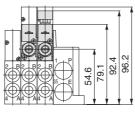

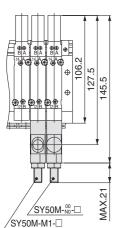


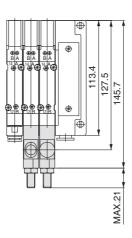


<Type 50, 51, 52> <Type 10, 11, 12>

■Individual SUP/EXH block assembly (Bottom ported)

: ø8, ø5/16"

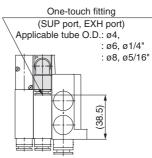

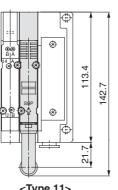

<Type 11>





Be sure to read before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Valve Mounting

⚠ Caution


Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown below.

Model	Thread size	Tightening torque
SY3000	M2	0.16 N⋅m
SY5000	M3	0.8 N·m

Manual Override

Marning


Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

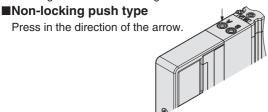

■Push-turn locking slotted type [Type D]

Push down on the manual override with a small flat head screwdriver until it stops. Turn it clockwise by 90 to lock it. Turn it counterclockwise to release it.

If it is not turned, it can be operated the same way as the non-locking type.

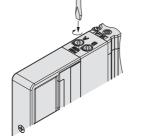




∧ Caution

Do not apply excessive torque when turning the manual override. [0.1 N·m]

When locking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

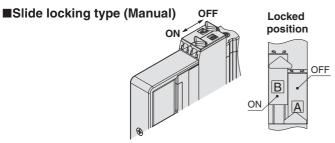

It is locked by sliding the manual override all the way in the direction indicated by the arrow (ON side) with a small flat head screwdriver or with your fingers. Slide it in the direction indicated by the arrow (OFF side) to release it.

Back Pressure Check Valve

A Caution

There are two types of back pressure check valves; the one which is built into a valve (with rubber seal type only) and the one which is built in on the manifold side with connector connection. Both of them have a check valve built-in to prevent back pressure. For this reason, use caution that the valves with external pilot specification cannot be pressurized from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow-rate characteristics goes down. Please contact SMC for details.

Exhaust Throttle

∧ Caution

The SY series pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when arranging the piping.

Used as a 3-Port Valve

⚠ Caution

■In case of using a 5-port valve as a 3-port valve

The SY3000/5000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3-port valve is required.

Plug position		B port	A port			
Type of actuation		N.C.	N.O.			
solenoids	Single	Plug (A) (B) (B) (CA) (P) (EB)	Plug (A) (B) (B) (B) (EA) (P) (EB)			
Number of solenoids	Double	Plug (A) (B) 2 D	Plug (A) (B) (B) (B) (C) (A) (C) (A) (B) (C) (A) (C) (C) (A) (C) (C) (C) (C) (C) (C) (C) (C) (C) (C			

Valve and Manifold Combination

The SY series plug-in valve has the common configuration of the valve mounting surface between base mounted type (SY $\frac{3}{5}\Box 0\Box$) and top ported type (SY $\frac{3}{5}\Box 3\Box$), therefore, it can be mounted to all manifolds of the side ported type (type 50 and type 10), the bottom ported type (type 51 and type 11) and the top ported type (type 52 and type 12).

For example, air output can be obtained from both sides of the A and B ports of the manifold and the valve by mounting a top ported valve to a side ported or bottom ported manifold, and a pressure switch can be connected to the output port on one side. However, when selecting valves and manifolds, note that when a base mounted valve is mounted to a top ported manifold, there will be no output from the A and B port.







Be sure to read before handling.

Negative common

Single solenoid

LED

[SOL.a] (Orange)

Light/surge voltage suppressor (□NZ)

Surge voltage suppressor (□NS)

Polarity protection diode

Polarity protection diode

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Light/Surge Voltage Suppressor


⚠ Caution

■Polar type


Positive common

Single solenoid

Light/surge voltage suppressor (□Z)

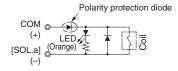

Surge voltage suppressor (□S)

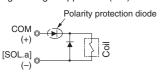

Negative common

Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□NZ)


[SOL.b]
(H)
(Green)
(Green)
Polarity protection diode

Light/surge voltage suppressor ($\square Z$) [SOL.b] $_{\odot}$


Double solenoid.

3-position, 4-position

Positive common

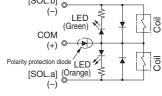


Surge voltage suppressor (□S)

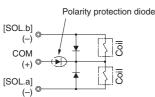

Surge voltage suppressor ($\square NS$)

[SOL.a] (Orange)

(+)

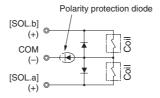

■Non-polar type

COM

[SOL.a]

COM


Varistor

Varistor

With surge voltage suppressor (□R)

Single solenoid




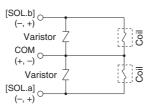

With light/surge voltage suppressor (□U)

Single solenoid


Double solenoid

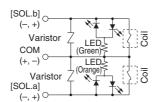

■With power saving circuit

Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.)


Note) Be careful with the energizing time, as quick response and high pressure types will become operational when loaded at more than 40 ms.

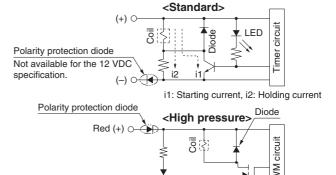

The above circuit reduces the current consumption when holding in order to save energy. Refer to the electrical power waveform as shown below.

LED

<Electrical power waveform with power saving circuit>

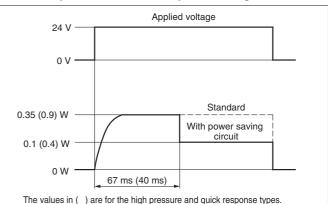

- The 12 VDC specification with power saving circuit (standard specification) does not have the polarity protection diode. Do not make a mistake with the polarity.
- Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

Residual voltage of the surge voltage suppressor

Note) If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the below table and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the valve specifications on page 8.

Residual Voltage

Surge voltage	Surge voltage DC					
suppressor	24 V	12 V				
S, Z	Approx. 1 V					
R, U	Approx. 47 V	Approx. 32 V				



Be sure to read before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Continuous Duty

⚠ Caution

If a valve is energized continuously for a long period of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energized continuously for a long period of time, be sure to use a valve with power saving circuit. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for a long period of time, take special care as the temperature rise will be greater.

Countermeasure for Surge Voltage Intrusion

■Sneak-in of surge voltage

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and the valve in a de-energized state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

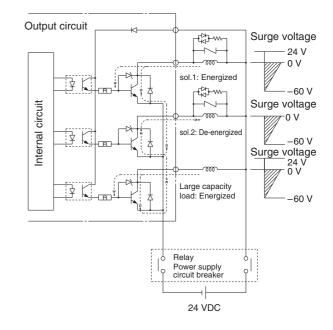


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 VDC)

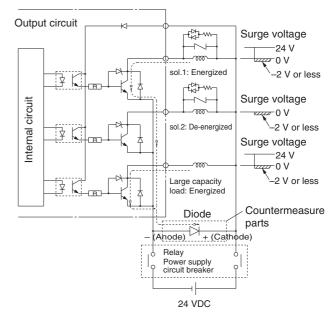


Figure 2. Surge intrusion circuit example (NPN outlet example) (24 VDC)




Be sure to read before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Light Indication

When equipped with indicator light and surge voltage suppressor, the light window turns orange when solenoid a is energized, and it turns green when solenoid b is energized.

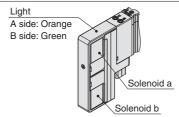


Type 5□ (Metal Base) Changing Connector Entry Direction

⚠ Caution

Connector direction for electrical entry of D-sub connector, flat ribbon cable and PC wiring can be changed.

If the directional change is required, push the lever on both sides to remove the connector and change the connector direction for electrical entry as shown in the figure. Since lead wire

assemblies are attached to the connector, excessive pulling or twisting can cause broken wires or other trouble. Also, take precautions so that lead wires are not caught and pinched when installing the connector.

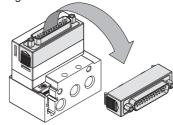


Type 1□ (Connector Connecting Base) Changing Connector Entry Direction

⚠ Caution

Connector direction for electrical entry of D-sub connector, flat ribbon cable and PC wiring can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to

slide the lever.) If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire, etc. to break. Thus, refrain from using in these ways.

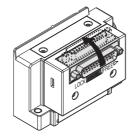

Fixation of DIN Rail Mounting Type Manifold

When the manifold is fixed with bolts on a mounting surface, etc., it can be operated just by fixing on both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally.

However, if it is used with other mounting or with side or reverse mounting, fix the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 positions for 2-5 stations, 3 positions for 6-10 stations, 4 positions for 11-15 stations, 5 positions for 16-20 stations and 6 positions for 21-24 stations.

Take the same measures for horizontal mounting if the mounting surface vibrates.


If fixed at lesser points than specified and use it, there could be a warp or torsion in the DIN rail and the manifold and lead to bring some troubles such as air leakage.

Port Block Assembly and How to Change Piping Types between Top and Side


A Caution

For top ported type, the port size of A and B ports can be changed by switching the port block assemblies which are mounted on the body. The piping method can also be changed by switching the top ported type port block assembly with the side ported type cover assembly. Also, it may cause air leakage if the mounting screws are not tightened securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 13 for part numbers of port block assembly and body cover assembly.

When switching them while valves are mounted on a manifold, remove the clip with a flat head screwdriver before switching the port plugs and the one-touch fittings. It may cause air leakage if the mounting screws are not tightened or the clip is not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque.

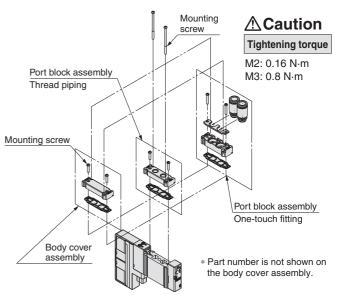

■How to change while mounted on a manifold

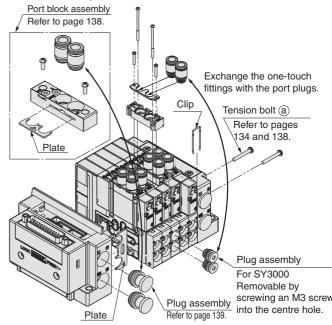

Replacement Construction

Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring

EX510

Connector Plug-in Connector

inal D-sub Connector | Flat Ribbon Cable | PC Wiring

Lead Wire Block Box

O Circular Le

0 EX600 EX500

EX126 EX260 EX250

ksembly EX120

Manifold One-touch Fittings and Plug Assembly/ Part No.

pecific Product recautions

156



Be sure to read before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Changing One-touch Fittings


⚠ Caution

By replacing one-touch fittings of valve or manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports.


When replacing the one-touch fittings, remove the clip or the plate and the plate mounting screws with a screwdriver before pulling the one-touch fittings off. Mount the one-touch fittings by following the removal procedure in reverse.

It may cause air leakage if the mounting screws are not tightened or the clip and the clip plate are not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 139 for part numbers of one-touch fittings for valve or manifold.

■Valve

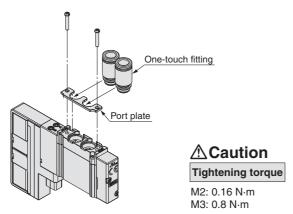


■Plug-in metal base

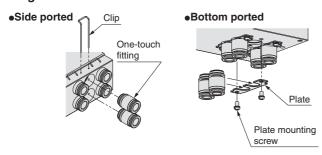


■Plug-in connector connecting base

Side ported

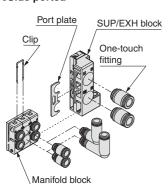

Bottom ported

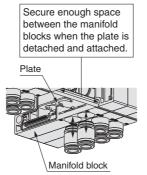

Other Tube Brands

∧ Caution

1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

1) Nylon tube within 0.1 mm
2) Soft nylon tube within 0.1 mm
3) Polyurethane tube within +0.15 mm
-0.2 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

One-touch Fittings

■Tube attachment/detachment for one-touch fittings

1) Tube attachment

- 1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2 or 3. Do not use pinchers, nippers or scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible. Allow some extra length in the tube.
- Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

2) Tube detachment

- 1. Push in the release button sufficiently, pushing its collar equally around the circumference.
- Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.



Be sure to read before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

One-touch Fittings

⚠ Caution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogues.

Fittings whose compliance with the SY series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

Applicable Fittings: Series KQ2H, KQ2S Series KJH, KJS

Series	Model	Dining port	Port size	Eittings	Applicable tube O.D.						
Series	iviouei	Piping port		Fittings	ø 2	ø 3.2	ø 4	ø 6	ø 8	ø 10	ø 12
	SY3□3 ⁰ -□□-M5	4A, 2B	M5 -	KQ2H KJH							
				KQ2S							
				KJS KQ2H							
		1P, 5EA, 3EB	1/8	KJH							
	SS5Y3-50/51/52(R) Manifold base			KQ2S KJS							
		X, PE	X, PE M5 KQ2H KJH KQ2S KJS	KQ2H							
SY3000				KQ2S							
		4A, 2B	1/8	KQ2H KJH							
				KQ2S KJS							
			M5 -	KQ2H							
				KJH							
				KQ2S KJS							

Series	Model	Piping port	Port	Fittings	Applicable tube O.D.							
Selles	Woder	Fibility port	size		ø 2	ø 3.2	ø 4	ø 6	ø 8	ø 10	ø 12	
	SY5□3 ⁰ -□□-01	4A, 2B	1/8	KQ2H KJH								
				KQ2S KJS								
	0 SS5Y5-50/51/52(R) Manifold base	1D 5EA 2EB	KQ2H KQ2S KQ2S	KQ2H								
		II, JLA, JLD										
SY5000		X, PE	M5	KQ2H KJH								
313000				KQ2S KJS								
		4A, 2B	1/4	KQ2H								
				KQ2S								
			1/8	KQ2H KJH								
			1/0	KQ2S KJS								

Specific Product Precautions



EX510

D-sub Connector Flat Ribbon Cable PC Wiring

Plug-in Metal Base

al Desub Connector Flug-in Connector Flat Ribbon Cable Connecting Base

EX500 Circular Lead Wire

60 EX250 EX600

EX120 EX126 EX260

infold One-touch Fittings and Plug Assembly Part No.

⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk Danger: which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*2)
 - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.