# Thru-beam sensor

# OBE12M-R100-S2EP-IO-0,3M-V1



CE 🚷 IO-Link C

## **Model Number**

# OBE12M-R100-S2EP-IO-0,3M-V1

Thru-beam sensor

with fixed cable and M12 connector, 4-pin

## **Features**

- Miniature design with versatile moun-• ting options
- IO-link interface for service and pro-٠ cess data
- Various frequencies for avoiding mu-• tual interference (cross-talk immunity)
- Extended temperature range -40°C ... 60°C
- High degree of protection IP69K ٠


## **Product information**

The R100 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design - from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.


The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

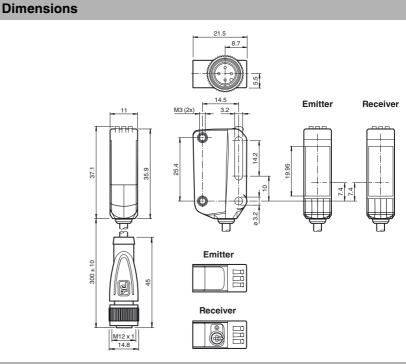

## **Electrical connection emitter**

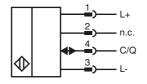


# **Electrical connection receiver**

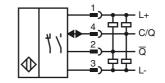

2 3 4

## **Pinout**

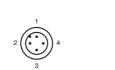

Wire colors in accordance with EN 60947-5-2 BN WH BU BK (brown (white) (blue) (black)

Pepperl+Fuchs Group

www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




1

# Indicators/operating means

#### Emitter

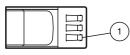

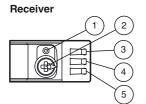

1	Operating indicator
---	---------------------

	1	Light-on/Dark-on changeover switch			
	Sensitivity adjuster				
	3	Operating indicator / dark on			

- 4 Signal indicator
- 5 Operating indicator / light on

# Accessories

V1-W-2M-PUR Female cordset, M12, 4-pin, PUR cable

### V1-G-2M-PUR

Female cordset, M12, 4-pin, PUR cable

## IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

Other suitable accessories can be found at www.pepperl-fuchs.com

2



Technical data		
System components		
Emitter		OBE12M-R100-S-IO-0,3M-V1
Beceiver		OBE12M-R100-2EP-IO-0,3M-V1
General specifications		
Effective detection range		0 12 m
Threshold detection range		15 m
Light source		LED
Light type		modulated visible red light
LED risk group labelling		exempt group
Diameter of the light spot		approx. 65 mm at a distance of 1 m
Angle of divergence		3.7 °
Ambient light limit		EN 60947-5-2 : 30000 Lux
5	otoro	LN 00347-3-2. 30000 Lux
Functional safety related parame	elers	462 a
MTTF <sub>d</sub> Mission Time (T <sub>M</sub> )		402 a 20 a
Diagnostic Coverage (DC)		0%
		0 /0
Indicators/operating means		
Operation indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator		Yellow LED: Permanently lit—light path clear Permanently off—object detected Flashing (4 Hz)—operating reserve not reached
Control elements		Receiver: light/dark switch
Control elements		Receiver: sensitivity adjustment
Parameterization indicator		IO link communication: green LED goes out briefly (1 Hz)
Electrical specifications		
Operating voltage	UB	10 30 V DC
Ripple	2	max. 10 %
No-load supply current	Ι <sub>Ο</sub>	Emitter: ≤ 14 mA Receiver: ≤ 13 mA at 24 V supply voltage
Protection class		III
Interface		
Interface type		IO-Link (via C/Q = pin 4)
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1
Min. cycle time		2.3 ms
Process data witdh		Emitter: Process data output: 2 Bit Receiver: Process data input: 2 Bit Process data output: 2 Bit
SIO mode support		yes
Device ID		Emitter: 0x110401 (1115137) Receiver: 0x110301 (1114881)
Compatible master port type		A
Input		
Test input		emitter deactivation at +U <sub>B</sub>
Output		
Switching type		The switching type of the sensor is adjustable. The default set- ting is:
		C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally open / dark on
Signal output		dark-on 2 push-pull (4 in 1)outputs, short-circuit protected, reverse pola- rity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category		DC-12 and DC-13
Voltage drop	Ud	≤ 1.5 V DC
Switching frequency	f	1000 Hz
Response time		0.5 ms
Ambient conditions		
Ambient temperature		-40 60 °C (-40 140 °F) , fixed cable -25 60 °C (-13 140 °F) , movable cable not appropriate for conveyor chains
Storage temperature		-40 70 °C (-40 158 °F)
Mechanical specifications		
Degree of protection		IP67 / IP69 / IP69K
Connection		300 mm fixed cable with M12 x 1, 4-pin connector
Material		
Material		
		PC (Polycarbonate)
Housing Optical face		PC (Polycarbonate) PMMA
Housing		

Refer to "General Notes Relating to Pepperl+Fuchs Product Information". Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS SENSING YOUR NEEDS




#### 0.3 m Cable length Compliance with standards and directives Directive conformity EMC Directive 2004/108/EC EN 60947-5-2:2007 + A1:2012 Standard conformity Product standard EN 60947-5-2:2007 + A1:2012 IEC 60947-5-2:2007 + A1:2012 UL 60947-5-2: 2014 Standards IEC 61131-9:2013 EN 62471:2008 EN 61131-9:2013


#### Approvals and certificates

UL approval


E87056, cULus Listed, class 2 power supply, type rating 1

## **Curves/Diagrams**

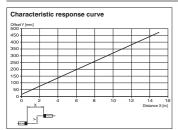

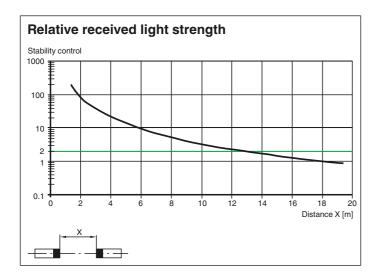

## **Functions and Operation**

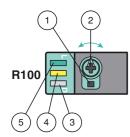

- 1 Light-on / dark-on changeover switch
- 2 Sensing range / sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

## Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

# Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.



4

## **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.

