## WIS module primary



# CE

## **Model Number**

## NDP-KE2-8E2

Inductive transmitter system

#### **Features**

- 8 channels •
- 9 outputs •
- LEDs for display of the output sta-. tes and communication
- **Deactivation option** •
- Housing with removable terminals •
- **DIN rail mounting** •
- For connection of 1 transmitter head


Technical data	
Nominal ratings	
Operating voltage U <sub>B</sub>	24 V DC ± 10 %
Number of signal channels	8
Signal transfer direction	from secondary side to primary side
Reverse polarity protection	reverse polarity protected
Current consumption	max. 1000 mA
Functional safety related parameters	
MTTF <sub>d</sub>	245 a
Mission Time (T <sub>M</sub> )	20 a
Diagnostic Coverage (DC)	0 %
Indicators/operating means	
Switching state	8 x LED, yellow
Transfer indicator Tx	LED, green
Input	
Number	1
Input type	Activation input signal level: $\geq$ 15 V = active, $\leq$ 3 V inactive
Input current	≤ 1 mA
Internal resistor	≥ 15 kΩ
Output	
Output type	1 Status output (high with proper transfer) and 8 Switch outputs PNP, NO. (switched high) , overload and short- circuit resistant
Voltage drop U <sub>d</sub>	≤ 2.5 V
Load current	max. 50 mA
Response time	$\leq$ 200 ms ( static operation , the transmission heads stand opposite to each other )
Ambient conditions	
Ambient temperature	0 50 °C (32 122 °F)
Storage temperature	-25 85 °C (-13 185 °F)
Mechanical specifications	
Degree of protection	IP20
Material	
Housing	PA 66-FR
Installation	DIN rail mounting
Mass	106 g
General information	6
Note	Maximum cable length between WIS module and WIS transmitter must not exceed 5 m.
Compliance with standards and directives	
Directive conformity	
EMC Directive 89/336/EEC	EN 61000-6-2:2001, EN 61000-6-4:2001, EN 50295:1999


Approvals and certificates CCC approval

CCC approval / marking not required for products rated ≤36 V

NDP-KE2-8E2

## Dimensions



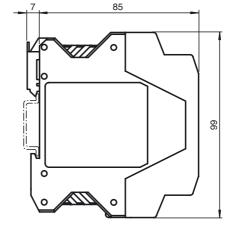

Pepperl+Fuchs Group www.pepperl-fuchs.com

Date of issue: 2014-10-02 200660\_eng.xml

Release date: 2014-06-23 15:48

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



## NDP-KE2-8E2

## **Electrical Connection**

## Connection:

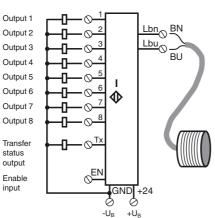

#### **Functional description**

A WIS (wireless inductive system) inductive transfer system always consists of the following four components:

- WIS primary module
- WIS primary transmitter
- WIS secondary transmitter
- WIS secondary module


The WIS primary module is installed in the stationary component and is connected to a downstream control (i.e., PLC). The WIS primary transmitter connected to the WIS primary module. The WIS secondary transmitter and the WIS secondary module that is connected to it are installed in the moveable part of the component. The WIS secondary module disposes of connection capabilities for several sensors. If the two transmitters are located in front of each other within the system range, then electric power is transferred from the primary side to the secondary side. The sensors attached to the WIS secondary module are now supplied with electric energy and begin to operate. The sensor output signals are transmitted in the opposite direction from the secondary side to the primary side and are separately available on the WIS promary module output terminals for further processing by the equipment control. The sensor signal status is also displayed by LEDs that correspond to the sensor channels.

A separate output signal Tx on the WIS primary module indicates the communication status. A high signal indicates communication between the WIS transmitters. This is also indicated by a glowing LED Tx.

Power transfer and communication in the system can be activated and deactivated on the WIS primary module with the EN input .

Input signal on EN	Function
+ UB (24 V DC)	Transfer activated
GND or open.	Transfer deactivated

**Function schematic** 

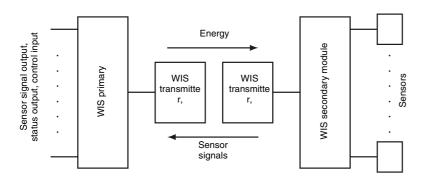

The sum of the currents of all sensors attached to the WIS secondary module must not be greater than the maximum transferable current. This is calculated by dividing the transferable power by the 12 V provided by the transmitters.

USA: +1 330 486 0001 Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com

621 776 4411 Singa perl-fuchs.com fa-info@s



www.pepperl-fuchs.com