
Dimensions



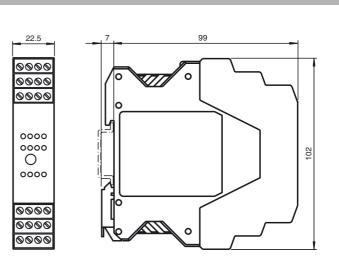

Electrical connection


Model number

VAA-4E4A-KE-ZEJQ/E2L


KE switch cabinet module 4 inputs and 4 outputs

Features

- Housing with removable, mechanical ٠ and color coded terminals
- Communication monitoring
- Inputs for 2- and 3-wire sensors •
- Addressing jack ٠
- Power supply of outputs from the ex-• ternal auxiliary voltage
- Selectable supply to the sensors: External or from the module
- Function display for bus, external au-• xiliary voltage, internal sensor supply, inputs, and outputs
- Red LED per channel, lights up in the • event of output overload
- Switchable lead breakage detection (outputs)

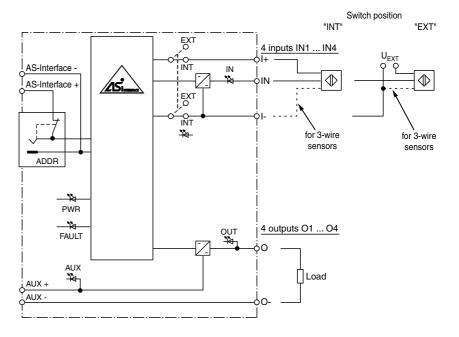

Indicating / Operating means

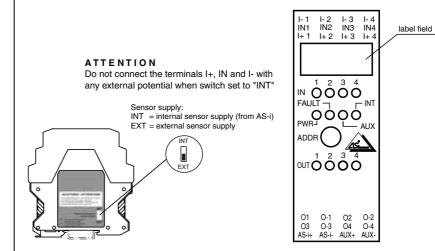



Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group USA: +1 330 486 0001 www.pepperl-fuchs.com

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

AS-Interface sensor/actuator module

Technical det

www.pepperl-fuchs.com

Technical data			
General specifications			
Slave type		Standard slave	
AS-Interface specification		V3.0	
Required master specification		≥ V2.0	
UL File Number	10-10	E87056	
Functional safety related parame MTTF _d	ters	190 a	
Mission Time (T _M)		20 a	
Diagnostic Coverage (DC)		0%	
Indicators/operating means			
LED FAULT		Error display; red LED	
		red: communication error, i.e red flashing: overload intern interruption outputs	e. address is 0 al input supply, i.e. overload or lead
LED INT		Internal input supply active;	LED green
LED PWR		AS-Interface voltage; green green: voltage OK flashing green: address 0	LED
LED AUX		ext. auxiliary voltage U _{AUX} ; o green: voltage OK	dual LED green/red
LED IN		red: reverse voltage switching state (input); 4 LEI	D vellow
LED OUT		switching state (input), 4 LL switching state (output); 4 Ll yellow: output active red: output overload or lead	ED yellow/red
Electrical specifications			
Auxiliary voltage (input)	U_{EXT}	12 30 V DC PELV	
Auxiliary voltage (output)	U _{AUX}	20 30 V DC PELV	
Rated operating voltage	Ue	26.5 31.6 V from AS-Inter	
Rated operating current	l _e	\leq 35 mA (without sensors) /	max. 190 mA
Protection class			
Surge protection		U _{EXT} , U _{AUX} , U _e : Over voltag supplies (PELV)	e category III, safe isolated power
Input			
Number/Type		4 inputs for 2- or 3-wire sens	X <i>Y</i> .
Supply Voltage		U _{EXT} (switch position EXT) 21 31 V DC (INT)	osition INT, basic setting) or externa
Current loading capacity		\leq 150 mA, overload- and she	ort-circuit protected (INT)
Input current		\leq 9 mA (limited internally)	······································
Switching point		according to DIN EN 61131	-2 (Type 2)
0 (unattenuated)		≤3 mA	
1 (attenuated)		≥5 mA	
Signal delay		< 1 ms (input/AS-Interface)	
Output			
Number/Type		•	verload and short-circuit proof
Supply Current		from external auxiliary voltage U_{AUX} 2 A per output, sum 4A ($T_B \le 40$ °C)	
		gaps) 2 A per output, total 4A (T _B	$_3 \le 60$ °C, arranged in series withou ≤ 60 °C, arranged in series with
Valtaga		5 mm gap)	
Voltage Usage category		≥ (U _{AUX} - 0.5 V) DC-13	
Programming instructions		50-10	
Profile		S-7.0	
IO code		7	
ID code		0	
ID1 code		F	
ID2 code		E	
Data bits (function via AS-Interface	e)	input	output
DO		IN1	01
D1		IN2	02
D2		IN3	03
D3 Parameter bits (programmable via	ο Δ Ο i)	IN4	O4
	u 70-1)	Communication monitoring	outputs maintain the status if com-
P0			f communication fails, the outputs ng)
			ng) suppression ≤ 2 ms
PO		P0 = 1 monitoring = on, i.e. i are deenergised (basic setti Input filter P1 = 0 input filter on, pulse s	ng) suppression ≤ 2 ms setting)

fa-info@de.pepperl-fuchs.com

fa-info@us.pepperl-fuchs.com

Function

The AS-Interface I/O module VAA-4E4A-KE-ZEJQ/E2L is a control cabinet module with 4 inputs and 4 electronic outputs. The housing is only 22.5 mm wide and takes up little space in the control cabinet. The module is mounted by snapping onto the 35-mm DIN rail in compliance with EN 50022.

The connection is made via plug-in terminals. Four-terminal blocks (black) are used for the inputs and outputs. The connection of the external bulk power and the AS Interface is via 2-terminal blocks (bulk power grey, AS-Interface yellow). Terminals for the inputs and outputs are mechanically coded to prevent incorrect connection.

The supply to the inputs and the connected sensors can be fed either from the internal supply of the module (from the AS-Interface) or via an external voltage source. A switch located on the side of the module changes the supply source. The choice of internal input supply is displayed via the INT LED. The IN and OUT LEDs display the current switching status of the relevant inputs and outputs. The OUT LED also indicates an overload or a lead breakage at the associated output.

Note:

The device is equipped with a communication monitor, which deactivates the outputs if the AS-Interface does not communicate with the module for more than 40 ms. The communication monitor can be deactivated via the parameter P0. Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1. Parameter P2 activates a lead breakage

detection system for the outputs. This function detects and reports a missing load, providing the relevant output is deactivated. The associated OUT LED and the 'peripheral fault' function display the signal transmitted to the AS-Interface master. A signal indicating an overload of the internal input supply or the outputs is also transmitted to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface continues even if a peripheral fault is set.

Accessories

VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

VBP-HH1-V3.0 AS-Interface Handheld

Singapore: +65 6779 9091

fa-info@sg.pepperl-fuchs.co

VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

F PEPPERL+FUCHS

Ambient conditions	
Ambient temperature	-25 60 °C (-13 140 °F)
Storage temperature	-25 85 °C (-13 185 °F)
Relative humidity	90 % , noncondensing
Pollution Degree	2
Mechanical specifications	
Protection degree	IP20
Connection	removable terminals rated connection capacity: rigid/flexible (with and without wire-end ferrules): $0.25 \text{ mm}^2 \dots 2.5 \text{ mm}^2$ for multiple-wire connection with two wires of equal cross-sec- tion: flexible with twin wire-end ferrules: $0.5 \text{ mm}^2 \dots 1.5 \text{ mm}^2$
Material	
Housing	PA 66-FR
Mass	150 g
Mounting	DIN mounting rail
Compliance with standards and directi- ves	•
Directive conformity	
EMC Directive 2004/108/EC	EN 61000-6-2:2005, EN 61000-6-4:2007, EN 50295:1999
Standard conformity	
Noise immunity	EN 61000-6-2:2005, EN 61326-1:2006, EN 50295:1999
Emitted interference	EN 61000-6-4:2007
Input	EN 61131-2:2004
Protection degree	EN 60529:2000
Fieldbus standard	EN 50295:1999, IEC 62026-2:2006

Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

