



Model number


VBA-4E-G12-ZAL

G12 flat module
4 inputs (PNP)


Features

- A/B slave with extended addressing possibility for up to 62 slaves
- One-piece housing with stainless steel base
- Installation without tools
- Metal threaded inserts with SPEED-CON technology
- Flat cable connection with cable piercing technique, variable flat cable guide
- Inputs for 2-, 3-, and 4-wire sensors
- Communication monitoring
- DIN rail mounting
- AS-Interface certificate


Dimensions

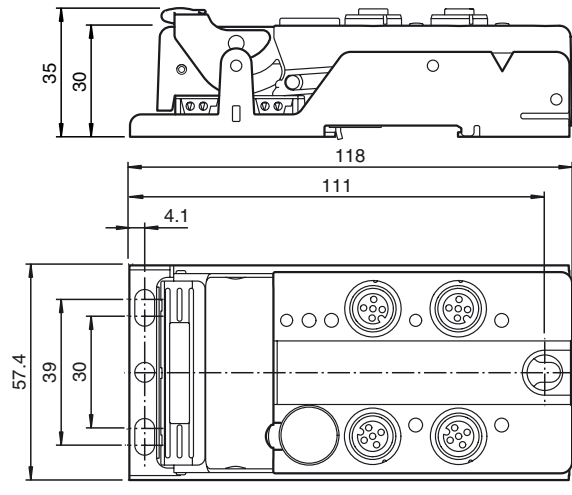

Electrical connection

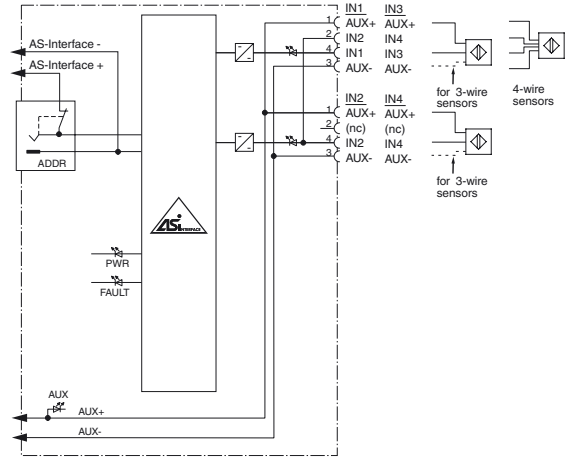

Indicating / Operating means

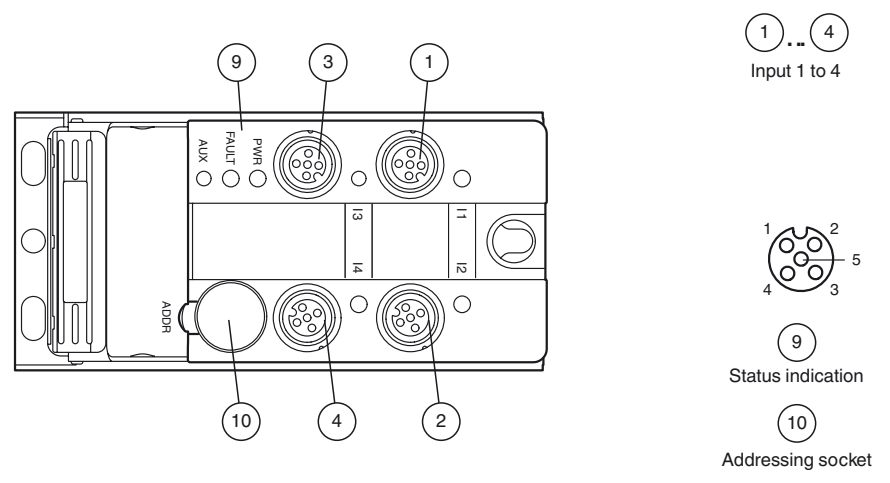

Technical data

General specifications	
Slave type	A/B slave
AS-Interface specification	V3.0
Required master specification	≥ V2.1
UL File Number	E87056
Functional safety related parameters	
MTTF _d	330 a
Mission Time (T _M)	20 a

Release date: 2013-12-12 13:58 Date of issue: 2015-02-05 200505_eng.xml

Diagnostic Coverage (DC)	0 %	
Indicators/operating means		
LED FAULT	error display; LED red red: communication error or address is 0 red flashing: overload of sensor supply	
LED PWR	AS-Interface voltage; green LED green: voltage OK flashing green: address 0	
LED AUX	ext. auxiliary voltage U_{AUX} ; dual LED green/red green: voltage OK red: reverse voltage	
LED IN	switching state (input); 4 LED yellow	
Electrical specifications		
Auxiliary voltage	U_{AUX}	24 V DC \pm 15 % PELV
Rated operating voltage	U_e	26.5 ... 31.6 V from AS-Interface
Rated operating current	I_e	\leq 40 mA
Protection class		III
Input		
Number/Type	4 inputs for 2- or 3-wire sensors (PNP), DC option 2 inputs for 4-wire sensors (PNP), DC	
Supply	from external auxiliary voltage U_{AUX}	
Current loading capacity	\leq 600 mA overload and short-circuit resistant	
Input current	\leq 8 mA (limited internally)	
Switching point	according to DIN EN 61131-2 (Type 2)	
0 (unattenuated)	\leq 2 mA	
1 (attenuated)	\geq 6 mA	
Signal delay	$<$ 1 ms (input/AS-Interface)	
Programming instructions		
Profile	S-0.A.2	
IO code	0	
ID code	A	
ID1 code	7	
ID2 code	2	
Data bits (function via AS-Interface)	input	output
D0	IN1	-
D1	IN2	-
D2	IN3	-
D3	IN4	-
Parameter bits (programmable via AS-i)	function	
P0	not used	
P1	Input filter P1 = 0 input filter on, pulse suppression \leq 2 ms P1 = 1 input filter off (basic setting)	
P2	Synchronous mode P2 = 0 synchronous mode on P2 = 1 synchronous mode off (basic setting)	
P3	not used	
Ambient conditions		
Ambient temperature	-25 ... 70 °C (-13 ... 158 °F)	
Storage temperature	-25 ... 85 °C (-13 ... 185 °F)	
Shock and impact resistance	30 g, 11 ms in 6 spatial directions 3 shocks 10 g, 16 ms in 6 spatial directions 1000 shocks	
Vibration resistance	0.75 mm 10 ... 57 Hz, 5 g 57 ... 150 Hz, 20 cycles	
Mechanical specifications		
Degree of protection	IP67	
Connection	cable piercing method flat cable yellow inputs: M12 round connector	
Material		
Housing	PBT	
Mass	200 g	
Mounting	Mounting base	
Compliance with standards and directives		
Directive conformity		
EMC Directive 2004/108/EC	EN 50295:1999	
Standard conformity		
Noise immunity	EN 61000-6-2:2005, EN 50295:1999	
Emitted interference	EN 61000-6-4:2007	
Input	EN 61131-2	
Degree of protection	EN 60529	
Fieldbus standard	EN 50295, IEC 62026-2	

Notes

For 4-wire sensors, it is only possible to use plug-in slot IN1 or IN3 for inputs 1+2 or 3+4 (jumped internally).

Function

The VBA-4E-G12-ZAJ is an AS-Interface trigger module with 4 inputs. 2- and 3-wire sensors as well as mechanical contacts can be connected to the plus switching electronic inputs.

The solid housing permits fast mounting without tools as well as easy removal without tools. The stainless steel shell and the cast housing ensure durability and a high protection category.

The connection to the AS-Interface cable is achieved via penetration technology in the integrated flat cable. The insert for the flat cables can be turned in two orientations.

All connections to inputs are implemented via metal inserts for high stability. The connection to the sensors is achieved via a M12 x 1 circular connector with SPEEDCON quick locking option.

The inputs and the connected sensors are supplied via an external power source (AUX). To indicate the current switching state there is an LED for each channel fitted to the top of the module.

An LED to indicate the AS-Interface voltage and that the module has an address of 0 is available, another indicates errors in the AS-Interface communication as well as periphery faults.

This module can be mounted in any position using three screws or can be snapped onto the DIN rail using the stainless steel holder.

Accessories

VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

VAZ-V1-B3

Blind plug for M12 sockets

VBP-HH1-V3.0

AS-Interface Handheld

VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

VAZ-CLIP-G12

lock for G12 module

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Release date: 2013-12-12 13:58 Date of issue: 2015-02-05 200505_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com