



### Model Number

**PGV150I-F200A-R4-V19**


Read head for incident light positioning system

### Features

- **Mechanically rugged: no wearing parts, long operating life, maintenance-free**
- **RS 485 interface**
- **Reading of Data Matrix control codes**
- **Infrared light**
- **Non-contact positioning on Data Matrix code tape**

### Diagrams

#### Coordinates

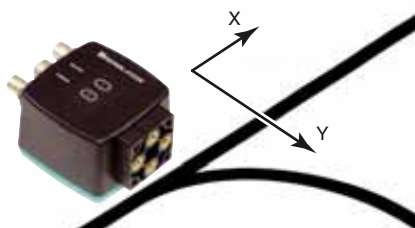

## Technical data

### General specifications

|                     |                                     |
|---------------------|-------------------------------------|
| Passage speed $v$   | $\leq 8$ m/s                        |
| Measuring range     | max. 10000 m                        |
| Light type          | Integrated LED lightning , infrared |
| Read distance       | 150 mm                              |
| Depth of focus      | $\pm 30$ mm                         |
| Reading field       | 170 mm x 105 mm                     |
| Ambient light limit | 100000 Lux                          |
| Resolution          | $\pm 0.2$ mm                        |

### Nominal ratings

|                       |                       |
|-----------------------|-----------------------|
| Camera                |                       |
| Type                  | CMOS , Global shutter |
| Processor             |                       |
| Clock pulse frequency | 600 MHz               |
| Speed of computation  | 4800 MIPS             |

### Functional safety related parameters

|                                |      |
|--------------------------------|------|
| MTTF <sub>d</sub>              | 86 a |
| Mission Time (T <sub>M</sub> ) | 43 a |
| Diagnostic Coverage (DC)       | 0 %  |

### Indicators/operating means

|               |   |
|---------------|---|
| LED indicator | 7 LEDs (communication, alignment aid, status information) |
|---------------|---|

### Electrical specifications

|                              |                       |
|------------------------------|-----------------------|
| Operating voltage $U_B$      | 15 ... 30 V DC , PELV |
| No-load supply current $I_0$ | max. 200 mA           |
| Power consumption $P_0$      | 3 W                   |

### Interface

|                  |                              |
|------------------|------------------------------|
| Interface type   | RS 485 interface             |
| Data output code | binary code                  |
| Transfer rate    | 38400 ... 230400 Bit/s       |
| Termination      | Switchable terminal resistor |
| Query cycle time | $\geq 10$ ms                 |

### Input

|                 |   |
|-----------------|---|
| Input type      | 1 to 3 functional inputs , programmable |
| Input impedance | $\geq 27$ k $\Omega$                    |

### Output

|                   |  |
|-------------------|--|
| Output type       | 1 to 3 switch outputs , PNP , programmable , short-circuit protected |
| Switching voltage | Operating voltage  |
| Switching current | 150 mA each output   |

### Standard conformity

|                      |                           |
|----------------------|---------------------------|
| Emitted interference | EN 61000-6-4:2007+A1:2011 |
| Noise immunity       | EN 61000-6-2:2005         |
| Shock resistance     | EN 60068-2-27:2009        |
| Vibration resistance | EN 60068-2-6:2008         |

### Ambient conditions

|                       |  |
|-----------------------|--|
| Operating temperature | 0 ... 60 °C (32 ... 140 °F) , -20 ... 60 °C (-4 ... 140 °F)<br>(noncondensing; prevent icing on the lens!) |
| Storage temperature   | -20 ... 85 °C (-4 ... 185 °F)  |
| Relative humidity     | 90 % , noncondensing   |


### Mechanical specifications

|                      |                          |
|----------------------|--------------------------|
| Connection type      | 8-pin, M12 x 1 connector |
| Housing width        | 70 mm                    |
| Housing height       | 70 mm                    |
| Degree of protection | IP67                     |
| Material             |                          |
| Housing              | PC/ABS                   |
| Mass                 | approx. 160 g            |



### Approvals and certificates

|              |   |
|--------------|---|
| UL approval  | cULus Listed, General Purpose, Class 2 Power Source, Type 1 enclosure |
| CCC approval | CCC approval / marking not required for products rated $\leq 36$ V    |


**Dimensions**

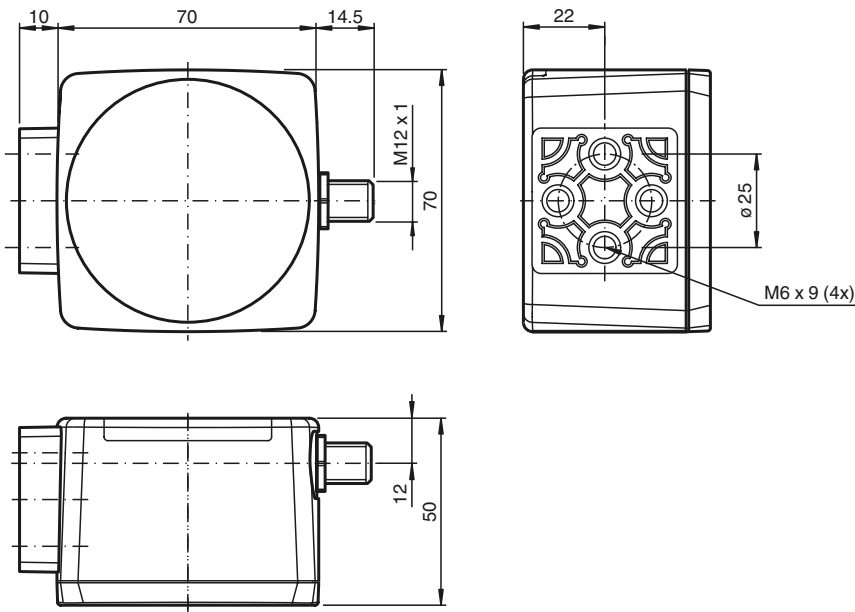


**Additional Information**

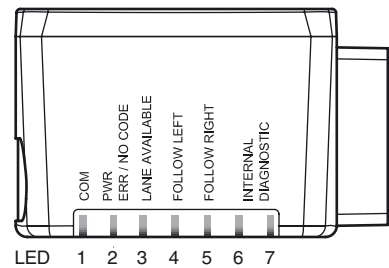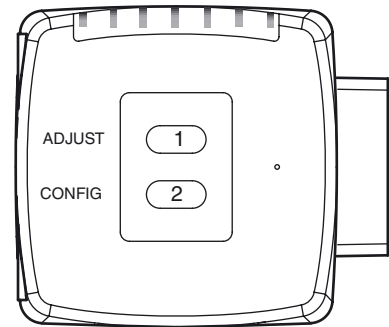

**Electrical Connection**

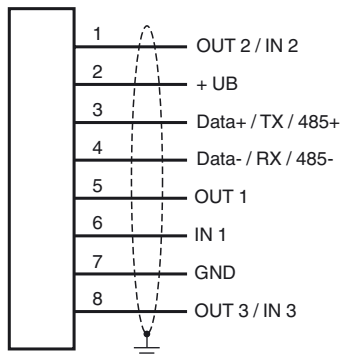

**Pinout**

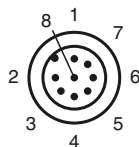

**General**

The PGV... reader forms part of the positioning system in the Pepperl+Fuchs incident light process. The reader's features include a camera module and an integrated illumination unit. The reader uses these features to detect a colored strip stuck to the floor to track the lane. The reader also detects control codes and position markers in the form of Data Matrix codes attached to a self-adhesive code tape. The code tape is usually mounted in a fixed position instead of the colored strip or parallel to the colored strip. The reader is located on the front of an automated guided vehicle and guides this vehicle along the colored strip.

**Accessories**

**PCV-USB-RS485-Converter Set**  
USB to RS 485 interface converter

**PCV-KBL-V19-STR-RS485**  
Cable unit with power supply for USB / RS-485 interface converter

**V19-G-ABG-PG9**  
Female connector, M12, 8-pin, shielded, field attachable

**V19-G-ABG-PG9-FE**  
Female connector, M12, 8-pin, shielded, field attachable

**PCV-SC12**  
Grounding clip for PCV system

**PCV-AG100**  
Alignment guide for PCV100-\* read head

**PCV-LM25**  
Marker head for 25 mm code tape

**PCV-MB1**  
Mounting bracket for PCV\* read head

**PGV33M-CB19-BU**  
PGV color-tape blue

**PGV33M-CB19-GN**  
PGV color-tape green

**PGV33M-CB19-RD**  
PGV color-tape red

**PGV33M-CB19-YE**  
PGV color-tape yellow

**Vision Configurator**  
Operating software for camera-based sensors

Release date: 2017-03-24 11:45 Date of issue: 2017-03-24 277208\_eng.xml

### Mounting and Commissioning

Mount the reader such that the optical surface of the device captures the optimum reading distance to the colored strip (see "Technical Data"). The stability of the mounting and the manner in which the vehicle is guided ensure that the reader is not operated outside of its depth of focus range. The colored strip must not leave the maximum reading window for the reader during this process. All readers can be adapted to optimally meet specific requirements by means of parameterization.

### Indicators and Operating Controls

The PGV... reader is equipped with seven indicator LEDs for carrying out visual function checks and rapid diagnostics. The reader is equipped with two buttons at the back for activating the alignment aid and parameterization mode.

#### LEDs

| LED | Color                 | Label              | Meaning                            |
|-----|-----------------------|--------------------|------------------------------------|
| 1   | Yellow                | COM                | Communication active               |
| 2   | Green/red             | PWR<br>ERR/NO CODE | Code detected/not detected, error  |
| 3   | Yellow                | LANE AVAILABLE     | Lane available                     |
| 4   | Yellow                | FOLLOW LEFT        | "Follow left-hand lane" activated  |
| 5   | Yellow                | FOLLOW RIGHT       | "Follow right-hand lane" activated |
| 6   | Red/green/yel-<br>low | INTERNAL           | Internal diagnostics               |
| 7   |                       | DIAGNOSTIC         |                                    |

#### External Parameterization

In order to parameterize the device externally, the parameterization code is required in the form of a Data Matrix containing the desired reader parameters. Data Matrix code cards detailing the step-by-step process for externally parameterizing the device are printed in the operating instructions for the reader.

The reader can be parameterized only within ten minutes of being switched on. If a key is pressed after ten minutes of the device being switched on, a visual signal is given by the LEDs (LED1, yellow/LED2, red/LED3, yellow/LED4, yellow/LED5, yellow, flashing for two seconds).

- The switchover from normal mode to parameterization mode is made by pressing button 2 on the back of the reader. To switch the device over, button 2 must be pressed and held for more than two seconds. LED3 then flashes.

**Note:** Parameterization mode is exited automatically if the device is inactive for one minute. In this case, the reader reverts to normal mode and operates without the settings having been changed.

- Place the parameterization code in the field of vision of the camera module. After the parameterization code is detected, the green LED2 lights up for one second. In the event of an invalid parameterization code, LED2 lights up red for two seconds.
- Briefly pressing button 2 will end parameterization mode.